

* This manual supersedes M44A1 and M44A2 series data
in TM 9-2320-209-34P. Retain TM 9-2320-209-34P for
supporting M35 and M44 series trucks.

TECHNICAL MANUAL

**DIRECT SUPPORT AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
FOR
TRUCK, 2 1/2-TON, 6X6, M44A1 AND M44A2 SERIES
(MULTIFUEL)**

MODEL	EIC NSN WITHOUT WINCH		EIC NSN WITH WINCH	
TRUCK, CARGO	M35A1	BM5	2300-00-542-5633	BM6 2320-00-542-5634
	M35A2	BMA	2320-00-077-1616	BMB 2320-00-077-1617
TRUCK, CARGO, XLWB	M36A2	BMC	2320-00-077-1618	BMD 2320-00-077-1619
TRUCK, CARGO, DROPSIDE	M35A2C	BMR	2320-00-926-0873	BMS 2320-00-926-0875
TRUCK, DUMP	M342A2	BMN	2320-00-077-1643	BMP 2320-00-077-1644
TRUCK, TRACTOR	M275A1	BM4	2320-00-446-2479	
	M275A2	BML	2320-00-077-1640	BMB 2320-00-077-1641
TRUCK, TANK, FUEL SERVICING	M49A1C	BMX	2320-00-440-3394	BMM 2320-00-440-3346
	M49A2C	BME	2320-00-077-1631	BMF 2320-00-077-1632
TRUCK, TANK, WATER	M50A1	BMZ	2320-00-440-8307	
	M50A2	BMG	2320-00-077-1633	
	M50A3	BMT	2320-00-937-4036	BMU 2320-00-937-5264
TRUCK PIPELINE CONSTRUCTION	M756A2			BMQ 2320-00-904-3277
TRUCK MAINTENANCE, EARTH BORING MACHINE AND POLE SETTER	M764			BMV 2320-00-937-5980
TRUCK VAN, SHOP	M109A2	BM3	2320-00-440-8313	BM2 2320-00-440-8308
	M109A3	BMJ	2320-00-077-1636	BMK 2320-00-077-1637
TRUCK, VAN, REPAIR	M185A2	BM8	4940-00-987-8799	
	M185A3	BMW	4940-00-007-1638	

DISTRIBUTION STATEMENT A Approved for public release; distribution is unlimited

HEADQUARTERS, DEPARTMENT OF THE ARMY JULY 1993

TECHNICAL MANUAL
NO. 9-2320-361-34P

TECHNICAL ORDER
NO. 36A12-1 B-1 104

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington D.C., 30 July 1993

**DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
TRUCK, 2 1/2-TON, 6X6, M44A1 AND M44A2 SERIES
(MULTIFUEL)**

Model		NSN Without Winch	NSN With Winch
TRUCK, CARGO	M35A1	2320-00-542-5633	2320-00-542-5634
	M35A2	2320-00-077-1616	2320-00-077-1617
TRUCK, CARGO, XLWB	M36A2	2320-00-077-1618	2320-00-077-1619
TRUCK, CARGO, DROPSIDE	M35A2C	2320-00-926-0873	2320-00-926-0875
TRUCK, DUMP	M342A2	2320-00-077-1643	2320-00-077-1644
TRUCK, TRACTOR	M275A1	2320-00-446-2479	
	M275A2	2320-00-077-1640	2320-00-077-1641
TRUCK, TANK, FUEL SERVICING	M49A1C	2320-00-440-3349	2320-00-440-3346
	M49A2C	2320-00-077-1631	2320-00-077-1632
TRUCK, TANK, WATER	M50A1	2320-00-440-8307	
	M50A2	2320-00-077-1633	
	M50A3	2320-00-937-4036	2320-00-937-5264
TRUCK, PIPELINE CONSTRUCTION	M756A2		2320-00-904-3277
TRUCK, MAINTENANCE, EARTH BORING MACHINE AND POLE SETTER	M764		2320-00-937-5980
TRUCK, VAN, SHOP	M109A2	2320-00-440-8313	2320-00-440-8308
	M109A3	2320-00-077-1636	2320-00-077-1637
TRUCK, VAN, REPAIR	M185A2	4940-00-987-8799	
	M 185A3	4940-00-077-1638	

* This manual supersedes M44A1 and M44A2 series data in TM 9-2320-209-34P. Retain TM 9-2320-209-34P for supporting M35 and M44 series trucks.

Current as of 29 January 1993

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, U.S. Army Tank-Automotive Command, ATTN: AMSTA-MB, Warren, MI 48397-5000. A reply will be furnished to you.

Distribution Statement A. Approved for Public release; Distribution is Unlimited.

TABLE OF CONTENTS

	Page	Illus Figure
Section I. INTRODUCTION.....	1	
Section II. REPAIR LIST.....	1-1	
Group 01. ENGINE		
0100 Engine and Container.....	1-1	1
0100 Engine Mounting and Related Parts.....	2-2	2
0101 Cylinder Head Assembly and Related Parts.....	3-1	3
0102 Vibration Damper and Related Parts.....	4-1	4
0103 Flywheel and Adapter Plate.....	5-1	5
0105 Rocker Arm Covers and Related Parts.....	6-1	6
0105 Pushrods and Rocker Arm Shaft Assembly.....	7-1	7
0105 Tappets and Tappet Chamber Cover.....	8-1	8
0105 Timing Gear Cover and Related Parts.....	9-1	9
0106 Oil Pan, Pump Assembly, and Related Parts.....	10-1	10
0106 Oil Filters and Housing Assembly.....	11-1	11
0106 Oil Cooler Assembly and Related Parts.....	12-1	12
0106 Crankcase Breather, Oil Level Indicator, and Related Parts.....	13-1	13
0108 Intake and Exhaust Manifolds and Related Parts.....	14-1	14
Group 02. CLUTCH		
0200 Clutch Cover and Drive Plate.....	15-1	15
0202 Clutch Release and Pedal.....	16-1	16
Group 03. FUEL SYSTEM		
0301 Fuel Injector, Lines, and Related Parts.....	17-1	17
0302 Fuel Injector Pump and Related Parts.....	18-1	18
0302 Fuel Pump and Related Parts.....	19-1	19
0304 Air Cleaner and Related Parts.....	20-1	20
0305 Turbocharger, Oil Inlet and Drain Tubes, and Related Parts.....	21-1	21
0306 Fuel Tank and Related Parts.....	22-1	22
0306 Fuel Tank Hangers and Mounting Hardware.....	23-1	23
0306 Fuel Tank Hangers and Mounting Hardware (Tractors).....	24-1	24
0306 Fuel Lines and Related Parts.....	25-1	25
0306 Fuel Lines and Related Parts.....	26-1	26
0306 Fuel Lines and Related Parts.....	27-1	27
0306 Fuel Lines and Related Parts.....	28-1	28
0309 Primary Fuel Filter and Related Parts.....	29-1	29
0309 Fuel Filters and Related Parts.....	30-1	30
0311 Flame Heater and Related Parts.....	31-1	31
0312 Accelerator and Engine Stop Controls.....	32-2	32
Group 04. EXHAUST SYSTEM		
0401 Exhaust Pipes and Related Parts.....	33-1	33
0401 Stick Exhaust and Related Parts.....	34-1	34
0401 Stack Exhaust and Related Parts, Water Tanker.....	35-1	35
0401 Engine Exhaust Pipes and Stack Pipe Mounting (Multifuel).....	36-1	36
0401 Exhaust Pipes and Related Parts.....	37-1	37
0401 By pass Valve and Related Parts.....	38-1	38

TABLE OF CONTENTS (Continued)

		Page	Illus Figure
Group 05.	COOLING SYSTEM		
	0501 Radiator and Related Parts	39-1	39
	0503 Water Manifold and Related Parts...	40-1	40
	0503 Thermostat and Housing.....	41-1	41
	0504 Water Pump and Related Parts	42-1	42
	0505 Fan and Belt Assembly	43-1	43
Group 06.	ELECTRICAL SYSTEM		
	0601 60-Ampere Alternator.....	44-1	44
	0603 Starter and Related Parts.....	45-1	45
	0607 Instrument Panel and Related Parts	46-1	46
	0608 Miscellaneous Items	47-1	47
	0609 Headlight Assembly and Mounting Hardware	48-1	48
	0609 Blackout Lamp Assembly and Mounting Hardware	49-1	49
	0609 Directional Lights and Related Parts	50-1	50
	0609 Floodlights, Support, and Related Parts	51-1	51
	0609 Side Marker Light and Related Parts	52-1	52
	0609 War Composite Light Assembly	53-1	53
	0610 Sending Units and Warning Switches	54-1	54
	0611 Horn Button and Air Horn Assembly	55-1	55
	0612 Batteries, Cables, Battery Box Assembly, and Mounting Hardware	56-1	56
	0613 Front Wiring Harness.....	57-1	57
	0613 Front Wiring Harness Hardware.....	58-1	58
	0613 Front Wiring Harness Hardware.....	59-1	59
	0613 Front Wiring Harness Hardware.....	60-1	60
	0613 Rear Wiring Harness, Van, Tanker, Cargo, and Polesetter	61-1	61
	0613 Rear Wiring Harness, Tractor	62-1	62
	0613 Rear Wiring Harness, Dump	63-1	63
	0613 Rear Wiring Harness, Pipeline	64-1	64
	0613 Rear Wiring Harness, Pipeline	65-1	65
Group 07.	TRANSMISSION		
	0700 Transmission, Plugs, Breather, and Gaskets	66-1	66
	0704 Transmission Top Cover and Related Parts	67-1	67
Group 08.	TRANSFER ASSEMBLY		
	0801 Power Transfer, Mounting 13 Hardware, and Related Parts	68-1	68
	0803 Transfer Hand Controls.....	69-1	69
	0803 Front Axle Air Engagement Cylinder	70-1	70
	0803 Transfer Controls	71-1	71
Group 09.	PROPELLER AND PROPELLER SHAFTS		
	0900 Propeller Shaft Assembly (Front Axle to Transfer and Forward-Rear to Rear-Rear Axle).	72-1	72
	0900 Propeller Shaft Assembly (Transmission to Transfer)	73-1	73
	0900 Propeller Shaft Assembly (Transfer to Center Bearing)	74-1	74
	0900 Propeller Shaft Assembly (Intermediate)	75-1	75
Group 10.	FRONT AXLE		
	1000 Front Axle and Housing Assembly	76-1	76
	1002 Front Axle Differential Assembly	77-1	77
	1002 Front Axle Differential Carrier Assembly	78-1	78

TABLE OF CONTENTS (Continued)

	Page	Illus Figure
1002 Front Axle Differential Shaft, Gears, and Flange Assembly	79-1	79
1002 Front Axle Differential Helical Drive Pinion and Related Parts	80-1	80
1004 Spindle Shaft Universal Shaft, and Knuckle Assembly	81-1	81
 Group 11. REAR AXLE		
1100 Forward-Rear and Rear-Rear Axle Assembly	82-1	82
1100 Tandem Axle Suspension Spring Seat.	83-1	83
1102 Rear Axle Differential Assembly	84-1	84
1102 Rear Axle Differential Carrier Assembly	85-1	85
1102 Rear Axle Differential Shaft, Gears, and Flange Assemblies.	86-1	86
1102 Rear Axle Differential Helical Drive Pinion and Related Parts	87-1	87
 Group 12. BRAKES		
1201 Parking Brake Drum, Shoes, and Related Parts	88-1	88
1201 Parking Brake Lever, Cable, and Mounting Hardware	89-1	89
1202 Service Brake Assembly	90-1	90
1204 Master Cylinder and Wheel Cylinder Assemblies.	91-1	91
1204 Air Hydraulic Unit and Vent Lines	92-1	92
1204 Front Axle Hydraulics	93-1	93
1204 Rear Axle Hydraulics	94-1	94
1206 Brake Pedal and Related Parts	95-1	95
1208 Air Reservoir and Mounting Hardware	96-1	96
1208 Air Reservoir and Mounting Hardware.	97-1	97
1208 Air Reservoir and Mounting Hardware	98-1	98
1208 Air Compressor to Governor and Air Reservoir	99-1	99
1208 Air Governor and Related Lines.	100-1	100
1208 Air Reservoir to Air Hydraulic Unit	101-1	101
1208 Rear Couplings and Related Parts	102-1	102
1208 Rear Coupling Air Lines and Mounting Hardware	103-1	103
1209 Air Compressor and Related Parts	104-1	104
1211 Check Valve to Air Hydraulic Unit	105-1	105
1211 Protection Valve to Check Valve to Tee	106-1	106
1211 Trailer Brake Control Valve and Lines	107-1	107
1211 Air Hook-Up to Trailer	108-1	108
 Group 13. WHEELS		
1311 Wheel and Disc Assembly	109-1	109
1311 Front Wheel Hub and Drum Assembly	110-1	110
1311 Rear Wheel Hub and Drum Assembly.	111-1	111
1313 Tire and Tube Assembly	112-1	112
 Group 14. STEERING		
1401 Drag Link Assembly	113-1	113
1401 Tie Rod Assembly	114-1	114
1401 Steering Gear Assembly	115-1	115
1401 Steering Wheel and Related Parts.	116-1	116
 Group 15. FRAME AND TOWING ATTACHMENTS		
1501 Frame Assembly	117-1	117
1501 Frame Shackle Assembly	118-1	118

TABLE OF CONTENTS (Continued)

	Page	Illus Figure
1503 Pintle Hook Assembly	119-1	119
1504 Spare Wheel Carrier and Related Parts	120-1	120
1504 Spare Wheel Carrier and Related Parts	121-1	121
1506 Fifth Wheel Mounting Hardware	122-1	122
1506 Fifth Wheel and Related Parts	123-1	123
1506 Fifth Wheel Breakdown	124-1	124
 Group 16. SPRINGS AND SHOCK ABSORBERS		
1601 Front Leaf Spring, Mounting Hardware, and Related Parts.	125-1	125
1601 Rear Leaf Spring, Mounting Hardware, and Related Parts	126-1	126
1604 Shock Absorber Assembly	127-1	127
1605 Torque Rods and Mounting Hardware.	128-1	128
 Group 18. BODY, CAB, AND HOOD		
1801 Door and Window Assembly.	129-1	129
1801 Cab Assembly Related Parts	130-1	130
1801 Cab Assembly and Mounting Hardware	131-1	131
1801 Hood Assembly and Related Parts	132-1	132
1802 Right Side Fender, Panel, and Related Parts	133-1	133
1802 Left Side Fender, Panel, and Related Parts	134-1	134
1802 Splash Shields and Related Parts	135-1	135
1802 Splash Guards	136-1	136
1802 Splash Guard and Related Parts	137-1	137
1802 Windshield Assembly and Mounting Hardware	138-1	138
1805 Cab Floor Tunnel and Mounting Hardware.	139-1	139
1806 Operator's Seat and Related Parts, Fixed	140-1	140
1806 Operator's Seat and Related Parts, Floating	141-1	141
1806 Companion Seat and Related Parts	142-1	142
1808 Tool Box Assemblies and Tie Down Straps	143-1	143
1810 Cargo Body and Long Wheel Base Body Mounting Hardware	144-1	144
1810 Long Wheel Base Body and Related Parts	145-1	145
1810 Dropside Tailgate and Related Parts and Cargo Body	146-1	146
1810 Cargo Body and Dropside Rack Assemblies	147-1	147
1810 Long Wheel Base Rack Assemblies	148-1	148
1810 Dump Body, Cab Shield, and Mounting Hardware	149-1	149
1810 Dump Body Tailgate, Controls, and Related Parts	150-1	150
1811 Water Tank Body Mounting Hardware	151-1	151
1811 Water Tank Body Parts	152-1	152
1811 Water Tank Body Manholes and Shutoff Assemblies	153-1	153
1811 Water Tank Filler Pipe and Manhole Assembly	154-1	154
1811 Water or Fuel Tank Delivery Pump	155-1	155
1811 Control Assembly and Related Parts	156-1	156
1811 Water and Fuel Discharge Valve Assembly	157-1	157
1811 Water Tank Discharge Tubes and Related Parts	158-1	158
1811 Water Tank Discharge Tubes and Related Parts	159-1	159
1811 Water Tank Gate Valve Assembly	160-1	160
1811 Water Tank Gate Valve Assembly	161-1	161
1811 Drive Shaft Assemblies	162-1	162
1811 Shaft Assemblies and Related Parts.	163-1	163
1811 Rear Compartment Doors (Water and Fuel) and Related Parts.	164-1	164

TABLE OF CONTENTS (Continued)

	Page	Illus Figure
1811 Water Nozzle Mounting Hardware and Related Parts	165-1	165
1811 Fuel Tank Body Mounting Hardware and Related Parts	166-1	166
1811 Fuel Nozzle, Hose, and Holder Assembly	167-1	167
1811 Fuel Tank Body Manhole, Cap, and Cover	168-1	168
1811 Delivery Pump and Gate Valve Assembly	169-1	169
1811 Discharge Tube and Valve Control	170-1	170
1811 Discharge Tube and Valve Control	171-1	171
1811 Seregator Assembly and Related Parst	172-1	172
1811 Segregator Element Test Valve and Related Parts	173-1	173
1811 Separator and Related Parts	174-1	174
1811 Fuel Tank Compartmen - Partial Explode	175-1	175
1811 Automatic Dump Valve and Sump Assembly	176-1	176
1811 Fuel Tank Rear Compartment	177-1	177
1811 Fuel Tank Overflow and Tubes and Related Parts	178-1	178
1812 Van Body Mouting Hardware	179-1	179
1812 Van Body Interior Panels	180-1	180
1812 Van Body Ceiling Panels	181-1	181
1812 Van Body Hardware and Related Parts	182-1	182
1812 Van Body Mounted Hardware	183-1	183
1812 Van Body Rear Doors Mounting Hardware and Related Parts	184-1	184
1812 Van Body Rear Doors and Related Parts	185-1	185
1812 Van Body Rear Doors Weatherstripping	186-1	186
1812 Van Body Windows and Related Parts	187-1	187
1812 Van Body Main Wiring Harness and Receptacle	188-1	188
1812 115- and 24-Volt Receptacle Harness and Related Parts	189-1	189
1812 Van Body Load Center and Related Parts	190-1	190
1812 Van Body Exterior Wiring Harness	191-1	191
1812 Van Body Exhaust Blower and Dome Light Assemblies	192-1	192
1812 Converter, Exhaust Blower, and Related Parts	193-1	193
1812 Earth Boring Body and Mounting Hardware	194-1	194
1812 Earth Boring Machine Gear Case Assembly and Related Parts	195-1	195
1812 Earth Boring Integral Derrick, Snatch Sheave Assembly, and Related Parts	196-1	196
1812 Feed Clutch, Clutch, Drive Clutch, and Brake Component	197-1	197
1812 Earth Boring, Horizontal Leveling Worm Drive Components	198-1	198
1812 Horizontal, Vertical Leveling Worm Drive Components	199-1	199
1812 Earth Boring Machine and Horizontal Leveling Assembly	200-1	200
1812 Earth Boring Machine Power Leveler Drive Housing and Shifting Handle Assembly	201-1	201
1812 Earth Boring Machine Intermediate Case and Gear Assembly	202-1	202
1812 Clutch Controls and Related Parts	203-1	203
1812 Main Drive Idler Gear and Related Parts	204-1	204
1812 Earth Boring Machine Propeller Shaft	205-1	205
1812 Outrigger Leg and Related Parts	206-1	206
1812 Hydraulic Cylinder and Related Parts	207-1	207
1812 Hydraulic Tank and Shield Assembly	208-1	208
1812 Outrigger Hydraulic System and Related Parts	209-1	209
1812 Earth Boring Machine Case	210-1	210
1812 Cab Protector, Operator's Seat, and Related Parts	211-1	211
1812 Pipeline Body, Toolbox, and Related Parts	212-1	212

TABLE OF CONTENTS (Continued)

	Page	Illus Figure
1812 Pipeline Body and Related Parts	213-1	213
1812 Pipeline RackAssemblies	214-1	214
1812 Pipeline Cab Protector and Stip Assembly	215-1	215
1812 Stiffleg Jack, Gin Pole, and Roller Assemblies	216-1	216
 Group 20. HOIST, WINCH, CAPSTAN, WINDLASS, POWER CONTROL UNIT, AND POWER TAKEOFF		
2001 Front Winch and Related Parts	217-1	217
2001 Rear Winch Basic Assembly	218-1	218
2001 Rear Winch Oil Drain Tubes and Mounting Hardware	219-1	219
2001 Rear Winch Drum Lock and Safety Brake Assemblies	220-1	220
2001 Rear Winch Sprocket, PTO Sprocket, and Drive Chain Assembly	221-1	221
2001 Rear Winch Controls and Linkage	222-1	222
2001 Rear Winch and Oil Drain Tubes	223-1	223
2001 Winch Break down and Related Parts	224-1	224
2001 Camiage Assembly and Related Parts	225-1	225
2001 Winch Drive Housing and Related Parts	226-1	226
2001 Reduction and Carriage Chain and Cable Assembly	227-1	227
2001 Rear Winch Controls and Linkage	228-1	228
2001 Front Winch Drive Shaft and Related Parts	229-1	229
2001 Subframe Assembly and Related Parts	230-1	230
2001 Driver's Control Lever and Related Parts	231-1	231
2001 Hydraulic Valve Control	232-1	232
2001 Dump Hoist Safety Latch	233-1	233
2001 Hydraulic Hoist Cylinder, Crosshead, Roller, and Related Parts	234-1	234
2001 Hydraulic Hoist Pump and Drive Shaft	235-1	235
2004 Power Takeoff Transmission and Power Takeoff Transfer Transmission	236-1	236
2004 Power Takeoff and Power Divider Controls	237-1	237
2004 Power Takeoff Linkage, Transfer Transmission	238-1	238
2004 Power Divider Assembly	239-1	239
2004 Rear Winch Drive Shaft Assembly	240-1	240
 Group 21. BUMPERS, GUARDS, AND MARINE FENDERS		
2101 Stone and Brush Guard and Mounting Hardware	241-1	241
 Group 22. BODY AND CHASSIS ACCESSORY ITEMS		
2201 Cab Soft Top Kit	242-1	242
2201 Bow and Tarp Kit	243-1	243
2201 Dumptruck Troop Seat and Cover Kit	244-1	244
2202 Windshield Wiper, Washer, and Related Parts	245-1	245
2202 Rearview and Convex Sideview Mirrors	246-1	246
2202 Reflectors and Mounting Hardware	247-1	247
2207 Personnel Heater and Related Parts	248-1	248
2207 Personnel Heater Inlet and Outlet Hose	249-1	249
2210 Data Plates	250-1	250
2210 Data Plates, Winch and Winch Protector	251-1	251
2210 Data Plates, Driver's Door, Console, and Instrument Panel	252-1	252
2210 Data Plates, Truck Bodies	253-1	253
2210 Data Plates, Fuel and Water Tankers, Rear Doors, and Cabinets.	254-1	254

TABLE OF CONTENTS (Continued)

	Page	Illus Figure
2210 Data Plates, Van Body	255-1	255
2210 Data Plates, Earth Boring Machine	256-1	256
2210 Data Plates, Winch and Winch Protector-Earth Boring	257-1	257
Group 33. SPECIAL PURPOSE KITS		
3303 Thermal Barrier Kit	258-1	258
3303 Hood and Radiator Cover Kit	259-1	259
3303 Diverter Assembly and Related Parts, Cargo Body Heater Kit	260-1	260
3303 Heater Tubing and Related Parts, Cargo Body Heater Kit . . .	261-1	261
3303 Heater Assembly and Support, Cargo Body Heater Kit	262-1	262
3303 Battery Box, Mounting Hardware, and Related Parts, Power Plant and Battery Heater Arctic Kit	263-1	263
3303 Heater, Shield, Shutoff, Tube Assembly, and Related Parts, Power Plant and Battery Heater Arctic Kit	264-1	264
3303 Diode, Control Box, and Related Parts, Power Plant and Battery Heater Arctic Kit	265-1	265
3303 Fuel Pump, Exhaust Assembly, and Related Parts, Primary Van Body Heater Kit	266-1	266
3303 Switches, Ducting, Support, and Related Parts, Primary Van Body Heater Kit	267-1	267
3303 Secondary Van Body Heater Kit	268-1	268
3303 Fuel Lines and Related Parts, Arctic Heater Kit	269-1	269
3303 Fuel Pump, Filter and Lines, and Related Parts, Arctic Heater Kit	270-1	270
3303 Fuel Lines, Harness, and Related Parts, Arctic Heater Kit	271-1	271
3303 Control Box, Covers, Hoses, and Related Parts, Arctic Heater Kit	272-1	272
3303 Ducting, Support, Harness, and Related Parts, Arctic Heater Kit	273-1	273
3303 Cover Plate, Latch, and Related Parts, Cab and Engine Swingfire Heater Kit	274-1	274
3303 Deflectors, Control Box Assembly, Covers, Harnesses, and Related Parts, Cab and Engine Swingfire Heater Kit . . .	275-1	275
3303 Receptacle Assembly, Adapters, and Related Parts, Cab and Engine Swingfire Heater Kit	276-1	276
3303 Battery Box Assembly, Insulation, and Related Parts, Cab and Engine Swingfire Heater Kit	277-1	277
3303 Fuel Pump, Filter Assembly, and Related Parts, Cab and Engine Swingfire Heater Kit	278-1	278
3303 Water Jacket, Tubes, and Related Parts, Cab and Engine Swingfire Heater Kit	279-1	279
3303 Swingfire Heater Assembly, Brackets, and Related Parts, Cab and Engine Swingfire Heater Kit	280-1	280
3303 Support and Related Parts, Cargo Body Arctic Enclosure Kit	281-1	281
3303 Mouthpiece Assembly, Tube Assembly, and Related Parts, Cargo Body Arctic Enclosure Kit	282-1	282
3303 Fire Extinguisher, Seats, Floor Sections, and Related Parts, Cargo Body Arctic Enclosure Kit	283-1	283
3303 Step Assembly, Closure Assemblies, and Related Parts, Cargo Body Arctic Enclosure Kit	284-1	284

TABLE OF CONTENTS (Continued)

		Illus Figure
3303	Closure Assembly and Related Parts, Cargo Body Arctic Enclosure Kit	285-1 285
3303	Support Panel, Clamping Strips, and Related Parts, Cargo Body Arctic Enclosure Kit	286-1 286
3303	Dome Light Assembly, Harnesses, and Related Parts, Cargo Body Arctic Enclosure Kit	287-1 287
3303	Side Rack and Seat Mounting Hardware, Cargo Body Swingfire Heater Kit	288-1 288
3303	Turbo Heater Assembly, Support, and Related Parts, Cargo Body Swingfire Heater Kit	289-1 289
3303	Step Assembly, Tarpaulin Assembly, and Related Parts, Cargo Body Swingfire Heater Kit	290-1 290
3303	Box Assembly, Guard, Exhaust, and Related Parts, Cargo Body Swingfire Heater Kit	291-1 291
3303	Engine Coolant Heater	292-1 292
3303	Heater, Vehicular Compartment, Model 10530-A24 and Model 10530B	293-1 293
3305	Deep Water Fording Kit	294-1 294
3307	A-Frame Kit	295-1 295
3307	Seatbelt Kit, Floating and Fixed	296-1 296
3307	Alcohol Evaporator Kit	297-1 297
3307	Hard top Closure Kit	298-1 298
3307	Slave Receptacle Kit	299-1 299
3307	Alternator Conversion Kit (60 Amperes)	300-1 300
3307	Alternator Conversion Kit (60 to 100 Amperes)	301-1 301
3307	Rectifier Shields, Shrouds, and Mounting Hardware, Rectified A. C. Generator Kit	302-1 302
3307	Rectifier, Regulator, Motor, and Related Parts, Rectified AC. Generator Kit	303-1 303
3307	Bracket, Cables, and Related Parts, Rectified A.C. Generator Kit	304-1 304
3307	Generator, Damper and Pulley Assembly, Gaskets, and Related Parts, Rectified A.C. Generator Kit	305-1 305
3307	Machine Gun Mount Kit	306-1 306
3307	Rifle Mounting Kit	307-1 307
3307	Decontamination Mounting Kit	308-1 308
3307	Chemical Agent Automatic Alarm Mounting Kit	309-1 309
3307	Fire Extinguisher Kit	310-1 310
3307	Low Air Pressure Warning Light Kit	311-1 311
3307	Trailer Air Brake Kit	312-1 312
3307	Air Horn Kit	313-1 313
3307	Meter Drain Kit	314-1 314
3307	Speed Control Cable Kit	315-1 315
3307	Front Bumper Stip Kit	316-1 316
3307	Raised Hood Kit	317-1 317
3307	Cab Reinforcement Kit	318-1 318
3307	Exhaust, Right Hand Mirror, and Cab Insulation Kit	319-1 319
3307	Mud Flap Kit	320-1 320
3307	Pioneer Tool Bracket Kit, Cargo	321-1 321
3307	Pioneer Tool Bracket Kit, Tanker and Dump	322-1 322
3307	Pioneer Tool Bracket Kit, Van and Tractor	323-1 323
3307	Mini Light Kit	324-1 324
3307	Center Mounted Troop Seat Kit	325-1 325

TABLE OF CONTENTS (Continued)

		Page	Illus Figure
Group 47.	GAGES (NON-ELECTRICAL)		
	4701 Speedometer and Related Parts	326-1	326
	4701 Tachometer and Related Parts	327-1	327
	4705 Meter	328-1	328
Group 94.	KITS	KITS-1	
	9401 Service Kits	KITS-1	
Group 95.	GENERAL USE STANDARDIZED PARTS	BULK-1	
	9501 Bulk	BULK-1	
Section III.	SPECIAL TOOLS		
Group 26.	SPECIAL TOOLS AND TEST EQUIPMENT		
	2604 Special Tools (Unit)	329-1	329
	2604 Special Tools (Direct Support)	330-1	330
	2604 Special Tools (Direct Support)	331-1	331
	2604 Special Tools (Direct Support)	332-1	332
	2604 Special Tools (General Support)	333-1	333
	2604 Special Tools (General Support)	334-1	334
	2604 Special Tools (General Support)	335-1	335
	2604 Special Tools (General Support)	336-1	336
Section IV.	CROSS-REFERENCE INDEXES		
	National Stock Number Index	I-1	
	Part Number Index	I-70	
	Figure and Item Number Index	I-230	

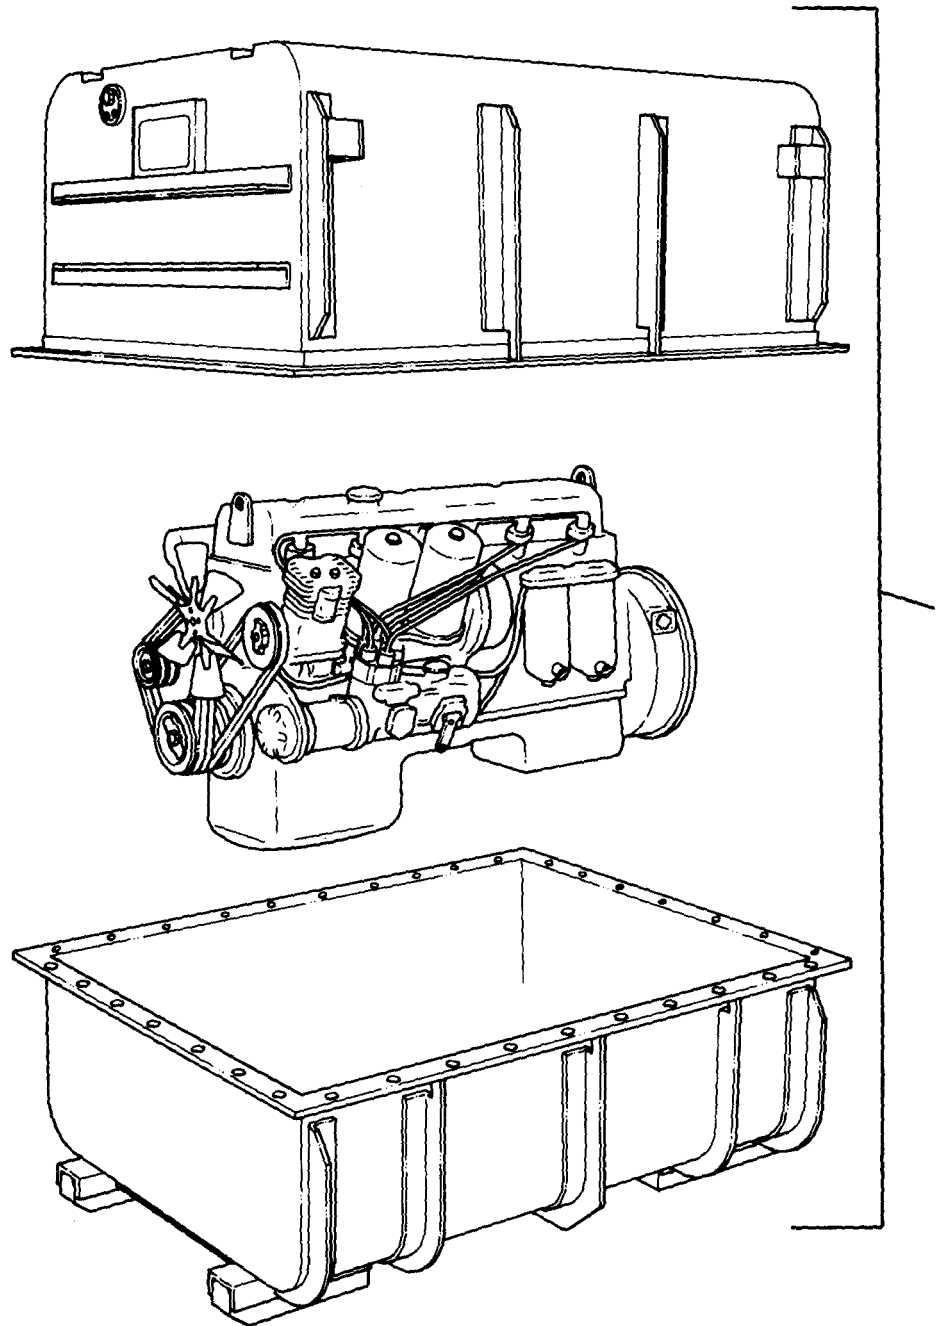 


Figure 1. Engine and Container.

SECTION II			TM9-2320-361-34P		
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART		
NO	CODE	CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES(UOC)	QTY

GROUP 01 ENGINE
0100 ENGINE ASSEMBLY

FIG. 1 ENGINE AND CONTAINER

1	PAFHD	19207	5705273	ENGINE WITH CONTAIN	1
---	-------	-------	---------	---------------------	---

END OF FIGURE

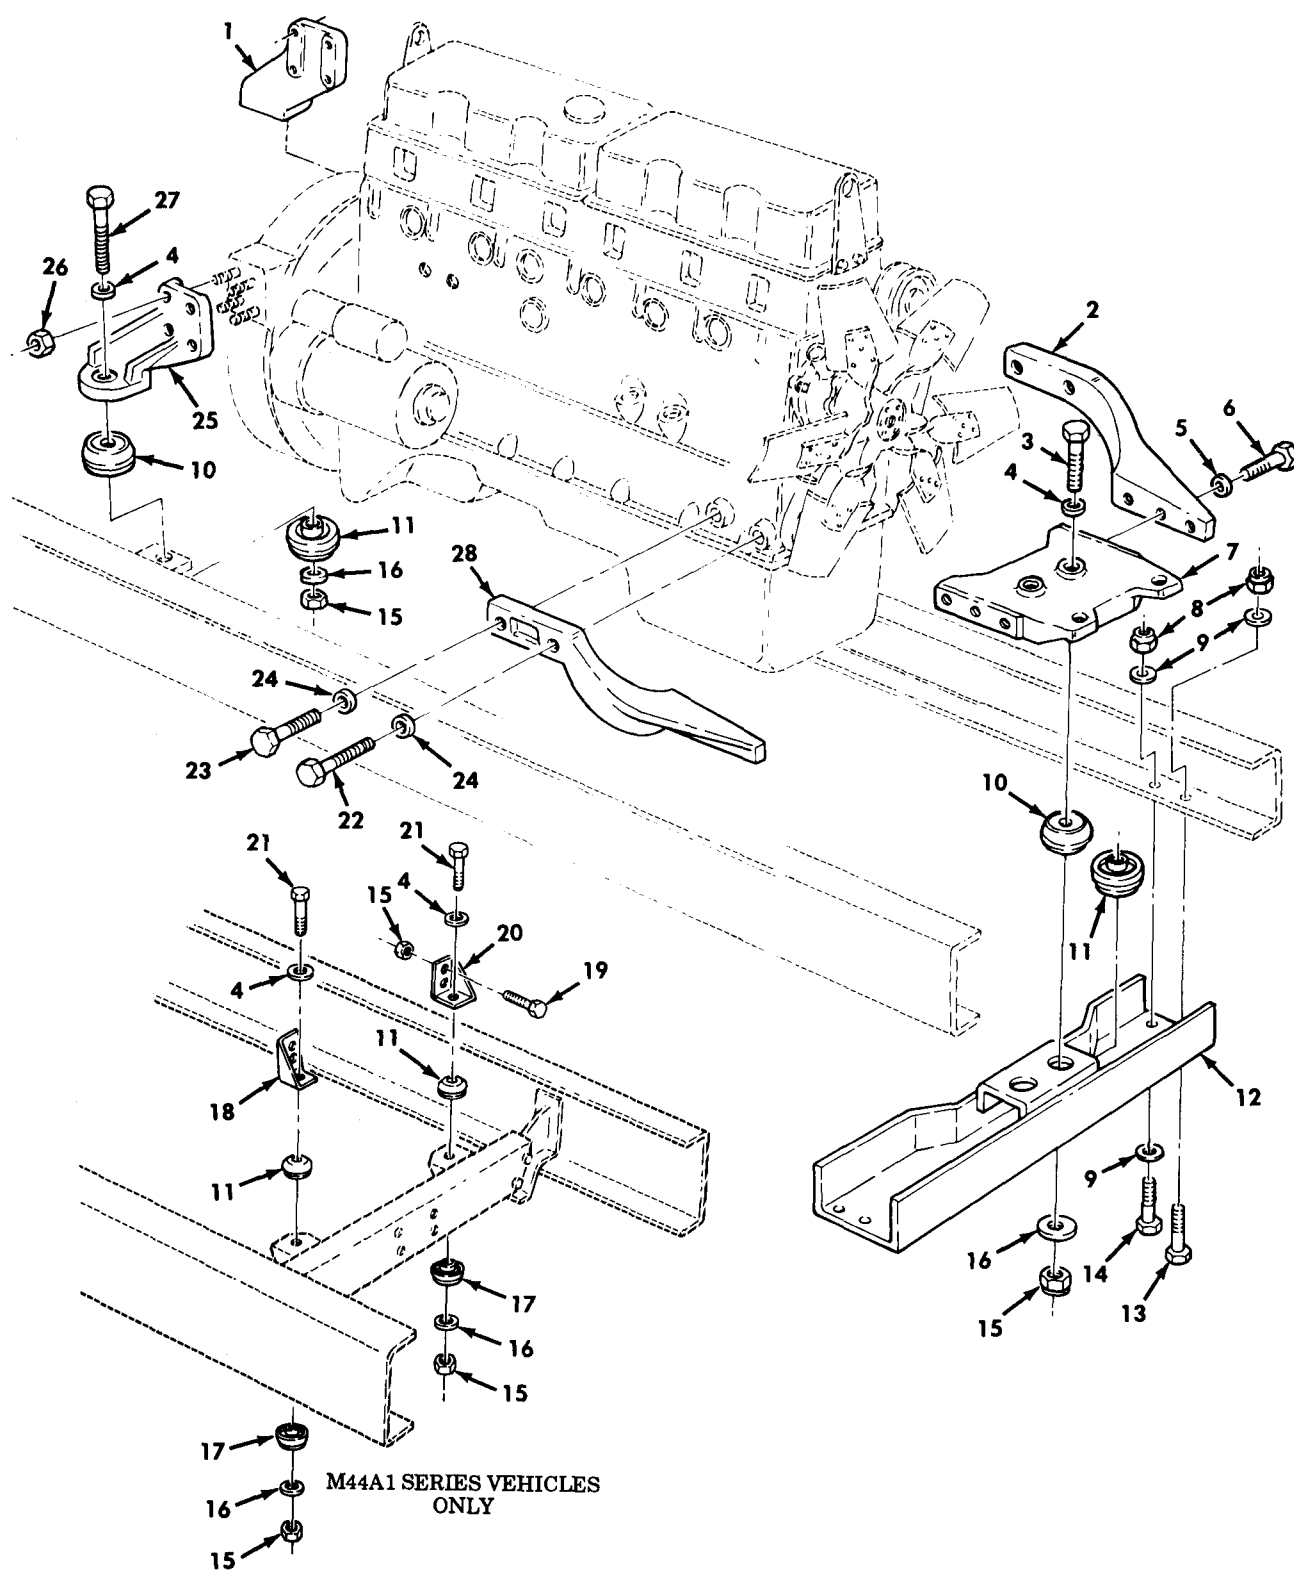 


Figure 2. Engine Mounting and Related Parts.

SECTION II			TM9-2320-361-34P		
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART		
NO	CODE	CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES(UOC)	QTY
GROUP 0100 ENGINE ASSEMBLY					
FIG. 2 ENGINE MOUNTING AND RELATED PARTS					
1	PAFZZ	19207	10896806	SUPPORT,ENGINE LEFT,REAR	1
2	PAFZZ	19207	11677072-1	SUPPORT,ENGINE MOUN LEFT	1
3	PAOZZ	19207	10872152-1	BOLT,SHOULDER	2
4	PAOZZ	19207	10872160	WASHER, FLAT	4
5	PAOZZ	19207	10937969-2	WASHER, FLAT	6
6	PAOZZ	96906	MS35764-1295	BOLT, SELF-LOCKING	6
7	PFOZZ	19207	11609698	PLATE, MOUNTING, ENGI	1
8	PAFZZ	19207	10937657	NUT, SELF-LOCKING, HE	4
9	PAFZZ	19207	10937876	WASHER, FLAT	6
10	PAOZZ	19207	7538641	MOUNT, RESILIENT UPPER	4
11	PAOZZ	19207	7538640	MOUNT, RESILIENT LOWER	4
12	PFFZZ	19207	11609268	FRAME SECTION, STRUC	1
13	PAFZZ	19207	10937875-3	BOLT, SHOULDER	2
14	PAFZZ	19207	10937875-2	BOLT, SHOULDER	2
15	PAOZZ	96906	MS51943-40	NUT, SELF-LOCKING, HE	4
				UOC: 435, 436, 490, 493, 512, 526, 537, 538, 542	
15	PAOZZ	96906	MS51943-40	NUT, SELF-LOCKING, HE	8
				UOC: B48, B95, B96, 437, 438, 444, 445, 446, 455, 456, 470, 483, 484, 503, 506, 507, 510, 511, 516, 527	
16	PAOZZ	19207	10897126	WASHER, FLAT	4
17	PAOZZ	06853	397A1	MOUNT, RESILIENT	2
				UOC: 435, 436, 490, 493, 512, 526, 537, 538, 542	
18	PAFZZ	19207	10896809	BRACKET, ANGLE	1
				UOC: 435, 436, 490, 493, 512, 526, 537, 538, 542	
19	PAFZZ	96906	MS18153-88	SCREW, CAP, HEXAGON H	4
				UOC: 435, 436, 490, 493, 512, 526, 537, 538, 542	
20	PAFZZ	19207	10896808	BRACKET, ANGLE	1
				UOC: 435, 436, 490, 493, 512, 526, 537, 538, 542	
21	PAOZZ	56442	2391B1	BOLT, SHOULDER	2
				UOC: 435, 436, 490, 493, 512, 526, 537, 538, 542	
22	PAFZZ	96906	MS35764-1579	BOLT, SELF-LOCKING	2
23	PAFZZ	96906	MS35764-1575	BOLT, SELF-LOCKING	2
24	PAFZZ	19207	10937969-1	WASHER, FLAT	2
25	PAFZZ	19207	10896807	SUPPORT,ENGINE RIGHT GEAR	1
26	PAFZZ	96906	MS51943-39	NUT, SELF-LOCKING, HE	8
27	PAFZZ	56442	2392B1	BOLT, SHOULDER	2
28	PAFZZ	19207	11677072-2	SUPPORT,ENGINE MOUN RIGHT	1
END OF FIGURE					

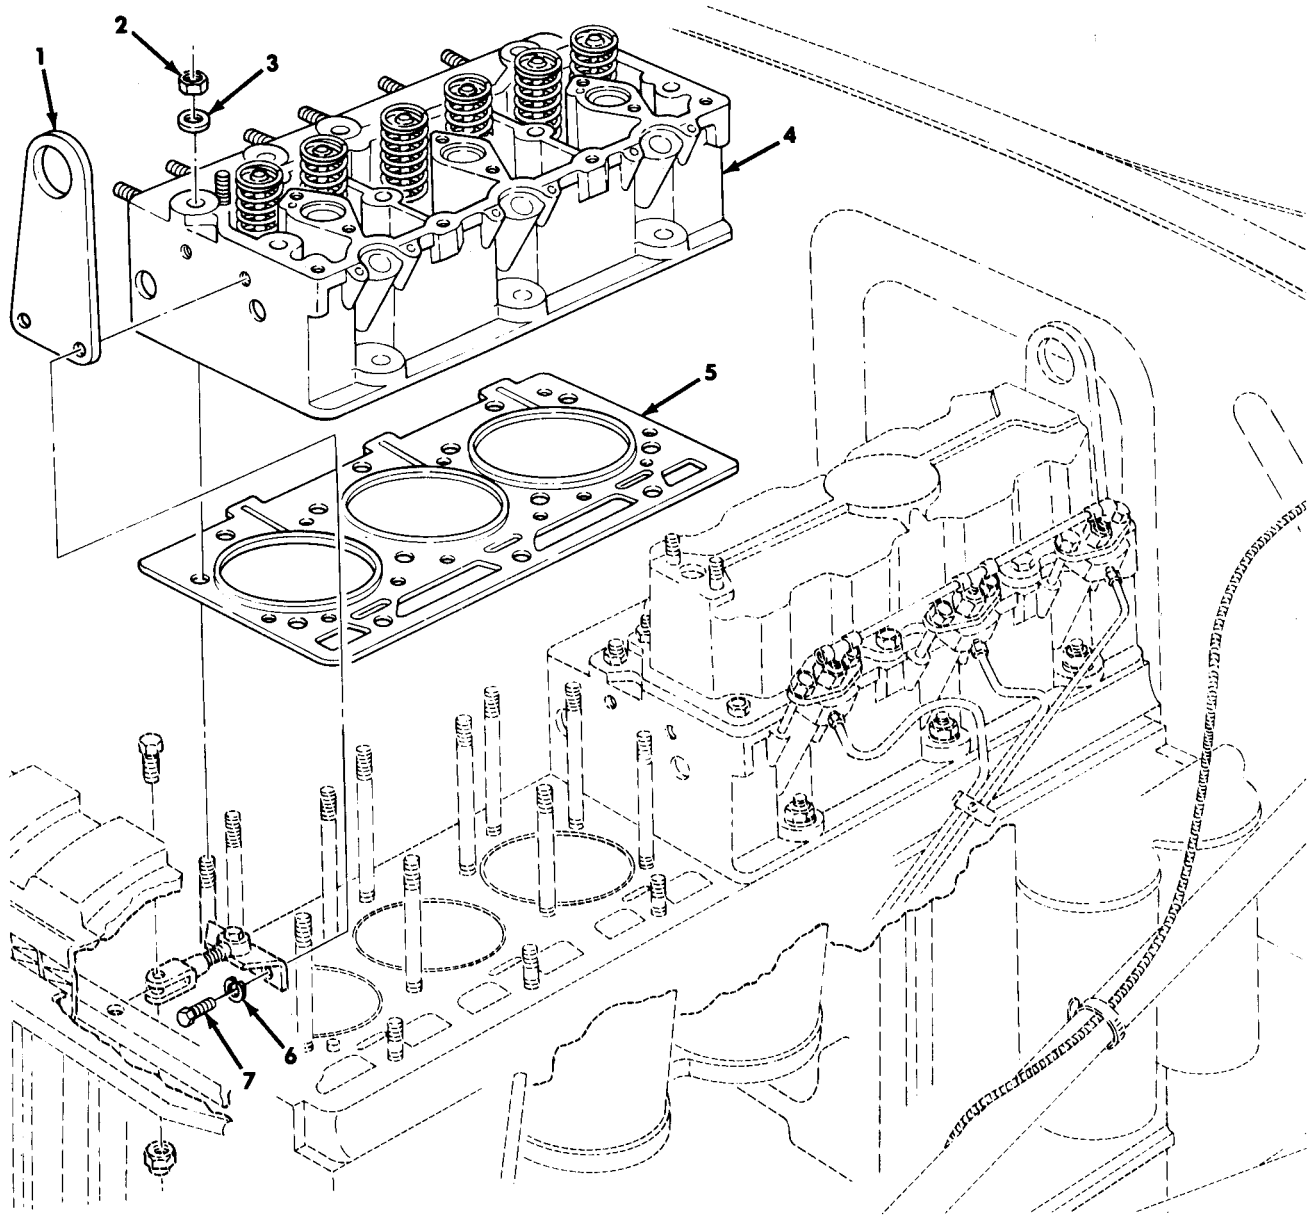 


Figure 3. Cylinder Head Assembly and Related Parts.

SECTION II		TM9-2320-361-34P			
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART		
NO	CODE	CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES(UOC)	QTY
				GROUP 0101 CRANKCASE, BLOCK, CYLINDER HEAD	
				FIG. 3 CYLINDER HEAD ASSEMBLY AND RELATED PARTS	
1	PAFZZ	19207	10889885	SPACER, PLATE	2
2	PAFZZ	19207	10898716	NUT, PLAIN, HEXAGON	28
3	PAFZZ	19207	10889774	WASHER, FLAT	28
4	PAFHH	19207	11682597	CYLINDER HEAD, DIESE SEE TM9-2815- 210-34P FOR REPAIR PARTS	2
5	PAFZZ	19207	10951428	GASKET	2
6	PAFZZ	96906	MS35340-47	WASHER, LOCK	4
7	PAFZZ	96906	MS90725-84	SCREW, CAP, HEXAGON H	4
				END OF FIGURE	

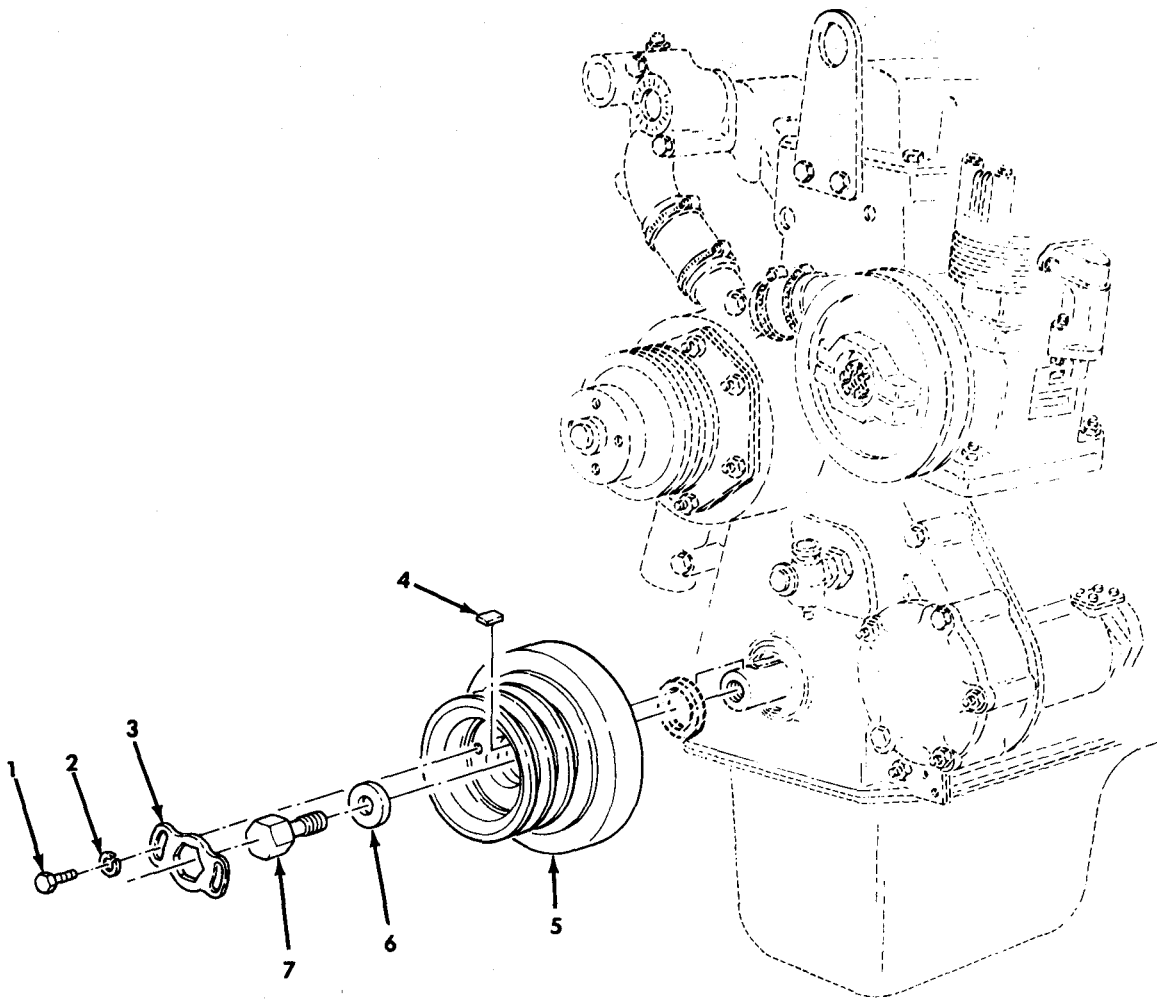 


Figure 4. Vibration Damper and Related Parts.

SECTION II				TM9-2320-361-34P	
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART		
NO	CODE	CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES(UOC) QTY	


GROUP 0102 CRANKSHAFT

FIG. 4 VIBRATION DAMPER AND RELATED PARTS

1	PAFZZ	96906	MS18154-58	SCREW,CAP, HEXAGON H	2
2	PAFZZ	12603	23E06	WASHER, LOCK	2
3	PAFZZ	14351	R6000200	RETAINER LOCK	1
4	PAFZZ	19207	11610011	PLUG, CRANKSHAFT	1
5	PBFZZ	19207	10935278	PULLEY AND DAMPENER	1
6	PAFZZ	19207	10889748	WASHER, FLAT	1
7	PAFZZ	19207	10889931	BOLT	1

END OF FIGURE

 1-2

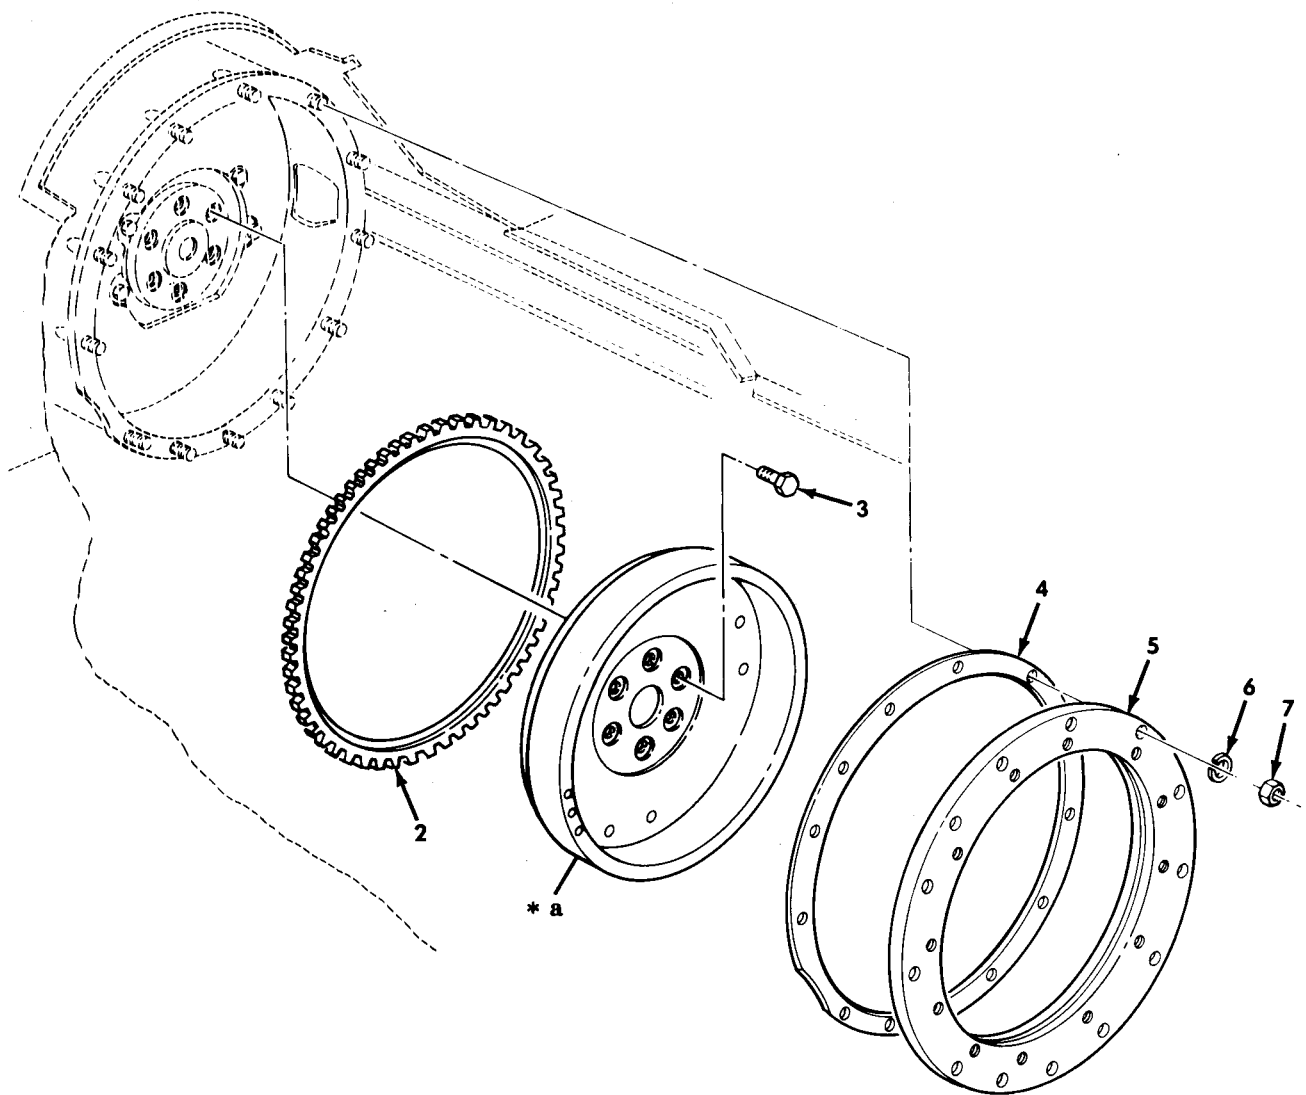

* a PART OF ITEM 1

Figure 5. Flywheel and Adapter Plate.

SECTION II				TM9-2320-361-34P	
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART		
NO	CODE	CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES(UOC)QTY	
GROUP 0103 FLYWHEEL ASSEMBLY					
FIG. 5 FLYWHEEL AND ADAPTER PLATE					
1	PAFHH	19207	10889801	FLYWHEEL, ENGINE	1
2	PAHZZ	19207	8386479	GEAR, SPUR	1
3	PAFZZ	19207	10898724	BOLT, SELF-LOCKING	6
4	PAFZZ	19207	10899062	GASKET	1
5	PAFZZ	19207	10912491	ADAPTER, TRANSMISSIO	1
6	PAFZZ	96906	MS35340-46	WASHER, LOCK	13
7	PAFZZ	96906	MS51967-8	NUT, PLAIN, HEXAGON	13

END OF FIGURE