

**UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LIST)
FOR**

**CARRIER, CARGO, TRACKED, 6-TON
M548A1
(2350-01-096-9356)**

**CARRIER, CARGO, TRACKED, 6-TON
M548A3
(2350-01-369-6081)**

This publication supersedes TM 9-2350-247-24P, dated 15 August 1994.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY

March 2003

TECHNICAL MANUAL
NO. 9-2350-247-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington D.C., 30 March 2003

**UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST)
FOR**

**CARRIER, CARGO, TRACKED, 6-TON
M548A1
(2350-01-096-9356)**

**CARRIER, CARGO, TRACKED, 6-TON
M548A3
(2350-01-369-6081)**

CURRENT AS OF JUNE 2002

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this publication. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Submit your DA Form 2028 (Recommended Changes to Publications and Blank Forms), through the Internet, on the Army Electronic Product Support (AEPS) website. The Internet address is <http://aeps.ria.army.mil>. If you need a password, scroll down and click on "ACCESS REQUEST FORM". The DA Form 2028 is located in the ONLINE FORMS PROCESSING section of the AEPS. Fill out the form and click on SUBMIT. Using this form on the AEPS will enable us to respond quicker to your comments and better manage the DA Form 2028 program. You may also mail, fax or E-mail your letter, DA Form 2028 direct to: AMSTA-LC-CI/TECH PUBS, TACOM-RI, 1 Rock Island Arsenal, Rock Island, IL 61299-7630. The email address is TACOM-TECH-PUBS@ria.army.mil. The fax number is DSN 793-0726 or Commercial (309) 782-0726.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

This publication supersedes TM 9-2350-247-24P, dated 15 August 1994.

TABLE OF CONTENTS

	<u>PAGE</u>	<u>ILLUS FIGURE</u>
SECTION I INTRODUCTION.....	1	
SECTION II REPAIR PARTS LIST		
Group 01 ENGINE		
0100 Engine and Shipping Container	1-1	1
0100 Engine Front Mounting	2-1	2
0100 Engine Assembly Attaching Parts	3-1	3
0100 Power Plant Rear Mounting.....	4-1	4
0101 Air Box Drain and Related Parts.....	5-1	5
0101 Cylinder Head Assembly and Lifting Brackets	6-1	6
0102 Drive Pulley and Hardware	7-1	7
0103 Drive Plate, Flywheel and Housing.....	8-1	8
0105 Rocker Arm Covers	9-1	9
0105 Rocker Arm Covers	10-1	10
0106 Deleted.....	11-1	11
0106 Oil Pan and Oil Gage Assembly	12-1	12
0106 Oil Pan and Oil Gage Assembly	13-1	13
0106 Oil Filter Assembly and Adaptor	14-1	14
0106 Oil Filter Assembly, Adaptor, and Related Parts	15-1	15
0106 Engine Oil Gage Rod.....	16-1	16
0106 Engine Oil Filler Neck	17-1	17
0106 Engine Oil Filter Mounting and Hoses	18-1	18
0106 Engine Oil Hoses and Fittings	19-1	19
0106 Engine Lubrication System	20-1	20
0108 Exhaust Manifold	21-1	21
Group 03 FUEL SYSTEM		
0302 Fuel Pump Assembly and Drive	22-1	22
0302 Fuel Lines and Fittings.....	23-1	23
0302 Fuel Lines and Fittings.....	24-1	24
0304 Air Cleaner Filter.....	25-1	25
0304 Air Cleaner Filter Indicator, Hoses and Fittings	26-1	26
0304 Air Cleaner Installation and Ducts	27-1	27
0304 Air Cleaner Assembly	28-1	28
0304 Air Cleaner Hoses and Fittings	29-1	29
0305 Turbocharger and Related Parts	30-1	30
0305 Deleted.....	31-1	31
0306 Fuel Lines and Fittings.....	32-1	32
0306 Fuel Lines and Fittings.....	33-1	33
0306 Primary Fuel Filter Air Separator Tubes and Fittings	34-1	34
0306 Air Separator and Tube Fittings.....	35-1	35
0306 Fuel Filler Neck and Tank Fittings	36-1	36
0306 Secondary Fuel Filter Hoses and Fittings.....	37-1	37
0306 Engine Fuel Filter Lines.....	38-1	38
0309 Fuel Filter and Strainer Assemblies.....	39-1	39
0311 Air Box Heater Related Parts	40-1	40
0311 Air Box Heater Related Parts	41-1	41
0311 Air Box Heater Assembly.....	42-1	42
0311 Air Pump, Ignition Coil, and Related Parts	43-1	43
0312 Throttle and Fuel Controls	44-1	44
0312 Throttle and Fuel Cutoff Controls	45-1	45
0312 Accelerator Pedal and Linkage.....	46-1	46

TABLE OF CONTENTS (cont)

	<u>PAGE</u>	<u>ILLUS FIGURE</u>
0312 Accelerator Pedal	47-1	47
0312 Fuel Control Linkage.....	48-1	48
0312 Fuel Control Linkage.....	49-1	49
Group 04 EXHAUST SYSTEM		
0401 Muffler and Exhaust Pipes.....	50-1	50
0401 Exhaust System Installation	51-1	51
Group 05 COOLING SYSTEM		
0501 Radiator and Mounting	52-1	52
0501 Radiator	53-1	53
0503 Thermostat, Housing, Lines, and Fittings	54-1	54
0503 Radiator Hoses, Lines and Fittings.....	55-1	55
0503 Radiator Hoses, Lines and Fittings.....	56-1	56
0504 Cooler Pump Assembly, Idler Pulley and Belt Set	57-1	57
0505 Fan and Fan Drive	58-1	58
0505 Fan and Fan Drive Installation.....	59-1	59
0505 Fan Belt Idler	60-1	60
0505 Fan Belt Idler	61-1	61
0505 Vaneaxial Fan Assembly	62-1	62
0505 Fan Ventilating.....	63-1	63
0505 Right Angle Drive, Cooling Fan	64-1	64
Group 06 ELECTRICAL SYSTEM		
0601 Generator Mounting and Belt Set – 100 AMP	65-1	65
0601 Generator Mounting and Belt Set – 200 AMP	66-1	66
0601 Generator and Mounting Hardware	67-1	67
0601 200 AMP Generator	68-1	68
0602 Regulator and Mounting Bracket	69-1	69
0602 Regulator and Mounting Hardware.....	70-1	70
0603 Starter and Mounting Hardware	71-1	71
0603 Starter Lead	72-1	72
0603 Starter Motor Relay and Leads.....	73-1	73
0607 Instrument Panel and Attaching Parts	74-1	74
0607 Instrument Panel and Attaching Parts	75-1	75
0607 Instrument Panel Indicators	76-1	76
0607 Instrument Panel Switches	77-1	77
0607 Instrument Panel Lights and Switches	78-1	78
0607 Instrument Panel Lights and Switches	79-1	79
0607 Circuit Breakers	80-1	80
0607 Circuit Breakers	81-1	81
0607 Master Switch and Electrical Leads.....	82-1	82
0608 Beam Selector, Stoplight and Hand Brake Switches	83-1	83
0609 Blackout Headlight Assembly	84-1	84
0609 Service and Infrared Headlight Assembly	85-1	85
0609 Stoplight and Taillight Assembly, Left.....	86-1	86
0609 Stoplight and Taillight Assembly, Right	87-1	87
0609 Dome Light	88-1	88
0609 Blackout Marker Light	89-1	89
0610 Engine Sending Units and Warning Switches	90-1	90
0610 Engine Sending Units and Warning Switches	91-1	91
0611 Horn Assembly and Ground Lead	92-1	92

TABLE OF CONTENTS (cont)

	<u>PAGE</u>	<u>ILLUS FIGURE</u>
0612 Batteries and Mounting Parts	93-1	93
0612 Batteries and Mounting Parts	94-1	94
0612 Electrical Leads, Battery	95-1	95
0612 Battery Leads.....	96-1	96
0613 Instrument Panel and Fuel Pump Wiring Harness Attaching Parts.....	97-1	97
0613 Wiring Harness Attaching Hardware	98-1	98
0613 Main Wiring Harness Attaching Parts.....	99-1	99
0613 Wiring Harness Attaching Parts.....	100-1	100
0613 Main Wiring Harness	101-1	101
0613 Main Wiring Harness	102-1	102
0613 Instrument Panel Wiring Harness.....	103-1	103
0613 Instrument Panel Wiring Harness.....	104-1	104
0613 Generator to Regulator Wiring Harness	105-1	105
0613 Generator Wiring Harness, Branched	106-1	106
0613 Wiring Harness, Branched.....	107-1	107
0613 Wiring Harness, Attaching Hardware	108-1	108
0613 Transmission Controller Wiring Harness	109-1	109
0613 Bilge Pump Lead, Electrical.....	110-1	110
0613 Personnel Heater Wiring Harness and Attaching Hardware	111-1	111
0613 Radio and Heater Control Box Wiring Harness.....	112-1	112
0613 Heater Control Box Wiring Harness	113-1	113
0613 Power Plant Wiring Harness Attaching Hardware	114-1	114
0613 Power Plant Wiring Harness.....	115-1	115
0613 Transmission Wiring Harness Attaching Hardware.....	116-1	116
0613 Regulator to Hull Wiring Harness	117-1	117
0613 Engine Ground Lead.....	118-1	118
0613 Trailer Light Wiring Harness	119-1	119
0613 Left Taillight Wiring Harness.....	120-1	120
0613 Fuel Pump Wiring Harness.....	121-1	121
0613 Fuel Pump Wiring Harness.....	122-1	122
0613 Differential Oil Temperature Lead	123-1	123
 Group 07 TRANSMISSION		
0700 Transmission with Shipping Container	124-1	124
0700 Transmission Assembly and Associated Parts	125-1	125
0700 Transmission Filler Neck and Level Gage.....	126-1	126
0700 Transmission Attaching Hardware.....	127-1	127
0700 Power Train Mounts Installation	128-1	128
0705 Shift Tower Installation	129-1	129
0708 Tow Start Installation	130-1	130
0710 Right Hand Cover and Center Housing	131-1	131
0710 Output Driven Gear and Steer Shaft Drive Gear	132-1	132
0710 Left Hand Cover.....	133-1	133
0710 Top Cover	134-1	134
0710 Input Housing.....	135-1	135
0710 Center Housing and Hydrostatic Pump and Motor.....	136-1	136
0710 Deleted.....	137-1	137
0710 Right Hand End Cover and Brake Apply Cam Shaft	138-1	138
0710 Transmission Range Selector and Linkage.....	139-1	139
0710 Transmission Range Selector and Switch.....	140-1	140
0710 Transmission Oil Filler Neck.....	141-1	141
0710 Oil Pan and Output Shaft.....	142-1	142

TABLE OF CONTENTS (cont)

	<u>PAGE</u>	<u>ILLUS FIGURE</u>
0714 Deleted.....	143-1	143
0714 G2 Backup, Priority Valve and Oil Transfer Plate	144-1	144
0721 Filter Cover Assembly and Filter Element	145-1	145
0721 Transmission Oil Valve and Attaching Parts	146-1	146
0721 Transmission Oil Cooler Hoses and Fittings	147-1	147
0721 Transmission Oil Cooler Lines and Fittings	148-1	148
0721 Oil Pumps and Filter	149-1	149
 Group 08 TRANSFER AND FINAL DRIVE ASSEMBLIES		
0801 Transfer Gearcase and Mounting Parts	150-1	150
0801 Transfer Gearcase	151-1	151
0801 Final Drive Assembly	152-1	152
0801 Final Drive Assembly	153-1	153
0801 Engine Disconnect Lever and Support	154-1	154
0801 Engine/Transfer Case Quick Disconnect.....	155-1	155
0801 Transfer Gearcase Oil Filler and Drain.....	156-1	156
 Group 09 PROPELLER, PROPELLER SHAFT, UNIVERSAL JOINTS COUPLER AND CLAMP ASSEMBLY		
0900 Propeller Shafts and Component Parts, 7C and 6C U-Joints	157-1	157
0900 Propeller Shafts	158-1	158
 Group 11 REAR AXLE		
1124 Final Drive and Filler.....	159-1	159
1124 Differential and Mounting Parts	160-1	160
1124 Differential Oil Filter Lines and Fittings.....	161-1	161
1124 Differential Oil Filter Assembly	162-1	162
1124 Differential Steering Control	163-1	163
1124 Differential Steering Control	164-1	164
1124 Right Angle Gear Box, Differential.....	165-1	165
 Group 12 BRAKES		
1206 Linkage Control, Brakes	166-1	166
1206 Lever, Brake Control.....	167-1	167
 Group 13 WHEELS AND TRACKS		
1301 Torsion Bar and Anchors.....	168-1	168
1301 Roadwheel Support Arm.....	169-1	169
1303 Idler Arm Assembly.....	170-1	170
1303 Track Tension Adjuster Assembly	171-1	171
1303 Track Tension Adjuster	172-1	172
1303 Idler Wheels.....	173-1	173
1304 Track Drive Sprockets	174-1	174
1305 Track Shoe Assembly.....	175-1	175
1311 Roadwheel and Mounting Parts	176-1	176
 Group 14 STEERING		
1401 Steering Components	177-1	177
1401 Steering Connecting Links.....	178-1	178
1403 Differential Steering Levers and Linkage.....	179-1	179
1403 Differential Steering and Linkage	180-1	180
1403 Pivot Steer, Brake Lines and Fittings	181-1	181

TABLE OF CONTENTS (cont)

	<u>PAGE</u>	<u>ILLUS FIGURE</u>
1403 Pivot Steer, Brake Assembly	182-1	182
1403 Steering Brakes, Master Brake Cylinder	183-1	183
1403 Brake, Single Disk, Pivot	184-1	184
 Group 15 FRAME, TOWING ATTACHMENTS, AND DRAWBARS		
1503 Towing Pintle	185-1	185
1503 Vehicle Towing and Tie Down Eyes	186-1	186
 Group 16 SPRINGS AND SHOCK ABSORBERS		
1604 Shock Absorber Assembly	187-1	187
 Group 18 BODY, CAB, HOOD AND HULL		
1801 Lifting Eyes	188-1	188
1801 Brake System Mounting Provision.....	189-1	189
1801 Air Cleaner Mounting Provision	190-1	190
1801 Steering System Mounting Provision.....	191-1	191
1801 Screw Thread Inserts.....	192-1	192
1801 Track Covers	193-1	193
1801 Compartment Doors	194-1	194
1801 Compartment Windows	195-1	195
1801 Heater Duct and Exhaust Hold Covers.....	196-1	196
1801 Engine Access Panel and Beams	197-1	197
1801 Support Beams and Engine Grilles	198-1	198
1801 Cab Cover.....	199-1	199
1802 Windshield Assembly.....	200-1	200
1805 Floor Plates and Covers	201-1	201
1805 Floor Plates.....	202-1	202
1806 Personnel Seats	203-1	203
1806 Personnel Seats	204-1	204
1806 Driver's Seat and Mount	205-1	205
1808 Stowage Pads and Straps	206-1	206
1810 Cargo Compartment Door	207-1	207
1810 Tailgate and Mounting Parts.....	208-1	208
 Group 20 HOIST, WINCH, CAPSTAN, WINDLASS, POWER CONTROL UNIT AND POWER TAKE OFF		
2001 Winch Installation.....	209-1	209
2001 Winch Drum and Clutch.....	210-1	210
2001 Winch Gears	211-1	211
2002 Gearcase and Shafts	212-1	212
2002 Winch Transfer Gearcase.....	213-1	213
2004 Power Take-Off and Mounting Hardware	214-1	214
 Group 22 BODY CHASSIS OR HULL AND ACCESSORY ITEMS7		
2201 Canvas Cover and Bows	215-1	215
2201 Canvas Cover and Straps.....	216-1	216
2202 Windshield Wiper and Motor	217-1	217
2205 Forward Bilge Pump and Tubes	218-1	218
2207 Vehicle Compartment Heater and Covers.....	219-1	219
2207 Vehicle Compartment Heater Components.....	220-1	220

TABLE OF CONTENTS (cont)

	<u>PAGE</u>	<u>ILLUS FIGURE</u>
2207 Vehicle Compartment Heater Ducts and Hoses.....	221-1	221
2207 Vehicle Compartment Heater Fuel Lines Attaching Parts.....	222-1	222
2207 Fuel Filter/Separator.....	223-1	223
2210 Data Plates and Markers.....	224-1	224
2210 Data Plates.....	225-1	225
2210 Stowage Markers.....	226-1	226
2210 Decals.....	227-1	227
2210 Decals.....	228-1	228
 Group 26 TOOLS AND TEST EQUIPMENT (REPAIR PARTS)		
2604 Sling, Beam Type.....	229-1	229
2606 Rheostat, Portable.....	230-1	230
2606 Wiring Harness, Accessory Kit.....	231-1	231
 Group 33 SPECIAL PURPOSE KITS		
3303 Personnel Cab Heater Kit, Lines and Fittings.....	232-1	232
3303 Personnel Cab Heater Kit, Fan Assembly.....	233-1	233
3303 Heater Kit Wiring Harness.....	234-1	234
3303 Personnel Cab Heater, Ducts and Fittings.....	235-1	235
3303 Personnel Cab Heater, Insulated Cover.....	236-1	236
3303 Personnel Heater Kit Cab Cover.....	237-1	237
3303 Cab Insulation Kit.....	238-1	238
3303 Cab Insulation Kit.....	239-1	239
3303 Cargo Area Heater Lines and Fittings (Primary).....	240-1	240
3303 Cargo Area Heater Assembly.....	241-1	241
3303 Heater Control Box Assembly.....	242-1	242
3303 Cargo Area Heater Wiring Harness.....	243-1	243
3303 Cargo Area Heater Wiring Harness.....	244-1	244
3303 Cargo Area Cover (Secondary).....	245-1	245
3303 Cargo Area Covers (Secondary).....	246-1	246
3303 Cargo Area Cover.....	247-1	247
3303 Cargo Area Cover.....	248-1	248
3303 Engine Coolant Heater Hoses and Fittings.....	249-1	249
3303 Engine Coolant Heater Assembly.....	250-1	250
3303 Pump, Heater and Attaching Hardware.....	251-1	251
3303 Engine Coolant Heater Hoses and Fittings.....	252-1	252
3303 Hoses and Fittings.....	253-1	253
3303 Engine Coolant Heater Wiring Harness.....	254-1	254
3303 Control Box and Attaching Hardware.....	255-1	255
3307 Hoist and Beam Material Handling Kit.....	256-1	256
3307 Material Handling Kit, Cushions, Racks and Straps.....	257-1	257
3307 Air Compressor and Drive Belts.....	258-1	258
3307 Air Tank, Hoses and Fittings.....	259-1	259
3307 Air Brake Treadle Valve, Hoses and Fittings.....	260-1	260
3307 Air Brake Pedal.....	261-1	261
3307 Air Brake Hose.....	262-1	262
3307 Front Directional Signal Light Kit.....	263-1	263
3307 Rear Directional Signal Light Kit.....	264-1	264
3307 Front Turn Signal Light Assembly.....	265-1	265
3307 Front Turn Signal Wiring Harness.....	266-1	266
3307 Right Stop and Taillight Assembly.....	267-1	267
3307 Right Rear Stop Light.....	268-1	268

TABLE OF CONTENTS (cont)

	<u>PAGE</u>	<u>ILLUS FIGURE</u>
3307 Right Turn Signal Wiring Harness	269-1	269
3307 Trailer Light Wiring Harness	270-1	270
3307 Right Stop Light Extension Lead	271-1	271
3307 Turn Signal Control Assembly	272-1	272
3307 ODS Straps and Covers	273-1	273
 Group 47 GAGES, WEIGHING AND MEASURING DEVICES		
4701 Speedometer Shaft Assembly and Mounting	274-1	274
4701 Speedometer Drive Shaft	275-1	275
4701 Tachometer Shaft Assembly and Mounting.....	276-1	276
4701 Tachometer Drive Shaft.....	277-1	277
 Group 76 FIRE FIGHTING EQUIPMENT COMPONENTS		
7639 Fire Extinguisher.....	278-1	278
 Group 91 CHEMICAL, BIOLOGICAL, AND RADIOLOGICAL (CBR) EQUIPMENT		
9111 NBC Installation	279-1	279
9111 NBC Installation	280-1	280
9111 NBC Installation	281-1	281
9111 Air Purifier/Precleaner Assembly.....	282-1	282
 Group 94 REPAIR KITS		
9401 Repair Kits	KITS	
 Group 95 BULK MATERIALS		
9501 Bulk Material	Bulk-1	Bulk
 SECTION III SPECIAL TOOLS LIST		
 Group 26 TOOLS AND TEST EQUIPMENT		
2604 Unit Maintenance Special Tools	283-1	283
2604 Unit Maintenance Special Tools	284-1	284
2604 Direct Support Special Tools	285-1	285
2604 General Support Special Tools.....	286-1	286
2604 Engine Special Tools	287-1	287
2604 Engine Special Tools	288-1	288
2604 Transmission Special Tools.....	289-1	289
 SECTION IV CROSS REFERENCE INDEXES		
NATIONAL STOCK NUMBER INDEX	I-1	
PART NUMBER INDEX	I-37	

**UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST)**

Section I. INTRODUCTION

1. Scope

This RPSTL lists and authorizes spares and repair parts; special tools; Special Test, Measurement, and Diagnostic Equipment (TMDE); and other special support equipment required for performance of Unit Maintenance, Direct Support and General Support Maintenance of the M548A1 and M548A3 vehicles. This RPSTL authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the Source, Maintenance, and Recoverability (SMR) codes.

2. General

In addition to Section I, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts, which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in this section. Items listed are shown on the associated illustration(s)/figure(s).

b. Section III. Special Tools List. A list of special tools, special TMDE and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE columns) for the performance of maintenance.

c. Section IV. Cross-reference Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross-reference NSN, CAGE and part number.

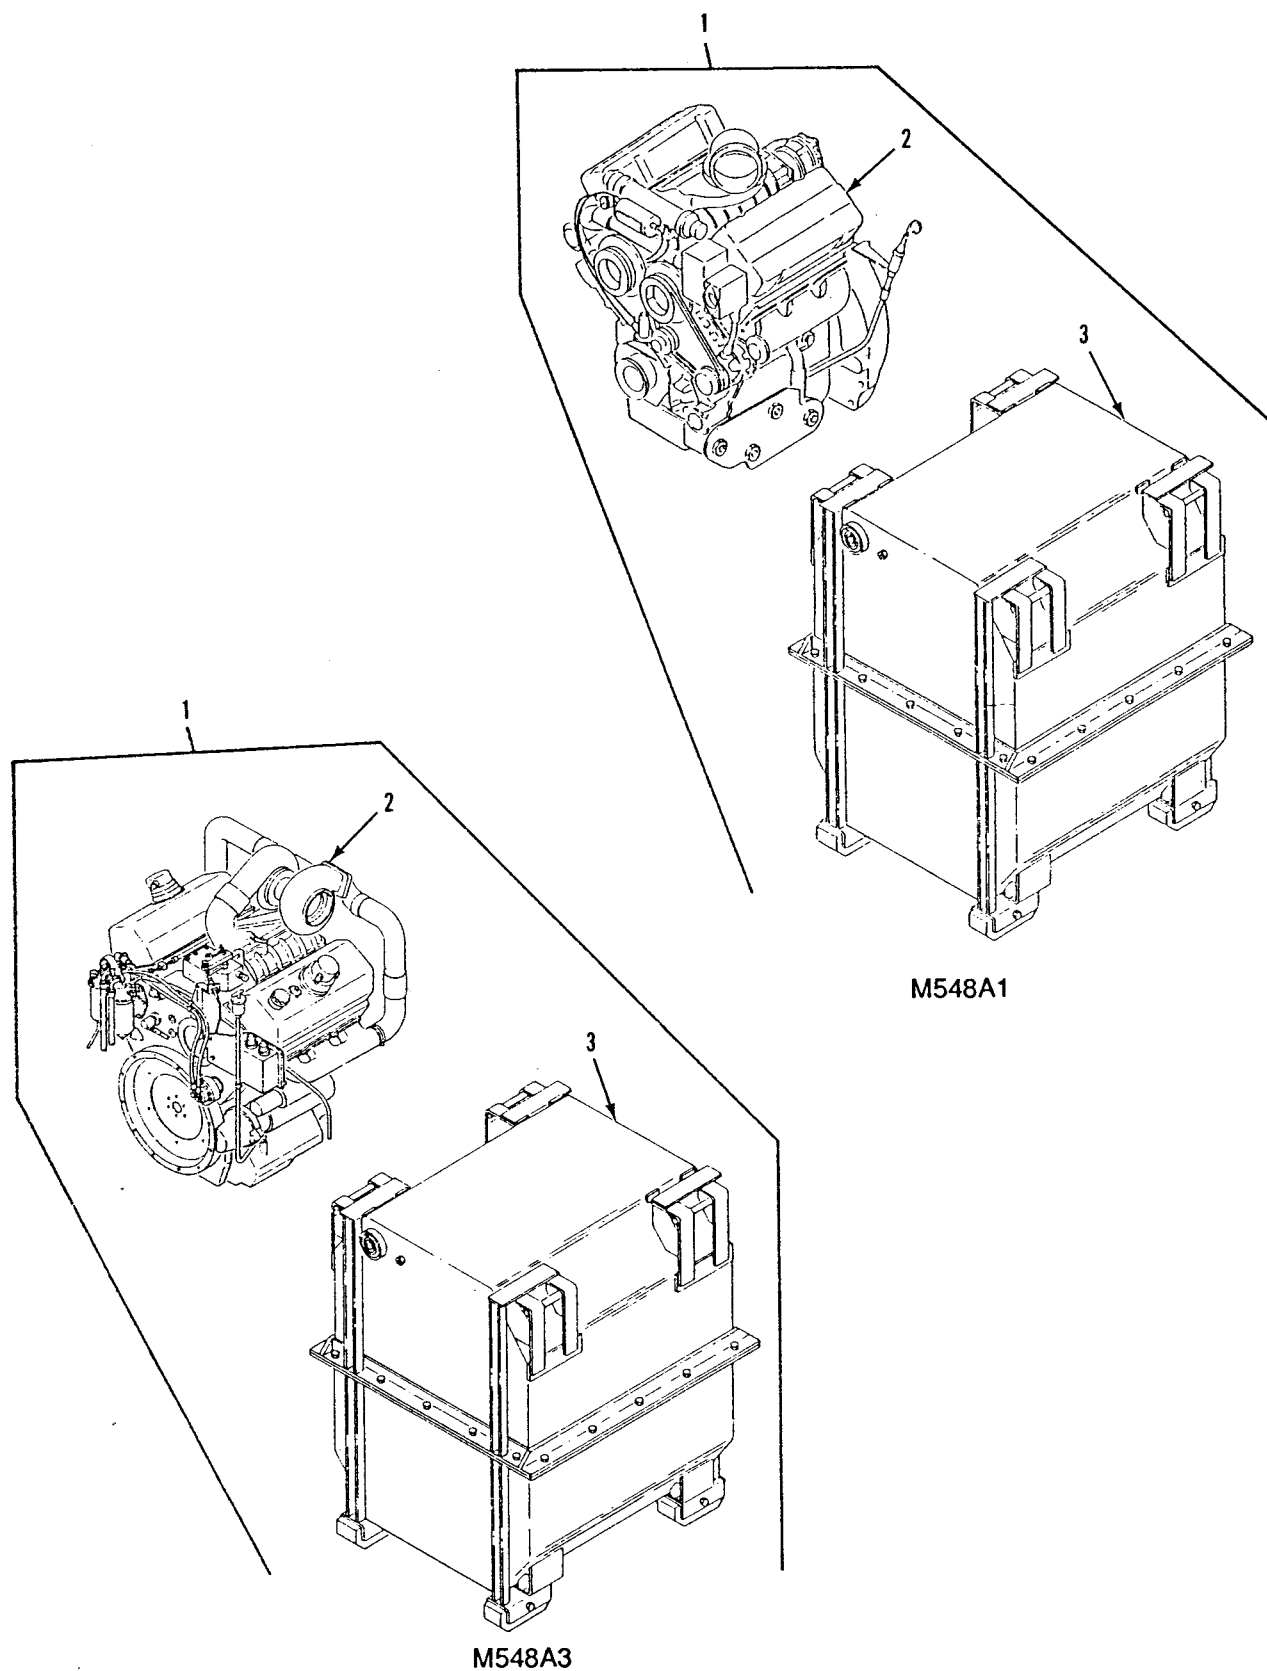 


Figure 1. Engine and Shipping Container

SECTION II

TM 9-2350-247-24P

(1) ITEM NO	(2) SMR	(3) NSN	(4) CAGE	(5) PART NUMBER	(6) DESCRIPTION AND USABLE ON CODE (UOC)	(7) QTY
					GROUP 01 ENGINE GROUP 0100 ENGINE ASSEMBLY FIG. 1 ENGINE AND SHIPPING CONTAINER	
1	PAFHD	2815-00-124-5390	19207	5703812	ENGINE WITH CONTAIN..... UOC:V96,	1
1	PAFHD	2815-01-246-0903	19207	5705596	ENGINE,W CONTAINER..... UOC:AP4,	1
2	XAFHD		19207	11650200-1	.ENGINE,DIESEL REFER TO TM9-2815-205-34P FOR COMPONENTS..... UOC:AP4,	1
2	XAFHD		19207	8738127	.ENGINE,DIESEL DETROIT DIESEL DIVISION GMC SERIES 6V53 REFER TOTM9-2815-205-34P FOR COMPONNET PARTS..... UOC:V96,	1
3	PAHHH	8145-01-232-9447	19207	11650202	.CONTAINER SHIPPING REFER TO TM9-2815-205-34P FOR COMPONENTS..... UOC:AP4,	1
3	PAFHH	8145-00-138-7809	19207	11678210	.SHIPPING AND STORAG REFER TO TM9-2815-205-34P FOR COMPONENT PARTS UOC:V96,	1

END OF FIGURE

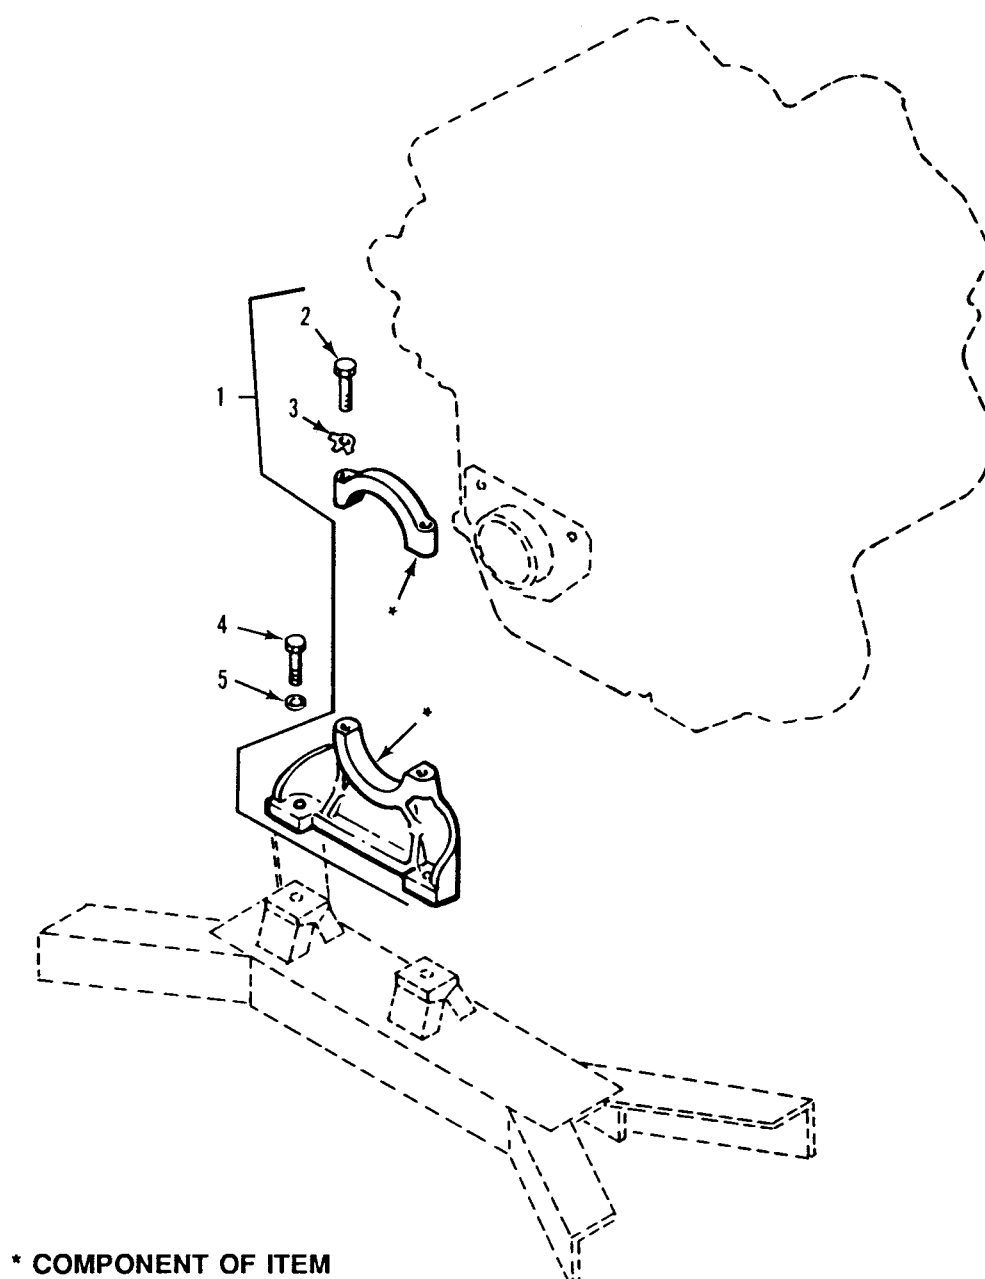 


Figure 2. Engine Front Mounting
(M548A1)

SECTION II

TM 9-2350-247-24P

(1) ITEM NO	(2) SMR	(3) NSN	(4) CAGE	(5) PART NUMBER	(6) DESCRIPTION AND USABLE ON CODE (UOC)	(7) QTY
GROUP 0100 ENGINE ASSEMBLY CONTINUED FIG. 2 ENGINE FRONT MOUNTING (M548A1)						
1	PA000	2510-00-314-3585	72582	5186647	SUPPORT, ENGINE, FRON..... UOC:V96,	1
2	PA0ZZ	5305-00-069-5578	96906	MS90725-94	.SCREW, CAP, HEXAGON H..... UOC:V96,	2
3	PA0ZZ	5310-00-655-9667	19207	10861663	.WASHER, KEY..... UOC:V96,	2
4	PA0ZZ	5305-00-726-2552	96906	MS90727-165	SCREW, CAP, HEXAGON H..... UOC:V96,	2
5	PA0ZZ	5310-00-823-8803	96906	MS27183-21	WASHER, FLAT..... UOC:V96,	2

END OF FIGURE

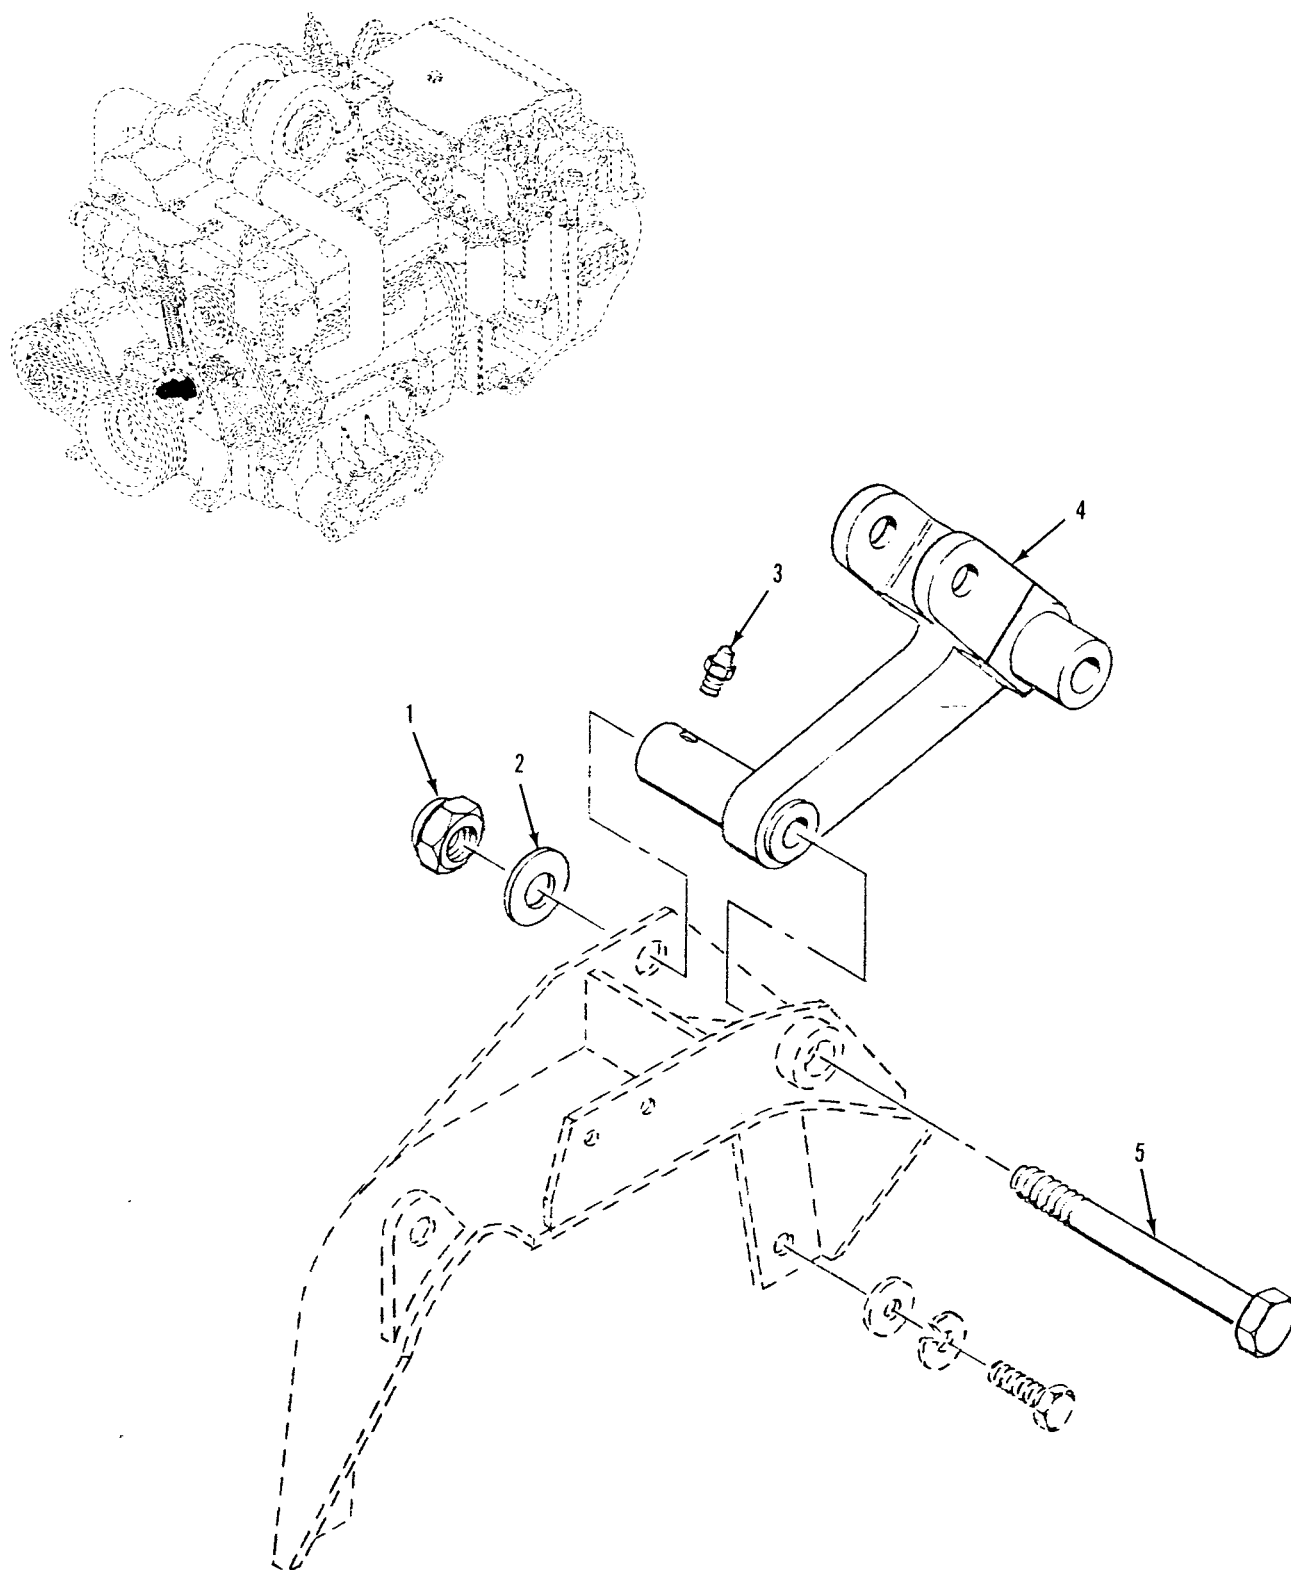 


Figure 3. Engine Assembly Attaching Parts
(M548A3)

SECTION II

TM 9-2350-247-24P

(1) ITEM NO	(2) SMR	(3) NSN	(4) CAGE	(5) PART NUMBER	(6) DESCRIPTION AND USABLE ON CODE (UOC)	(7) QTY
					GROUP 0100 ENGINE ASSEMBLY CONTINUED FIG. 3 ENGINE ASSEMBLY ATTACHING PARTS (M548A3)	
1	PA0ZZ	5310-00-877-5795	96906	MS21044N8	NUT, SELF-LOCKING, HE..... UOC:AP4,	1
2	PA0ZZ	5310-00-809-5998	96906	MS27183-18	WASHER, FLAT..... UOC:AP4,	1
3	PA0ZZ	4730-00-050-4208	96906	MS15003-1	FITTING, LUBRICATION..... UOC:AP4,	1
4	PA0ZZ	3040-01-229-4036	19207	12313390	LEVER, REMOTE CONTRO..... UOC:AP4,	1
5	PA0ZZ		80204	B1821BH050F450N	SCREW, CAP, HEXAGON H..... UOC:AP4,	1

END OF FIGURE

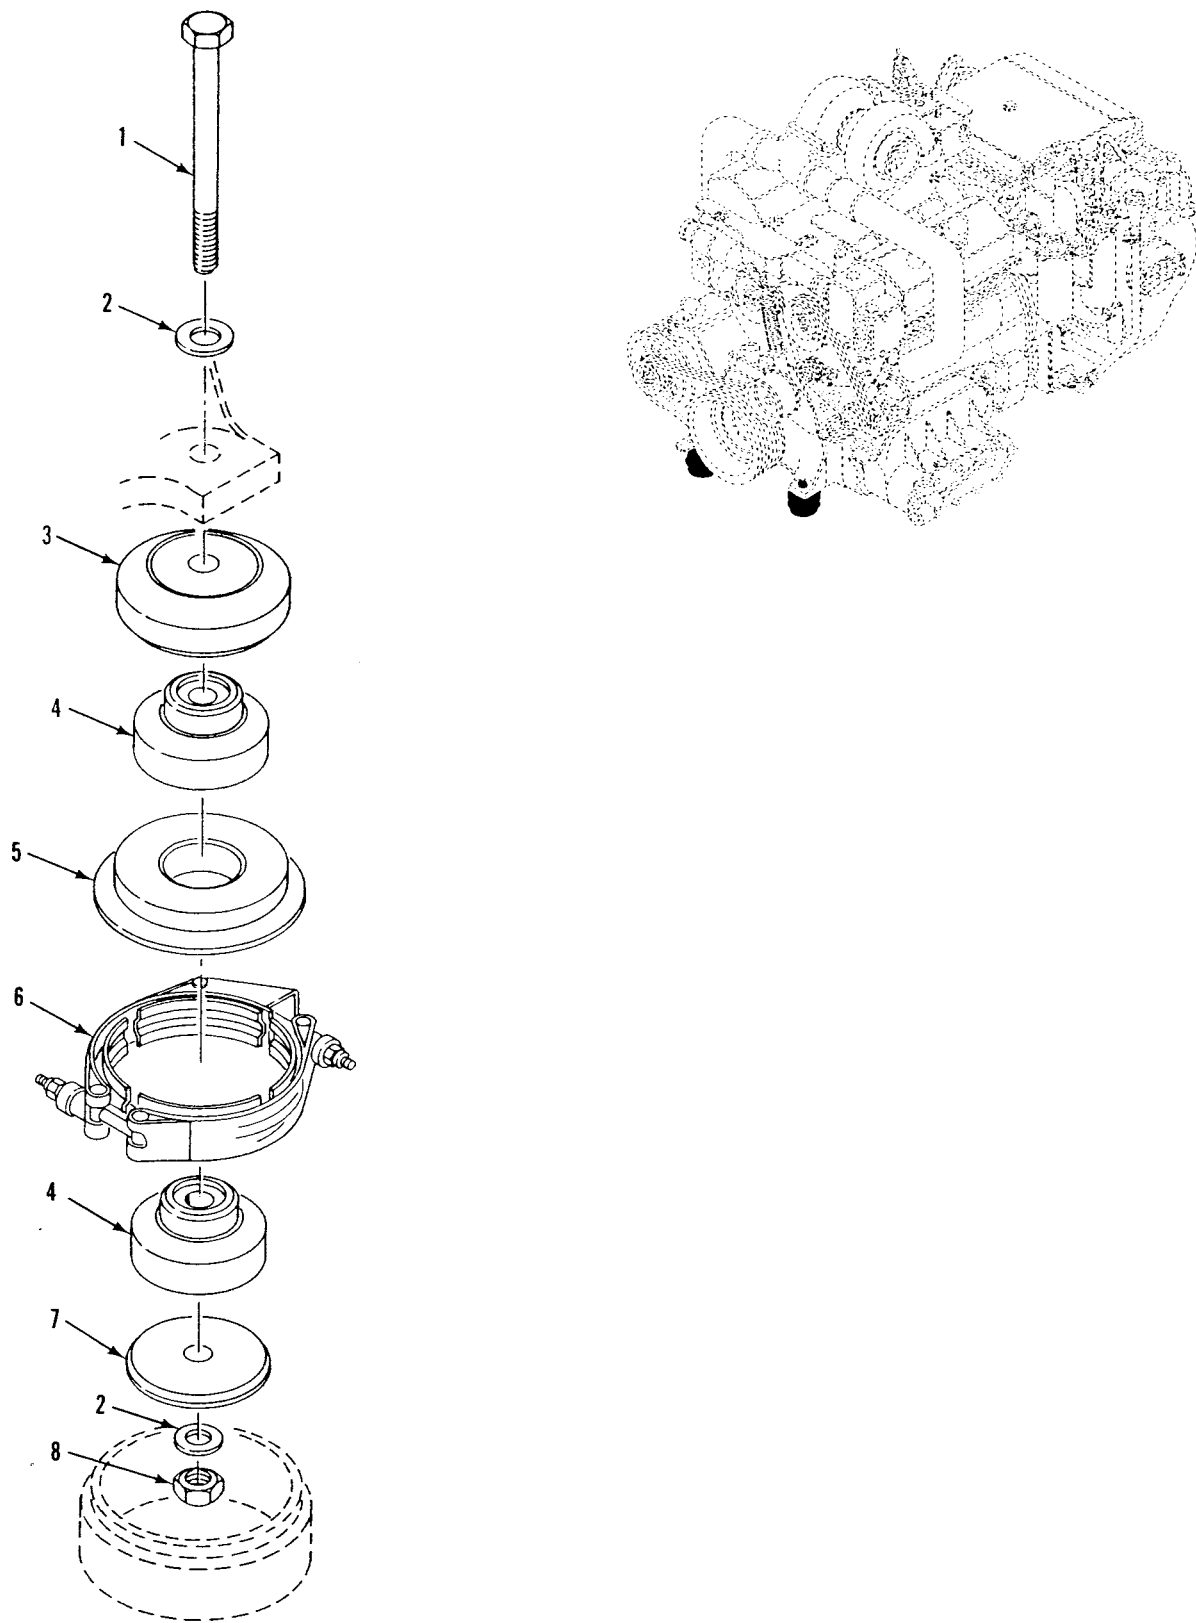 



Figure 4. Power Plant Rear Mounting
(M548A3)

SECTION II


TM 9-2350-247-24P

(1) ITEM NO	(2) SMR	(3) NSN	(4) CAGE	(5) PART NUMBER	(6) DESCRIPTION AND USABLE ON CODE (UOC)	(7) QTY
GROUP 0100 ENGINE ASSEMBLY CONTINUED FIG. 4 POWER PLANT REAR MOUNTING (M548A3)						
1	PA0ZZ	5305-00-732-9207	80204	B1821BH063C550N	SCREW,CAP,HEXAGON H..... UOC:AP4,	2
2	PA0ZZ	5310-00-823-8803	96906	MS27183-21	WASHER,FLAT..... UOC:AP4,	4
3	PA0ZZ	5365-01-250-0787	19207	12313346	WASHER,FLAT..... UOC:AP4,	2
4	PA0ZZ	5340-00-572-8604	19207	10863416-1	MOUNT,RESILIENT..... UOC:AP4,	4
5	PA0ZZ	5340-01-218-2253	19207	12313343	BRACKET,MOUNTING..... UOC:AP4,	2
6	PA0ZZ	5340-00-159-4562	96906	MS27114-18R	COUPLING,CLAMP,GROO..... UOC:AP4,	2
7	PA0ZZ	5310-00-059-5327	19207	10861316-1	WASHER,CONVEX..... UOC:AP4,	2
8	PA0ZZ	5310-00-269-4040	96906	MS51922-49	NUT,SELF-LOCKING,HE..... UOC:AP4,	2

 
END OF FIGURE

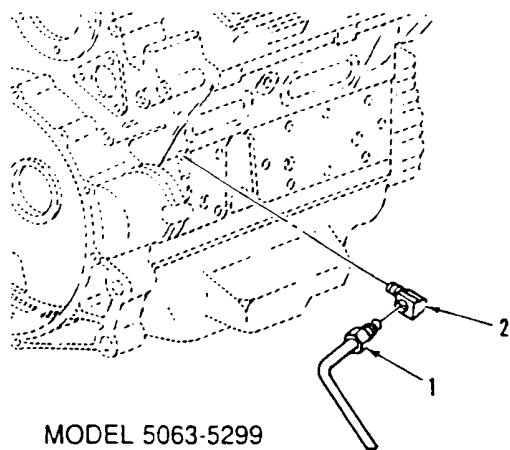

MODEL 5063-5299

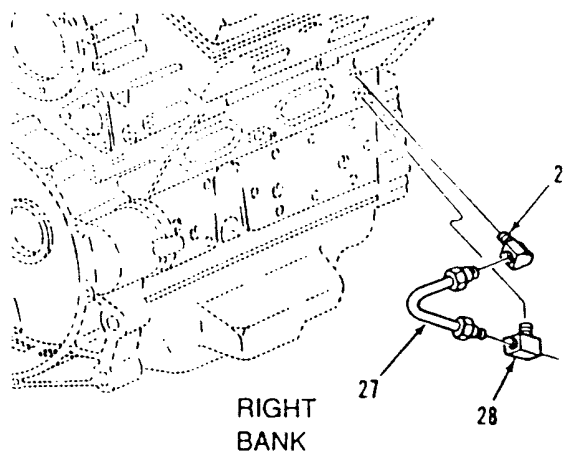 RIGHT
BANK

 MODEL 5063-5398

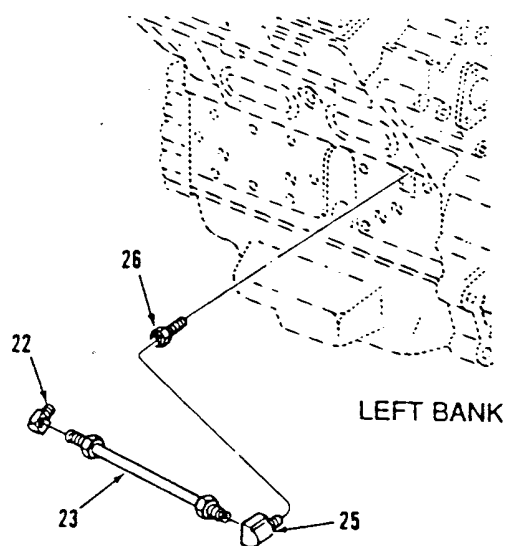

LEFT BANK

MODELS 5063-5395 & 5063-539F

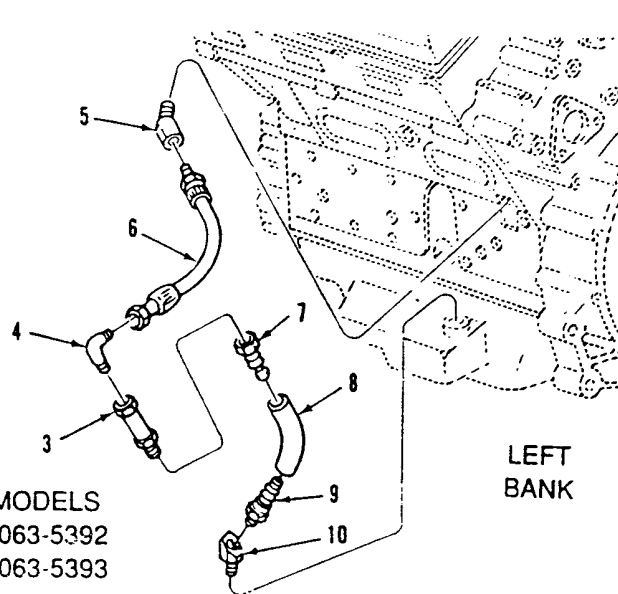 
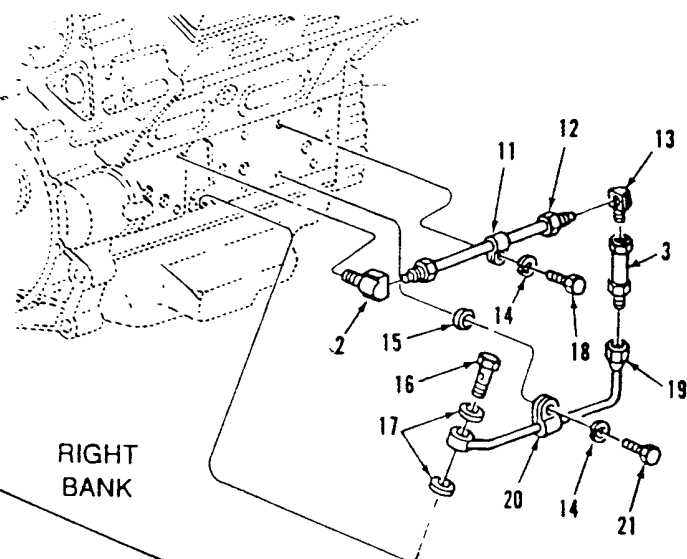 
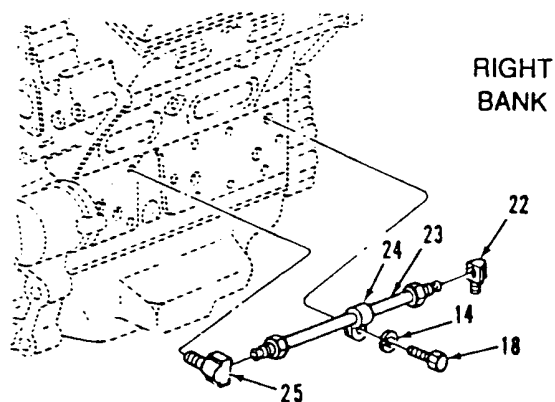 
LEFT
BANKMODELS
5063-5392
5063-5393RIGHT
BANKRIGHT
BANK

Figure 5. Air Box Drain and Related Parts

SECTION II

TM 9-2350-247-24P

(1) ITEM NO	(2) SMR	(3) NSN	(4) CAGE	(5) PART NUMBER	(6) DESCRIPTION AND USABLE ON CODE (UOC)	(7) QTY
GROUP 0101 CRANKCASE, BLOCK, CYLINDER HEAD FIG. 5 AIR BOX DRAIN AND RELATED PARTS						
1	PA0ZZ	4710-00-701-3875	72582	5134195	TUBE ASSEMBLY,METAL..... UOC:V96,	2
2	PA0ZZ	4730-01-187-6671	72582	8925032	ELBOW,PIPE TO TUBE..... UOC:V96,	2
2	PA0ZZ	4730-01-187-6671	72582	8925032	ELBOW,PIPE TO TUBE CYL BLK TO AIRBOX DRAIN TUBE RBK..... UOC:AP4,	1
3	PA0ZZ	4820-01-160-8172	72582	8996207	VALVE,CHECK..... UOC:AP4,	2
4	PA0ZZ	4730-00-366-3011	79470	49X4X4	ELBOW,PIPE TO TUBE..... UOC:AP4,	1
5	PA0ZZ	4730-00-277-5683	96906	MS14307-1	ELBOW,PIPE CYL BLK LBK..... UOC:AP4,	1
6	PA0ZZ	4710-01-221-1494	72582	8926595	TUBE ASSEMBLY,METAL AIRBOX DRAIN LB UOC:AP4	1
7	PA0ZZ	4730-01-247-2463	72582	5113191	ADAPTER, STRAIGHT,PI..... UOC:AP4,	1
8	M00ZZ		72582	8927796	HOSE, NONMETALLIC MAKE FROM HOSE, P/N 2565-6, AIRBOX DRAIN LB..... UOC:AP4	1
9	PA0ZZ	4730-00-849-2737	72582	5114049	FITTING, CYLINDER HE..... UOC:AP4	1
10	PA0ZZ	4730-01-157-6224	72582	8924161	ELBOW,HOSE OIL PAN,LBK..... UOC:AP4,	1
11	PA0ZZ	5340-00-235-2278	72582	5124802	CLIP, SPRING TENSION..... UOC:AP4,	1
12	PA0ZZ	4710-01-221-2216	72582	8926596	TUBE ASSEMBLY,METAL RIGHT BANK..... UOC:AP4,	1
13	PA0ZZ	4730-00-277-8643	92392	0913040	ELBOW,PIPE TO TUBE CHECK VALVE INLET,RBK..... UOC:AP4,	1
14	PA0ZZ	5310-00-407-9566	96906	MS35338-45	WASHER, LOCK..... UOC:AP4,	2
15	PA0ZZ	4730-00-080-7024	72582	5196119	SPACER, TRUCK ADVERS..... UOC:AP4,	1
16	PA0ZZ	2815-01-210-6950	72582	5104370	ADAPTER OIL GAGE RIGHT BANK..... UOC:AP4,	1
17	PA0ZZ	5310-00-532-8136	72582	5151921	WASHER, FLAT RIGHT BANK..... UOC:AP4,	2
18	PA0ZZ	5306-00-226-4825	80204	B1821BH031C075N	BOLT, MACHINE 5/16-18UNC-2AX3/R GR8. UOC:AP4,	1
19	PA0ZZ	4710-01-221-1492	72582	8926290	TUBE ASSEMBLY,METAL CHECK VALVE OUTLET,RBK..... UOC:AP4,	1
20	PA0ZZ	5340-00-853-3467	72582	5151883	CLAMP, LOOP..... UOC:AP4,	1
21	PA0ZZ	5306-00-226-4827	80204	B1821BH031C100N	BOLT, MACHINE 5/16-18UNC-2AX1 GR8... UOC:AP4,	1

END OF FIGURE