

THIS MANUAL SUPERSEDES MANUAL DATED APRIL, 1992.
SEE TABLE OF CONTENTS PAGE FOR DETAILS.

TECHNICAL MANUAL

**UNIT, DIRECT SUPPORT, AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS)**

**FOR
HULL, SUSPENSION, AND MISCELLANEOUS
COMPONENTS OF HULL FOR ARMORED
RECONNAISSANCE/AIRBORNE ASSAULT
VEHICLE:
FULL-TRACKED, 152-mm, GUN LAUNCHER
M551A1 (2350-00-140-5151)
AND
M551NTC (2350-01-115-1579)**

DISTRIBUTION: APPROVED FOR PUBLIC RELEASE; DISTRIBUTION IS UNLIMITED

HEADQUARTERS, DEPARTMENT OF THE ARMY

AUGUST 1996

No. 9-2350-230-24P-1

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 1 August 1996

UNIT, DIRECT SUPPORT, AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(Including Depot Maintenance
Repair Parts and Special Tools)

FOR

HULL, SUSPENSION, AND MISCELLANEOUS
COMPONENTS FOR ARMORED
RECONNAISSANCE/AIRBORNE ASSAULT VEHICLE:
FULL-TRACKED, 152-mm, GUN LAUNCHER
M551A1 (2350-00-140-5151)
AND
M551 NTC (2350-01-115-1579)

Current as of 1 April 1996

REPORTING OF ERRORS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to Commander, US Army Tank-automotive and Armaments Command, ATTN: AMSTA-IM-OPIT, Warren, MI 48397-5000. A reply will be furnished to you.

You may also provide DA Form 2028-2 information to TACOM via datafax or e-mail:

- TACOM's fax number is DSN 786-6323
- TACOM's e-mail address is tacom-tech-pubs@cc.army.mil

DISTRIBUTION: APPROVED FOR PUBLIC RELEASE; DISTRIBUTION IS UNLIMITED.

THIS MANUAL SUPERSEDES MANUAL DATED APRIL, 1992

TABLE OF CONTENTS

		Page	Figure
SECTION I	INTRODUCTION	1	
SECTION II	REPAIR PARTS LIST	1-1	
Group 01	Engine		
	0100 Engine and Container.....	1-1	1
	Engine Supports and Mounts	2-1	2
	0101 Air Box Drain and Related Parts	3-1	3
	Cylinder Head Lifting Brackets	4-1	4
	0103 Drive Plate, Flywheel, and Housing.....	5-1	5
	0105 Rocker Arm Covers	6-1	6
	0106 Oil Cooler Assembly (Models 5063-5395 and 5063-539F)	7-1	7
	Oil Pan and Oil Gage Assembly (Models 5063-5395, 5063-5398, and 5063-539F)	8-1	8
	Oil Filter Assembly and Adapter (Model 5063-5398)	9-1	9
	Oil Filter Assembly, Adapter, and Related Parts (Models 5063-5395 and 5063-539F)	10-1	10
	Engine Breather Drain Collector Hoses	11-1	11
	Engine Breather Drain Collector Box	12-1	12
	0108 Exhaust Manifold	13-1	13
Group 03	Fuel System		
	0302 Fuel Pump Assembly and Drive	14-1	14
	Fuel Lines and Fittings (Models 5063-5395 and 5063-539F) ..	15-1	15
	Fuel Lines and Fittings (Model 5063-5398)	16-1	16
	0304 Air Cleaner Assembly	17-1	17
	Air Cleaner Duct and Clamp	18-1	18
	0305 Turbocharger and Related Parts	19-1	19
	Blower Drive Gear and Related Parts	20-1	20
	0306 Center Fuel Tank, Drain Pump, Straps, and Lines	21-1	21
	Side Fuel Tanks, Hoses, Valves, Seals, and Pads	22-1	22
	Fuel Tank Filler Protective Cover, Cap, and Filter	23-1	23
	Governor Linkage Rod	24-1	24
	0309 Fuel Filter and Strainer Assemblies (Models 5063-5395, 5063-5398, and 5063-539F)	25-1	25
	0311 Air Box Heater Related Parts	26-1	26
	Air Box Heater Assembly	27-1	27
	Air Pump, Ignition Coil, and Related Parts	28-1	28
	0312 Accelerator and Throttle Linkage and Accelerator Pedal, Pedal Rod, and Attaching Parts	29-1	29

	Fuel Shutoff Controls.....	30-1	30
Group 04	Exhaust System		
	0401 Exhaust System Insulation, Muffler, and Diffuser Assembly ...	31-1	31
Group 05	Cooling System		
	0501 Engine Coolant Radiator, Mounts, and Surge Tank.....	32-1	32
	0502 Engine Cooling Shrouds and Seals.....	33-1	33
	0503 Engine Cooling Shrouds, Seals, and Radiator Contamination Shield.....	34-1	34
	Radiator and Surge Tank Upper Hoses and Clamps	35-1	35
	Radiator Lower Hoses, Tube, and Clamps	36-1	36
	Thermostat, Housing, Lines, and Fittings.....	37-1	37
	0504 Cooler Pump Assembly, Idler Pulley, and Belt Set.....	38-1	38
	0505 Engine Cooling Fan, Mounts, Clutch, and V-Belts	39-1	39
	Engine Cooling Fan Clutch.....	40-1	40
Group 06	Electrical System (Engine and Vehicular, etc.)		
	0601 Generator Belt Tensioner and Drive Assembly	41-1	41
	Generator Drive Assembly	42-1	42
	0602 Generator Regulator, Mounts, and Ground Lead.....	43-1	43
	0603 Starter and Mounting Hardware	44-1	44
	0607 Driver's Instrument Panel Assembly	45-1	45
	Instrument Panel Bracket Harness	46-1	46
	Driver's Switch Panel.....	47-1	47
	0608 Engine Starter Motor Relay	48-1	48
	Headlight Dimmer Switch	49-1	49
	Master and Turret Power Relay.....	50-1	50
	Front and Rear Bilge Pump Relays.....	51-1	51
	Hull Electrical Circuit Breaker	52-1	52
	Neutral Safety and Water Steer Shift Switch Assembly	53-1	53
	Driver's Night Viewer Switch Box	54-1	54
	Parking Brake and Stop-Light Switches	55-1	55
	Personnel Heater Control Box.....	56-1	56
	Air Cleaner Blower Motor Relay	57-1	57
	Slave Receptacle Mounting Hardware	58-1	58
	0609 Headlight Assembly, Mount, and Guard.....	59-1	59
	Driver's Dome Light Dimmer Switch Bracket	60-1	60
	Driver's Dome Light.....	61-1	61
	Right Taillight.....	62-1	62
	Left Taillight	63-1	63
	0610 Powerplant Pressure and Temperature Switches	64-1	64
	Upper and Lower Fuel Level Transmitters	65-1	65
	0612 Storage Batteries, Terminals, Leads, and Insulation.....	66-1	66

0613	Engine Disconnect-to-Starter Wiring Harness	67-1	67
	Engine Disconnect-to-Master Relay Wiring Harness	68-1	68
	Engine Disconnect-to-Instruments Wiring Harness	69-1	69
	Battery-to-Regulator Wiring Harness	70-1	70
	Generator-to-Regulator Wiring Harness	71-1	71
	Generator-to-Starter Ground Lead	72-1	72
	Headlight Wiring Harness	73-1	73
	Hull Front Power Wiring Harness	74-1	74
	Hull Front Indicator and Switch Wiring Harness	75-1	75
	Driver's Intercom-to-Bulkhead Cable Assembly and Winterization Kit Harness Cover	76-1	76
	Ground Intercom-to-Bulkhead Cable Assembly	77-1	77
	Driver's Intercom-to-Contact-Ring Assembly	78-1	78
	Driver's Night Viewer Cable Assembly	79-1	79
	Hull Rear Wiring Harness	80-1	80
	Slip Ring Harness-to-Crew Compartment Fire Extinguisher Bottle Solenoid Wiring Harness	81-1	81
	Slip Ring-to-Crew Compartment Fire Extinguisher Wiring	82-1	82
	Personnel Heater Wiring Harness	83-1	83
	Turret Power Relay to Slip Ring Lead Assembly	84-1	84
	Turret Power Relay to Driver's Switch Panel Lead Assembly	85-1	85
	Battery to Master Relay Power Harness	86-1	86
	Air Cleaner Blower Motor Relay Wiring Harness	87-1	87
	Front and Rear Air Cleaner Blower Motor Lead Assembly	88-1	88
	Air Cleaner Blower Motor Lead Assembly	89-1	89
Group 07	Transmission		
0705	Transmission Shift Controls	90-1	90
0710	Transmission and Container	91-1	91
	Transmission Brake Adjustment Cover, Drain Plug, Inserts, Engine Coupling Parts, and Flywheel Housing Flange Inserts	92-1	92
0721	Transmission Oil Cooler Hoses and Oil Level Indicator	93-1	93
	Transmission Oil Filter Parts Kit and Preformed Packing	94-1	94
Group 12	Brakes (Other Than Special Purpose)		
1206	Service Brake and Pedal Linkage	95-1	95
	Service Brake Control Linkage	96-1	96
	Parking Brake Lock Assembly and Linkage	97-1	97
Group 13	Wheels and Tracks		
1301	Front and Rear Roadwheel Arm, Housing, and Spindle	98-1	98
	Intermediate Front and Center Roadwheel Arm, Housing, and Spindle Assembly	99-1	99

	Intermediate Rear Roadwheel Arm, Housing, and Spindle Assembly	100-1	100
	Suspension Roadwheel Assembly	101-1	101
	Suspension Torsion Bar and Cover	102-1	102
	Torsion Bar Anchor and Cover	103-1	103
1303	Suspension Idler Assembly, Wheel, and Hub	104-1	104
	Track Adjuster	105-1	105
1304	Sprocket Drive Assembly	106-1	106
	Track Carrier Wheel and Sprocket	107-1	107
	Track Shoe Assembly	108-1	108
Group 14	Steering		
	1401 Land Steer Control Linkage	109-1	109
	1403 Water Steer Shift Control Linkage	110-1	110
Group 15	Frame, Towing Attachments, and Drawbars		
1503	Towing Shackle Assembly, Air Drop Tie-Down Brackets, and Vehicle Lifting Eyes	111-1	111
	Towing Pintle and Mounting Bracket	112-1	112
Group 16	Springs and Shock Absorbers		
1604	Suspension Shock Absorbers	113-1	113
Group 18	Body, Cab, Hood, and Hull		
1801	Engine Access Covers, Grilles, and Grille Debris Screens	114-1	114
	Battery Access Door, Cover, and Pin Assembly	115-1	115
	Air Cleaner Access Door Cover Pin Assembly and Barrier Stowage Cover Pin Assembly	116-1	116
	Turret Bearing Access Cover	117-1	117
	Turret Locating Pin and Hull Plugging Screws (Used When Mine Protective Kit Is Not Installed)	118-1	118
	Driver's Escape Hatch Cover	119-1	119
	Flotation Barrier	120-1	120
	Flotation Barrier and Aluminum Skin Flotation Cavity Insulation	121-1	121
	Surfboard Assembly Brackets, Supports, Latch, and Mounting Parts	122-1	122
	Surfboard Assembly	123-1	123
1802	Front and Rear Fenders	124-1	124
1803	Driver's Rotatable Hatch	125-1	125
	Driver's Hatch Drip Pans	126-1	126
1804	Engine Compartment Drain Plugs	127-1	127
	Flotation Drain Plug Assembly and Hull Drain Cover	128-1	128
1806	Driver's Seat	129-1	129
	Driver's Seat Support and Harness	130-1	130
1808	Hull Forward Ammunition Rack - Left Side	131-1	131

	Hull Rear Ammunition Rack - Left Side.....	132-1	132
	Hull Ammunition Rack - Right Side	133-1	133
	Hull Interior Stowage - Left Side.....	134-1	134
	Driver's M48 ANVS-2 Stowage Box Assembly.....	135-1	135
	Hull Interior Stowage - Right Side	136-1	136
	Hull Exterior Stowage.....	137-1	137
Group 22	Body Chassis or Hull, and Accessory Items		
	2202 Ground Intercom Door.....	138-1	138
	2205 Front Bilge Pump, Hoses, and Tubes (All Vehicles) and Chamber and Attaching Parts	139-1	139
	Rear Bilge Pumps, Inlet and Discharge Lines.....	140-1	140
	Bilge Pump Assembly	141-1	141
	2207 Personnel Heater Fuel Lines, Pump, Filter, Hoses, and Pipes.....	142-1	142
	Personnel Heater Assembly	143-1	143
	Personnel Heater Blower Assembly (New)	144-1	144
	Personnel Heater Burner Assembly	145-1	145
	2210 Instruction and Identification Plates.....	146-1	146
	Identification Plates	147-1	147
Group 33	Special Purpose Kits		
	3303 Winterization Kit Heater, Exhaust Pipes, Brackets, and Clamps ..	148-1	148
	Winterization Kit Fuel Pump, Coolant Pump, Battery Heater, Fuel Filter, and Hoses	149-1	149
	Personnel Heater Winterization Kit Exhaust Pipe and Fuel Inlet Hose	150-1	150
	Winterization Kit Grille Cover	151-1	151
	Winterization Kit Coolant Heater Control Box Assembly.....	152-1	152
	Bulkhead-to-Coolant Heater and Thermostat Wiring Harness	153-1	153
	Winterization Kit Control Box-to-Bulkhead Wiring Harness ..	154-1	154
	3307 Mine Protective Kit.....	155-1	155
Group 47	Gages (Non-electrical), Weighing and Measuring Devices		
	4701 Speedometer and Tachometer Shaft Assemblies	156-1	156
	4702 Air Restrictor Gage Kit.....	157-1	157
Group 56	Filters, Separators, and Purifiers		
	5600 Driver's Air Filter Tube, Hoses, and Clamps	158-1	158
Group 76	Fire Fighting Equipment Components		
	7639 Fixed Fire Fighting Equipment (Vehicular)	159-1	159
	Fire Extinguisher System	160-1	160
	Fire Extinguisher Cylinder and Valve Assembly.....	161-1	161
	Fire Extinguisher Valve Assembly.....	162-1	162
Group 94	Kits		
	9401 Kits.....	KIT-1	

Group 95	General Use Standardized Parts	
	9501 Bulk Items.....	BULK-1
SECTION III	SPECIAL TOOLS LIST	163-1
Group 26	Tools and Test Equipment	
	2604 Special Tools - 1.....	163-1 163
	Special Tools - 2.....	164-1 164
	Special Tools - 3.....	165-1 165
	Special Tools - 4.....	166-1 166
SECTION IV	CROSS-REFERENCE INDEXES	I-1
	National stock number index.....	I-1
	Part number index.....	I-33
	Figure and item number index	I-103

**UNIT, DIRECT SUPPORT AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST**

SECTION I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit, Direct Support, and General Support maintenance of the M551A1/M551NTC Armored Reconnaissance/Airborne Assault Vehicle. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General.

In addition to Section I, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in this section. Items listed are shown on the associated illustration(s)/figure(s).

b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. Cross-reference Indexes. A list, in national item identification number (NIIN) sequence, of all national stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers (NSN's) and part numbers are cross-referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGEC (Commercial and Government Entity Code) and part numbers.

3. Explanation of Columns (Section II and III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR CODE (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following example:

SECTION II

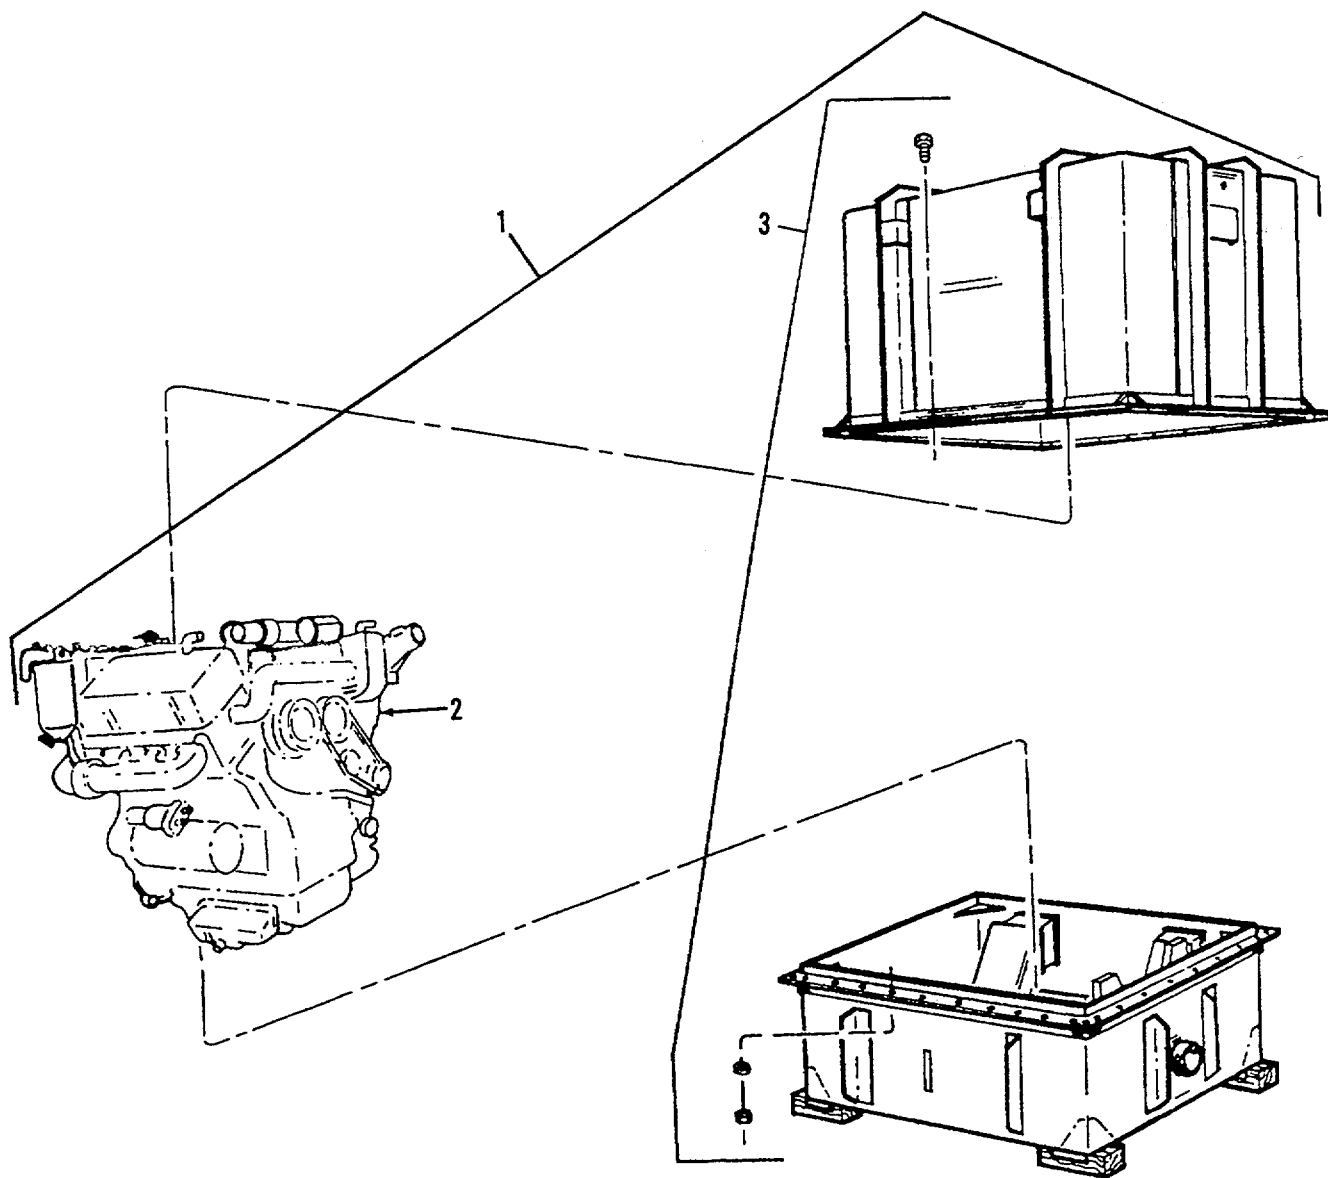 


Figure 1. Engine and Container

SECTION II				TM 9-2350-230-24P-1	
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART		
NO	CODE	CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES (UOC)	QTY
GROUP 01: ENGINE					
GROUP 0100: ENGINE ASSEMBLY					
FIG. 1 ENGINE AND CONTAINER					
1	PAFHD	19207	57K1002	ENGINE AND CONTAIN FOR REPAIR.....	1
2	XAFHD	19207	11650228	PARTS SEE TM 9-2815-205-34P	1
3	XAFDD	19207	10955141	. ENGINE, DIESEL FOR REPAIR PARTS.....	1
				SEE TM 9-2815-205-34P	
				. SHIPPING AND STORAGE FOR REPAIR.....	1
				PARTS SEE TM 9-2815-205-34P	
END OF FIGURE					

SECTION II

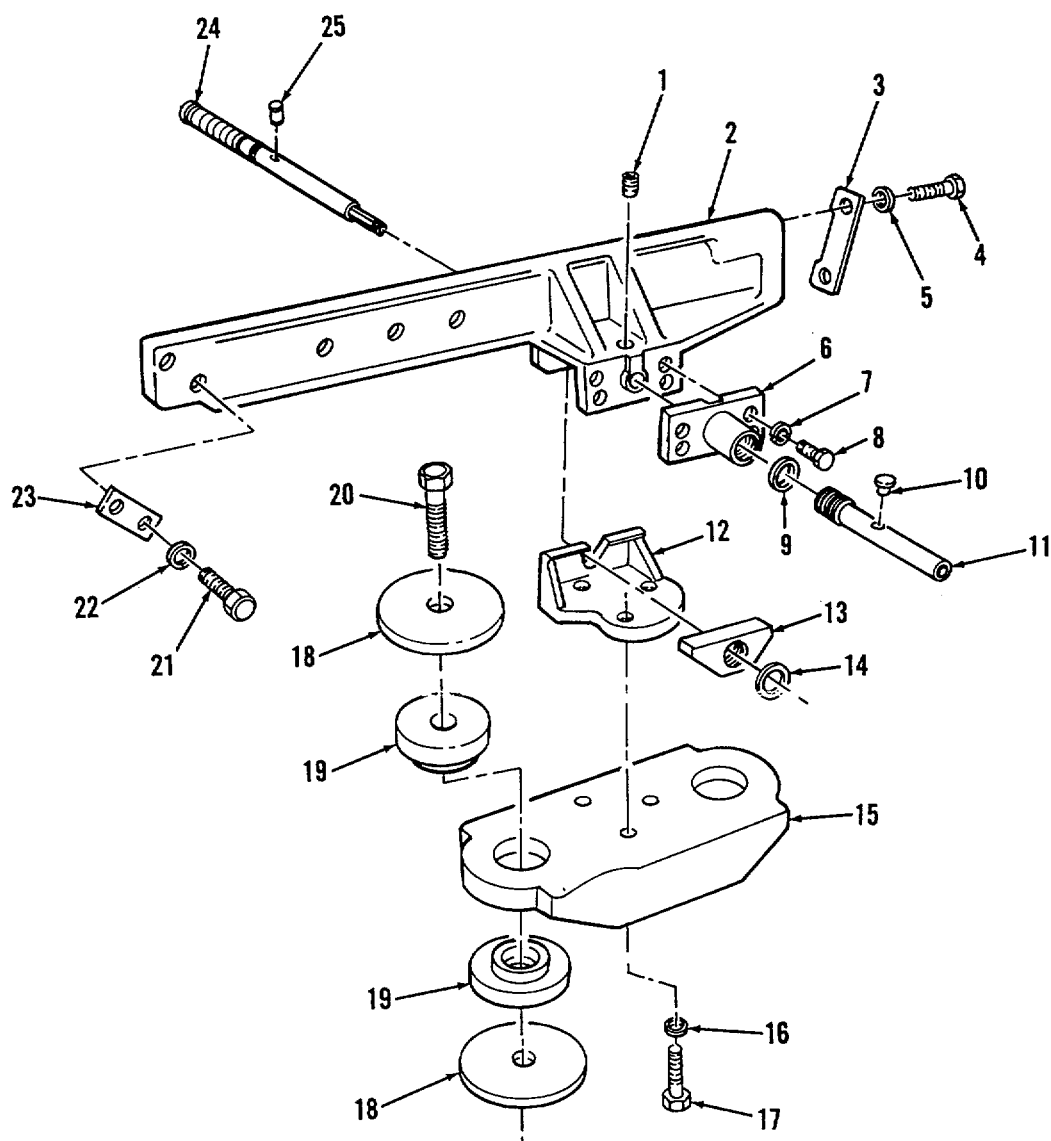 


Figure 2. Engine Supports and Mounts

SECTION II					
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART		
NO	CODE	CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES (UOC)	QTY
GROUP 0100: ENGINE ASSEMBLY					
FIG. 2 ENGINE SUPPORTS AND MOUNTS					
1	PAFZZ	19207	8712287	PLUNGER,QUICK RELEA.....	2
2	PBFZZ	19207	10948434-1	MOUNT,HULL,ENGINE,R,LEFT.....	1
2	PBFZZ	19207	10948434-2	BRACKET,ENGINE MOUN,RIGHT	1
3	PAFZZ	19207	10954011	BRACKET,ENGINE ACCE.....	2
4	PAFZZ	80204	81821BH075C325N	SCREW,CAP,HEXAGON H	4
5	PAFZZ	19200	10910174-8	WASHER,FLAT	4
6	PAFZZ	19207	12255513	BRACKET,ENGINE MOUN	2
7	PAFZZ	96906	MS35338-45	WASHER,LOCK.....	8
8	PAFZZ	96906	MS90725-34	BOLT,MACHINE	8
9	PAFZZ	19207	12255519	WASHERFLAT.....	2
10	PAFZZ	19207	12255514	PIN,STRAIGHT,HEADED O	2
11	PAFZZ	19207	12255516	BRACKET,ENGINE MOUN	2
12	PFOZZ	19207	10948432-1	SUPPORT,ENGINE MOUN, IGH T	1
12	PFOZZ	19207	10948432-2	SUPPORT,ENGINE MOUN UPPER, LEFT	1
13	PAFZZ	19207	11664903-1	NUT,PLAIN,RECTANGUL	2
14	PAFZZ	96906	MS9320-17	WASHER.FLAI.....	2
15	PAOZZ	19207	10948433-1	BRACKET,SUPPORT	1
15	PAOZZ	19207	10948433-2	BRACKET,SUPPORT	1
16	PAOZZ	19200	10910174-5	WASHER,FLAT	6
17	PAOZZ	96906	MS90727-113	SCREW,CAP,HEXAGON H	6
18	PAOZZ	19207	10948429	WASHER#FLAT.....	8
19	PAOZZ	19207	10946856	BUSHING,NONMETALLIC	8
20	PAOZZ	96906	M590727-194	SCREW,CAP#HEXAGON H	4
21	PAOZZ	80204	818218H063C200N	SCREW,CAP,HEXAGON H	4
22	PAOZZ	19200	10910174-7	WASHER,FLAT	4
23	PAOZZ	19207	11664792	SPACER,PLATE	2
24	PAOZZ	19207	11594211-1	SCREW,SUPPORT,ENGIN	2
25	PAOZZ	96906	MS16562-71	PIN,SPRING.....	2

END OF FIGURE

SECTION II

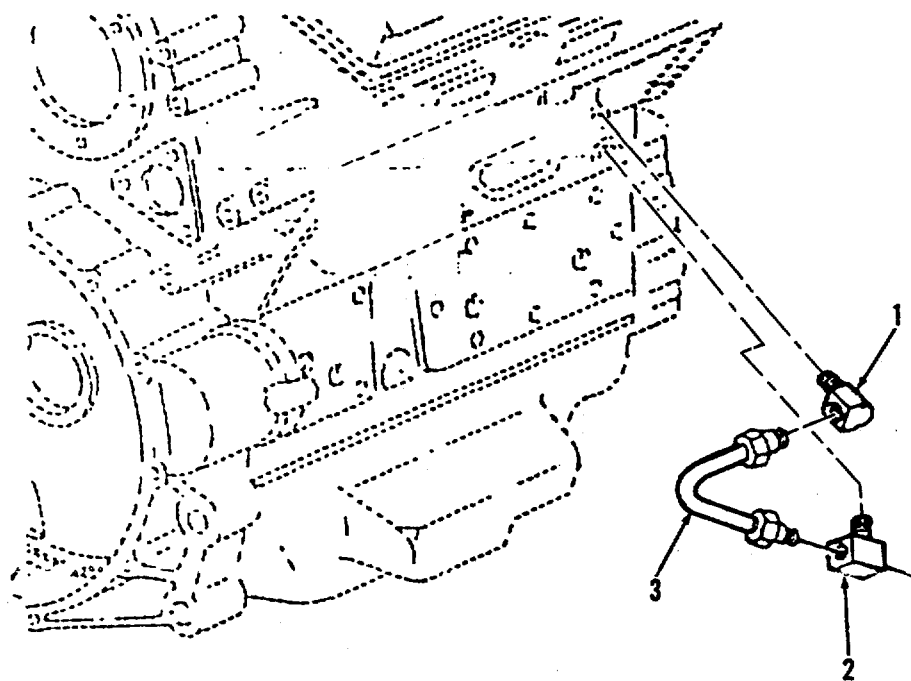 


Figure 3. Air Box Drain and Related Parts

SECTION II				TM 9-2350-230-24P-1	
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART		
NO	CODE	CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES (UOC)	QTY


 
GROUP 0101: CRANKCASE, BLOCK,
CYLINDER HEAD

FIG. 3 AIR BOX DRAIN AND RELATED
PARTS


1	PADZZ	72582	8925032	ELBOW,PIPE TO TUBE	1
2	PAOZZ	21450	442346	TEE,BOSS	1
3	PAOZZ	72582	5132918	TUBE ASSEMBLY,METALRIGHT BANK	1

END OF FIGURE

 
SECTION II

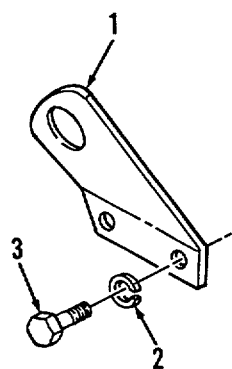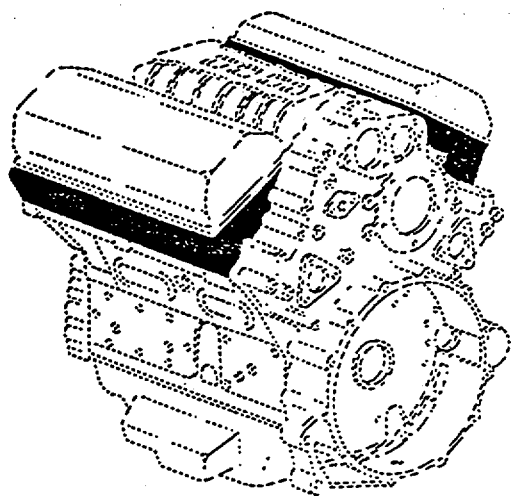

RIGHT HEAD REAR

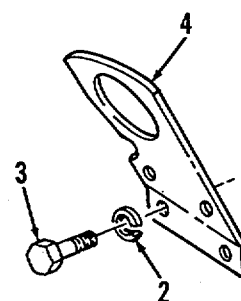 

RIGHT HEAD FRONT

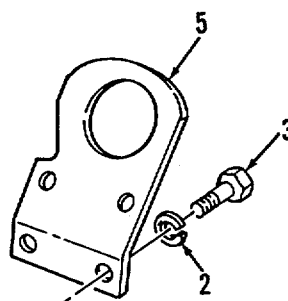 

LEFT HEAD FRONT

Figure 4. Cylinder Head Lifting Brackets

SECTION II				TM 9-2350-230-24P-1	
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART		
NO	CODE	CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES (UOC)	QTY
GROUP 0101: CRANKCASE, BLOCK, CYLINDER HEAD					
FIG. 4 CYLINDER HEAD LIFTING BRACKETS					
1	PAOZZ	72582	5127949	BRACKET RIGHT BANK REAR	1
2	PAOZZ	24617	273589	WASHER, LOCK	10
3	PAOZZ	80204	81821BH038C100N	SCREW, CAP, HEXAGON H 3/8-16UNC-2AX1	10
				GRB	
4	PAOZZ	72582	5135180	BRACKET, LIFTER, RIGHT RIGHT BANK	1
				FRONT	
5	PAOZZ	72582	5134161	BRACKET, LIFTER, LEFT LEFT BANK FRONT	1
END OF FIGURE'					

SECTION II

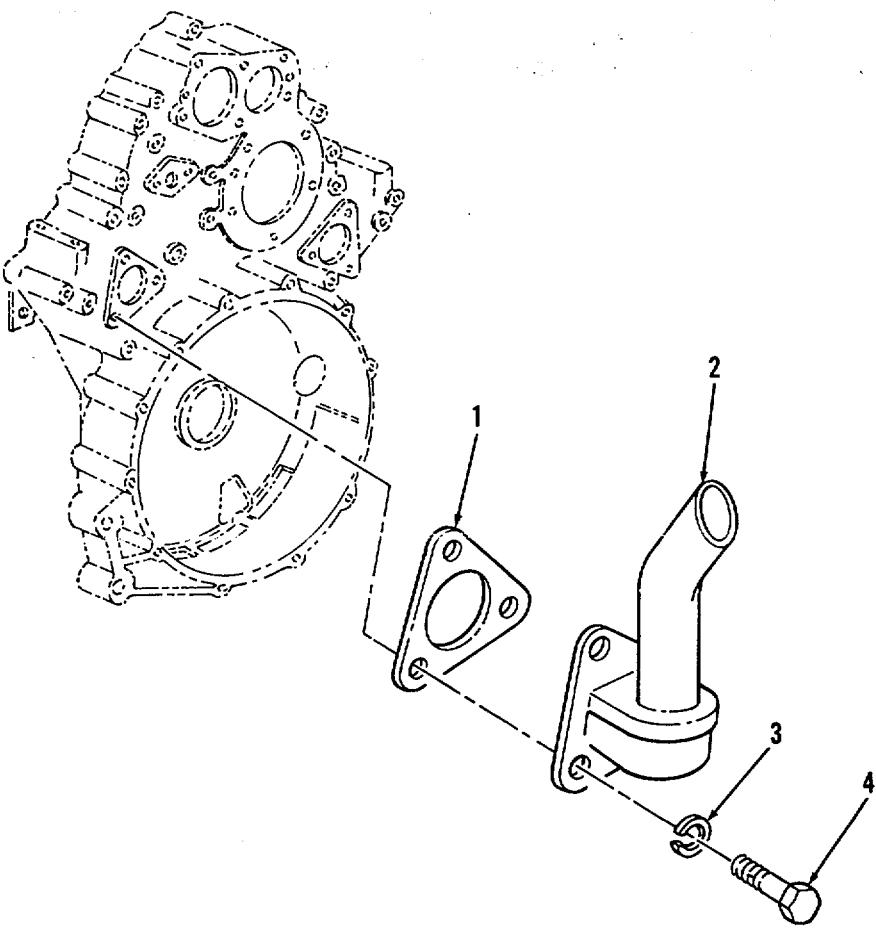 


Figure 5. Drive Plate, Flywheel, and Housing

SECTION II				TM 9-2350-230-24P-1	
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART		
NO	CODE	CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES (UOC)	QTY

GROUP 0103: FLYWHEEL ASSEMBLY

FIG. 5 DRIVE PLATE, FLYWHEEL, AND
HOUSING

1	PAOZZ	72582	5150193	GASKET.....	1
2	XBOZZ	72582	5133353	COVER ASSEMBLY	1
3	PAOZZ	96906	MS35338-45	WASHER,LOCK.....	3
4	PAOZZ	80204	B1821BH031C088N	BOLT,MACHINE 5/1b-18UNC-2A7/8 GR8	3

END OF FIGURE

SECTION II

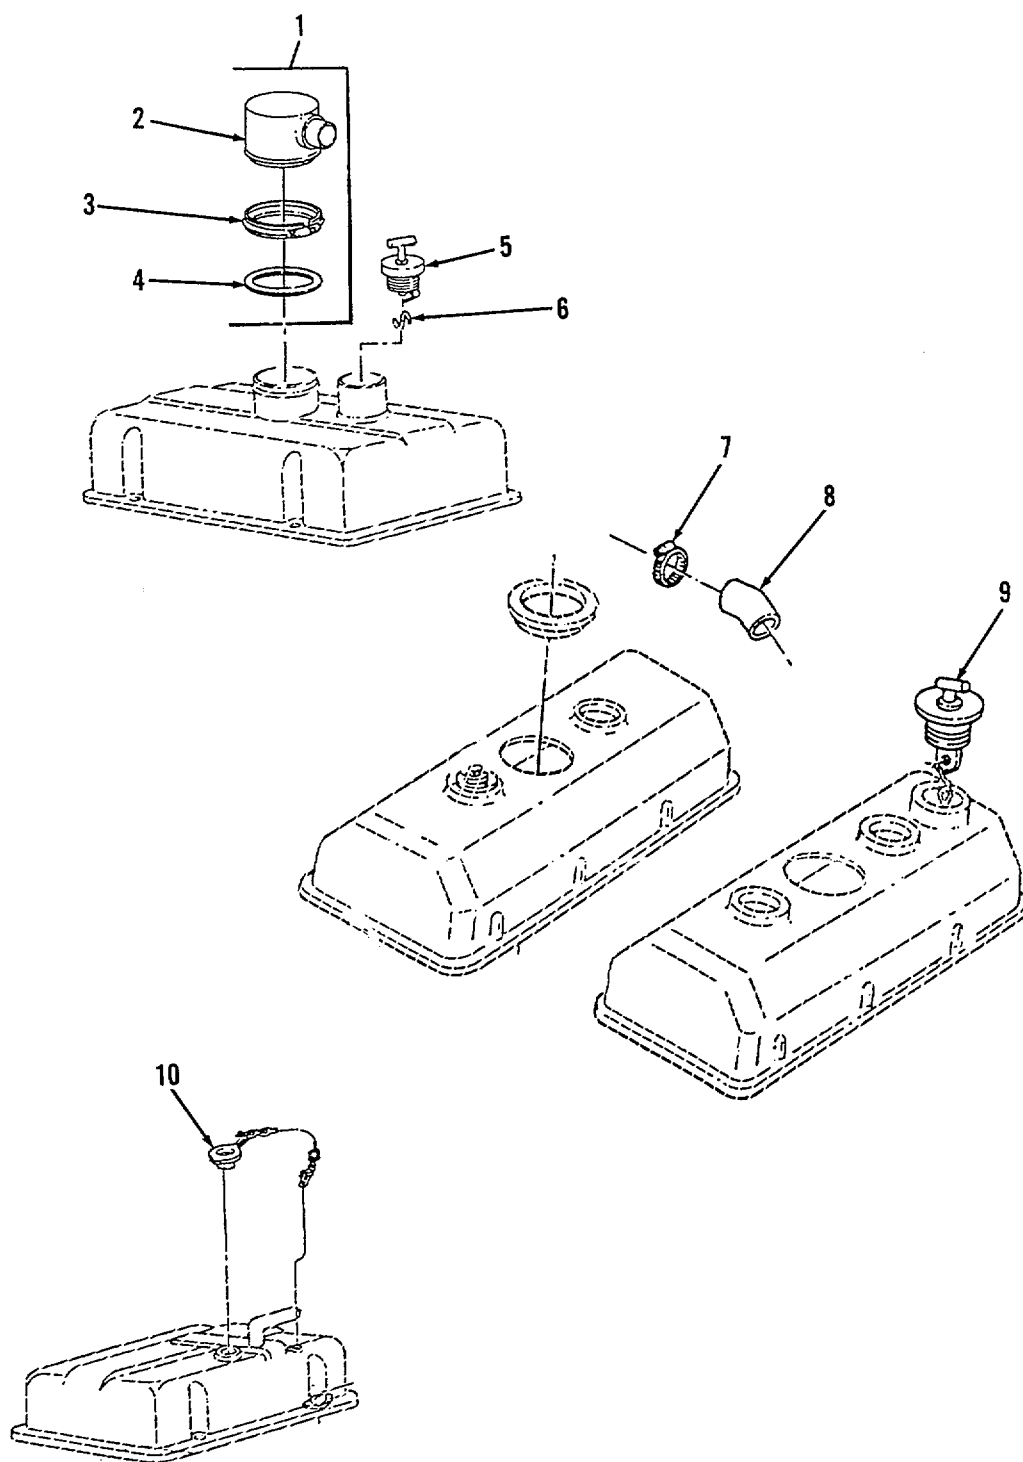 


Figure 6. Rocker Arm Covers

SECTION II

TM 9-2350-230-24P-1

(1) ITEM NO	(2) SMR CODE	(3) FSCM	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODES (UOC)	(6) QTY
-------------------	--------------------	-------------	-----------------------	--	------------

GROUP 0105: VALVES, CAMSHAFTS AND
TIMING SYSTEM

FIG. 6 ROCKER ARM COVERS

1	PAOOO	72582	5110384	BREATHER ASSEMBLY	2
2	PAOZZ	23862	2443795	.COVER ASSEMBLY,PREA.....	1
3	PAOZZ	72582	5104265	.CLAMPLOOP.....	1
4	PAOZZ	72582	5144038	.GASKET	1
5	PAOZZ	72582	5117362	CAP,FILLER OPENING.....	1
6	PAOZZ	72582	5146248	HOOK	1
7	PAOZZ	96906	MS35842-12	CLAMP,HOSE	2
8	PAOZZ	72582	23501683	HOSE,PREFORMED.....	2
9	XBOZZ	72582	23502458	CAP,FILLER OPENING.....	1
10	PAOZZ	72582	5140259	CAP,FILLER OPENING.....	2

END OF FIGURE