 


TECHNICAL MANUAL

**UNIT, DIRECT SUPPORT, AND GENERAL
SUPPORT MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LIST (INCLUDING
DEPOT MAINTENANCE REPAIR PARTS AND
SPECIAL TOOLS)**

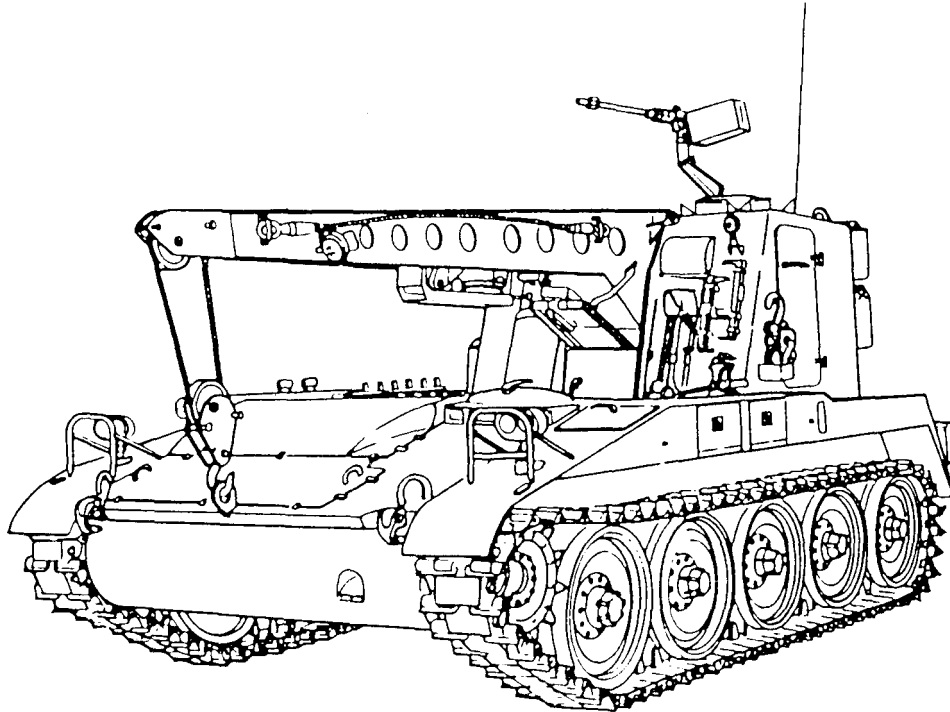

**RECOVERY VEHICLE,
FULL TRACKED:
LIGHT ARMORED, M578
(2350-00-439-6242)
(HULL COMPONENTS)
(EIC: 3LA)**

Distribution: Statement A: Approved for public release; distribution is unlimited

**This Manual supersedes hull and related components portions of
TM 9-2350-238-20P, dated 18 April 1982, and
TM 9-2350-238-34P-1, dated 21 June 1982,**

**HEADQUARTERS, DEPARTMENT OF THE ARMY
31 MAY 1994**

Technical Manual

No. 9-2350-238-24P-1

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington D.C., 31 May 1994

**UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)**

**HULL COMPONENTS
USED ON
RECOVERY VEHICLE, FULL TRACKED:
LIGHT ARMORED, M578
(2350-00-439-6242)
(EIC: 3LA)**

Current as of November 1992

DISTRIBUTION STATEMENT A. Approved for public release; distribution is unlimited.

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter or DA Form 2028 (Recommending Changes to Publications and Blank Forms) located in the back of this manual direct to: Commander, US Army Tank Automotive Command, ATTN: AMSTA-MCC, Warren, MI 48397-5000. A reply will be furnished to you.

TABLE OF CONTENTS

		Page	Illus/ Figure
Section	I. Introduction	1	
Section	II. Repair Parts List	1-1	
Group	01 Engine and Related Parts	1-1	1
	Engine Mount	2-1	2
	0106 External Oil Lines and Fittings (Upper Engine)	3-1	3
	0106 External Oil Lines and Fittings (Lower Engine) and Scavenger Reservoir	4-1	4
Group 03	0304 Engine Air Cleaner System	5-1	5
	0304 Air Cleaner Centrifugal Fan 10905010	6-1	6
	0304 Engine Intake Air Ducts	7-1	7
	0305 Turbocharger Air Intake Filter and Related Items (Engine Model 7083-7398)	8-1	8

TABLE OF CONTENTS (cont)

		Page	Illus/ Figure
	0305 Turbocharger Air Intake Screen and Related Items (Engine Model 7083-7395)	9-1	9
	0306 Fabric Fuel Cell Filler Blocks	10-1	10
	0306 Fabric Fuel Cell Installation	11-1	11
	0306 Fuel Lines and Fittings (Low Pressure) Couplings to Engine	12-1	12
	0306 Fuel Lines and Fittings (Low Pressure) Couplings to Fuel Cells	13-1	13
	0311 Fuel and Purge-and-Prime Lines and Fittings (Engine Model 7083-7398)	14-1	14
	0311 Fuel and Purge-and-Prime Lines and Fittings (Engine Model 7083-7395)	15-1	15
	0312 Throttle and Accelerator Controls and Linkage (Driver's Compartment)	16-1	16
	0312 Throttle and Accelerator Controls and Linkage (Engine Compartment)	17-1	17
Group 04	0401 Exhaust System (Engine Model 7083-7398)	18-1	18
	0401 Exhaust System (Engine Model 7083-7395)	19-1	19
Group 05	0501 Radiator and Related Parts...	20-1	20
	0501 Radiator Support Beam and Related Parts	21-1	21
	0501 Surge Tank and Related Parts	22-1	22
	0503 Cooling System Hoses, Pipes, and Related Parts	23-1	23
	0503 Aeration Detector	24-1	24
	0505 Cooling System Fan Tensioner and Related Parts	25-1	25
	0505 Radiator Cooling Vaneaxial Fan	26-1	26
Group 06	0601 Generator and Cooling Air Intake System	27-1	27
	0602 Voltage Regulator and Related Parts	28-1	28
	0603 Starter Relay and Related Items	29-1	29
	0603 Neutral Position Switch and Related Parts	30-1	30
	0607 Driver's Instrument Panel Installation	31-1	31
	0607 Driver's Instrument Panel Assembly 10904806	32-1	32
	0607 Driver's Instrument Panel 10892415	33-1	33
	0607 Warning Light 12355239	34-1	34
	0607 Indicator Light 8376499 and Indicator Light 8376500	35-1	35
	0607 Air Box Heater Controls Bracket Assembly	36-1	36
	0608 Miscellaneous Electrical Components	37-1	37
	0608 Electrical Accessories Panel Assembly 11675629	38-1	38
	0609 Headlight, Dome Light, Warning Light, and Stoplight- Taillight Installation	39-1	39
	0609 Headlight Assembly MS53022-1	40-1	40
	0609 Left Stop Light-Taillight 8378785	41-1	41
	0609 Right Stop Light-Taillight 8378786	42-1	42
	0609 Driver's Compartment Dome Light 7064671	43-1	43
	0610 Sending Units, Warning Switches, and Indicator Lights	44-1	44

TABLE OF CONTENTS (cont)

	Page	Illus/ Figure
0610 Low Engine Coolant Warning Light Indicator		
11675565	45-1	4 5
0611 Audible Warning Horn and Related Parts	46-1	4 6
0612 Batteries, Electrical Leads, and Related Parts	47-1	4 7
0613 Electrical Wiring Installation Attaching Hardware	48-1	4 8
0613 Electrical Wiring (Hull Aft)	49-1	4 9
0613 Bulkhead Disconnect to Switch Panel Wiring Harness		
10881944	50-1	5 0
0613 Bulkhead Disconnect to Engine Components and		
Warning Units Branched Wiring Harness		
10882032	51-1	5 1
0613 Bulkhead Disconnect to Driver's Control Branched		
Wiring Harness 12289941	52-1	5 2
0613 Suspension Lockout System Warning Light Ground		
and Horn Ground Electrical Leads 10892526	53-1	5 3
0613 Line Connection to Right Headlamp Disconnect		
Branched Wiring Harness 10901827	54-1	5 4
0613 Trailer Receptacle Assembly to Disconnect Branched		
Wiring Harness 10901829	55-1	5 5
0613 Battery to Circuit Breaker Electrical		
Lead 10901835	56-1	5 6
0613 Bulkhead Disconnect to Generator Armature Elec-		
trical Lead 10901840	57-1	5 7
0613 Bulkhead Disconnect to Starter Electrical Lead		
10901842	58-1	5 8
0613 Bulkhead to Bulkhead Generator Circuit Electrical		
Lead 10901844	59-1	5 9
0613 Bulkhead Disconnect to Voltage Regulator Assembly		
Wiring Harness 10901852	60-1	6 0
0613 Floor Disconnect to Bulkhead Disconnect Wiring		
Harness 10901855	61-1	6 1
0613 Bulkhead Disconnect to Magnetic Clutch Branched		
Wiring Harness 10901856	62-2	6 2
0613 Bulkhead Disconnect to Circuit Breaker Branched		
Wiring Harness 10904973	63-1	6 3
0613 Hull Disconnect to Slip Ring and Circuit Breaker	64-1	6 4
0613 Blower to Ground Electrical Lead 10914828	65-1	6 5
0613 Intercom Circuit Bulkhead Disconnect to Slip Ring		
Branched Wiring Harness 10914906	66-1	6 6
0613 Horn to Warning Relay Wiring Harness 10919885	67-1	6 7
0613 Generator Control Circuits to Bracket Disconnect		
Branched Wiring Harness 10919889	68-1	6 8
0613 Disconnect to Instrument Panel Branched Wiring		
Harness 10934573	69-1	6 9
0613 Disconnect to Forward Air Cleaner Blower Motor		
Electrical Lead 10934867 and Fuel Purge-and-		
Prime Switch to Solenoid Electrical Lead		
12254008 (Engine Model 7083-7395)	70-1	7 0

TABLE OF CONTENTS (cont)

	Page	Illus/ Figure
0613 Bulkhead Disconnect to Trailer Receptacle Disconnect Aft Blower Motor and Taillights Branched Wiring Harness 10956785	71-1	71
0613 Lighting Switch to Vehicle Accessories and Disconnect Branched Wiring Harness 11592728.	72-1	72
0613 Battery to Bulkhead Disconnect Cable Assembly 12289960	73-1	73
0613 Bulkhead to Bulkhead Starter Circuit Branched Wiring Harness 11592731	74-1	74
0613 Disconnect to Headlamp Wiring Harness 11592755	75-1	75
0613 Relay to Starter and Neutral Position Switch Branched Wiring Harness 12290396	76-1	76
0613 Fuel Purge-and-Prime Switch to Solenoid Electrical Lead 11675547 (Engine Model 7083-7398)	77-1	77
0613 Warning Light Low Coolant Detector to Bulkhead Disconnect Branched Wiring Harness 11675566	78-1	78
0613 Aeration Detector Branched Wiring Harness 11675567	79-1	79
0613 Low Coolant Warning Light to Bulkhead Disconnect Branched Wiring Harness 11675568	80-1	80
0613 Master Relay to Bulkhead Disconnect Special Cable Assembly 12289961	81-1	81
0613 Voltage Regulator to Bulkhead Disconnect Slave Receptacle and Accessories Panel Special Cable Assembly 12322791	82-1	82
0613 Air Cleaner Blower Relay to Bulkhead Disconnect Wiring Harness 12290394	83-1	83
0613 Neutral Position Safety Switch to Engine Disconnect Electrical Lead 12290393	84-1	84
0613 Slave Receptacle (NATO) and Ground Electrical Lead 12322792	85-1	85
0613 Generator to Ground Engine Ignition Lead 10914937	86-1	86
0613 Starter to Ground Electrical Lead 10901839	87-1	87
0614 Slip Ring Electrical Components	88-1	88
0614 Turret Slip Ring Cover 11593028	89-1	89
0614 Slip Ring Electrical Contact Set Assembly 10914699	90-1	90
0614 Slip Ring Electrical Brush Connector Assembly 11592936	91-1	91
0614 Slip Ring Disconnect to Interior Disconnect Wiring Harness 10914730	92-1	92
0614 Slip Ring to 24-Volt Feed Electrical Lead 10914731	93-1	93
0615 Hub Cap Radio Static Suppression Helical Spring (7379067)	94-1	94
0710 Transmission Assembly 5703079	95-1	95
0710 Transmission Components	96-1	96

Group 07

TABLE OF CONTENTS (cont)

		Page	Illus/ Figure
	0714 Transmission Plugs	97-1	97
	0721 Oil Sampling Drain Cock and Related Items	98-1	98
Group 08			
	0801 Transfer and Final Drive Assemblies	99-1	99
	0801 Auxiliary Drive Installation	100-1	100
	0801 Auxiliary Drive Assembly 11675634 (Vehicular Drive)	101-1	101
	0801 Auxiliary Drive Assembly 11675634 (Clutch Drive)	102-1	102
	0801 Auxiliary Drive Assembly 11675634 (Generator Drive)	103-1	103
	0801 Auxiliary Drive Assembly 11675634 (Input Drive) . .	104-1	104
	0801 Oil Filler Neck 10934580	105-1	105
	0801 Oil Drain Tube Assembly 10902501-1	106-1	106
	0803 Shifting Control and Linkage	107-1	107
	0804 Pump and Slip Ring Assembly 10914685 and At- taching Parts	108-1	108
	0804 Slip Ring Assembly 10908809	109-1	109
	0804 Double Rotary Pump 10867009	110-1	110
	0804 Impact Wrench Control Hydraulic Lines and Fittings .	111-1	111
	0804 Impact Wrench Ball Regulator Ball Valve 10923477	112-1	112
	0804 Hydraulic Power Supply Lines and Fittings (Forward Section)	113-1	113
	0804 Hydraulic Power Supply Lines and Fittings (Aft Sec- tion)	114-1	114
	0804 Fluid Filter	115-1	115
Group 09			
	0900 Auxiliary Drive Shafts, Universal Joints, and Related Parts	116-1	116
	0900 Auxiliary Drive Line Ball Bearing Unit 11642773 . . .	117-1	117
Group 12			
	1201 Parking Brake Control and Linkage	118-1	118
	1201 Parking Brake Assembly 12254047	119-1	119
	1206 Mechanical Brake Control and Linkage	120-1	120
Group 13			
	1301 Torsion Bars and Sockets	121-1	121
	1301 Roadwheel Arm and Hub Assembly and Attaching Parts	122-1	122
	1301 Roadwheel Pivot Arm Assembly 10891653	123-1	123
	1301 Roadwheel Suspension Hub 11631593	124-1	124
	1301 Idler Wheel, Roadwheel Wheel, and Left Lubrication Tube	125-1	125
	1303 Idler Wheel Arm and Hub Assembly and Attaching Parts	126-1	126
	1303 Idler Wheel Arm and Hub 10891675	127-1	127
	1303 Idler Wheel Vehicular Wheel Hub 10891677	128-1	128
	1304 Drive Hub Sprockets and Related Parts	129-1	129
	1305 Vehicular Track Shoe Installation	130-1	130
	1305 Vehicular Track Shoe 10934639	131-1	131

TABLE OF CONTENTS (cont)

		Page	Illus/ Figure
Group 14	1401 Steering Controls and Linkage and Steering Rod Assembly 12253961	132-1	132
Group 15	1503 Towing Pintle Assembly	133-1	133
	1503 Tow Hook and Related Parts...	134-1	134
Group 16	1604 Lockout Cylinder and Related Parts	135-1	135
	1604 Hydraulic Suspension Lockout Cylinder Assembly 12254156	136-1	136
	1604 Suspension Lockout System Control Valve and Associated Parts	137-1	137
	1604 Suspension System Hydraulic Lines and Fittings (Right Side)	138-1	138
	1604 Suspension System Hydraulic Lines and Fittings (Right Side) and Attaching Hardware	139-1	139
	1604 Suspension System Hydraulic Lines and Fittings (Left Side)	140-1	140
	1604 Suspension System Hydraulic Lines and Fittings (Left Side) and Attaching Hardware	141-1	141
Group 18	1801 Hull Covers and Access Doors.	142-1	142
	1801 Hull Covers, Doors, and Plates	143-1	143
	1801 Air Cleaner Blower Motor Access Door 10903996	144-1	144
	1801 Battery Access Cover 12355134	145-1	145
	1801 Air Cleaner Access Door 12355090	146-1	146
	1801 Engine Fuel Filter Access Door 11643066	147-1	147
	1801 Hull Deck and Miscellaneous Components	148-1	148
	1801 Hull Engine Compartment Deck Assembly Lid 10904150	149-1	149
	1801 Hull Transmission Compartment Assembly Access Cover 10904116	150-1	150
	1802 Mud Guards, Fender Extensions, and Attaching Parts	151-1	151
	1803 Driver's Hatch Cover	152-1	152
	1804 Hull Drain Plugs, Valves, and Related Parts	153-1	153
	1806 Driver's Seat and Associated Parts	154-1	154
	1806 Vehicular Seat 10901351	155-1	155
	1808 Hull Stowage Clamps, Retainers, and Associated Parts	156-1	156
Group 20	2004 Power Takeoff Installation	157-1	157
	2004 Transmission Power Takeoff 10902000-1	158-1	158
	2005 Spade and Related Parts	159-1	159
	2005 Hydraulic Cylinder Assembly 10904921	160-1	160
	2005 Spade Hydraulic Control Valves, Lines, and Fittings	161-1	161
	2005 Direct Linear Valve 10923471	162-1	162

TABLE OF CONTENTS (cont)

			Page	Illus/ Figure
Group	2 2			
	2 2 1 0	Vehicle Data Plates	163-1	163
Group	3 3			
	3 3 0 3	Vehicle Winterization Kit 11643500	164-1	164
	3 3 0 3	Heater Installation Kit 11643540	165-1	165
	3 3 0 3	Heater Installation Kit 11643540 (Battery Box Sup- ports and Related Items)	166-1	166
	3 3 0 3	Heater Installation Kit 11643540 (Battery Box and Covers)	167-1	167
	3 3 0 3	Heater Installation Kit 11643540 (Hoses and Fit- tings)	168-1	168
	3 3 0 3	Heater Installation Kit 11643540 (Fuel Lines and Fit- tings)	169-1	169
	3 3 0 3	Heater Installation Kit 11643540 (Driver's Heater Air Hoses)	170-1	170
	3 3 0 3	Heater Installation Kit 11643540 (Air Intake Blower, Fuel Filter Heaters, and Connecting Harness) . . .	171-1	171
	3 3 0 3	Heater Installation Kit 11643540 (Electrical Com- ponents and Wiring)	172-1	172
	3 3 0 3	Heater Installation Kit 11643540 (Air Intake Covers, Plates, and Related Items)	173-1	173
	3 3 0 3	Battery Positive Terminal to Circuit Breaker Electrical Leads 10934557 and 12355156	174-1	174
	3 3 0 3	Coolant Heater Circuit Breaker to Line Disconnect Special Cable Assembly 11643550	175-1	175
	3 3 0 3	Heater Control Box to Driver's Heater Wiring Harness 12322871	176-1	176
	3 3 0 3	Bulkhead Disconnects to Master Relay and Circuit Breaker Special Cable Assembly 11643585	177-1	177
	3 3 0 3	Bulkhead Disconnect to Circuit Breakers and Elec- trical Components Branched Wiring Harness 11643591	178-1	178
	3 3 0 3	Power-Plant Compartment Branched Wiring Harness 11643592	179-1	179
	3 3 0 3	Filter Mounting Fluid Filter 12322867 and Fluid Filter MS51085-1	180-1	180
	3 3 0 3	Pyrometer Vehicular Panel 11643533 and Warning Indicator Light 8729063	181-1	181
	3 3 0 3	Engine Blower Assembly 10956647	182-1	182
	3 3 0 3	Driver's Heater Electrical Control Box 11669705 . . .	183-1	183
	3 3 0 3	Engine Coolant Heater 11643561	184-1	184
	3 3 0 3	Coolant Heater Assembly Branched Wiring Harness 11617762	185-1	185
	3 3 0 3	Vehicular Heater 12322854	186-1	186
	3 3 0 3	Driver's Windshield Enclosure Kit 11643510 (Elec- trical Wiring)	187-1	187
	3 3 0 3	Driver's Windshield Enclosure Kit 11643510 (Driver's Base Assembly and Related Parts)	188-1	188

TABLE OF CONTENTS (cont)

	Page	Illus/ Figure
3303 Driver's Windshield Enclosure Kit 11643510 (Enclosure)	189-1	189
3303 Vehicular Window 11643497	190-1	190
3303 Vehicular Window 11643494	191-1	191
3303 Windshield Wiper Motor Assembly 12355188	192-1	192
3303 Wiper Motor and Defroster Lead Disconnects Elec- trical Lead Assembly 11643498	193-1	193
3303 Circuit Breaker to Wiper Motor and Defroster Switch Electrical Lead Assembly 11643499	194-1	194
3303 Defroster to Switch and Ground Lead Disconnects and Wiper Motor to Ground Lead Disconnect Elec- trical Leads 11643576-2	195-1	195
3303 Defroster to Switch and Ground Lead Disconnect 12355164 and Wiper Motor to Switch 11643608-1 Electrical Leads	196-1	196
3303 Oil Reservoir Heater Kit 11643609	197-1	197
3303 Relay to Heating Element Electrical Lead 10934763	198-1	198
3303 Overheat Thermostat to Relay Branched Wiring Harness 10934764	199-1	199
3303 Relay and Disconnect to Slave Receptacle Special Cable Assembly 11592924	200-1	200
3303 Heating Element to Slave Electrical Lead 11643584	201-1	201
3303 Vehicular Parts Kit 11643610 (Boots, Plugs, Trays, and Related Parts)	202-1	202
3303 Vehicular Parts Kit 11643610 (Heater and Related Parts)	203-1	203
3303 Circuit Breaker to Heater Control Box Branched Wir- ing Harness 10934483	204-1	204
3303 Air Deflector Assembly 11643617	205-1	205
3303 Personnel Vehicular Heater Assembly 12290382-2	206-1	206
3303 Personnel Vehicular Heater Assembly 12290382-2 (Tank Assembly Filter, and Pump)	207-1	207
3303 Control Box Assembly to Heater Assembly Wiring Harness 10934482	208-1	208
3303 Crane Operator's Enclosure Kit 11643520 (Electrical Wiring)	209-1	209
3303 Crane Operator's Enclosure Kit 11643520 (Enclosure)	210-1	210
3303 Crane Window Assembly 11643521	211-1	211
3303 Crane Operator's Base Assembly 11643519	212-1	212
3303 Wiper Motor and Defroster Lead Disconnects Branched Wiring Harness 11643522	213-1	213
3303 Circuit Breaker to Wiper Motor and Defroster Switch Electrical Lead Assembly 11643523	214-1	214
3307 Arctic Traction Kit 1643271	215-1	215

TABLE OF CONTENTS (cont)

			Page	Illus/ Figure
Group	47	4701 Speedometer, Tachometer, and Related Parts	216-1	216
Group	76	7639 Fixed Fire Extinguisher Control System	217-1	217
		7639 Fixed Fire Extinguisher Connecting Lines and Fittings	218-1	218
		7639 Fixed Fire Extinguisher Forward Nozzle, Lines and Fittings	219-1	219
		7639 Fixed Fire Extinguisher Rear Nozzle, Lines and Fittings	220-1	220
		7639 Fire Extinguisher Retaining Strap 10946585	221-1	221
		7639 Cylinder Fire Extinguisher 12257169	222-1	222
Group	91	9111 12 C.F.M. Four-Man Tank Gas-Particulate Filter Unit M8A3	223-1	223
Group	9501	Bulk Items	Bulk-1	
Group	9401	Kits	Kits-1	
Section	III.	Special Tools List	224-1	224
Group	2604	Special Tools	224-1	224
Group	2604	Special Tools	225-1	225
Group	2604	Special Tools	226-1	226
Section	IV.	Cross Reference Indexes (to be provided)	I-1	

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

Section I. INTRODUCTION

1. SCOPE. This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit, direct support, and general support maintenance of the M578 Recovery Vehicle. It authorizes the requisitioning, issue, and disposition of spares, repair parts, and special tools as indicated by the source, maintenance, and recoverability (SMR) codes.

2. GENERAL. In addition to Section I, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Items listed are shown on the associated illustration(s)/figure(s).

b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. Cross-reference Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listing. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGEC, and part numbers.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR CODE (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply requisitioning information, maintenance level authorization criteria, and disposition instruction, as shown in the following breakout:

SECTION II		TM9-2350-238-24P-1			
(1)	(2)	(3)	(4)	(5)	(6)
ITEM NO	SMR CODE	CAGEC	PART NUMBER	DESCRIPTION AND USABLE ON CODES(UOC)	QTY
GROUP 0100					
FIG.1 ENGINE AND RELATED PARTS					
1	PAFZZ	96906	MS35764-1291	BOLT,SELF-LOCKING HEX HD,3/8-16 X .875	12
2	PAFZZ	0AT62	8603811-235	PACKING,PREFORMED .135 DIA,3.0 ID	1
3	PAFZZ	19207	11662761	COUPLING,SHAFT,FLEX ENGINE TO POWER TRAIN	1
4	PAFHD	19207	5705715	ENGINE,W CONTAINER FOR REPAIR PARTS SEE TM 9-2815-202-24P	1
5	PAFZZ	19207	10904375	SUPPORT,TRANSMISSIO ENGINE TO TRANSMISSION	1
6	PAFZZ	96906	MS35338-48	WASHER,LOCK 1/2 NOM SIZE	4
7	PAFZZ	96906	MS90725-123	SCREW,CAP,HEXAGON H	4
8	PAFZZ	80204	B1821BH038C113N	SCREW,CAP,HEXAGON H 3/8-16UNC X 1.125	2
9	PAFZZ	96906	MS35338-46	WASHER,LOCK 3/8 NOM SIZE	2
10	PAFZZ	80204	B1821BH063C200N	SCREW,CAP,HEXAGON H 5/8-11UNC X 2.000	6
11	PAFZZ	80045	23MS35338-50	WASHER,LOCK 5/8 NOM SIZE	6
12	PAFZZ	96906	MS35338-47	WASHER,LOCK 7/16 NOM SIZE	14
13	PAFZZ	96906	MS90725-96	SCREW,CAP,HEXAGON H 7/16-14UNC X 3.250	2
14	PAFZZ	80204	B1821BH044C150N	SCREW,CAP,HEXAGON H 7/16-14UNC X 1.500	9
15	PAFZZ	80204	B1821BH044C225N	SCREW,CAP,HEXAGON H 7/16-14UNC X 2.250	3
16	PAFZZ	19207	12289974	GASKET FLYWHEEL HOUSING	1
END OF FIGURE					

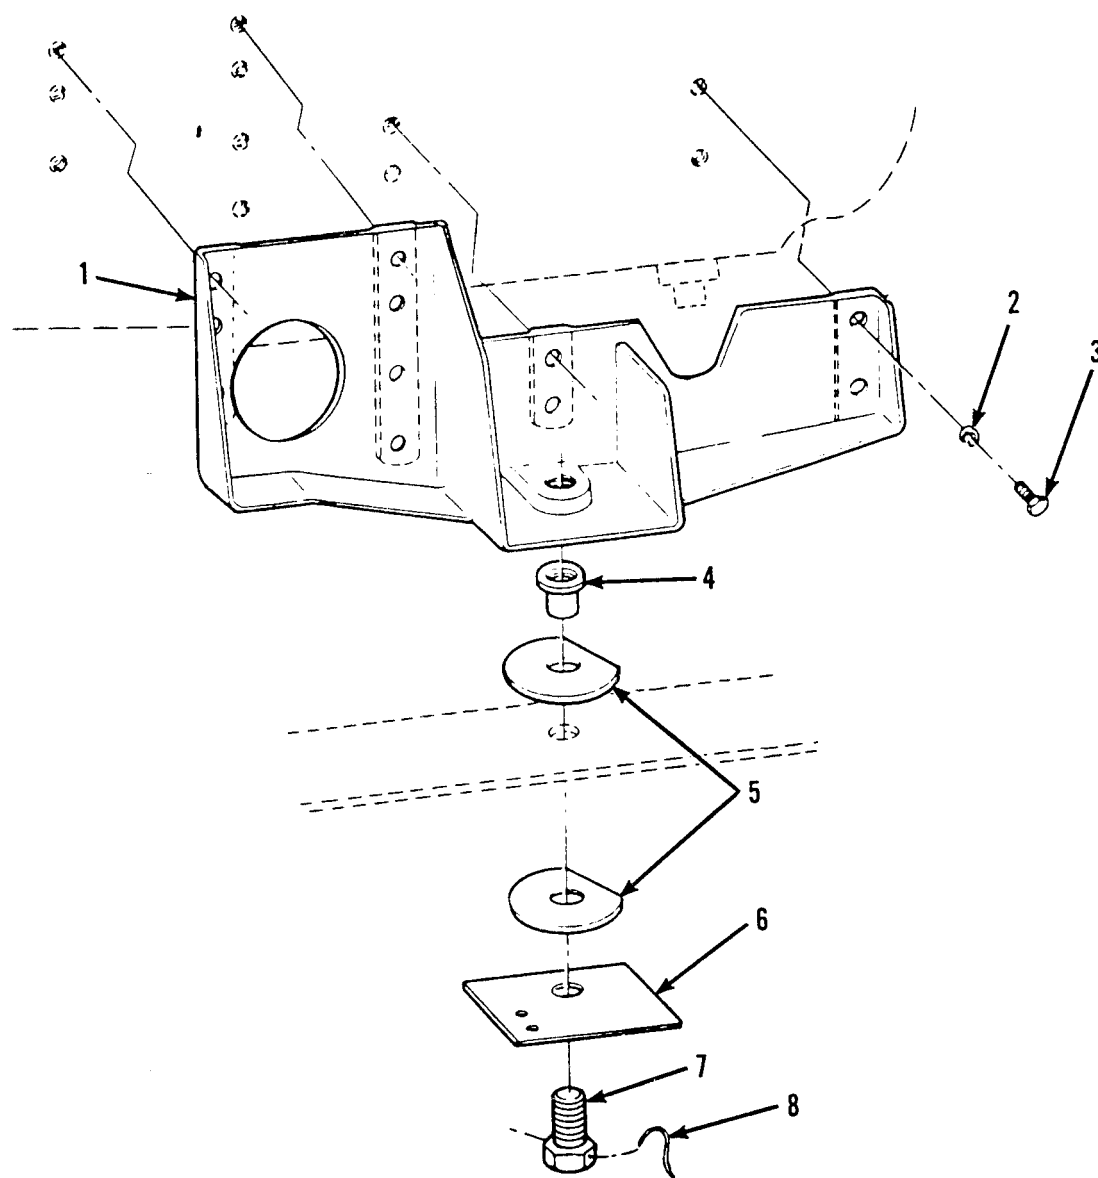 


Figure 2. Engine Mount.

SECTION II			TM9-2350-238-24P-1		
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART		
NO	CODE	CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES(UOC)	QTY
GROUP 0100					
FIG.2 ENGINE MOUNT					
1	PA0ZZ	19207	11631501	BRACKET,MOUNTING	1
2	PA0ZZ	96906	MS35338-46	WASHER,LOCK 3/8 NOM SIZE	12
3	PA0ZZ	80204	B1821BH038C125N	SCREW,CAP,HEXAGON H 3/8-16UNC X 1.250	12
4	PA0ZZ	19207	10898445	TUBE,SPACER,MOUNT,P	1
5	PA0ZZ	19207	10882021	PAD,CUSHIONING SHOCK,ENGINE MOUNT	2
6	PA0ZZ	19207	10882022	WASHER,ENGINE MOUNT LOCK WIRE PLATE	1
7	PA0ZZ	96906	MS51096-513	SCREW,CAP,HEXAGON H 1.0-12UNF X 3.00	1
8	M00ZZ	96906	MS20995C91AR	WIRE,NONELECTRICAL. MFD FROM NSN90505-00-221-2650	V
END OF FIGURE					

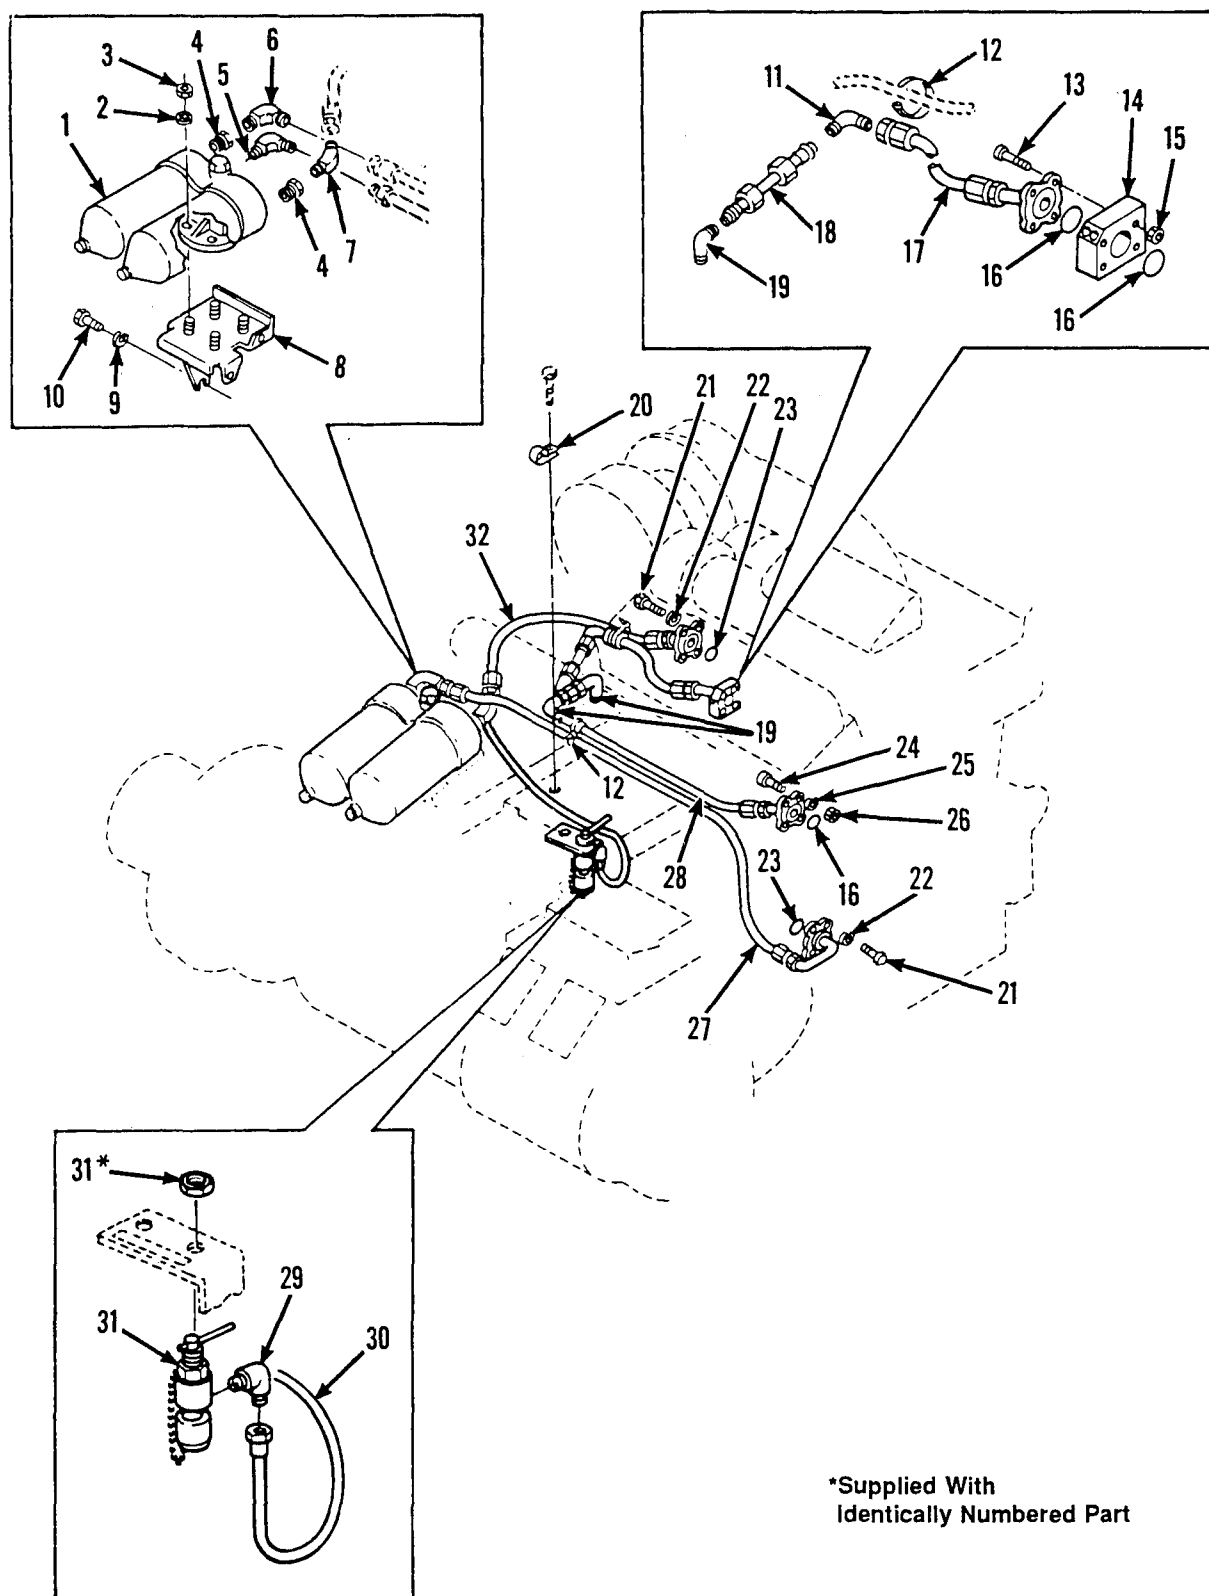 


Figure 3. External Oil Lines and Fittings (Upper Engine).

SECTION II			TM9-2350-238-24P-1		
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART		
NO	CODE	CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES(UOC)	QTY
GROUP 0106					
FIG.3 EXTERNAL OIL LINES AND					
FITTINGS (UPPER ENGINE)					
1	PA0ZZ	72582	5126546	FILTER,FLUID PRESSURE	1
2	PA0ZZ	96906	MS35333-42	WASHER, LOCK 3/8 NOM SIZE	4
3	PA0ZZ	96906	MS51968-8	NUT,PLAIN,HEXAGON 3/8-24UNF	4
4	PA0ZZ	24617	144059	BUSHING,PIPE 1-1/4 X 3/4 NPT	2
5	PA0ZZ	96906	MS51504A4-4	ELBOW,PIPE TO TUBE	1
6	PA0ZZ	96906	MS51815-14	ELBOW,PIPE TO TUBE 3/4NPTF PIPE TO	1
				3/4 TUBE	
7	PA0ZZ	19207	10917222-6	ELBOW,PIPE TO TUBE OIL FILTER	1
				COOLER HOSE	
8	PA0ZZ	19207	11642652	BRACKET,OIL FILTER OIL FILTER	1
9	PA0ZZ	96906	MS35338-46	WASHER, LOCK 3/8 NOM SIZE	1
10	PA0ZZ	80204	B1821BH038C075N	SCREW,CAP,HEXAGON H 3/8-16UNC X	1
				1.00	
11	PA0ZZ	96906	MS21904-16	ELBOW,TUBE FLARELESS,1.0 TUBE OD	1
12	PA0ZZ	19207	10921769	BAND,MARKER OIL HOSES	2
13	PA0ZZ	96906	MS90727-129	SCREW,CAP,HEXAGON H 1/2-20UNF X	4
				6.00	
14	PA0ZZ	19207	10914794	MANIFOLD,OIL RESERV OIL RESERVOIR	1
15	PA0ZZ	96906	MS21044-N8	NUT,SELF-LOCKING,HE	4
16	PA0ZZ	96906	MS28775-228	PACKING,PREFORMED 2.234 ID,2.512 OD	3
17	PA0ZZ	19207	8712200	HOSE ASSEMBLY,NONME RUBBER,	1
				TRANSMISSION TO OIL COOLER	
18	PA0ZZ	19207	10881937	TUBE ASSEMBLY,METAL TRANSMISSION	1
				OIL TO OIL COOLER	
19	PA0ZZ	96906	MS51815-48	ELBOW,PIPE TO TUBE 1.0NPTF PIPE TO	2
				1.0 TUBE	
20	PA0ZZ	96906	MS21333-120	CLAMP,LOOP	1
21	PA0ZZ	80204	B1821BH044C125N	SCREW,CAP,HEXAGON H 7/16-14UNC X	8
				1.250	
22	PA0ZZ	96906	MS35338-47	WASHER, LOCK 7/16 NOM SIZE	8
23	PA0ZZ	96906	MS28775-222	PACKING,PREFORMED 1.484 ID,1.762 OD	2
24	PA0ZZ	96906	MS90727-122	SCREW,CAP,HEXAGON H 1/2-20UNF X	4
				3.750	
25	PA0ZZ	96906	MS35338-48	WASHER, LOCK 1/2 NOM SIZE	4
26	PA0ZZ	96906	MS51968-14	NUT,PLAIN,HEXAGON 1/2-20UNF	4
27	PA0ZZ	98441	213038-12-0444	HOSE ASSEMBLY,NONME RUBBER,ENGINE	1
				OIL FILTER	
28	PA0ZZ	19207	10914574	HOSE ASSEMBLY,NONME TRANSMISSION	1
				TO OIL COOLER	
29	PA0ZZ	96906	MS51506A4	ELBOW,PIPE TO TUBE	1
30	PA0ZZ	96906	MS8000E320A	HOSE ASSEMBLY,NONME	1
31	PA0ZZ	19207	11669424	COCK,DRAIN	1
32	PA0ZZ	19207	10906363	HOSE ASSEMBLY,NONME RUBBER,OIL	1
				FILTER COOLER	
END OF FIGURE					

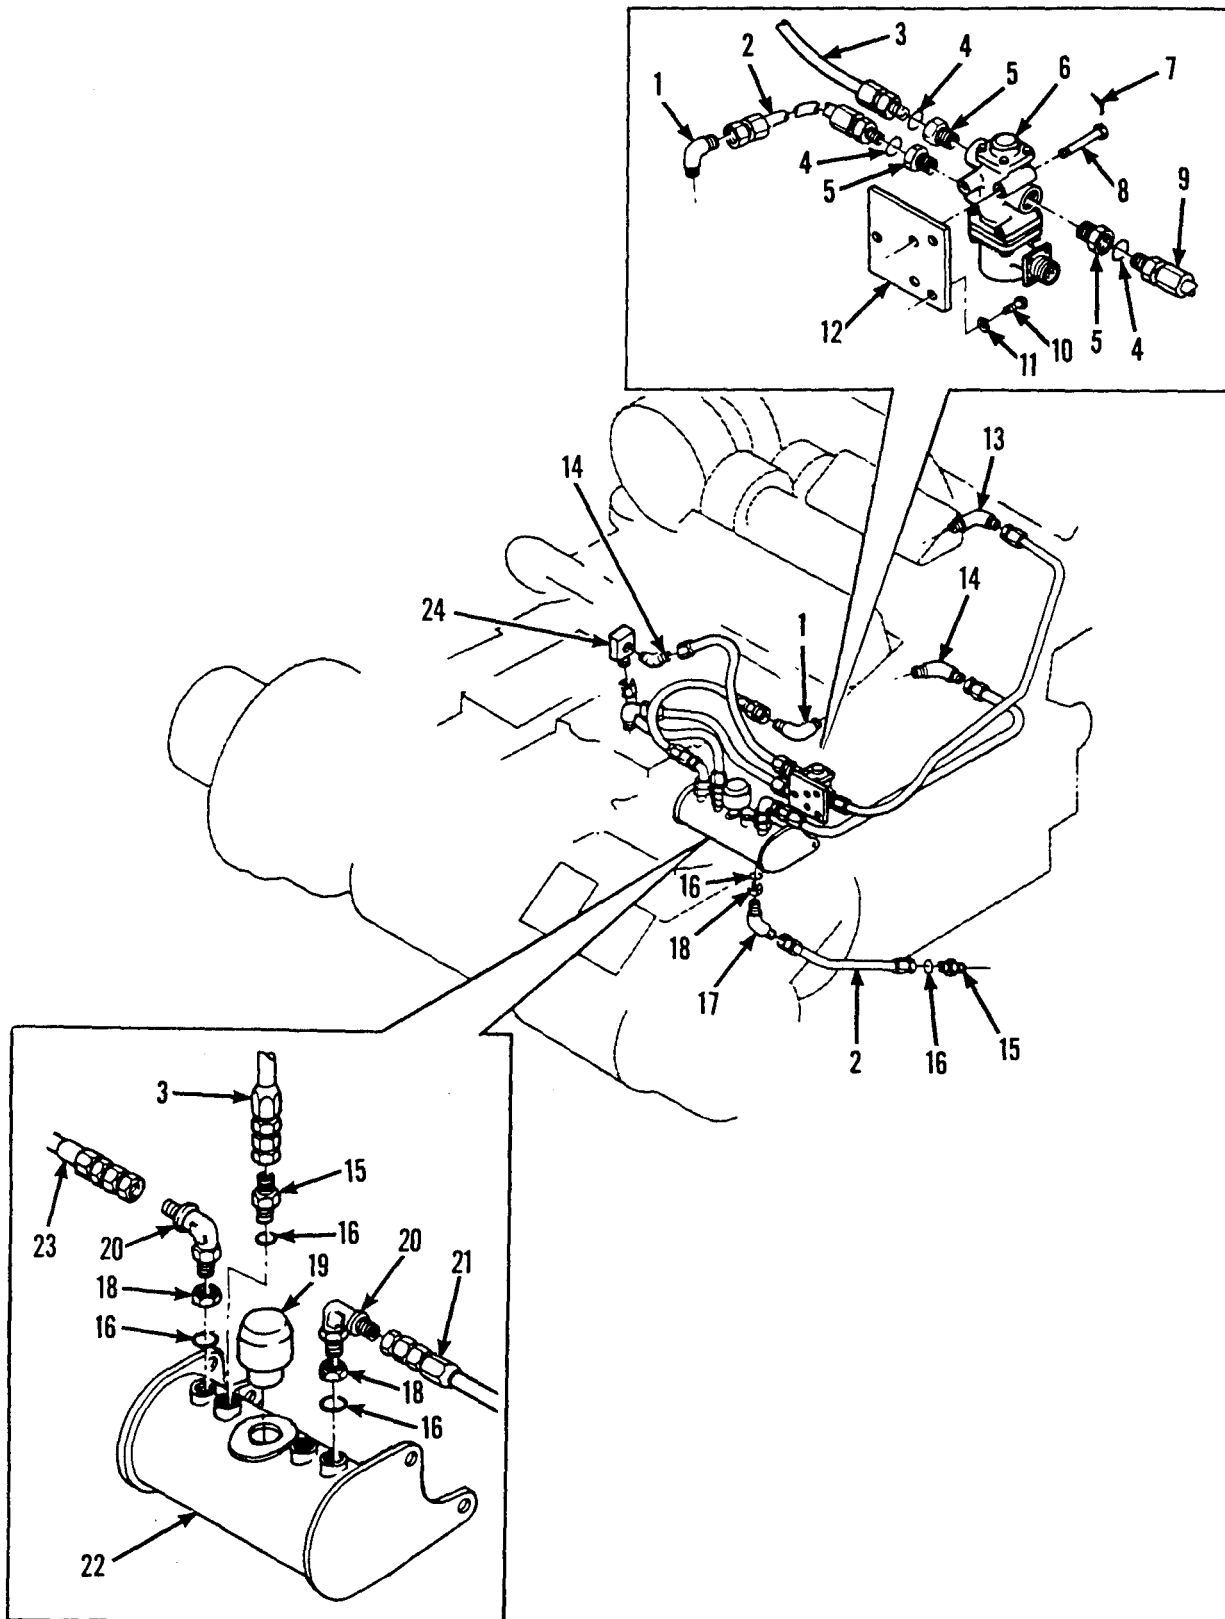 


Figure 4. External Oil Lines and Fittings (Lower Engine) and Scavenger Reservoir.

SECTION II			TM9-2350-238-24P-1		
(1)	(2)	(3)	(4)	(5)	(6)
ITEM NO	SMR CODE	CAGEC	PART NUMBER	DESCRIPTION AND USABLE ON CODES(UOC)	QTY
GROUP 0106 FIG.4 EXTERNAL OIL LINES AND FITTINGS (LOWER ENGINE) AND SCAVENGER RESERVOIR					
1	PA0ZZ	96906	MS51815-3	ELBOW,PIPE TO TUBE 1/8NPTF PIPE TO 1/4 TUBE	2
2	PA0ZZ	19207	10911012	HOSE ASSEMBLY,NONME RUBBER, RESERVOIR DRAIN (1) TRANSMISSION TO SOLENOID (1)	2
3	PA0ZZ	19207	10913170	HOSE ASSEMBLY,NONME RUBBER, TRANSMISSION DRAIN (1) TRANSMISSION TO SOLENOID (1)	2
4	PA0ZZ	96906	MS28778-8	PACKING,PREFORMED .644 ID, .818 OD	3
5	PAFZZ	96906	MS21916-8-4	REDUCER,BOSS 1/4 TO 1/2	3
6	PAFZZ	19200	10900446	VALVE,SOLENOID BYPASS RETURN SOLENOID	1
7	MFFZZ	96906	MS20995F41	WIRE,NONELECTRICAL MFD FROM 9505-00-684-4843	V
8	PAFZZ	96906	MS18153-12	SCREW,CAP,HEXAGON H 1/4-28UNF X 2.00	3
9	PA0ZZ	19207	10917137-4	HOSE ASSEMBLY,NONME RUBBER, GOVERNOR TO BYPASS SOLENOID	1
10	PAFZZ	80204	B1821BH044C100N	SCREW,CAP,HEXAGON H 7/16-14UNC X 1.000	2
11	PAFZZ	96906	MS35338-47	WASHER, LOCK 7/16 NOM SIZE	2
12	PAFZZ	19207	10881940	PLATE,MOUNTING,SOLE BYPASS SOLENOID VALVE MOUNTING	1
13	PA0ZZ	96906	MS51815-5	ELBOW,PIPE TO TUBE 1/4NPTF PIPE TO 1/4 TUBE,GOVERNOR TO BYPASS SOLENOID	1
14	PA0ZZ	19207	10917222-1	ELBOW,PIPE TO TUBE 1/8NPTF PIPE TO 1/4 TUBE	2
15	PA0ZZ	96906	MS21902-4	NIPPLE,BOSSW	2
16	PA0ZZ	96906	MS28778-4	PACKING,PREFORMED .351 ID, .495 OD	5
17	PA0ZZ	96906	MS21907-4	ELBOW,TUBE 1/4 TUBE OD	1
18	XDOZZ	88044	AN6289-2	LOCKNUT,TUBE FITTIN 7/16-20UNF	3
19	PA0ZZ	19207	10915154	BREATHER POWER PLANT RESERVOIR	1
20	PA0ZZ	96906	MS21908-4	ELBOW,TUBE 1/4 TUBE OD	2
21	PA0ZZ	19207	10906356	HOSE ASSEMBLY,NONME RUBBER,ENGINE BLOCK DRAIN	1
22	PB0ZZ	19207	10904381	RESERVOIR, ENGINE O POWER PLANT	1
23	PA0ZZ	19207	10913169	HOSE ASSEMBLY,NONME RUBBER,ENGINE CONDENSATION	1
24	PA0ZZ	19207	10881942	ELBOW,PIPE TO HOSE TRANSMISSION TO SOLENOID HOSE	1

END OF FIGURE

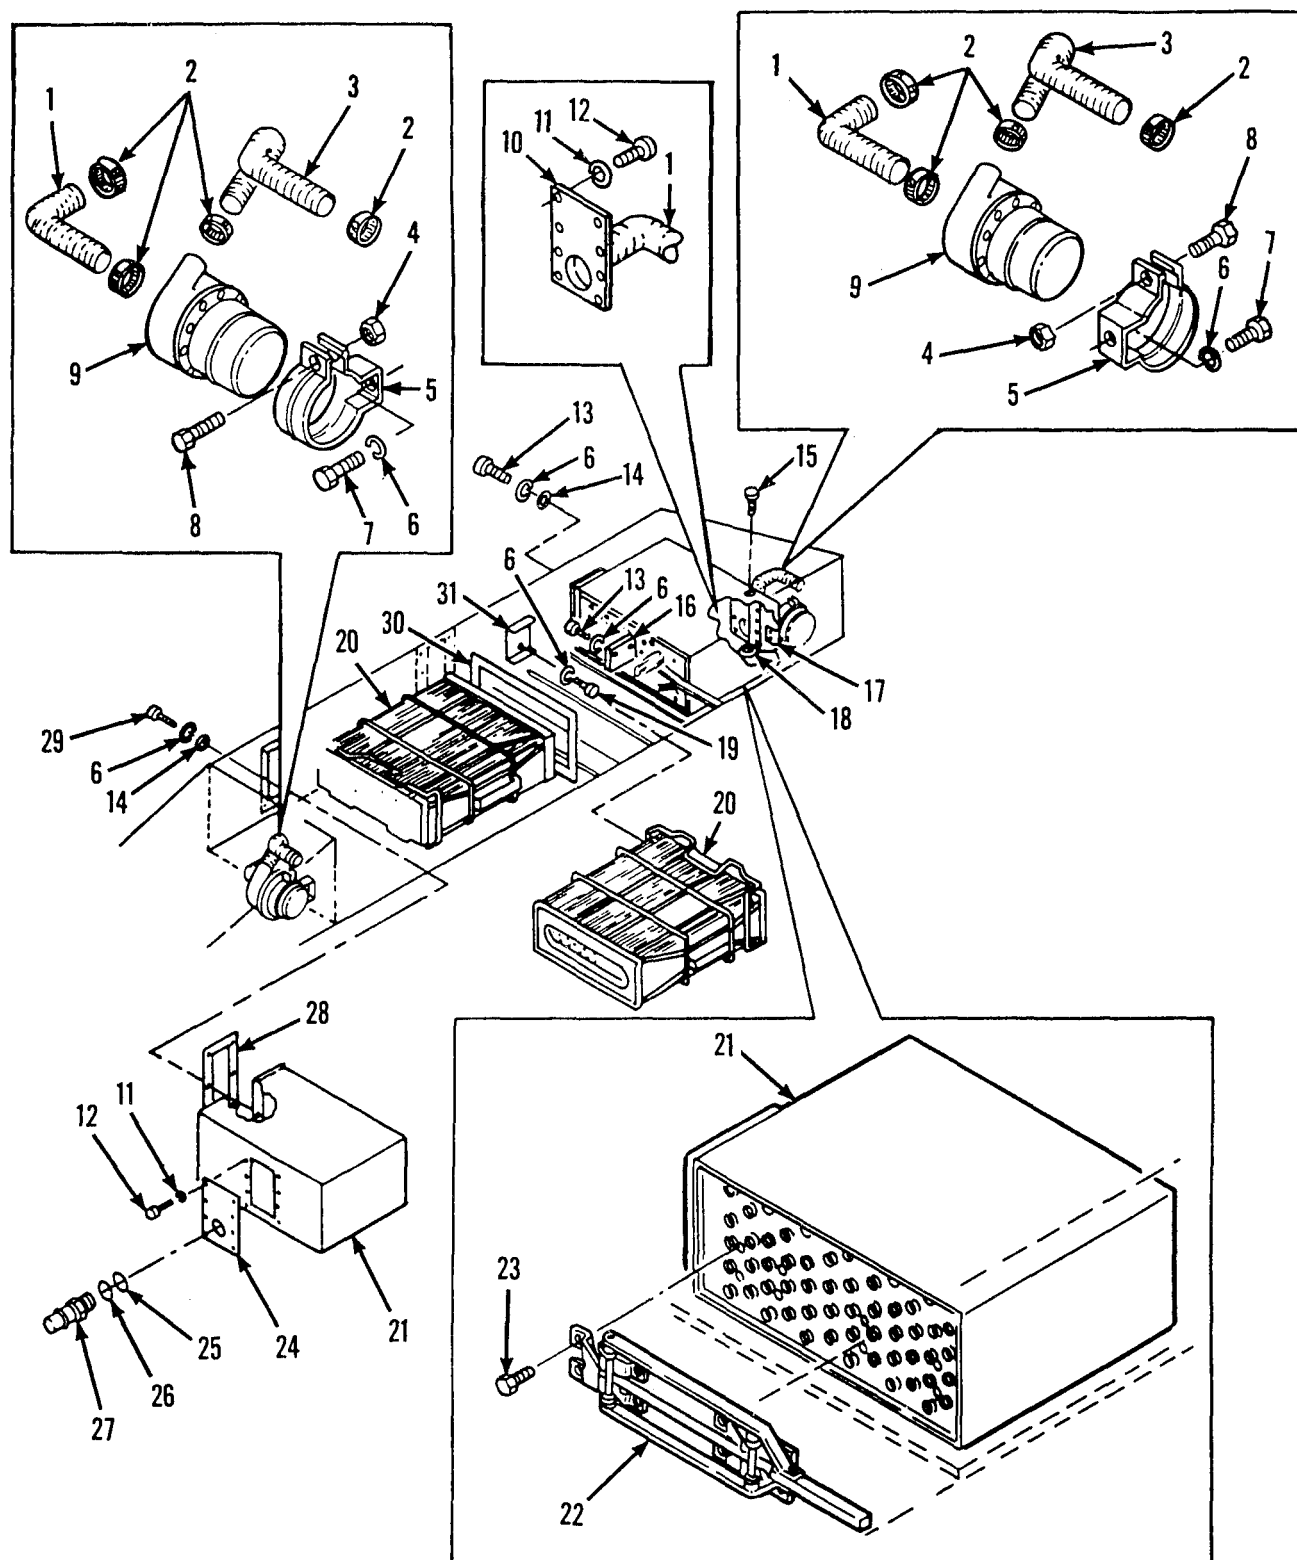 


Figure 5. Engine Air Cleaner System.

SECTION II (1) ITEM NO	(2) SMR CODE	(3) CAGEC	TM9-2350-238-24P-1 (4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODES(UOC)	(6) QTY
GROUP 0304 FIG.5 ENGINE AIR CLEANER SYSTEM					
1	M00ZZ	19207	8724783-6	HOSE,AIR DUCT BLOWER INLET,MFD FROM 4720-00-882-1669	V
2	PA0ZZ	96906	MS35842-12	CLAMP,HOSE 1.063 TO 2.00 ID	8
3	M00ZZ	19207	8724783-10	HOSE,AIR DUCT BLOWER OUTLET,MFD FROM 4720-00-882-1669	V
4	PA0ZZ	96906	MS21044N5	NUT,SELF-LOCKING,HE 5/16-24UNJF	2
5	PA0ZZ	19207	10934628	BRACKET CLAMP AIR C AIR CLEANER	2
6	PA0ZZ	96906	MS35338-46	WASHER,LOCK 3/8 NOM SIZE	24
7	PA0ZZ	80204	B1821BH038C075N	SCREW,CAP,HEXAGON H 3/8-24UNF X .625	4
8	PA0ZZ	96906	MS90726-36	SCREW,CAP,HEXAGON H 5/16-24UNF X 1.250	2
9	PA0FF	19207	10905010	FAN,CENTRIFUGAL AIR SEPARATOR,SEE FIG. 6 FOR ASSY BKDN	2
10	PA0ZZ	19207	10919794	DOOR,AIR CLEANER,EX AFT AIR SEPARATOR BLOWER ADAPTER	1
11	PA0ZZ	96906	MS35338-44	WASHER,LOCK 1/4 NOM SIZE	16
12	PA0ZZ	96906	MS90725-5	SCREW,CAP,HEXAGON H 1/4-20UNC X .625	16
13	PA0ZZ	96906	MS90727-58	SCREW,CAP,HEXAGON H 3/8-24UNF X .750	10
14	PA0ZZ	96906	MS27183-14	WASHER,FLAT .406 ID, .812 OD, .065 THK	12
15	PA0ZZ	96906	MS90727-63	SCREW,CAP,HEXAGON H 3/8-24UNF X 1.375	1
16	PA0ZZ	19207	12355148	SPACER,PLATE PLACEMENT GUIDE	2
17	PA0ZZ	19207	8762879	GASKET	1
18	PA0ZZ	96906	MS35692-21	NUT,PLAIN,SLOTTED,H 3/8-24UNF	1
19	PA0ZZ	96906	MS90727-55	SCREW,CAP,HEXAGON H 3/8-24UNF X .500	4
20	PA0BZ	78940	W260DX-3	FILTER ELEMENT,INTA	2
21	PA0ZZ	19207	10934626	AIR CLEANER,INTAKE AIR CLEANER SEPARATOR	2
22	PA0ZZ	19207	12355157	REATAINER ASSEMBLY, A AIR FILTER	2
23	PA0ZZ	21450	186491	BOLT,ASSEMBLED WASH 1/4-20UNC X 1/2	16
24	PA0ZZ	19207	10919793	COVER,ACCESS FWD AIR SEPARATOR BLOWER ADAPTER	1
25	PA0ZZ	88044	AN960-2616	WASHER,FLAT 1.640 ID,2.375 OD 090 THK	1
26	PA0ZZ	19207	10956619	GASKET FWD AIR SEPARATOR OUTLET ADAPTER	1
27	PA0ZZ	19207	10919791	ADAPTER,STRAIGHT,H0 STRAIGHT,HOSE TO BOSS,FWD AIR SEPARATOR END PLATE DOOR	1
28	PA0ZZ	19207	10934570	GASKET AIR SEPARATOR INLET	2
29	PA0ZZ	96906	MS90727-60	SCREW,CAP,HEXAGON H 3/8-24UNF X 1.000	6
30	PA0ZZ	19207	12355122	SEAL ASSEMBLY,AIR F FILTER BASKET AIR OUTLET	2