 


DEPARTMENT OF THE ARMY TECHNICAL MANUAL

UNIT, DIRECT SUPPORT, AND GENERAL
SUPPORT MAINTENANCE REPAIR
PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS)

CRANE (CAB) COMPONENTS

RECOVERY VEHICLE,
FULL-TRACKED:
LIGHT, ARMORED, M578
(2350-00-439-6242) (EIC:3LA)

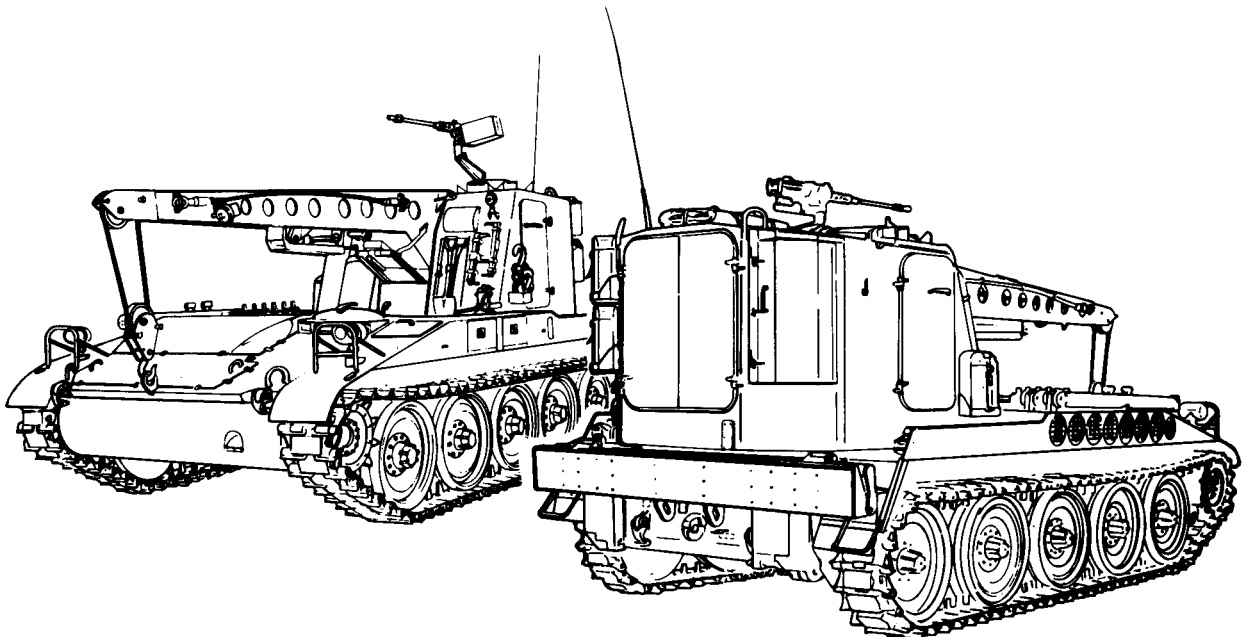

DISTRIBUTION STATEMENT A. Approved for public release; distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY

5 MARCH 1992

TECHNICAL MANUAL

No. 9-2350-238-24P-2

HEADQUARTERS
DEPARTMENT OF THE ARMY

Washington, DC

5 March 1992

UNIT, DIRECT SUPPORT, AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS)

CRANE (CAB) COMPONENTS

RECOVERY VEHICLE, FULL-TRACKED: LIGHT, ARMORED, M578
(2350-00-439-6242) (EIC:3LA)

Current as of 21 August 1991

DISTRIBUTION STATEMENT A. Approved for public release; distribution is unlimited.

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, U.S. Army Armament, Munitions and Chemical Command, ATTN: AMSMC-MAS, Rock Island, IL 61299-6000. A reply will be furnished to you.

TABLE OF CONTENTS

		Page	Illus/ Figure
Section I.	Introduction	1	
Section II.	Repair Parts List	1-1	
Group 00	M578 Armored Light Full-Track Recovery Vehicle	1-1	1
Group 01	Cab Assembly 10934910, Stowage Compartment Doors	2-1	2
01	Cab Assembly 10934910, Tow Winch Access Door and Related Parts	3-1	3
01	Cab Assembly 10934910, Covers, Doors, and Related Parts . . .	4-1	4
01	Cab Assembly 10934910, Boom Elevating, Boom and Tow Winch Controls and Linkage	5-1	5
01	Cab Assembly 10934910, Operator's Cupola	6-1	6
01	Cab Assembly 10934910, Traversing Foot Pedal Linkage	7-1	7

*This manual supersedes crane (cab) components portions of TM 9-2350-238-20P, including all changes, dated 15 April 1982, and TM 9-2350-238-34P-2, including all changes, dated 21 May 1982.

Table of Contents (cont)

		Page	Illus/ Figure
Group 01	Cab Assembly 10934910, Interior Covers, Plates, and Related Parts	8-1	8
01	Cab Assembly 10934910, Operator's and Rigger's Seat	9-1	9
01	Cab Assembly 10934910, Floors, Plates, and Related Parts	10-1	10
	0101 Left Side Cab Swinging Metal Door 10908371-1 (Shown) and		
	0102 Right Side Cab Vehicle Hatch Door 10908371-2 (Opposite)	11-1	11
	0103 Left Rear Cab Swinging Metal Door 10908330	12-1	12
	0104 Commander's Cupola Assembly 11592757	13-1	13
	0105 Left Cab Stowage Vehicle Hatch Doors 10908675-2 (Lower Shown) and		
	0106 10908675-1 (Upper Opposite)	14-1	14
	0107 Vehicular Seat 10934684 and		
	010701 Manual Control Lever 10934706	15-1	15
	0108 Forward Left-Hand Nonskid Metallic Tread 10956685	16-1	16
Group 02	Boom and Winch 10908500, Level Wind and Block	17-1	17
02	Boom and Winch 10908500, Boom, Pulley, and Related Parts . . .	18-1	18
02	Boom and Winch 10908500, Tow Winch Cables	19-1	19
02	Boom and Winch 10908500, Tow Winch Assembly	20-1	20
02	Boom and Winch 10908500, Control Cylinders and Attaching Parts	21-1	21
02	Boom and Winch 10908500, Cover and Related Parts	22-1	22
02	Boom and Winch 10908500 and		
	0205 Vehicle Drum Winch 10908544-2	23-1	23
	0201 Single Tackle Block Assembly 10908619	24-1	24
	0202 Winch Level Wind 11592700 and		
	020201 Connecting Link Slide 11592697	25-1	25
	0203 Boom Winch Cover 10908949	26-1	26
	0204 Hydraulic Motor 10922179	27-1	27
	020501 Manual Control Lever 10915013	28-1	28
	020502 Planetary (Boom) Winch 10934878-2	29-1	29
	02050201 Winch Control Cylinder 10915010	30-1	30
	02050202 Stage One Boom Winch Gear Cluster 10908540	31-1	31
	02050203 Stage Two Boom Winch Carrier Assembly 10908580	32-1	32
	02050204 Stage Three Boom Winch Carrier Assembly 12322775	33-1	33
	0206 Boom Winch Control Cylinder Assembly 10908990	34-1	34
	0207 Manual Control Lever 10908725	35-1	35
	0208 Vehicle Tow Drum Winch 10904960	36-1	36
	020801 Winch Control Cylinder 10915010	37-1	37
	020802 Stage One Carrier Assembly Mechanical Housing 10908270	38-1	38
	020803 Stage Two Carrier Assembly Gear Cluster 10908281	39-1	39
	020804 Stage Three Winch Carrier Assembly 10908282	40-1	40
	020805 Stage Four Carrier Assembly Spur Gearshaft 10908283	41-1	41

		Page	Illus/ Figure
Group 03	Hydraulic Installation 10908350, Boom Elevating Hydraulic Lines and Fittings-Manifold to Three-Spool Valve	42-1	42
03	Hydraulic Installation 10908350, Boom Cylinder Hydraulic Lines and Fittings-Manifold to Cylinders	43-1	43
03	Hydraulic Installation 10908350, Boom Winch Three-Spool Valve Hydraulic Lines and Fittings	44-1	44
03	Hydraulic Installation 10908350, Boom Winch Counterbalance Manifold Lines and Fittings	45-1	45
03	Hydraulic Installation 10908350, Tow Winch Three-Spool Valve Hydraulic Lines and Fittings	46-1	46
03	Hydraulic Installation 10908350, Tow Winch Counterbalance Manifold Hydraulic Lines and Fittings	47-1	47
03	Hydraulic Installation 10908350, Traversing System Control Valve Hydraulic Lines and Fittings	48-1	48
03	Hydraulic Installation 10908350, Traversing System Solenoid Valves Hydraulic Lines and Fittings	49-1	49
03	Hydraulic Installation 10908350, Traversing System Power Unit Hydraulic Lines and Fittings	50-1	50
03	Hydraulic Installation 10908350, Slip Ring, Flow Divider Manifold, and Control Valve Hydraulic Lines and Fittings	51-1	51
03	Hydraulic Installation 10908350, Hydraulic Drain Lines, Fittings, and Components	52-1	52
03	Hydraulic Installation 10908350 and Hydraulic Reservoir Lines and Fittings		
	and		
	0304 Hydraulic Reservoir Filter and Strainer Assembly 10919820	53-1	53
	0301 Three Spool Directional Linear Valve 10923476	54-1	54
	0302 Manifold Assembly Counterbalance 10914830	55-1	55
	030201 Pressure Relief Valve 12253780	56-1	56
	030202 Check Valves 12253779-1		
	and		
	030203 12253779-2	57-1	57
	030204 Pressure Relief Valves 12253778-1		
	and		
	030205 12253778-2	58-1	58
	0303 Hydraulic Flow Divider Manifold 10914821		
	and		
	030301 Hydraulic Flow Divider Plug Valve 11631605	59-1	59
	030302 Relief Valve 12253774	60-1	60
	030303 Check Valve 12253775.. . . .	61-1	61
	030304 Pressure Relief Valve 12253776	62-1	62
	030305 Solenoid Valve 12253777	63-1	63
	0305 Turret Traverse Control Directional Linear Valve 10923472 and Spool Assembly 612376.	64-1	64
Group 04	Traversing Installation 10904950	65-1	65
	0401 Cab Traversing Unit 10904849		
	and		
	040102 Primary Planetary Speed Gear Assembly 11675344	66-1	66
	040101 Traversing Hydraulic Motor 10910344	67-1	67
	0402 Traversing Final Drive 11675635	68-1	68

Table of Contents (cont)

		Page	Illus/ Figure
Group 05	Electrical Installation 10904800, Wiring and Attaching Hardware	69-1	69
05	Electrical Installation 10904800, Floodlights and Cab Electrical Components	70-1	70
	0501 Dome Light 7064671	71-1	71
	0502 Warning Light 12355239	72-1	72
	05030 Operator Vehicular Flasher Control Panel 11592770 and		
	050301 Flasher Indicator Light 8376499	73-1	73
Group 06	Cab Filter Installation 11643432 and Circuit Breaker	74-1	74
06	Cab Filter Installation 11643432, Frame Assembly	75-1	75
06	Cab Filter Installation 11643432, Cable Assemblies	76-1	76
06	Cab Filter Installation 11643432 and		
	0601 Hose Assembly C5-19-876-2 and		
	0602 Hose Assembly C5-19-876-3 and		
	0603 Hose Assembly C5-19-876-4	77-1	77
	0604 Gas Particulate Filter Unit DL5-19-1779 and		
	060401 M2A2 Air Purifier Assembly D5-19-1772 and		
	06040101 Housing Precleaned Assembly D5-19-1785	78-1	78
	0605 Circuit Breaker and Switch Assembly C5-19-1757	79-1	79
Group 07	Equipment Stowage Installation 10904850 and		
	0703 Tackle Stowage Tray 10934732 and		
	0704 Boom Tray Manual Control Handle 10908786	80-1	80
07	Equipment Stowage Installation 10904850, Cab Interior Boxes, Brackets, Straps, and Related Parts	81-1	81
07	Equipment Stowage Installation 10904850, Cab Interior Boxes, Brackets, Straps, Racks, and Related Parts	82-1	82
07	Equipment Stowage Installation 10904850, Cab Exterior Stowage Racks, Boxes, and Straps	83-1	83
	0701 Pioneer Tool Bracket Assembly 7346922	84-1	84
	0702 Tool Locker 10914910	85-1	85
	0705 Binocular Stowage Bracket Assembly 10904054.	86-1	86
Group 08	Turret Bearing Installation 10898400	87-1	87
	0801 Plain Bearing Unit 10956570 and		
	080101 Outer Race Assembly 11592865	88-1	88
Group 9999	Bulk items	Bulk-1	
Section III.	Special Tools List	89-1	
Group 9500	Special Tools	89-1	89
Section IV.	Cross-Reference Indexes	I-1	
	National Stock Number Index	I-1	
	Part Number Index	I-15	
	Figure and Item Number Index	I-49	

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

Section I. INTRODUCTION

1. SCOPE

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit, direct support, and general support maintenance of the M578 Recovery Vehicle. It authorizes the requisitioning, issue, and disposition of spares, repair parts, and special tools as indicated by the Source, Maintenance, and Recoverability (SMR) codes.

2. GENERAL

In addition to Section I, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in this section. Items listed are shown on the associated illustration(s)/figure(s).

b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE (UOC) column) for the performance of maintenance.

c. Section IV. Cross-Reference Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listing. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGEC, and part numbers.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III)

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR CODE (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance level authorization criteria, and disposition instruction, as shown in the following breakout:

3. EXPLANATION OF COLUMNS (SECTIONS II AND III) (CONT)

(2) The physical security classification of the item is indicated by the parenthetical entry which is a physical security classification abbreviation, e.g., Phy Sec C1 (C)-Confidential, Phy Sec C1 (S)-Secret, Phy Sec C1 (T)-Top Secret.

(3) Items that are included in kits and sets are listed below the name of the kit or set.

(4) Spare/repair parts that make up an assembled item are listed immediately following the assembled item line entry.

(5) Part numbers for bulk materials are referenced in this column in the line item entry for the item to be manufactured/fabricated.

(6) When the item is not used with all serial numbers of the same model, the effective serial numbers are shown on the last line(s) of the description (before UOC).

(7) The usable on code, when applicable (see paragraph 5, Special Information).

(8) In the Special Tools List section, the Basis of Issue (BOI) appears as the last line(s) in the entry for each special tool, special TMDE, and other special support equipment. When density of equipment supported exceeds density spread indicated in the basis of issue, the total authorization is increased proportionately.

(9) The statement "END OF FIGURE" appears just below the last item description in Column 5 for a given figure in both Section II and Section III.

f. **QTY (Column (6)).** The QTY (quantity per figure column) indicates the quantity of the item used in the breakout shown on the illustration figure, which is prepared for a functional group, subfunctional group, or an

assembly. A "V" appearing in this column in lieu of a quantity indicates that the quantity is variable and the quantity may vary from application to application.

4. EXPLANATION OF COLUMNS (SECTION IV).

a. National Stock Number (NSN) Index.

(1) **STOCK NUMBER column.** This column lists the NSN by National Item Identification Number (NIIN) sequence. The NIIN consists of the last nine digits of the NSN

NSN

NIIN

(i.e., 5305-01-674-1467). When using this

column to locate an item, ignore the first 4 digits of the NSN. However, the complete NSN should be used when ordering items by stock number.

(2) **FIG. column.** This column lists the number of the figure where the item is identified/located. The figures are in numerical order in Section II and Section III.

(3) **ITEM column.** The item number identifies the item associated with the figure listed in the adjacent FIG. column. This item is also identified by the NSN listed on the same line.

b. **Part Number Index.** Part numbers in this index are listed by part number in ascending alphanumeric sequence (i.e., vertical arrangement of letter and number combination which places the first letter or digit of each group in order A thru Z, followed by the numbers 0 thru 9 and each following letter or digit in like order).

(1) **CAGEC column.** The Contractor and Government Entity Code (CAGEC) is a 5-digit numeric code used to identify the manufacturer, distributor, or Government agency, etc., that supplies the item.

(2) PART NUMBER column. Indicates the primary number used by the manufacturer (individual, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications standards, and inspection requirements to identify an item or range of items.

(3) STOCK NUMBER column. This column lists the NSN for the associated part number and manufacturer identified in the PART NUMBER and CAGEC columns to the left.

(4) FIG. column. This column lists the number of the figure where the item is identified/located in Section II and III.

(5) ITEM column. The item number is that number assigned to the item as it appears in the figure referenced in the adjacent figure number column.

c. Figure and Item Number Index.

(1) FIG. column. This column lists the number of the figure where the item is identified/located in Sections II and III.

(2) ITEM column. The item number is that number assigned to the item as it appears in the figure referenced in the adjacent figure number column.

(3) STOCK NUMBER column. This column lists the NSN for the item.

(4) CAGEC column. The Contractor and Government Entity Code (CAGEC) is a 5-digit numeric code used to identify the manufacturer, distributor, or Government agency, etc., that supplies the item.

(5) PART NUMBER column. Indicates the primary number used by the manufacturer (individual, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items.

5. SPECIAL INFORMATION

a. Fabrication Instructions. Bulk materials required to manufacture items are listed in the Bulk Material Function Group of this RPSTL. Part numbers for bulk materials are also referenced in the description column of the line item entry for the item to be manufactured/fabricated. Detailed fabrication instructions for items source coded to be manufactured or fabricated are found in TM 9-2350-238-20-2 and TM 9-2350-238-34-2.

b. Assembly Instruction. Detailed assembly instructions for items source coded to be assembled from component spare/repair parts are found in TM 9-2350-238-20-2 and TM 9-2350-238-34-2. Items that make up the assembly are listed immediately following the assembly item entry or reference is made to an applicable figure.

c. Kits. Line item entries for repair parts kits appear in a group in Section II (see table of contents).

d. Index Numbers. Items which have the word BULK in the figure column will have an index number shown in the item number column. This index number is a cross-reference between the National Stock Number/Part Number Index and the bulk material list in Section II.

5. SPECIAL INFORMATION (CONT)

e. Associated Publications. The publication(s) listed below pertain to M578 Recovery Vehicle and its components:

Publication	Short Title
TM 9-2350-238-10	Recovery Vehicle, Full-Track, M578: Operator's Manual
TM 9-2350-238-20-1	Recovery Vehicle, Full-Track, M578: Unit Maintenance, Hull and Components
TM 9-2350-238-20-2	Recovery Vehicle, Full-Track, M578: Unit Maintenance, Crane & Components
TM 9-2350-238-24P-1	Recovery Vehicle, Full-Track, M578: Unit, Direct Support, and General Support Repair Parts and Special Tools List, Hull and Components
TM 9-2350-238-34-1	Recovery Vehicle, Full-Track, M578: Direct Support and General Support Maintenance, Hull and Components
TM 9-2350-238-34-2	Recovery Vehicle, Full-Track, M578: Direct Support and General Support Maintenance, Crane and Components
TM 9-2350-274-BD	Operator's, Organizational, Direct Support, and General Support Maintenance Battlefield Damage Assessment and Repair: for M109/M110/M578 Vehicles

6. HOW TO LOCATE REPAIR PARTS

a. When National Stock Number or Part Number is Not Known.

(1) First. Using the table of contents, determine the assembly group or subassembly group to which the item belongs. This is necessary since figures are prepared for assembly groups and subassembly groups, and listings are divided into the same groups.

(2) Second. Find the figure covering the assembly group or subassembly group to which the item belongs.

(3) Third. Identify the item on the figure and use the Figure and Item Number Index to find the NSN.

b. When National Stock Number or Part Number is Known.

(1) First. Using the National Stock Number or the Part Number Index, find the pertinent National Stock Number or Part Number. The NSN index is in National Item Identification Number (NIIN) sequence (see 4.a.(1)). The part numbers in the Part Number index are listed in ascending alphanumeric sequence (see 4.b). Both indexes cross-reference you to the illustration/figure and item number of the item you are looking for.

(2) Second. Turn to the figure and item number, verify that the item is the one you're looking for, then locate the item number in the repair parts list for the figure.

7. ABBREVIATIONS

Not applicable.

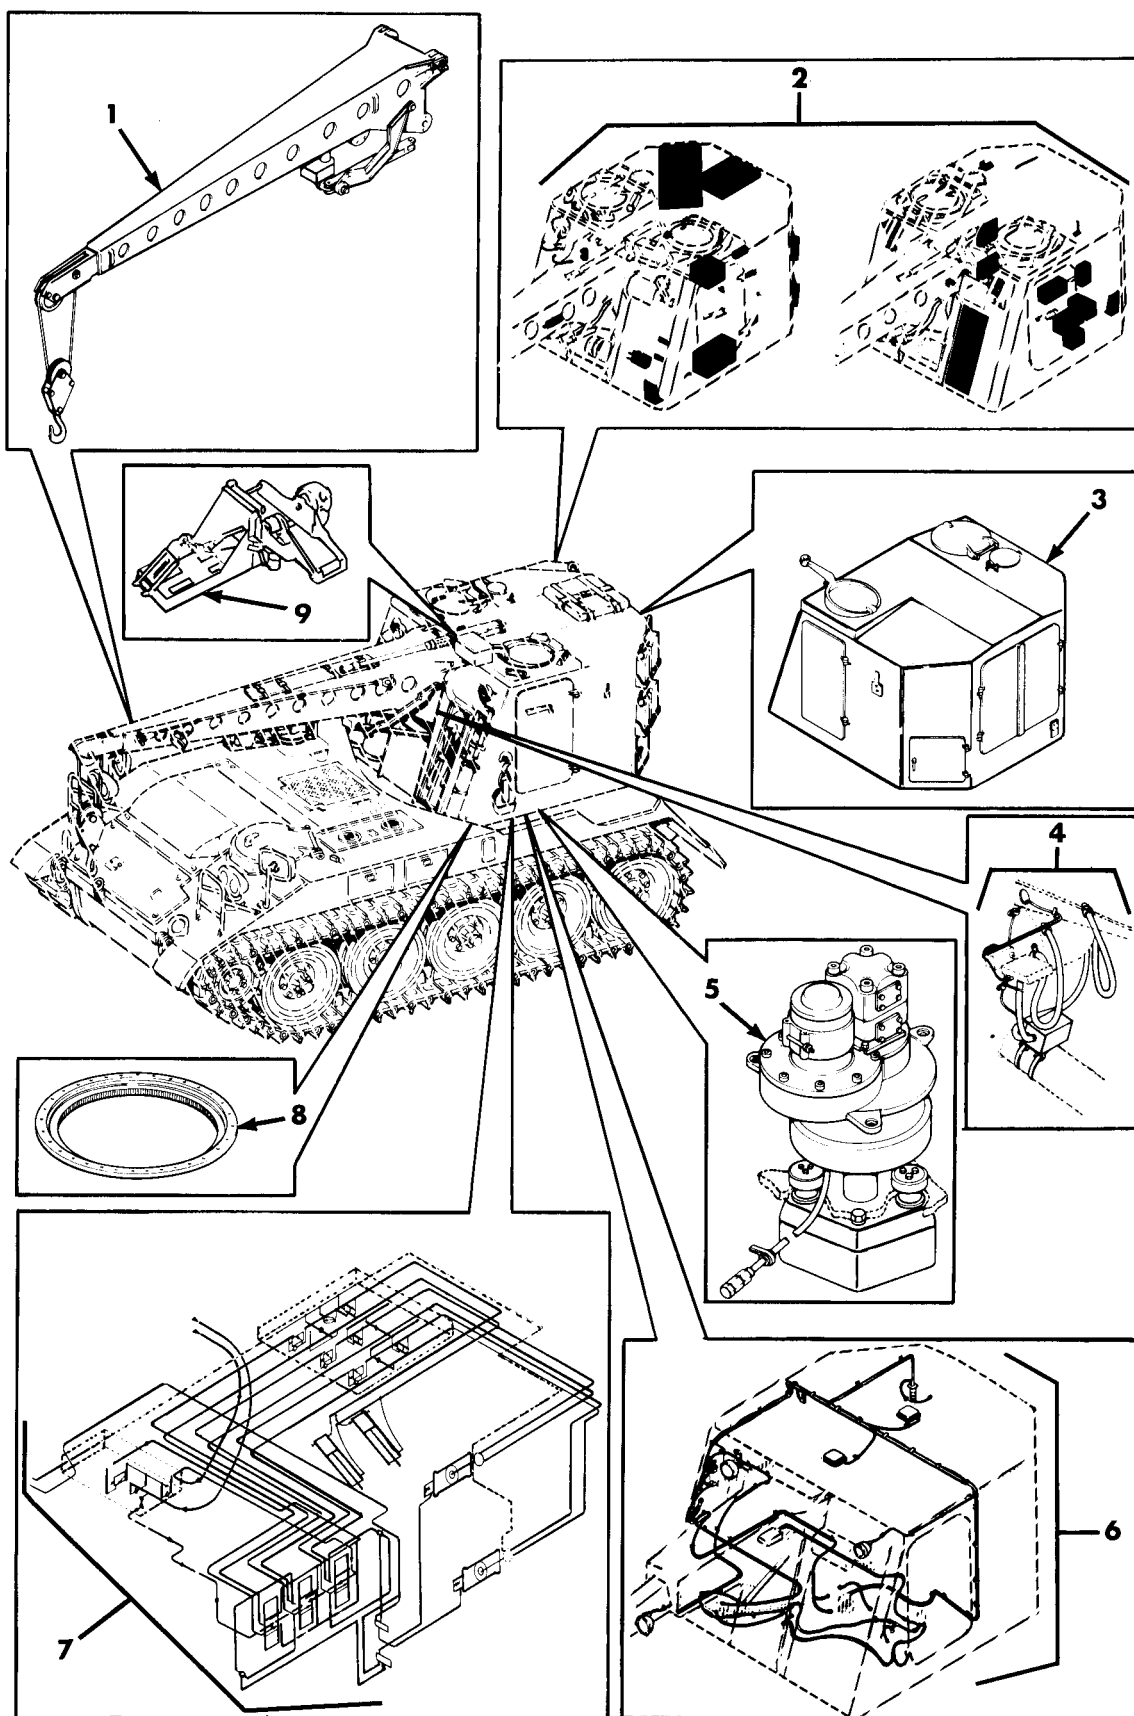 


Figure 1. M578 Armored Light Full-Track Recovery Vehicle.

SECTION II		TM9-2350-238-24P-2			
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART		
NO	CODE	CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES(UOC)	QTY
GROUP 00					
FIG.1 M578 ARMORED LIGHT FULL-TRACKED RECOVERY VEHICLE					
1	XC	19200	10908500	BOOM AND WINCH	1
2	XC	19207	10904850	EQUIPMENT STOWAGE INSTALLATION	1
3	XC	19207	10934910	1 CAB ASSEMBLY	1
4	XC	19204	11643432	FILTER INSTL., CAB	1
5	XC	19207	10904950	TRAVERSING INSTALLATION	1
6	XC	19207	10908350	HYDRAULIC INSTALLATION	1
7	XC	19207	10904800	ELECTRICAL INSTALLATION	1
8	XC	19200	10898400	TURRET BEARING INST SEE FIG.87	
9	PAOFF	19204	7046650	MOUNT, MACHINE GUN (REFER TO TM9-1005-213-10)	1
END OF FIGURE					

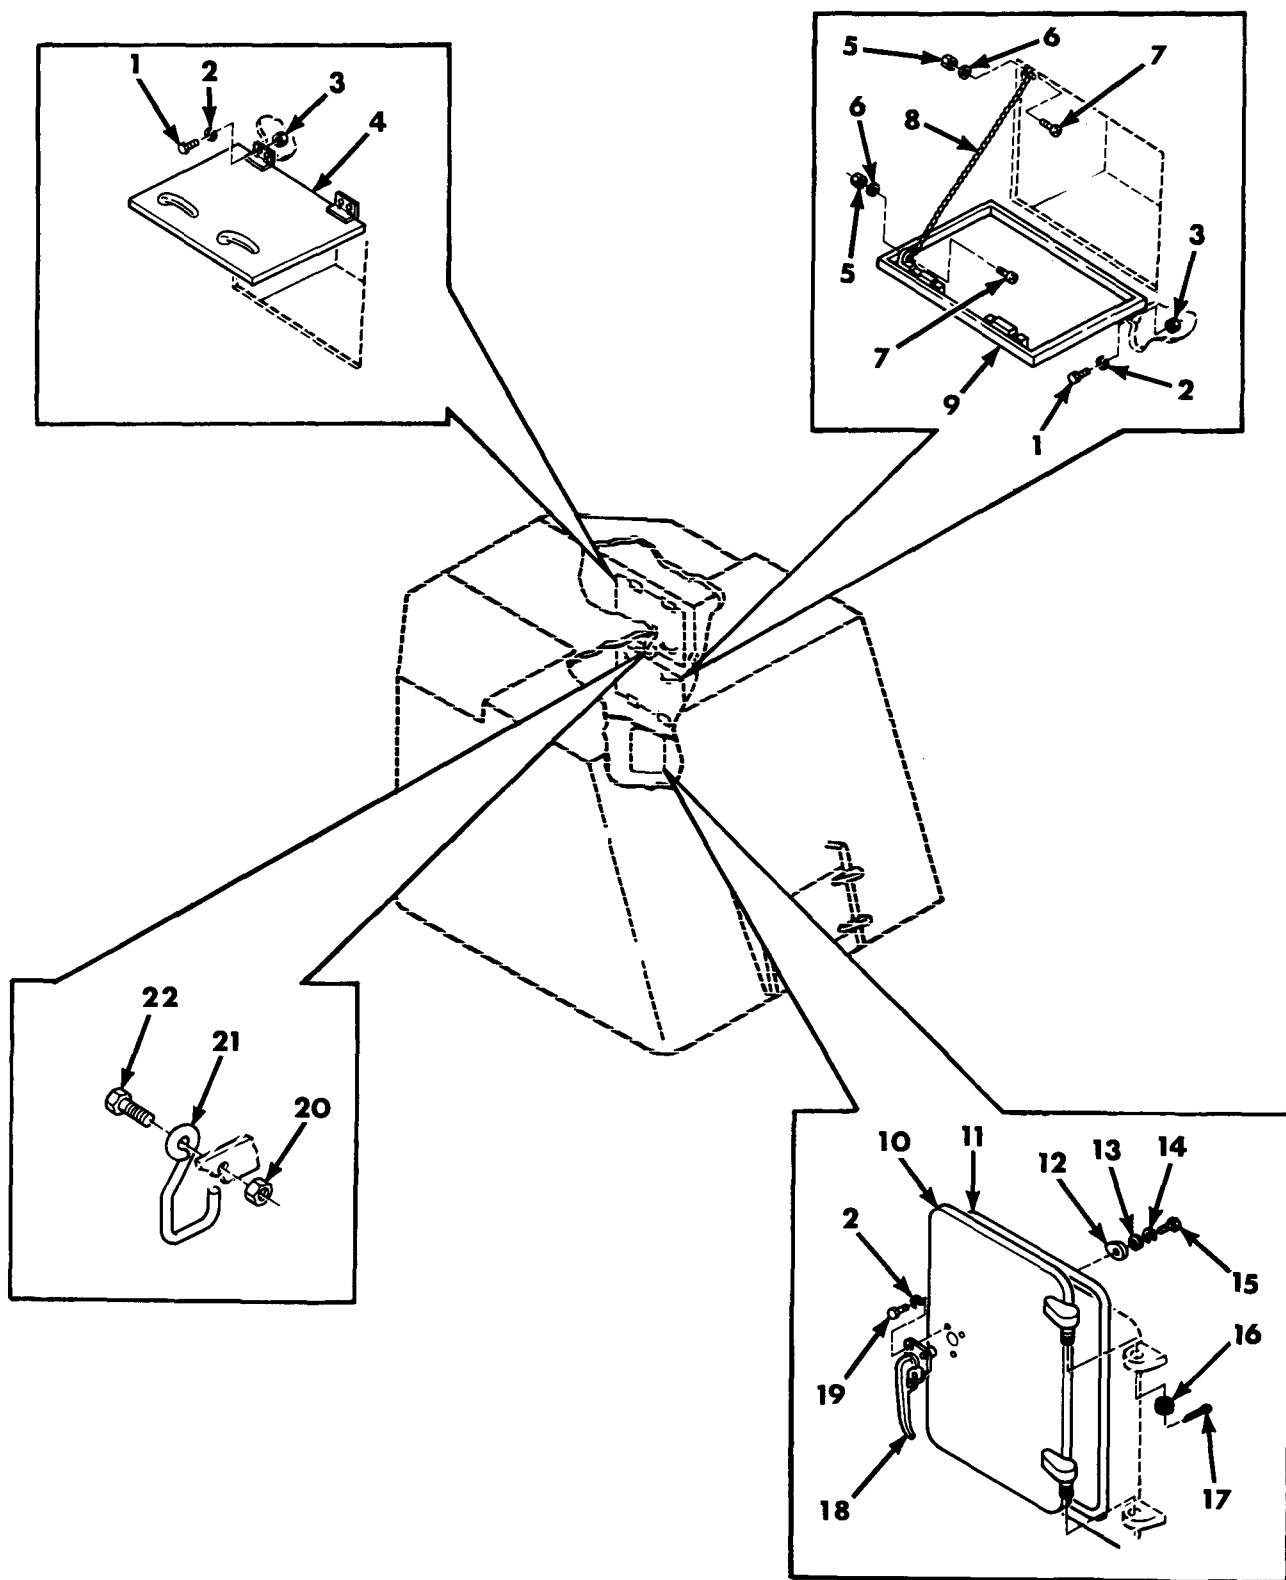 


Figure 2. Cab Assembly 10934910, Stowage Compartment Doors.

SECTION II		TM9-2350-238-24P-2			
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART		
NO	CODE	CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES(UOC)	QTY
GROUP 01					
FIG.2 CAB ASSEMBLY 10934910,STOWAGE COMPARTMENT DOORS					
1	PAOZZ	96906	MS90727-6	BOLT,MACHINE CAP,HEXAGON HEAD STEEL,CADMIUM PLATED, 1/4 INCH NOMINAL SIZE,28 UNF-2A,3/4 INCH LONG,LEFT SIDE CAB STOWAGE DOORS	8
2	PAOZZ	96906	MS35338-44	WASHER,LOCK LOCK HELICAL,STEEL,CADMIUM PLATED,NOMINAL SIZE 1/4 INCH,.263 INCH ID,.489 INCH OD,.109 INCH WIDE, LEFT CAB STOWAGE DOORS	11
3	PAOZZ	96906	MS51968-2	NUT,PLAIN,HEXAGON PLAIN,HEXAGON STEEL,CADMIUM PLATED,28 UNF-2B,1/4 INCH NOMINAL SIZE,7/32 INCH THICK, LEFT CAB STOWAGE DOORS	8
4	PA000	19204	10908675-1	DOOR,HATCH,VEHICLE HATCH,VEHICLE LEFT CAB STOWAGE SEE FIG. 14 ASSY BKDN	1
5	PAOZZ	96906	MS21042-02	NUT,SELF-LOCKING,EX SELF-LOCKING NON-CORROSION RESISTANT STEEL,.086-56 UNJC-3B,.167 INCH DIAMETER,.100 INCH THICK,LEFT CAB STOWAGE,LOWER DOOR CHAIN	2
6	PAOZZ	96906	MS27183-2	WASHER,FLAT .094 ID,.250 OD,.020 THK	2
7	PAOZZ	96906	MS35206-209	SCREW,MACHINE MACHINE CARBON STEEL,CADMIUM PLATED,56 UNC-2A,NOMINAL SIZE NUMBER 2,3/4 INCH LONG, LEFT CAB STOWAGE, LOWER DOOR CHAIN	2
8	M00ZZ	81348	RRC271TYPEIICL6B RSSIZE018	CHAIN,SAFETY MAKE FROM CHAIN ASSEMBLY,NSN4010-00-171-4427,PNRR-C-271	25
9	PA000	19204	10908675-2	DOOR,HATCH,VEHICLE HATCH,VEHICLE LEFT CAB STOWAGE,LOWER DOOR SEE FIG. 14 ASSY BKDN	1
10	PAOZZ	19204	10908664	DOOR,HATCH,VEHICLE CAB,REAR STOWAGE	1
11	PAOZZ	19207	10908671-1	NONMETALLIC SPECIAL GASKET,DOOR	1
12	PAOZZ	19204	10908669	LEVER,LOCK-RELEASE DOOR HANDLE	1
13	PAOZZ	96906	MS27183-15	WASHER,FLAT .438 ID,1.00 OD,.083 THK	1
14	PAOZZ	96906	MS35338-46	WASHER,LOCK 3/8 NOM SIZE	1
15	PAOZZ	96906	MS90727-58	SCREW,CAP,HEXAGON H 3/8-24UNF X .750	1
16	PAOZZ	96906	MS35692-37	NUT,PLAIN,SLOTTED,H 1/2-20UNF	1
17	PAOZZ	96906	MS24665-287	PIN,COTTER 3/32 DIA X 1-1/4 LG	1
18	PAOZZ	19207	10917058	HANDLE,DOOR	1
19	PAOZZ	96906	MS90727-3	SCREW,CAP,HEXAGON H 1/4-28UNF X .500	3
20	PAOZZ	96906	MS35650-302	NUT,PLAIN,HEXAGON NO. 10-32UNF	1

SECTION II		TM9-2350-238-24P-2			
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART		
NO	CODE	CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES(UOC)	QTY
21	PA0ZZ	19207	10919830	HOOK, STOWAGE DOOR	1
22	PA0ZZ	96906	MS35207-264	SCREW, MACHINE NO. 10-32UNF X .625	1

END OF FIGURE

 
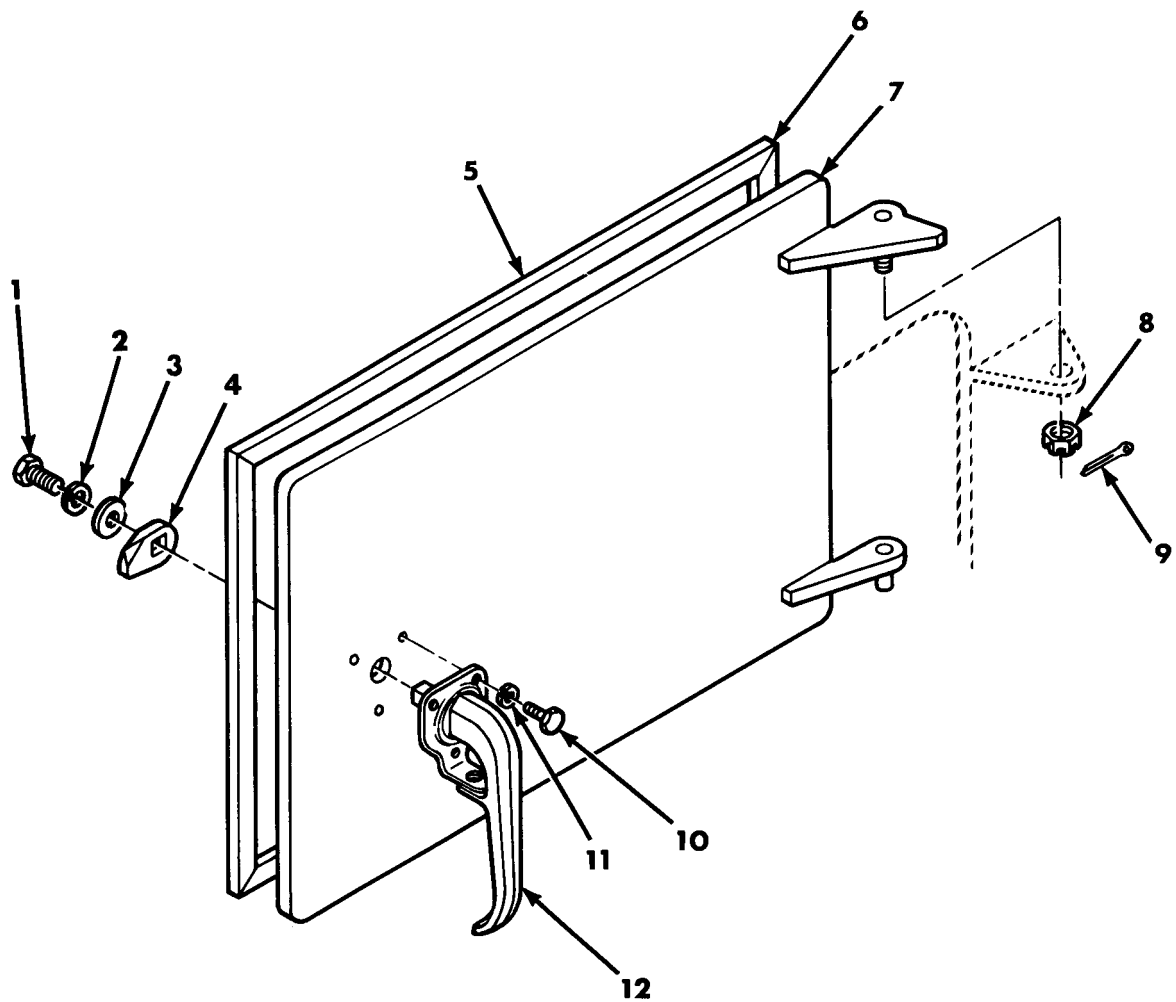 


Figure 3. Cab Assembly 10934910, Tow Winch Access Door and Related Parts.

SECTION II		TM9-2350-238-24P-2				
(1)	(2)	(3)	(4)	(5)		(6)
ITEM	SMR		PART			
NO	CODE	CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES(UOC)		QTY
GROUP 01						
FIG.3 CAB ASSEMBLY 10934910,TOW						
WINCH ACCESS DOOR AND RELATED						
PARTS						
1	PA0ZZ	96906	MS90727-58	SCREW,CAP,HEXAGON H 3/8-24UNF X .750		1
2	PA0ZZ	96906	MS35338-46	WASHER, LOCK 3/8 NOM SIZE		1
3	PA0ZZ	96906	MS27183-15	WASHER, FLAT .438 ID, 1.00 OD, .083 THK		1
4	PA0ZZ	19204	10908669	LEVER, LOCK-RELEASE DOOR LOCK		1
5	PA0ZZ	19204	10956690-1	SEAL, NONMETALLIC ST DOOR, TOP AND BOTTOM		2
6	PA0ZZ	19204	10956690-2	SEAL, NONMETALLIC ST DOOR, SIDES		2
7	PA0ZZ	19207	10908335	DOOR, ACCESS		1
8	PA0ZZ	96906	MS35692-37	NUT, PLAIN, SLOTTED, H 1/2-0UNF		1
9	PA0ZZ	96906	MS24665-287	PIN, COTTER 3/32 DIA X 1-1/4 LG		1
10	PA0ZZ	96906	MS90727-3	SCREW,CAP,HEXAGON H 1/4-28UNF X .500		3
11	PA0ZZ	96906	MS35338-44	WASHER, LOCK 1/4 NOM SIZE		3
12	PA0ZZ	19207	10917058	HANDLE, DOOR STOWAGE DOOR		1
END OF FIGURE						

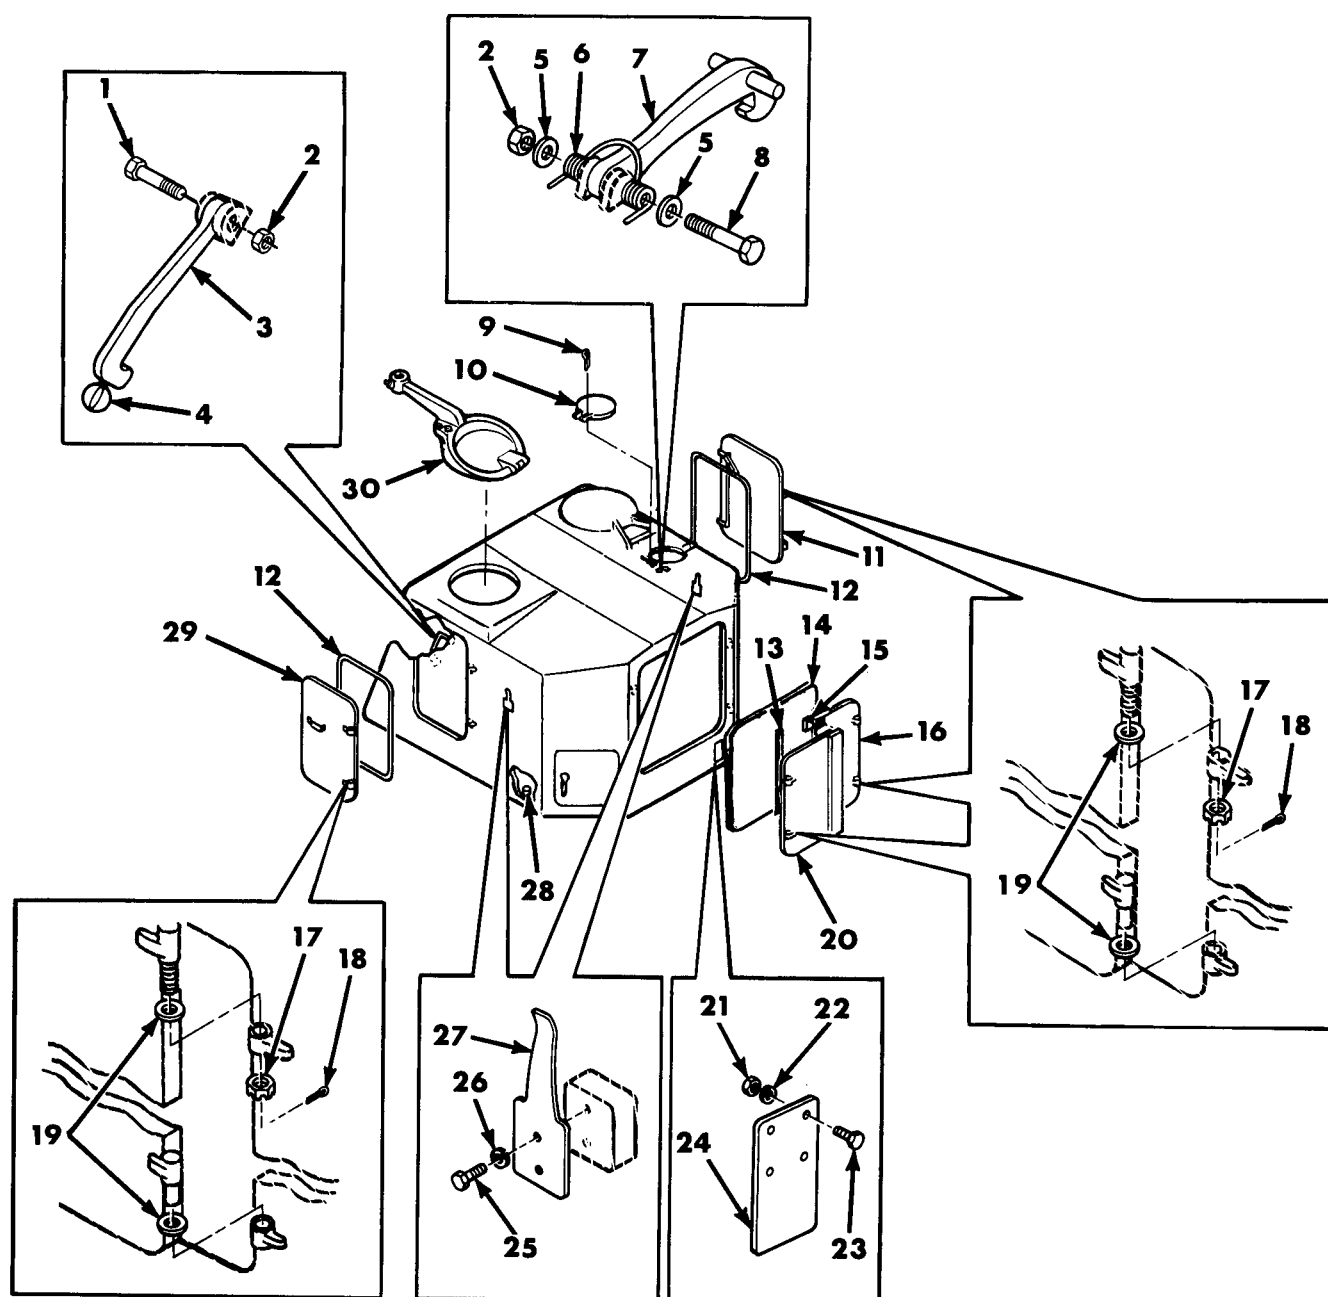

*NO FURTHER DISASSEMBLY AUTHORIZED.

Figure 4. Cab Assembly 10934910, Covers, Doors, and Related Parts.

SECTION II		TM9-2350-238-24P-2			
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART		
NO	CODE	CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES(UOC)	QTY
GROUP 01					
FIG.4 CAB ASSEMBLY 10934910,COVERS, DOORS,AND RELATED PARTS					
1	PA0ZZ	96906	MS18153-63	SCREW,CAP,HEXAGON H 3/8-24UNF X 1.750	1
2	PA0ZZ	96906	MS21044N6	NUT,SELF-LOCKING,HE 3/8-24UNJF	2
3	PA0ZZ	19207	10908980	LATCH,RIM TOW WINCH DOOR HOLD OPEN	1
4	PA0ZZ	19204	8391404	KNOB TOW WINCH DOOR HOLD OPEN,CATCH	1
5	PA0ZZ	96906	MS27183-14	WASHER,FLAT .406 DI, .812 OC, .065 THK	2
6	PA0ZZ	19204	10934919	SPRING,HELICAL,TORS CUPOLA LID CATCH	1
7	PA0ZZ	19204	10901299	LATCH,THUMB CRANE OPERATOR'S HATCH HOLD OPEN	1
8	PA0ZZ	96906	MS90727-77	SCREW,CAP,HEXAGON H 3/8-24UNF X 4.750	1
9	PA0ZZ	96906	MS24665-285	PIN,COTTER 3/32 DIA X 1.0 LG	2
10	PA0ZZ	19200	10908718	DOOR,ACCESS HYDRAULIC RESERVOIR FILTER	1
11	PA000	19204	10908371-2	DOOR,HATCH,VEHICLE CAB,RIGHT SIDE SEE FIG. 11 ASSY BKDN	1
12	PA0ZZ	19207	10908671-2	NONMETALLIC SPECIAL SEAL CAB SIDE DOORS	2
13	PA0ZZ	19207	10908671-3	NONMETALLIC SPECIAL SEAL	1
14	PA0ZZ	19207	10908671-4	SEAL,NONMETALLIC SP CAB,REAR DOOR, CENTER	1
15	PA0ZZ	19207	11592841	SEAL,NONMETALLIC ST TAB, .62 X .75 X .75	2
16	PA0B0	19204	10908368	DOOR,HATCH,VEHICLE HATCH,VEHICLE CAB,REAR RIGHT	1
17	PA0ZZ	96906	MS35692-61	NUT,PLAIN,SLOTTED,H SLOTTED,3/4- 16UNF	4
18	PA0ZZ	96906	MS24665-355	PIN,COTTER 1/8 DIA X 1-1/4 LG	4
19	PA0ZZ	19204	8334628	BEARING,SLEEVE	8
20	PA000	19204	10908330	DOOR,METAL,SWINGING CAB,LEFT REAR SEE FIG. 12 ASSY BKDN	1
21	PA0ZZ	96906	MS51968-8	NUT,PLAIN,HEXAGON 3/8-24UNF	4
22	PA0ZZ	96906	MS35338-46	WASHER,LOCK 3/8 NOM SIZE	4
23	PA0ZZ	96906	MS90727-64	SCREW,CAP,HEXAGON H 3/8-24UNF X 1.500	4
24	PA0ZZ	19200	10934779	COVER,ACCESS SLAVE,RECEPTACLE HOLE	1
25	PA0ZZ	96906	MS90727-5	SCREW,CAP,HEXAGON H 1/4-28UNF X .625	4
26	PA0ZZ	96906	MS35338-44	WASHER,LOCK 1/4 NOM SIZE	4
27	PA0ZZ	19204	10914833	SPRING,FLAT CAB RIGHT AND LEFT DOOR CATCH	2
28	PA0ZZ	96906	MS20913-6S	PLUG,PIPE 3/4NPT	1
29	PA000	19204	10908371-1	DOOR,METAL,SWINGING CAB,LEFT SIDE SEE FIG. 11 ASSY BKDN	1