

LUBRICATION ORDER
1 July 1985

TRUCK TRACTOR, YARD TYPE, 43500 LB GVW, DED, 4X2
M878A1 (2320-01-121-2102)

Reference TM 9-2320-285-10, TM 9-2320-285-24, TM 9-2320-285-24P

Intervals and the related man-hour times are based on normal operation. The man-hour time specified is the time you need to do all the services prescribed for a particular interval. Change the interval if your lubricants are contaminated or if you are operating the equipment under adverse operating conditions, including long-than-usual operating hours. You may extend the interval during periods of low activity, but you must take adequate preservation precautions. Clean fittings before lubricating. Clean parts with solvent, dry cleaning (SD-2). Dry before lubricating. Dashed arrow points indicate lubrication on both sides of the equipment.

The lowest level of maintenance authorized to lubricate a point is indicated by one of the following symbols as appropriate: Operator/crew (C); and Organizational Maintenance (O).

You can improve this publication by calling attention to errors and by recommending improvements and by stating your reasons for the recommendations. Your letter or DA Form 2028, Recommended Changes to Publications and Forms should be mailed directly to Commander, US Army Tank-Automotive Command, ATTN: AMSTA-MB, Warren, MI 48397-5000. A reply will be furnished directly to you.

FOLD

FOLD

LUBRICANT • INTERVAL

Rocker Arm Cover Breathers
Remove, clean, dry, (O) and install

Engine Oil Filter
(O) (See note 1)

Engine Crankcase Drain
(O) (See note 1)

Transmission Vent
(O) Remove, clean, dry, and install

Transmission Modulator Cable
(O) Apply at engine end of cable; use Dexron-II fluid only

Gear Shift, Control Valve, and Speedometer Cables
(O) Grease both ends of cables

Transmission Governor Filter
(O) (See note 3)

Universal Joints and (O) Slip Yoke

Fifth Wheel Jaw Pins
(C) 2 oil can points

SD-2

—

—

SD-2

FTD

GIA

—

GAA

OE

500

100

100

500

500


500

500

500

50

TOP VIEW

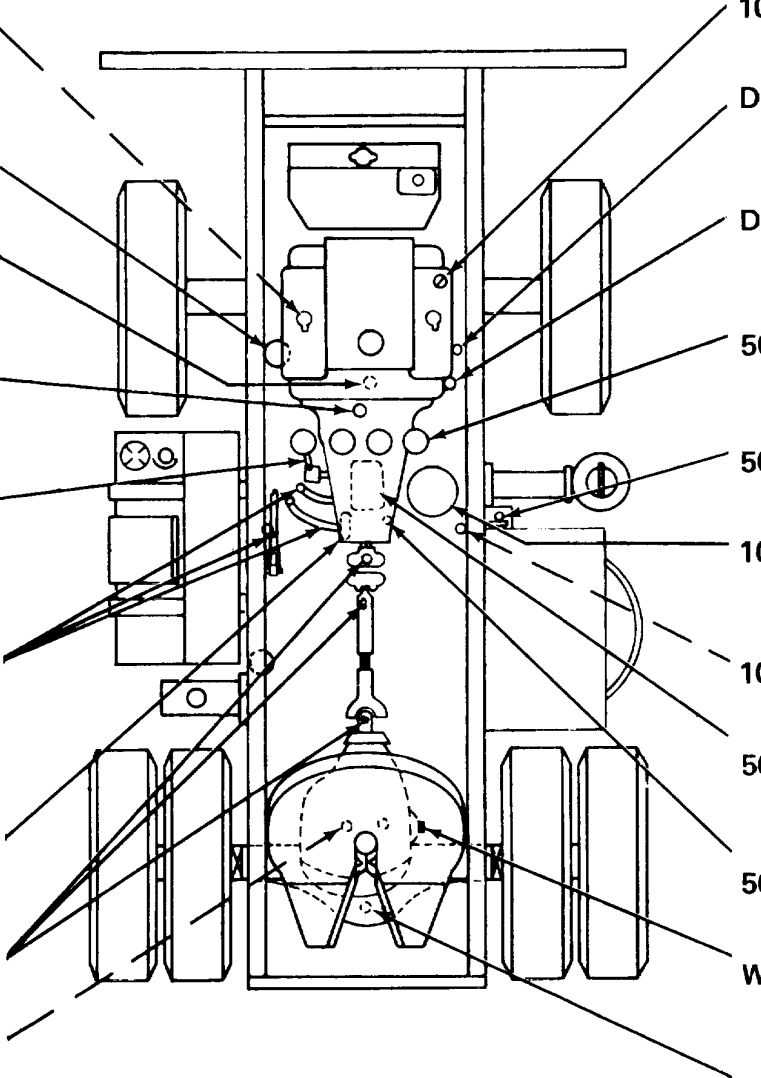

INTERVAL • LUBRICANT

100

—

—

500

500

100

100

500

500

500

W

1000

OE

D

D

—

FTD

—

FTD

—

GAA

—

FTD

GO

GO

Engine Crankcase Fill
(See note 1) (C)

Engine Oil Level Dipstick
Check level (C)

Transmission Dipstick and Fill
(See note 3) (C)

Transmission External Fluid Filter
(See note 3) (O)

Cab Tilt Reservoir Fill
(See note 4) (O)

Engine Oil Filter Pack and Drain
(See note 1) (O)

Boom Pivot Pins 2 Fittings (O)

Transmission Sump Fluid Filter
(See note 3) (O)

Transmission Drain
(See note 3) (O)

Differential Check and Fill
(See note 2) (O)

Differential Drain
(See note 2) (O)