

TM 9-2350-256-24P-1

THIS MANUAL SUPERSEDES MANUALS DATED MAY 1977.
SEE TABLE OF CONTENTS PAGE FOR DETAILS.

TECHNICAL MANUAL

**UNIT, DIRECT SUPPORT AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS)**

FOR

RECOVERY VEHICLE, FULL TRACKED; MEDIUM

M88A1 (NSN 2350-00-122-6826)

Approved for public release; distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY

29 MAY 1992

UNIT, DIRECT SUPPORT AND
GENERAL SUPPORT MAINTENANCE
REPAIR. PARTS AND SPECIAL TOOLS LIST
(Including Depot Maintenance
Repair Parts and Special Tools)

FOR

RECOVERY VEHICLE, FULL TRACKED; MEDIUM

M88A1 (NSN 2350-00-122-6826)

Current as of 15 November 1994

REPORTING OF ERRORS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to Commander, US Army Tank-automotive and Armaments Command, ATTN: AMSTA-IM-OPIT, Warren, MI 48397-5000. A reply will be furnished to you.

You may also provide DA Form 2028-2 information to TACOM via data fax or e-mail:

- TACOM's fax number is DSN 786-6323
- TACOM's e-mail address is tacom-tech-pubs-cc.army.mil

THIS MANUAL SUPERSEDES MANUALS TM 9-2350-256-20P-1 DATED MAY 1977 AND
ITM 9-2350-256-34P-1 DATED MAY 1977.

Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

		Page	Figure
SECTION I	INTRODUCTION	1	
SECTION II	REPAIR PARTS LIST.....	1-1	
Group 01	Engine		
	0100 Engine Assembly with Container.....	1-1	1
	Engine Front Mounting	2-1	2

	Engine Rear Mount and Base Assembly	3-1	3
0106	Damper Housing, Oil Filter and Associated Parts	4-1	4
	Oil Level Indicator and Oil Filler Tubes and Related Parts	5-1	5
	Oil Pan and Associated Parts	6-1	6
	Breather Tube, Oil Cooler Vent Lines and Associated Parts.....	7-1	7
	Oil Cooler Frames, Shrouds and Associated Parts	8-1	8
	Cylinder Head Oil Drain Tubes and Associated Parts	9-1	9
	Oil Cooler, Screens and Associated Parts.....	10-1	10
	Crankshaft Damper and Oil Filter Housing and Associated Parts.....	11-1	11
	Oil Sampling System	12-1	12
0108	Exhaust Manifolds and Associated Parts (Left Bank).....	13-1	13
	Exhaust Manifold and Associated Parts (Right Bank)	14-1	14
Group 03	Fuel System		
0301	Fuel Injector Tubes, Brackets and Associated Parts	15-1	15
0302	Electric Fuel Pump	16-1	16
	Fuel Transfer Pump and Related Parts	17-1	17
	DELETED	18-1	18
	Fuel Pump, Fuel Back flow Valve and Associated Parts	19-1	19
	Smoke Generating System	20-1	20
0304	Air Cleaner and Related Parts	21-1	21
	Left and Right Air Cleaner Ducts	22-1	22
0305	Turbocharger Support Beam and Associated Parts	23-1	23
0306	Fuel Injector Nozzle Return Hoses and Associated Parts.....	23A-1	23A
	Fuel Tanks and Related Parts	24-1	24
	Fuel Line - Front View.....	25-1	25
	Purge Pump	26-1	26
	Fuel Control Valves, Lines and Related Parts	27-1	27
	Engine Fuel Lines and Fittings.....	28-1	28
0309	Primary Fuel Filter, Water/Separator Fuel Filter, Flame Heater Fuel Filter and Associated Parts	29-1	29
	Primary Fuel Filter and Water/Separator Fuel Filter	30-1	30
0311	Manifold Heater Assembly (Left Bank)	31-1	31
	Manifold Heater Assembly (Right Bank).....	32-1	32
0312	Accelerator Controls and Linkages.....	33-1	33
Group 04	Exhaust System		
0401	Exhaust System and Related Parts	34-1	34
Group 05	Cooling System		
0502	Engine Seal, Air Inlet and Related Parts.....	35-1	35
	Generator Air Intake Tube	36-1	36
	Generator Air Ducts	37-1	37

Group 06		Engine Shrouds	38-1	38
		Cylinder Deflectors and Shrouds	39-1	39
	0505	Engine Cooling Fan and Housing	40-1	40
		Fan Drive Clutch Assembly and Associated Parts	41-1	41
		Electrical System (Engine and Vehicular, etc.)		
	0601	Engine Generator, Cradle, Support and Associated Parts	42-1	42
	0602	Voltage Regulator and Associated Parts (Dual Voltage Regulator)	43-1	43
		Voltage Regulator, Generator (Single Voltage Regulator)	44-1	44
	0603	Master Relay Housing Assembly (Single and Dual Voltage Regulator)	45-1	45
		Engine Starter, Cradle, Bracket and Associated Parts	46-1	46
		Engine Starter Solenoid Relay and Bracket	46A-1	46A
		Main Engine and APU Generator Relay and Housing Assembly (Single Voltage Regulator)	47-1	47
		Switching Relay Box Assembly (Single Voltage Regulator)	48-1	48
	0606	Fuel Injection Pump, Fuel Shutoff Solenoid, Electrical Lead and Associated Parts	49-1	49
	0607	Main Switch Panel Assembly	50-1	50
		Main Lighting and Blackout Selector Switch Wiring Harness Assembly	51-1	51
		Main Lighting and Master Relay Wiring Harness Assembly	52-1	52
		Starter Switch Wiring Harness Assembly	53-1	53
		Switch Panel Electrical Lead Assembly	54-1	54
		Switch Panel Electrical Lead Assembly	55-1	55
		Switch Panel Electrical Lead Assembly	56-1	56
		Gage Panel Assembly	57-1	57
		DELETED	58-1	58
		Gage Panel Wiring Harness Assembly	59-1	59
		Fuel Gage Panel Lead Assembly	60-1	60
		Electrical Accessories Panel	61-1	61
		Bilge Pump, Generator Cutout Switch, PTO Engagement and M239 Smoke Grenade Launcher Power Box Warning Indicator Light	62-1	62
		Accessories Panel Generator Cutout Switch Assembly	63-1	63
		Bilge Pump and Generator Cutout Switch Lead Assembly	64-1	64
		Bilge Pump Main Power Harness Assembly	65-1	65
		Hydraulic Oil High Temperature Gage	66-1	66
		Bilge Pump Power Lead Relay, Mounting Plate and Circuit Breaker	67-1	67
	0608	DELETED	68-1	68

	Auxiliary Power Unit Control Box Assembly (Dual Voltage Regulator)	69-1	69
	Auxiliary Power Unit Control Box Assembly (Single Voltage Regulator)	70-1	70
	Auxiliary Power Unit Preheat Switch Lead Assembly	71-1	71
	Auxiliary Power Unit Starting Switch Lead Assembly	72-1	72
	Auxiliary Power Unit Fuel Shutoff Switch Lead Assembly	73-1	73
	Auxiliary Power Unit Control Box Wiring Harness Assembly (Dual Voltage Regulator)	74-1	74
	Auxiliary Power Unit Control Box Wiring Harness Assembly (Single Voltage Regulator)	75-1	75
	Flasher Switch	76-1	76
	Heater Control Box Assembly	77-1	77
	Fuel Tank Ground Strap	78-1	78
	Neutral Safety Switch	79-1	79
	Stoplight Switch	80-1	80
	Rigger's Service Light Switch	81-1	81
	Driver's Passive Night Viewer Switch	82-1	82
	Dummy Connector Assembly Infrared and Passive Night Viewer	83-1	83
	Driver's Headlight Dimmer Switch	84-1	84
	Spare Headlight Mount Base Assembly	85-1	85
	Auxiliary Power Unit Pressure Switch	86-1	86
	Fire Extinguisher Interlock Switch Assembly	87-1	87
	DELETED	88-1	88
	Power Control Lever Switch	89-1	89
0609	DELETED	90-1	90
	Driver's Infrared or Passive Night Viewer Indicator Lamps	91-1	91
	Rigger's Service Light	92-1	92
	Front Signal Light Assembly	93-1	93
	Front Headlight Assembly	94-1	94
	Left Stoplight-Taillight Assembly	95-1	95
	Right Stoplight-Taillight Assembly	96-1	96
	Spotlight Hand and Reel Assembly	97-1	97
	Spotlight and Related Parts	98-1	98
	High Beam Indicator Light Assembly	99-1	99
	Hydraulic Reservoir Temperature Caution Light	100-1	100
	Dome light	101-1	101
	Winch Illumination Lamp Assembly	102-1	102
0610	Mechanical Transmission Lubrication Oil Low Pressure Switch ...	103-1	103
	Switch and Transmitters	104-1	104

	Oil Pressure Sending Unit and Switches, Engine Oil	
	Temperature Switch, and Oil Temperature Sending Unit.	105-1 105
	Oil Temperature Transmitter Unit	105A-1 105A
0611	Horn Assembly	106-1 106
	Horn Switch Assembly	107-1 107
	Horn Relay	108-1 108
0612	Batteries, Battery Trays and Terminal	109-1 109
	Cleaning Tubes Under Battery Tray	110-1 110
0613	DELETED	111-1 111
	Master Relay to Rectifier Lead Assemblies	112-1 112
	Red Flasher Breaker to Switch Cable Assembly	113-1 113
	Panel Wiring Harness	114-1 114
	DELETED	115-1 115
	Red Flasher Wiring Harness Assembly	116-1 116
	Engine Wiring Harness Brackets and Clamps	117-1 117
	Engine Wiring Harness Clamp	118-1 118
	Engine Wiring Harness Assembly (Single Voltage Regulator)	119-1 119
	Engine Wiring Harness Assembly (Dual Voltage Regulator)	120-1 120
	Generator Power Lead Assembly	121-1 121
	Starter Ground Cable	122-1 122
	Starter Wiring Harness and Associated Parts	123-1 123
	Starter Wiring Harnesses and Associated Parts	124-1 124
	DELETED	125-1 125
	Headlight Wiring Harness Assembly and Associated Parts	126-1 126
	Hull Wiring Harness Attaching Parts	127-1 127
	Wiring Harness, Bulkhead Rear Slave Receptacle	128-1 128
	Air Cleaner Circuit Breaker Lead Assembly	129-1 129
	Bulkhead to Master Relay and Left and Right Taillight Wiring Harness Assembly	130-1 130
	Bulkhead to Main Engine Harness and Starter Relay Wiring Harness Assembly	131-1 131
	Bulkhead to Main Engine Bracket and Rear Fuel Tank Transmitter Wiring Harness Assembly (Dual Voltage Regulator)	132-1 132
	Bulkhead To Main Engine Bracket and Rear Fuel Tank Transmitter Wiring Harness Assembly (Single Voltage Regulator)	133-1 133
	Batteries to Master Relay, Voltage Regulator and Slave Receptacle Wiring Harness Assembly Engine Disconnect (Dual Voltage Regulator)	134-1 134
	Batteries to Master Relay, Voltage Regulator and Slave Receptacle Wiring Harness Assembly Engine Disconnect (Single Voltage Regulator)	135-1 135

Bulkhead to APU, Master Relay and Rigger's Lights Wiring Harness Assembly (Dual Voltage Regulator).....	136-1	136
Bulkhead to APU, Master Relay and Rigger's Lights Wiring Harness Assembly (Single Voltage Regulator)	137-1	137
APU and Main Engine Armature Relays to Voltage Regulator Wiring Harness Assembly (Single Voltage Regulator)	138-1	138
Gage Panel to Bulkhead Wiring Harness Assembly (Dual Voltage Regulator)	139-1	139
Gage Panel to Bulkhead Wiring Harness Assembly (Single Voltage Regulator)	140-1	140
Switch Panel to Head lamp and Bulkhead Wiring Harness Assembly	141-1	141
Switch Panel to Neutral Safety Switch to Bulkhead.....	142-1	142
APU Control Box to Foot Dimmer Switch and Bulkhead Wiring Harness Assembly (Dual Voltage Regulator)	143-1	143
APU Control Box to Foot Dimmer Switch and Bulkhead Wiring Harness Assembly (Single Voltage Regulator).....	144-1	144
Switch Panel, Radio and Bilge Pump to Bulkhead Wiring Harness	145-1	145
Heater Control Box to Heater Wiring Harness Assembly	146-1	146
Engine Disconnect Ground Lead Assembly	147-1	147
Battery to Circuit Breaker Lead Assembly	148-1	148
Ground Strap, Generator Control Box (Single Voltage Regulator)	149-1	149
Main Engine Voltage Regulator to Engine Disconnect Wiring Harness Assembly (Dual Voltage Regulator)	150-1	150
Engine Disconnect to Main Engine Armature Relay Electrical Lead (Single voltage Regulator)	151-1	151
Switch Panel to Gage Panel and Miscellaneous Switches Wiring Harness Assembly (Passive Night Viewer) (Dual Voltage Regulator)	152-1	152
Switch Panel to Gage Panel and Miscellaneous Switches Wiring Harness Assembly (Infrared Night Viewer) (Single Voltage Regulator)	153-1	153
Driver's Power PC to Infrared Scope Lead Assembly (Infrared Night Viewer).....	154-1	154
Headlight and Dimmer Switch Wiring Harness Assembly	155-1	155
Accessories Panel Cable Assembly	156-1	156
Horn Switch to Horn Lead.....	157-1	157
Horn Ground Cable.....	158-1	158
Bilge Pump Lead Relay Wiring Harness and Cap	159-1	159

	Lead Assembly, Smoke Generating System	160-1	160
	Bilge Pump Circuit Breaker to Switch Panel Lead.....	161-1	161
	Wiring Harness, Electrical Kit for M239 Smoke Grenade Launcher	162-1	162
	Cable Assembly, Electrical Kit for M239 Smoke Grenade Launcher	163-1	163
	Cable Assembly, Electrical Kit for M239 Smoke Grenade Launcher, Left Hand Side Discharge Feed Through	164-1	164
	Wiring Harness Box Assembly, Power Switch for M239 Smoke Grenade Launcher	165-1	165
	Commander's Switchplate to Driver's Vehicle Exhaust Smoke Bracket Wiring Hamess	166-1	166
	Exhaust Smoke Generating System to Fuel Solenoid Lead Assembly	166A-1	166A
	Driver's Vehicle Exhaust Smoke Bracket to Bulkhead Connection Wiring Harness	167-1	167
	Exhaust Smoke Generating System Lead Assembly	168-1	168
	Lead Assembly, Smoke Generating System	169-1	169
	Diode Assembly	170-1	170
Group 07	0616 Ventilator Blower Assembly	171-1	171
	Transmission		
	0700 Engine and Transmission Roller Bracket Assemblies	172-1	172
	Transmission Linkage and Related Parts	173-1	173
	0705 Transmission Shifting Controls	174-1	174
	0708 Torque Converter.....	175-1	175
	0710 Transmission With Container	176-1	176
	Bayonet Gage.....	177-1	177
	0714 Breather Assembly	178-1	178
	0721 Transmission Lines and Fittings	179-1	179
	Oil Filter.....	180-1	180
	0724 Left and Right Steer Clutches and Output Planetaries.....	181-1	181
	DELETED	182-1	182
	0726 Left Output Reduction Mounting Saddles and Brakes.....	183-1	183
	Right Output Reduction Mounting Saddles and Brakes	184-1	184
Group 11	Rear Axle		
	1103 Transmission Output Reduction Assembly With Container	185-1	185
Group 12	Brakes (Other Than Special Purpose)		
	1206 Mechanical Brake System	186-1	186
	Service Brake Control Linkage Front Half	187-1	187
	Service Brake Control Linkage Rear Half	188-1	188
Group 13	Wheels and Tracks		

	1301	Suspension	189-1	189
		Front Suspension Assembly	190-1	190
		Intermediate Suspension Assembly	191-1	191
		Rear Suspension Assembly.....	192-1	192
	1302	Track Support Roller, Bracket and Wheel	193-1	193
		Track Support Roller, Bracket and Wheel, Left Front.....	194-1	194
	1303	Compensating Idler and Arm Assembly and Related Parts	195-1	195
	1304	Final Drive Sprocket and Hub.....	196-1	196
	1305	Track Shoe	197-1	197
	1311	Road Wheels	197A-1	197A
Group 14	Steering			
	1401	Steering Control Assembly	198-1	198
		Steering and Shifting Controls, Front Half	199-1	199
		Steering and Shifting Controls, Rear Half.....	200-1	200
Group 15	Frame, Towing Attachments, and Drawbars			
	1503	Pintle and Mount Assembly	201-1	201
		Heavy Duty Tow Bar Assembly	201A-1	201A
Group 16	Springs and Shock Absorbers			
	1601	Bumper Assemblies, Left and Right	202-1	202
		DELETED	203-1	203
1604	Shock Absorbers	204-1	204	
Group 18	Body, Cab, Hood and Hull			
	1801	Covers, Doors, Grilles and Related Parts.....	205-1	205
		Transmission Guide Bars	206-1	206
		Engine Deck and Related Parts.....	207-1	207
		Optional Engine Deck Cover Assembly.....	208-1	208
		Boom Support and Related Parts	209-1	209
		Wire Rope Roller Door	210-1	210
		Right Side Storage Door.....	211-1	211
		Left Side Storage Door	212-1	212
		Right and Left Personnel Doors.....	213-1	213
		Fuel Filter Access Cover.....	214-1	214
		Right and Left Side Air Cleaner Inlet Covers	215-1	215
		Personnel Step Assemblies.....	216-1	216
		DELETED	217-1	217
		Bilge Pump Outlet Cover	218-1	218
		Antenna Base Cover and Related Parts.....	219-1	219
	1802	Fender and Related Parts.....	220-1	220
	1803	Driver's Cab Top Door and Related Parts	221-1	221
		Passive Night Viewer Mount Related Parts.....	222-1	222
		Rigger's Cab Top Door and Related Parts	223-1	223

		Mechanic's Cab Top Door and Related Parts	224-1	224
		Periscope Quick-Release Assembly (Passive Night Viewer)	225-1	225
		Periscope Quick-Release Assembly (Infrared Night Viewer)	226-1	226
		Periscope and Vision Prism Installation.....	227-1	227
1804		Drain Valves, Control, Cover and Related Parts	228-1	228
1805		Subfloors and Related Parts	229-1	229
1806		Personnel Seat Assembly.....	230-1	230
		Commander's and Rigger's Seat Assemblies	231-1	231
		Drivers and Mechanic's Seat Assemblies.....	232-1	232
		DELETED	233-1	233
1808		Caliber .50 Ammunition Rack, Acetylene and Stowage		
		Compartment Doors and Tool Box Strap	234-1	234
		Stowage Baskets and Periscope Box.....	235-1	235
		Stowage Boxes, Fire Extinguisher.....	236-1	236
		Stowage Boxes, Water Cans, Hand Grenades, Spare Bulbs		
		and Oddment	237-1	237
		Binocular Case Straps	238-1	238
		Tool Box Rack, Caliber .50 Barrel Stowage Straps, Liquid		
		Container and Rocket Launcher	239-1	239
		Brackets, Retainers, Strap Assemblies and Hardware for		
		Pioneer Tool Set, Road Wheel, Support Wheel, Sprocket,		
		Track Link, Tackle Block, Snatch Block, and Oxygen Tank	240-1	240
		Vise Mounting Hardware, Tow Bar Mounting Bracket and		
		Chain	241-1	241
Group 19	Turret			
	1903	Commander's Cupola Assembly	242-1	242
		Commander's Cupola Door Assembly.....	243-1	243
Group 22	Body Chassis or Hull, and Accessory Items			
	2207	Personnel Heater and Related Parts	244-1	244
		Personnel Heater	245-1	245
		Personnel Heater	246-1	246
	2210	Instruction Plate, Engine Mount.....	247-1	247
		Identification Plates, Fuel Control Valves	248-1	248
		Instruction Plate, Engine Oil Filter Servicing.....	249-1	249
		Identification Plates, Master Relay Housing Assembly.....	250-1	250
		Identification Plates, Main Switch Panel Assembly.....	251-1	251
		Identification Plates, Gage Panel.....	252-1	252
		Identification Plates, Auxiliary Power Unit Control Box.....	253-1	253
		Identification Plates, Turn Signal Flasher Switch.....	254-1	254
		Identification Plate, Rigger's Service Lights.....	255-1	255
		High Beam Indicator Light Identification Plate and Infrared and		

	Passive Night Viewer Instruction Plate	256-1	256
	Nameplate, Diesel, Fuel Filler Access Cover	257-1	257
	Instruction Plates, Main Winch and Hoist Winch	258-1	258
	Identification Plate, Oil Fill and Drain, Auxiliary Power Unit.....	259-1	259
	Identification Plate, APU Fuel Filter	260-1	260
	Identification Plate, Auxiliary Power Unit	261-1	261
	Identification Plate, Recovery Vehicle, Full-Track, Medium, M88A1	262-1	262
	Instruction Plate, Power Switch Box Assembly for M239 Smoke Grenade Launcher	263-1	263
	Instruction Plate, Flow Regulator Settings.....	264-1	264
	Instruction Plate, Voltage Regulator	265-1	265
	Filler Neck Tube Cap Assembly Identification Plate.....	266-1	266
	Instruction Decals, Air Cleaners	266A-1	266A
	Interior Stowage Decals.....	266B-1	266B
Group 24	Hydraulic Lift Components		
	2401 APU Hydraulic Pump and Related Parts	267-1	267
Group 29	Auxiliary Generator and Engine and Controls (Special Purpose)		
	2901 APU and Related Parts.....	268-1	268
	2902 APU Oil Filter	269-1	269
	2916 APU Oil Drain Lines	270-1	270
	DELETED	271-1	271
	2919 APU Driving Mechanism	272-1	272
	2933 APU Air Intake	273-1	273
	2937 APU Fuel Filter.....	274-1	274
	2938 APU Engine Fuel Lines Fittings	275-1	275
	2941 APU Muffler Installation and Exhaust System	276-1	276
	2952 APU Engine Shrouds and Exhaust Cooling Ducts	277-1	277
	APU Air Duct Generator	278-1	278
	2960 Pressure Transmitter	279-1	279
	2961 APU Generator	280-1	280
	2963 APU Wiring Harness.....	281-1	281
	APU Sending Unit Wiring Harness	282-1	282
	APU Ground Lead Assembly	283-1	283
	APU High Air Temperature Switch Lead Assembly.....	284-1	284
	APU Attaching Hardware.....	285-1	285
	APU Diode	286-1	286
	APU Starter Relay to Generator Cable Assembly	287-1	287
	APU Relay Housing Assembly.....	288-1	288
	Fuel Shutoff and Preheat Solenoid and Leads	289-1	289
Group 33	Special Purpose Kits		

3305	Deep Water Fording Kit	290-1	290
	Deep Water Engine Fording Valve Assembly	291-1	291
3307	Electrical Kit for M239 Smoke Grenade Launcher	292-1	292
	Box Assembly, Power Switch for M239 Launcher	293-1	293
	M88 Vehicle Hull Exhaust Smoke Generating System		
	Modification Kit	294-1	294
	Left and Right Rear Stoplights (USAREUR Signal Kit)	295-1	295
	DELETED	296-1	296
	Flasher and Associated Parts (USAREUR Signal Kit)	297-1	297
	Directional Control Switch (USAREUR Signal Kit)	298-1	298
	Side View Mirrors and Reflectors (USAREUR Signal Kit)	299-1	299
	Front Directional Signal Lamps and Related Parts (USAREUR		
	Signal Kit)	299A-1	299A
	Wiring Harness (USAREUR Signal Kit)	300-1	300
	Wiring Harness (USAREUR Signal Kit)	301-1	301
	Wiring Harness (USAREUR Signal Kit)	302-1	302
	Wiring Harness (USAREUR Signal Kit)	303-1	303
	Wiring Harness (USAREUR Signal Kit)	304-1	304
	Wiring Harness (USAREUR Signal Kit)	304A-1	304A
	Wiring Harness (USAREUR Signal Kit)	304B-1	304B
	Wire Assembly (USAREUR Signal Kit)	304C-1	304C
	Wiring Harness (USAREUR Signal Kit)	304D-1	304D
Group 44	Welding, Metalizing, Metal Heating, and Plating Equipment		
4415	Acetylene Hose Adapter and Related Parts	305-1	305
Group 47	Gages (Non-Electrical), Weighing and Measuring Devices		
4701	Mechanical Tachometer and Speedometer	306-1	306
Group 68	Warning, Scanning, and Signaling Devices and Navigational Instruments		
6810	Infrared Power Supply and Mount	307-1	307
Group 76	Fire Fighting Equipment Components		
7639	Fixed Fire Fighting Equipment Lines and Nozzles - Rear Half	308-1	308
	Fixed Fire Fighting Equipment Lines and Nozzles - Front Half	309-1	309
	Fixed Fire Fighting Equipment and Manual Interlock System	310-1	310
	Fire Extinguisher Valve	310A-1	310A
	DELETED	311-1	311
Group 91	Chemical, Biological, and Radiological (CBR) Equipment		
9111	M2A2 Air Purifier	312-1	312
	Hose Assemblies	313-1	313
	Cable Assemblies and Connecting Hardware	314-1	314
	Clamp Assemblies	315-1	315
	Circuit Breaker and Switch Assembly	316-1	316
	Frame Assembly	317-1	317

TM 9-2350-256-24P-1 C01

Group 94	Kits		
	9401	Kits	KIT-1
Group 95	General Use Standardized Parts		
	9501	Bulk Items	BULK-1
SECTION III	SPECIAL TOOLS LIST	318-1	
Group 26	Tools and Test Equipment		
	2604	Special Tools	318-1 318
		Special Tools	319-1 319
		Special Tools	320-1 320
		Special Tools	321-1 321
		Special Tools and Equipment - Continued	322-1 322
		Special Tools and Equipment - Continued	323-1 323
		DELETED	324-1 324
	2606	Test Equipment.....	325-1 325
SECTION IV	CROSS-REFERENCE INDEXES	I-1	
	National stock number index	I-1	
	Part number index	I-49	
	Figure and item number index	I-157	

**UNIT, DIRECT SUPPORT AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST**

SECTION I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit, Direct Support, and General Support maintenance of the M88A1 Recovery Vehicle. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General.

In addition to Section I, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in this section. Items listed are shown on the associated illustration(s)/figure(s).

 
b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. Cross-reference Indexes. A list, in national item identification number (NIIN) sequence, of all national stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers (NSN's) and part numbers are cross-referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGEC and part numbers.

3. Explanation of Columns (Section II and III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR CODE (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following example:

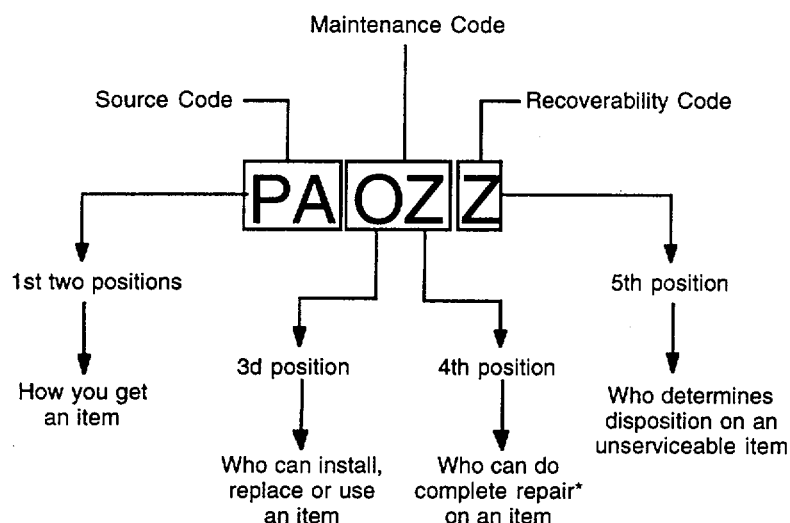

*Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how to get an item needed for maintenance, repair or overhaul of an end item/equipment. Explanation of source codes follows:

Code	Explanation
PA PB PC** PD PE PF PG	Stocked items; use the applicable NSN to request/requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3rd position of the SMR code. **NOTE: Items coded PC are subject to deterioration.

KD KF KB	Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the 3rd position of the SMR code. The complete kit must be requisitioned and applied.
----------------	--

MO- (Made at Org/ AVUM Level) MF- (Made at DS/ AVUM LEVEL) MH- (Make at Gs Level) ML- (Made a Spe- cialized Repair Activity (SRA)) MD- (Made at Depot)	Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number or NSN in the DESCRIPTION AND USABLE ON CODE (UOC) column and listed in the Bulk Material group of the repair parts list in this RPSTL. If the item is authorized to you by the 3rd position code of the SMR code, but the source code indicates it is made at a higher level, order the item from the higher level of maintenance.
--	--

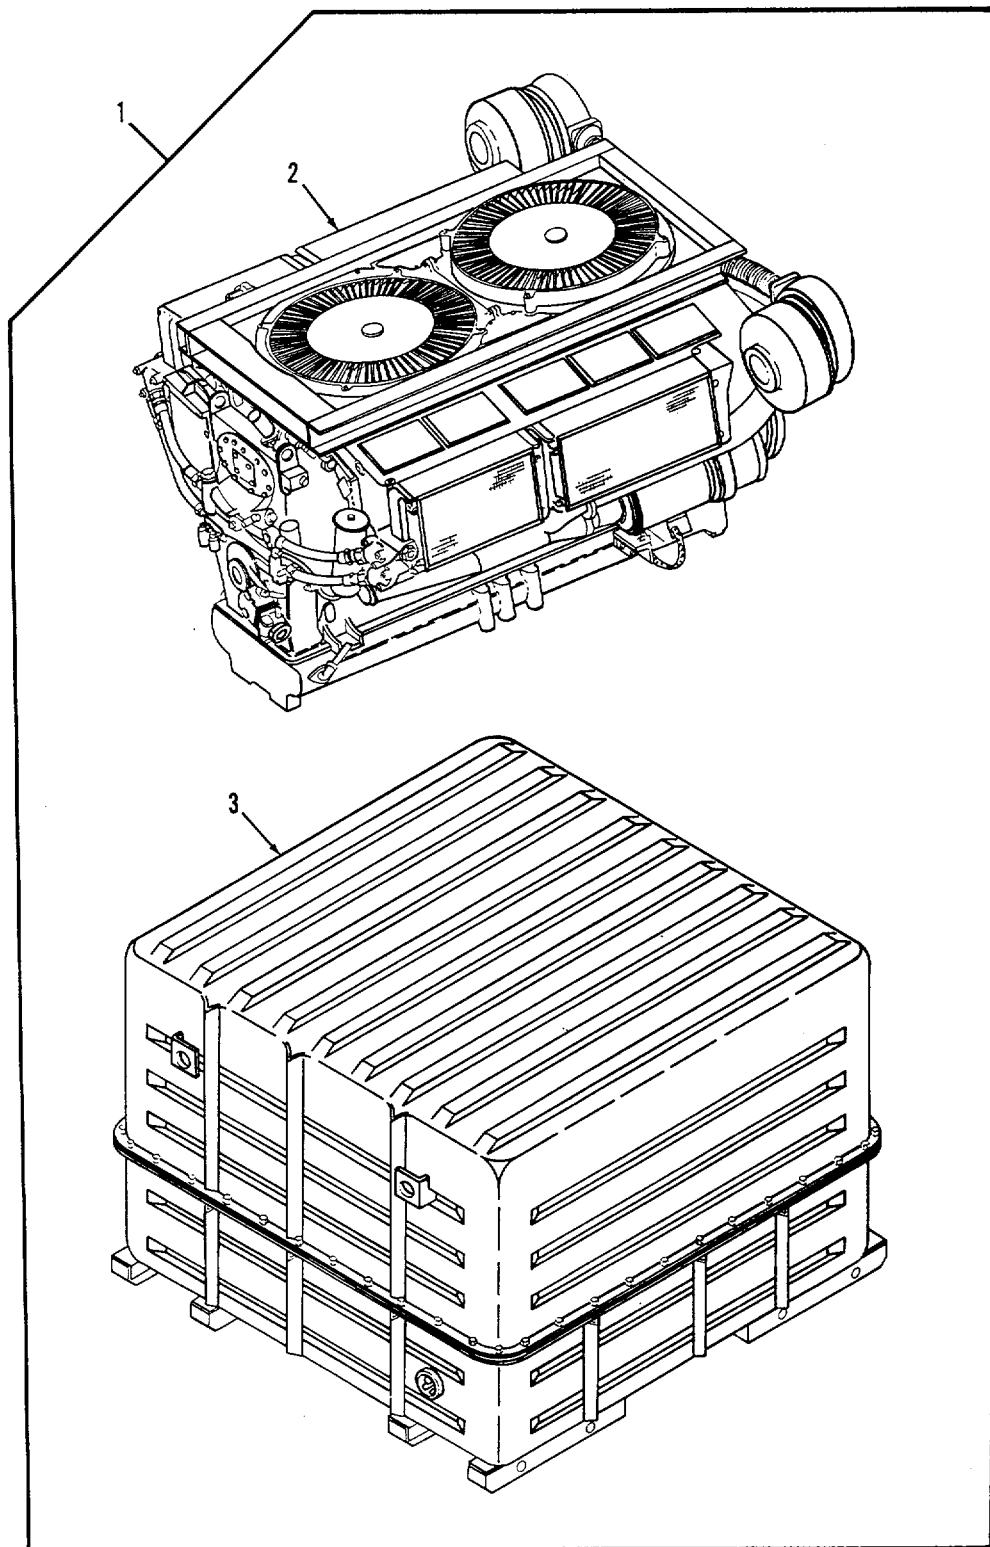 


Figure 1. Engine Assembly with Container

SECTION II		TM9-2350-256-24P-1			
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART		
NO	CODE	CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES(UOC)	QTY
				GROUP: 0100	
				FIGURE 1. ENGINE ASSEMBLY WITH CONTAINER	
1	PAFHD	19207	5704489	ENGINE WITH CONTAIN	1
2	XAFHD	19207	11684150	ENGINE ASSY	1
3	PAFDD	19207	10912269	SHIPPING AND STORAG	1
				END OF FIGURE	

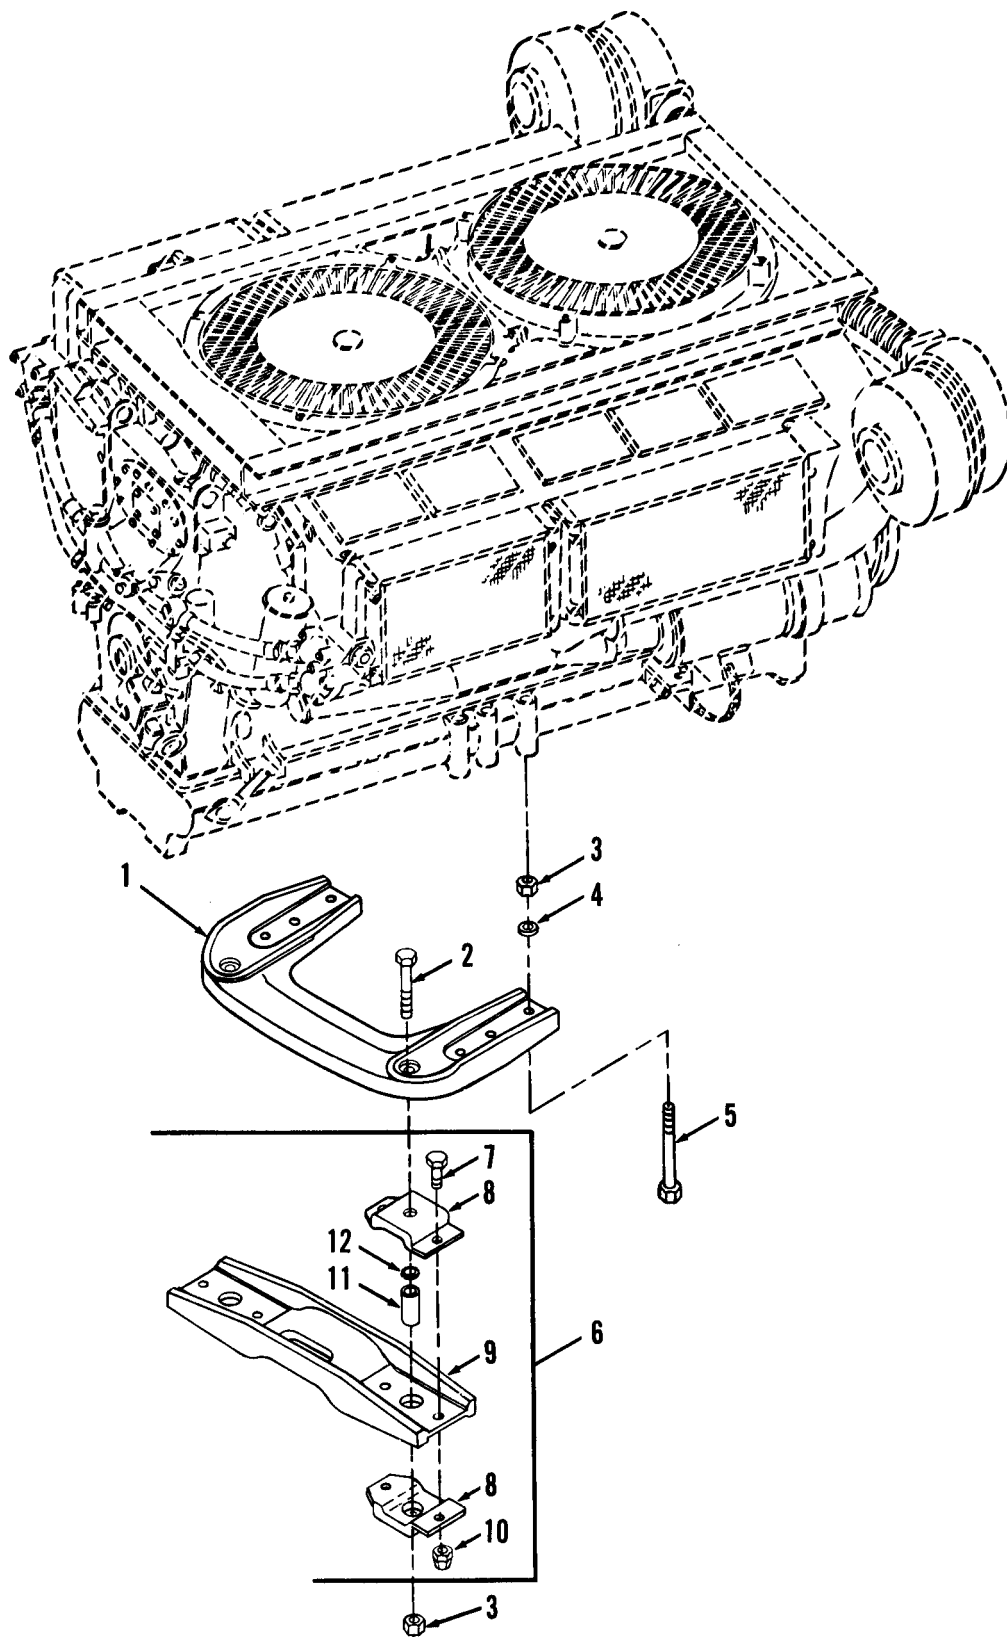 


Figure 2. Engine Front Mounting

SECTION II

TM9-2350-256-24P-1

(1) ITEM NO	(2) SMR CODE	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
GROUP: 0100					
FIGURE 2. ENGINE FRONT MOUNTING					
1	PAOZZ	19207	11671085	ENGINE, MOUNT	1
2	PAOZZ	96906	MS90727-199	SCREW,CAP,HEXAGON H	2
3	PAOZZ	96906	MS51922-61	NUT,SELF-LOCKING,HE	8
4	PAOZZ	96906	MS27183-23	WASHER,FLAT	6
5	PAOZZ	19207	10863824	BOLT,MACHINE	6
6	PAOOO	19207	8383247	MOUNT,RESILIENT	1
7	PAOZZ	96906	MS90727-164	•SCREW,CAP,HEXAGON H	4
8	PAOZZ	19207	7360494	•MOUNTING,ASSY ENGIN	4
9	XAOZZ	19207	7360495	•SADDLE.....	1
10	PAOZZ	96906	MS51922-53	•NUT,SELF-LOCKING,HE	4
11	PAOZZ	19207	7360492	•SPACER,SLEEVE	2
12	PAOZZ	19207	7360488	•SHIM	2

END OF FIGURE

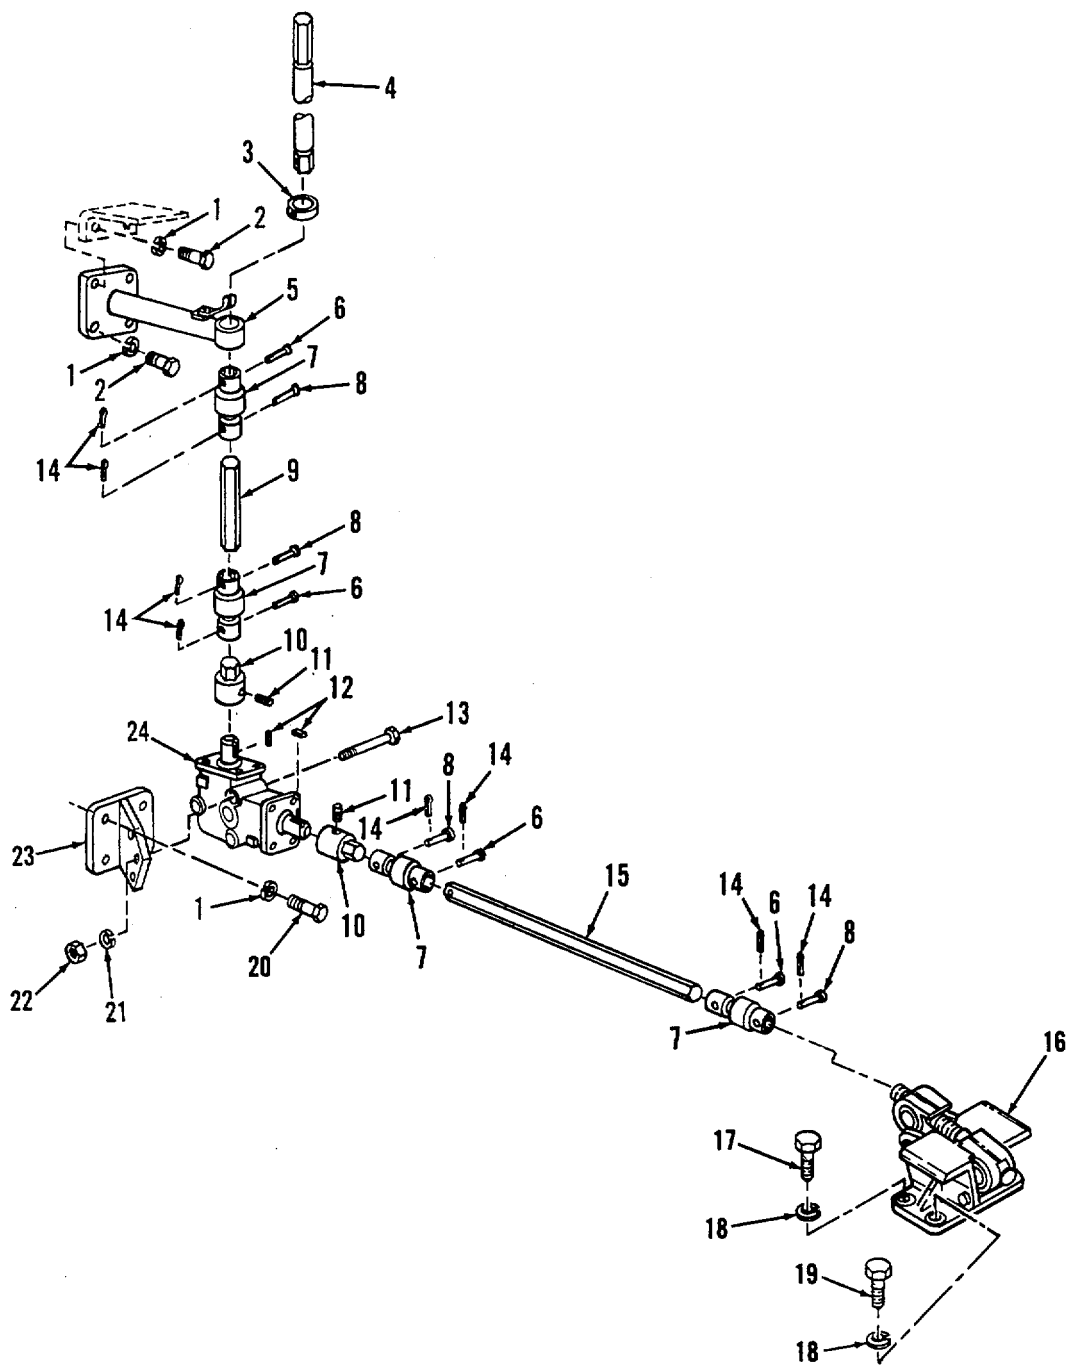 


Figure 3. Engine Rear Mount and Base Assembly

SECTION II

TM9-2350-256-24P-1

(1) ITEM NO	(2) SMR CODE	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
GROUP: 0100					
FIGURE 3. ENGINE REAR MOUNT AND BASE ASSEMBLY					
1	PAOZZ	96906	MS35338-46	WASHER, LOCK.....	8
2	PAOZZ	96906	MS90727-63	SCREW, CAP, HEXAGON H.....	4
3	PAOZZ	18876	8193067	COLLAR, SHAFT.....	1
4	PAOZZ	19207	11671051	SHAFT, STRAIGHT.....	1
5	PAOZZ	19207	11671052	BRACKET, MOUNTING.....	1
6	PACZZ	19207	7525474	PIN, STRAIGHT HEADED.....	4
7	PAOZZ	19207	7526823	UNIVERSAL JOINT.....	4
8	PAOZZ	19207	7713891	PIN, STRAIGHT, HEADED.....	4
9	PAOZZ	19207	11671050-2	SHAFT, STRAIGHT.....	1
10	PAOZZ	19207	8764385	COUPLING, ENGINE MOU.....	2
11	PAOZZ	96906	MS51964-64	SETSCREW.....	2
12	PAOZZ	97384	58313-40189-3	KEY, MACHINE.....	2
13	PAOZZ	96906	M590727-18	SCREW, CAP, HEXAGON H.....	3
14	PAOZZ	10001	12Z48PC611	PIN, COTTER.....	8
15	PAOZZ	19207	11671050-1	SHAFT, STRAIGHT.....	1
16	PAOZZ	19207	7527607	BRACKET, MOUNTING.....	1
17	PA3ZZ	96906	M590727-162	SCREW, CAP, HEXAGON H.....	2
18	PAOZZ	96906	MS35340-50	WASHER, LOCK.....	4
19	PAOZZ	80204	81821BH063F138N	SCREW, CAP, HEXAGON H.....	2
20	PADZZ	96906	MS90726-60	SCREW, CAP, HEXAGON H.....	4
21	PAFZZ	96906	MS35338-44	WASHER, LOCK.....	3
22	PAOZZ	969C6	M5S51968-2	NUT, PLAIN, HEXAGON.....	3
23	PAOZZ	19207	11671056	BRACKET, MOUNTING.....	1
24	PAOZZ	19207	8764928	DRIVE UNIT, ANGLE.....	1

END OF FIGURE

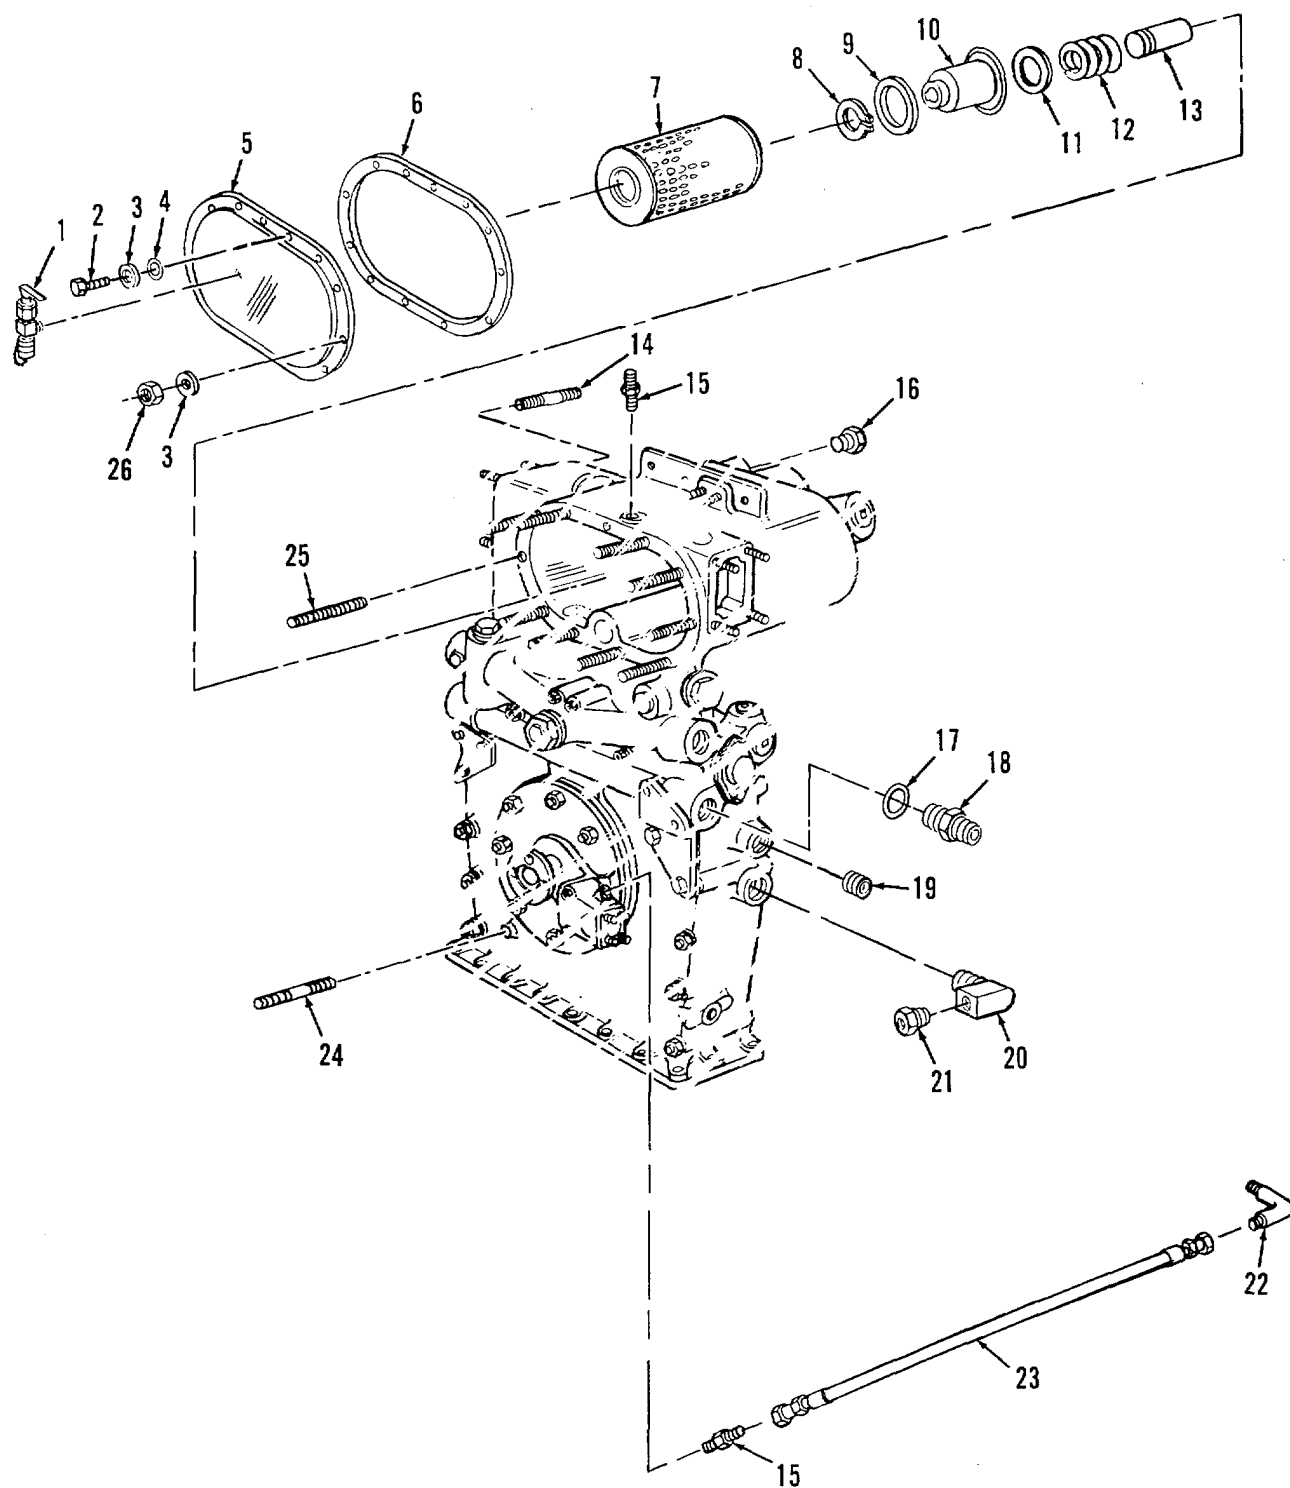 


Figure 4. Damper Housing, Oil Filter and Associated Parts

SECTION II

TM9-2350-256-24P-1

(1) ITEM NO	(2) SMR CODE	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
GROUP: 0106					
FIGURE 4. DAMPER HOUSING, OIL FILTER AND ASSOCIATED PARTS					
1	PAOZZ	19207	11669424	COCK,DRAIN.....	1
2	PAOZZ	96906	MS90727-63	SCREW,CAP,HEXAGON H.....	1
3	PAOZZ	96906	MS9320-12	WASHER,FLAT PART OF KIT P/N 5704486	10
4	PAOZZ	80205	NAS1523-6Y	PACKING WITH RETAIN PART OF KIT P/N	1
				5704486	
5	PAOZZ	19207	11684043-1	COVER, FLUID FI LTER.....	1
6	PAOZZ	19207	11684047	GASKET PART OF KIT P/N 5704486	1
7	KFOZZ	19207	11668619	FILTER ELEMENT,FLUI PART OF KIT P/N.....	2
				5704486	
8	PAOZZ	96906	MS16624-1131	RING,RETAINING.....	2
9	PAOZZ	19207	11684058	RETAINER,PACKING.....	2
10	PADZZ	19207	11684053	FILTER BOODY ,FLUID	2
11	PAOZZ	19207	11684034	WASHER,FLAT.....	2
12	PAOZZ	19207	11684066	SPRING HELICAL,COMP.....	2
13	PAOZZ	19207	11584060	SUPPORT,OIL FILTER.....	2
14	PAOZZ	19207	7767804	STUD,PLAIN	2
15	PAOZZ	96906	MS51500-A4-4S	ADAPTER,STRAIGHT,PI.....	2
16	PAOZZ	81348	WN-P-471BDOBCCA	BUSHING,PIPE	1
17	PAOZZ	19207	7403580-1	GASKET	4
18	PAOZZ	50036	7324900	ADAPTER, STRAIGHT,TU	4
19	PFOZZ	19207	11684133	BUSHING,PIPE.....	1
20	PAOZZ	88044	AN914-4	ELBOA,PIPE	1
21	PAOZZ	79470	C3109X8X6	BUSHING,PIPE.....	1
22	PAOZZ	96906	MS20822-5S	ELBOW,PIPE TO TUBE	1
23	PAOZZ	96906	PS8005FI8OA	HOSE ASSEMBLY, NONME	1
24	PAOZZ	19207	7415384	STUD, PLAIN	1
24	PAOZZ	02978	401965S	STUD, PLAIN	1
25	PAOZZ	19207	8666736	STUD, PLAIN	10
25	PAOZZ	19207	8666737	STUD, PLAIN	10
25	PAOZZ	96906	M521045-6	NUT,SELF-LOCKING,HE	10

END OF FIGURE

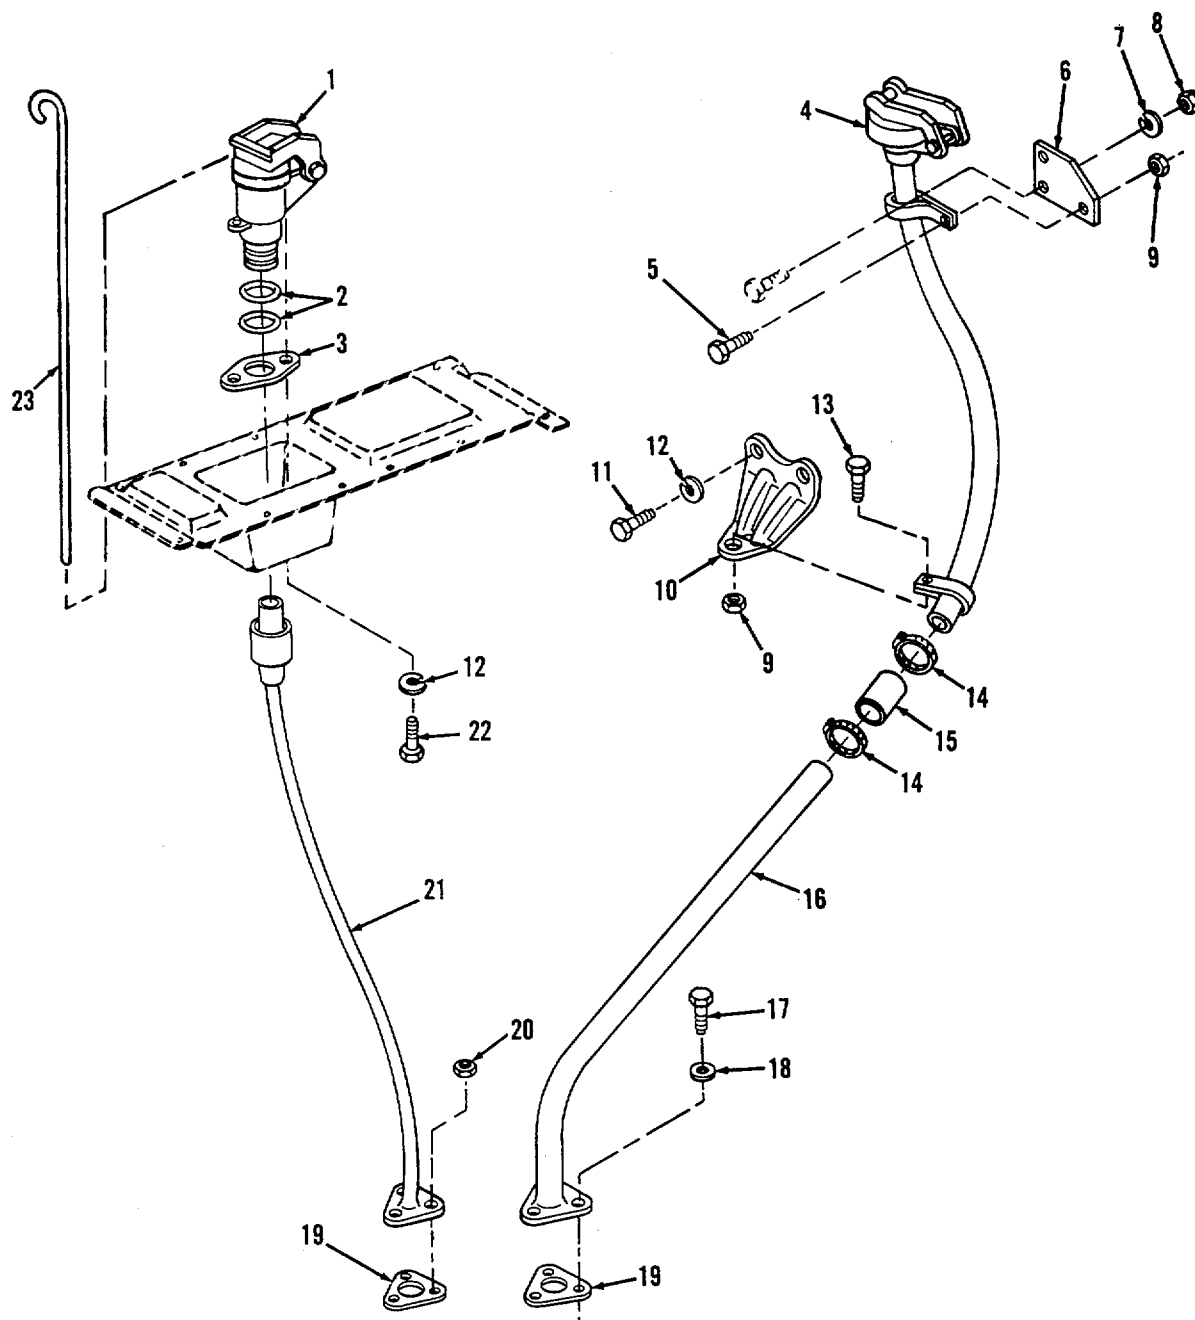 


Figure 5. Oil Level Indicator and Oil Filler Tubes and Related Parts

SECTION II

TM 9-2350-256-244P-1

(1) ITEM NO	(2) SMR CODE	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODES (UOC)	(6) QTY
-------------------	--------------------	--------------	-----------------------	--	------------

GROUP: 0106

FIGURE 5 OIL LEVEL INDICATOR AND
OIL FILLER TUBES AND
RELATED PARTS

1	PFOZZ	19207	10935623	CAP, FILLER OPENING	1
2	PA0ZZ	91349	M83248/1-327	PACKING, PREFORMED.....	2
3	PA0ZZ	19207	10935621	GASKET	1
4	PFOZZ	19207	11682616	FILLER NECK	1
5	PA0ZZ	96906	M590727-60	SCREW, CAP, HEXAGON H	1
6	PA0ZZ	19207	11682609	BRACKET, MOUNTING	1
7	PA0ZZ	19207	7744570	WASHER, FLAT	2
8	PA0ZZ	15653	SPL51712-6	NUT, SELF-LOCKING, HE	2
9	PA0ZZ	96906	MS21044N6	NUT, SELF-LOCKING, HE	2
10	PA0ZZ	19207	11682610	BRACKET, ANGLE	1
11	PA0ZZ	96906	MS90727-62	SCREW, CAP, HEXAGON H	2
12	PA0ZZ	96906	MS35338-45	WASHER, LOCK	4
13	PA0ZZ	96906	MS90727-59	SCREW, CAP, HEXAGON H	1
14	PA0ZZ	96906	MS35942-13	CLAMP, HOSE	5
15	MOOZZ	19207	8357967-4	HOSE, NONMETALLIC MAKE FROM NSN	1
				4720-00-278-1110, 3.5 INCHES.....	
16	PFOZZ	19207	11641927	TUBE ASSEMBLY, METAL	1
17	PA0ZZ	96906	MS90727-34	SCREW, CAP, HEXAGON H	3
18	PA0ZZ	25184	110 5-16	PACKING WITH RETAIN	3
19	PA0ZZ	63729	585094	GASKET	2
20	PA0ZZ	96906	M521044N5	NUT, SELF-LOCKING, HE	3
21	PA0ZZ	19207	11684226	TUBE ASSEMBLY, METAL	1
22	PA0ZZ	96906	MS90726-31	BOLT, MACHINE	2
23	PFOZZ	19207	12275750	GAGE ROD, LIQUID LEV.....	1

END OF FIGURE

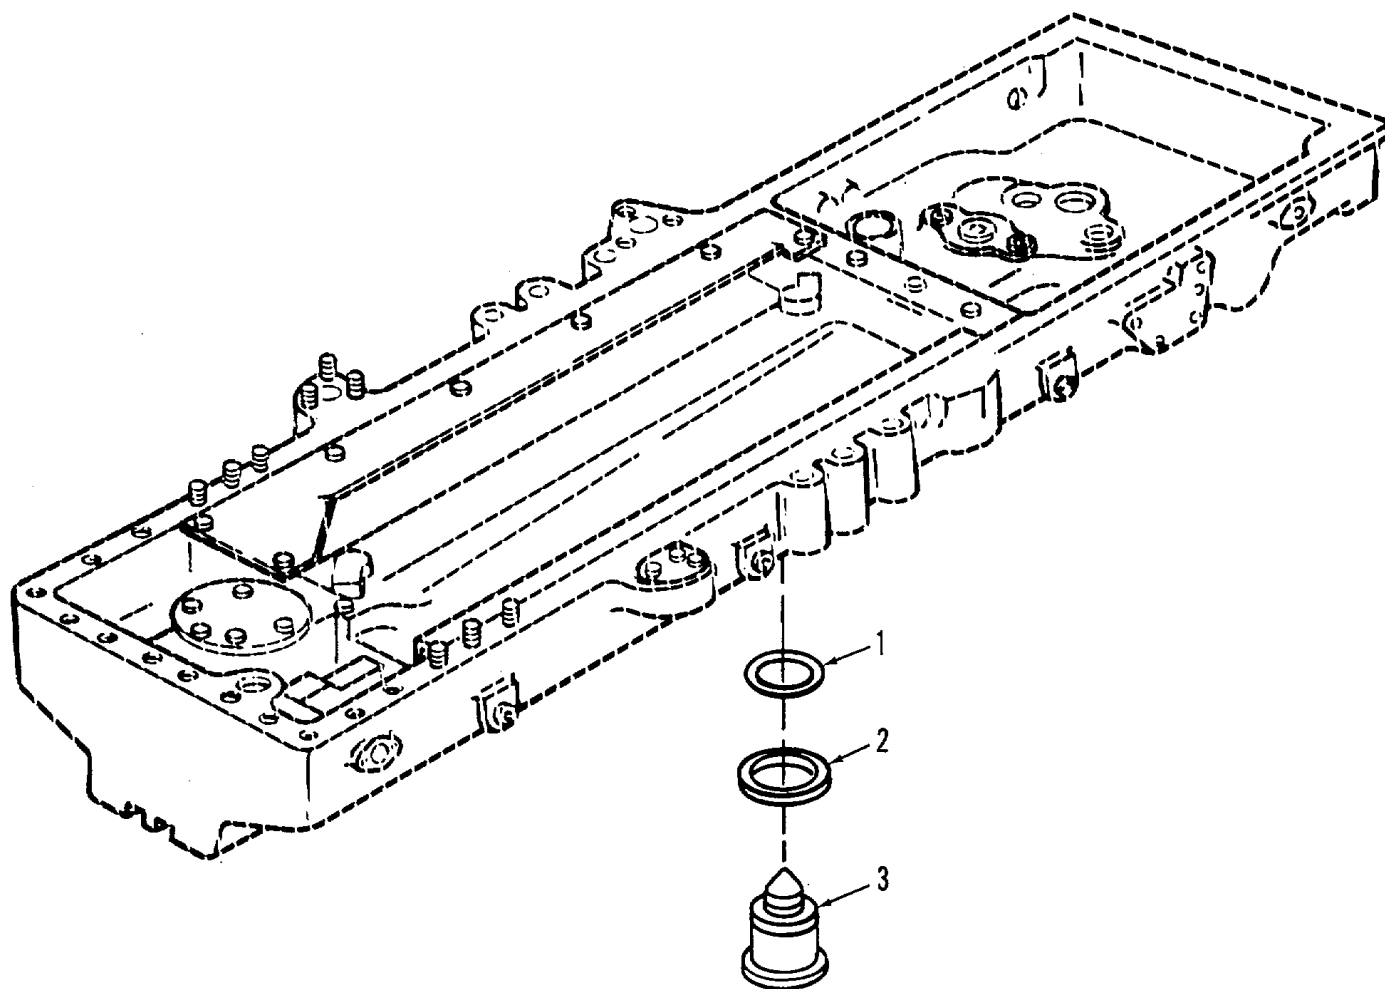 


Figure 6. Oil Pan and Associated Parts