

TECHNICAL MANUAL

DIRECT SUPPORT
AND
GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND SPECIAL
TOOLS LISTS
FOR

TRUCK, TRACTOR, COMMERCIAL
HEAVY EQUIPMENT TRANSPORTER

C - H E T

85,000 GVWR, 8 X 6,

ARMY MODEL M911

NSN 2320-01-025-3733

This manual supersedes TM9-2320-270-34P, 9 April 1985 and all changes

Approved for Public Release; Distribution is Unlimited

HEADQUARTERS, DEPARTMENT OF THE ARMY
JULY 1989

**DIRECT SUPPORT
AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
TRUCK, TRACTOR COMMERCIAL
HEAVY EQUIPMENT TRANSPORTER
C-HET
85,000 GVWR, 8x6
ARMY MODEL M911
NSN 2320-01-025-3733**

Current as of 14 April 1989

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of away to improve the procedures, please let us know. Mail your letter, DAForm 2028 (Recommended Changes to Publications and Blank Form), or DA Form 2028-2 located in back of this manual direct to: Commander, U.S. Army Tank Automotive Command, ATTN: AMSTA-MB, Warren, MI 48397-5000. A reply will be furnished to you.

Approved for Public Release: Distribution is Unlimited.

TABLE OF CONTENTS

	Page	Illus Fig
SECTION I. INTRODUCTION	1	
SECTION II. REPAIR PARTS LIST	1-1	
GROUP 01 ENGINE		
0100-ENGINE ASSEMBLY	1-1	
ENGINE ASSEMBLY	1-1	1
ENGINE LIFTING BRACKETS	2-1	2
ENGINE SIDE SUPPORT BRACKETS AND RELATED PARTS	3-1	3
ENGINE TRUNNION MOUNTING SUPPORT	4-1	4

. This publication supersedes TM 9-2320-270-34Pdated 9 April 1985 and all changes.

TABLE OF CONTENTS

	Page	Illus Fig
0101-CRANKCASE, BLOCK, CYLINDER HEAD	5-1	
ENGINE BLOCK AND RELATED PARTS	5-1	5
ENGINE BLOCK CYLINDER LINERS, AND RELATED PARTS	6-1	6
CYLINDER HEAD AND RELATED PARTS	7-1	7
0102-CRANKSHAFT	8-1	
CRANKSHAFT, MAIN BEARINGS, TIMING GEAR, MAIN SEALS, AND RELATED PARTS	8-1	8
VIBRATION DAMPER AND RELATED PARTS	9-1	9
0103-FLYWHEEL ASSEMBLY	10-1	
FLEXIBLE COUPLING AND FLYWHEEL	10-1	10
FLYWHEEL HOUSING AND RELATED PARTS	11-1	11
FLYWHEEL HOUSING COVERS AND RELATED PARTS	12-1	12
0104-PISTONS, CONNECTING RODS	13-1	
PISTON, RINGS, CONNECTING ROD AND RELATED PARTS	13-1	13
0105-VALVES CAMSHAFTS, AND TIMING SYSTEMS	14-1	
CAMSHAFT, BEARINGS, GEARS, AND RELATED PARTS	14-1	14
VALVES, TAPPETS, ROCKER ARMS, AND RELATED PARTS	15-1	15
BALANCE WEIGHT COVER	16-1	16
IDLER GEAR AND RELATED PARTS	17-1	17
ROCKER COVERS AND RELATED PARTS FOR THE LATE T AND TA ENGINES.....	18-1	18
ROCKER COVERS AND RELATED PARTS FOR THE EARLY T ENGINE	19-1	19
0106-ENGINE LUBRICATION SYSTEM.....	20-1	
OIL FILTER, BREATHER, AND RELATED PARTS	20-1	20
OIL PAN, GAGE GUIDE, AND RELATED PARTS	21-1	21
OIL PUMP AND RELATED PARTS.....	22-1	22
BREATHER TUBES AND RELATED PARTS.....	23-1	23
OIL COOLER EXPLODED VIEW	24-1	24
OIL PRESSURE REGULATOR VALVE.....	25-1	25
OIL INLET SCREEN AND RELATED PARTS	26-1	26
OIL FILTER, ADAPTER, AND ANALYSIS KIT	27-1	27
0108-MANIFOLDS	28-1	
EXHAUST MANIFOLDS	28-1	28
0109-ACCESSORY DRIVING MECHANISMS	28-1	
ALTERNATOR DRIVE AND RELATED PARTS	29-1	29
POWER STEERING DRIVE AND RELATED PARTS	30-1	30
AIR COMPRESSOR DRIVE AND RELATED PARTS	31-1	31
BLOWER DRIVE AND RELATED PARTS.....	32-1	32
 GROUP 03		
FUEL SYSTEM		
0301- FUEL INJECTOR	33-1	
FUEL INJECTOR SYSTEM	33-1	33
FUEL INJECTOR EXPLODED VIEW	34-1	34
FUEL CONTROL TUBES AND RELATED PARTS	35-1	35
0302-FUEL PUMPS	36-1	
FUEL PUMPS AND RELATED PARTS	36-1	36
FUEL LINES AND FITTINGS.....	37-1	37
0304-AIR CLEANER	38-1	
AIR INTAKE FILTER AND RELATED PARTS.....	38-1	38
AIR CLEANER BRACKETS AND RELATED PARTS	39-1	39
0305-SUPERCHARGER, BLOWER AND TURBOCHARGER	40-1	
TURBOCHARGER AND RELATED PARTS	40-1	40
TURBOCHARGER EXPLODED VIEW	41-1	41
AFTERCOOLER AND RELATED PARTS FOR THE 8V92TA ENGINE	42-1	42
BLOWER EXPLODED VIEW	43-1	43
AIR INLET HOUSING	44-1	44
0306-TANKS, LINES AND FITTINGS	45-1	
FUEL TANK, LINES AND FITTINGS	45-1	45
0308-ENGINE SPEED GOVERNOR AND CONTROLS	46-1	
GOVERNOR AND RELATED PARTS	46-1	46
GOVERNOR EXPLODED VIEW	47-1	47

TABLE OF CONTENTS

	Page	Illus Fig
GOVERNOR OPERATING SHAFT EXPLODED VIEW	48-1	48
GOVERNOR COVER AND RELATED PARTS	49-1	49
GOVERNOR WEIGHTS AND RELATED PARTS	50-1	50
GOVERNOR SPRING AND RELATED PARTS	51-1	51
0309-FUEL FILTERS	52-1	
PRIMARY FUEL FILTER AND MOUNTING BRACKET (SPIN ON TYPE)	52-1	52
SECONDARY FUEL FILTER AND RELATED PARTS (SPIN ON TYPE)	53-1	53
PRIMARY AND SECONDARY FUEL FILTERS (REPLACEABLE ELEMENT TYPE)	54-1	54
0311-ENGINE STARTING AIDS	55-1	
ENGINE FUEL PRIMER AND RELATED PARTS	55-1	55
0312-ACCELERATOR, THROTTLE OR CHOKE CONTROLS	56-1	
THROTTLE CONTROL AND RELATED PARTS	56-1	56
ACCELERATOR PEDAL	57-1	57
 GROUP 04 EXHAUST SYSTEM		
0401-MUFFLER AND PIPES	58-1	
MUFFLER AND RELATED PARTS	58-1	58
EXHAUST PIPE AND RELATED PARTS	59-1	59
 GROUP 05 COOLING SYSTEM		
0501-RADIATOR, EVAPORATIVE COOLER, OR HEAT EXCHANGER	60-1	
RADIATOR TIE RODS AND RELATED PARTS	60-1	60
RADIATOR CORE AND RELATED PARTS	61-1	61
HEAT EXCHANGER AND RELATED PARTS	62-1	62
0502-COWLING, DEFLECTORS, AIR DUCTS, SHROUDS	63-1	
RADIATOR GUARD AND RELATED PARTS	63-1	63
0503-WATER MANIFOLD, HEADERS, THERMOSTATS AND HOUSING GASKETS	64-1	
THERMOSTAT, HOUSINGS AND RELATED PARTS	64-1	64
RADIATOR HOSES AND RELATED PARTS	65-1	65
HEAT EXCHANGER HOSES AND RELATED PARTS	66-1	66
0504-WATER PUMP	67-1	
WATER PUMP	67-1	67
0505-FAN ASSEMBLY	68-1	
FAN SHUT OFF VALVE AND RELATED PARTS	68-1	68
FAN, BELTS, AND RELATED PARTS	69-1	69
 GROUP 06 ELECTRICAL SYSTEM		
0601-ALTERNATOR	70-1	
ALTERNATOR AND RELATED PARTS	70-1	70
Alternator EXPLODED VIEW	71-1	71
0603-STARTING MOTOR	72-1	
STARTER, RELAY, SOLENOID AND RELATED PARTS	72-1	72
STARTER ARMATURE AND RELATED PARTS	73-1	73
STARTER LEVER HOUSING AND RELATED PARTS	74-1	74
0606-ENGINE SAFETY CONTROLS	75-1	
ENGINE SHUT DOWN AND RELATED PARTS	75-1	75
0607-INSTRUMENT CONTROL PANEL	76-1	
instrument PANEL AND REMLATED APRTS	76-1	76
INSTRUMENT PANEL INDICATOR AND CONTROLS (includes WINCH/CONTROL swatches)	77-1	77
TACHOGRAPH	78-1	78
0608-MISCELLANEOUS ITEMS	79-1	
SENDING SWITCHES	79-1	79
SENDING SWITCHES AND RELATED PARTS (INCLUDES NEUTRAL SAFETY SWITCH AND PIN)	80-1	80
0609-LIGHTS	81-1	
BACKUP LIGHT	81-1	81
DOME LIGHT	82-1	82
WORK LIGHT ASSEMBLY	83-1	83

TABLE OF CONTENTS

	Page	Illus Fig
CLEARANCE LIGHT.....	84-1	84
HEADLIGHT ASSEMBLY	85-1	85
WARNING LIGHT	86-1	86
STOP LIGHT.....	87-1	87
TURN SIGNAL AND RELATED PARTS	88-1	88
BLACKOUT HEADLIGHT	89-1	89
BLACKOUT CLEARANCE LIGHT	90-1	90
BLACKOUT TAILLIGHT.....	91-1	91
0610-SENDING UNITS AND WARNING SWITCHES	92-1	
LOW AIR PRESSURE INDICATOR	92-1	92
SENDING UNITS AND RELATED PARTS	93-1	93
0611-HORN	94-1	
HORN AND RELATED PARTS	94-1	94
0612-BATTERIES, STORAGE	95-1	
BATTERY BOX AND RELATED PARTS	95-1	95
BATTERY AND RETAINER ASSEMBLY	96-1	96
BATTERY CABLES	97-1	97
0613-CHASSIS WIRING HARNESS.....	98-1	
LAMPHOLDER OPTICAL RIBBON, AND RELATED PARTS	98-1	98
ENGINE WIRING HARNESS	99-1	99
CHASSIS WIRING HARNESS (FRONT SECTION)	100-1	100
CHASSIS WIRING HARNESS (REAR SECTION)	101-1	101
CAB WIRING (INTERIOR SECTION)	102-1	102
CAB WIRING (FIREWALL SECTION)	103-1	103
INSTRUMENT PANEL WIRING (RIGHTSIDE)	104-1	104
INSTRUMENT PANEL WIRING (LEFT SIDE).....	105-1	105
 GROUP 07		
TRANSMISSION		
0700-TRANSMISSION ASSEMBLY	106-1	
AUXILIARY TRANSMISSION AND RELATED PARTS	106-1	106
AUXILIARY TRANSMISSION EXPLODED VIEW	107-1	107
0701-TRANSMISSION SHAFTS	108-1	
MAIN SHAFT AND RELATED PARTS	108-1	108
0705-GEAR SHIFT, VACUUM BOOSTER AND CONTROLS	109-1	
SHIFT YOKE AND RELATED PARTS	109-1	109
SHIFT CONTROL AND RELATED PARTS	110-1	110
0708-TORQUE CONVERTER	111-1	
TORQUE CONVERTER AND RELATED PARTS	111-1	111
CONVERTER HOUSING AND RELATED PARTS	112-1	112
0710-TRANSMISSION ASSEMBLY (HYDRAULIC)	113-1	
HYDRAULIC TRANSMISSION	113-1	113
TRANSMISSION EXPLODED VIEW	114-1	114
CARRIER ASSEMBLY AND RELATED PARTS	115-1	115
CARRIER ASSEMBLY MAIN SHAH AND RELATED PARTS	116-1	116
CARRIER ASSEMBLY EXPLODED VIEW	117-1	117
FIRST CLUTCH AND RELATED PARTS	118-1	118
0713-INTERMEDIATE CLUTCH	119-1	
SECOND AND REVERSE CLUTCH AND RELATED PARTS	119-1	119
RETARDER HOUSING AND RELATED PARTS	120-1	120
FORWARD CLUTCH AND RELATED PARTS	121-1	121
RING GEAR AND RELATED PARTS	122-1	122
CLUTCH SUPPORT ASSEMBLY FOR CENTER, THIRD AND FOURTH CLUTCH	123-1	123
FIFTH CLUTCH AND RELATED PARTS	124-1	124
TRANSMISSION RETARDER CONTROL PEDAL AND RELATED PARTS.....	125-1	125
RETARDER CONTROL VALVE AND RELATED PARTS	126-1	126
0714-SERVO UNIT	127-1	
FRONT SUPPORT AND GROUND SLEEVE ASSEMBLY	127-1	127
LOCKUP CUT OFF VALVE AND RELATED PARTS	128-1	128
VALVE BODY AND RELATED PARTS	129-1	128
CONTROL VALVE AND RELATED PARTS	130-1	130

TABLE OF CONTENTS

	Page	Illus Fig
CONTROL VALVE EXPLODED VIEW	131-1	131
FIFTH CLUTCH TRIMMER VALVE AND RELATED PARTS	132-1	132
0721-COOLERS, PUMP, MOTORS	133-1	
OIL PUMP ASSEMBLY	133-1	133
INTERNAL TRANSMISSION OIL FILTER AND RELATED PARTS	134-1	134
EXTERNAL TRANSMISSION OIL FILTER AND RELATED PARTS	135-1	135
HYDRAULIC OIL COOLER HOSES AND RELATED PARTS	136-1	136
 GROUP 08		
TRANSFER AND FINAL DRIVE ASSEMBLIES		
0801-POWER TRANSFER AND FINAL DRIVE ASSEMBLIES	137-1	
TRANSFER CASE AND RELATED PARTS	137-1	137
TRANSFER CASE EXPLODED VIEW	138	138
TRANSFER CASE FRONT OUTPUT SHAFT AND RELATED PARTS	139-1	139
SHIFTER FORK AND UNIVERSAL YOKE EXPLODED	140-1	140
0803-GEAR SHIFT, VACUUM BOOSTER AND CONTROLS	141-1	
AIR SHIFTCAMBER	141-1	141
TRANSFER CASE AIR SHIFT LINES AND FITTINGS	142-1	142
TRANSFER CASE LOCKUP VALVE AND RELATED PARTS	143-1	143
 GROUP 09		
PROPELLER SHAFTS		
0900-PROPELLER SHAFTS	144-1	
PROPELLER SHAFTS AND RELATED PARTS	144-1	144
 GROUP 10		
FRONT AXLE		
1000-FRONT AXLE ASSEMBLY	145-1	
FRONT AXLE ASSEMBLY AND RELATED PARTS	145-1	145
1002-DIFFERENTIAL	146-1	
FRONT CARRIER ASSEMBLY AND RELATED PARTS	146-1	146
DIFFERENTIAL CARRIER BEVELED PINION CAGE	147-1	147
1004-STEERING WHEEL MECHANISM	148-1	
AXLE BALL AND RELATED PARTS	148-1	148
 GROUP 11		
REAR AXLE		
1100-REAR AXLE ASSEMBLY	149-1	
REAR PUSHER AXLE AND RELATED PARTS	149-1	149
REAR TANDEM AXLE	150-1	150
AXLE SHAFT AND RELATED PARTS	151-1	151
1101-HOUSING, BEAM, HOUSING COVERS, PLUGS AND SEALS	152-1	
AXLE HOUSING ASSEMBLY	152-1	152
HOUSING ASSEMBLY EXPLODED VIEW	153-1	153
1102-DIFFERENTIAL	154-1	
DIFFERENTIAL AND RELATED PARTS	154-1	154
UNIVERSAL YOKE AND RELATED PARTS	155-1	155
UNIVERSAL YOKE EXPLODED VIEW	156-1	156
DIFFERENTIAL HOUSING AND RELATED PARTS	157-1	157
AXLE HOUSING COVER AND RELATED PARTS	158-1	158
DIFFERENTIAL FORWARD TANDEM AXLE	159-1	159
REAR DIFFERENTIAL	160-1	160
REAR DIFFERENTIAL EXPLODED VIEW	161-1	161
REAR YOKE AND RELATED PARTS	162-1	162
1105-TANDEM DRIVE ASSEMBLY	163-1	
SHIFTER FORK AND RELATED PARTS	163-1	163
REAR TANDEM AIR SHIFT CHAMBER HOSE AND RELATED PARTS	164-1	164
1108-WALKING BEAMS, STUB AXLES AND PARTS	165-1	
EQUALIZING BEAM AND RELATED PARTS	165-1	165
EQUALIZING BEAM ASSEMBLY	166-1	166

TABLE OF CONTENTS

	Page	Illus Fig
GROUP 12		
BRAKES		
1202-SERVICE BRAKES	167-1	
FRONT BRAKE ASSEMBLY	167-1	167
FRONT BRAKE ACTUATOR HOUSING AND ADJUSTING		
BOLT ASSEMBLY	168-1	168
PUSHER AXLE BRAKE SHOE AND LINING ASSEMBLY	169-1	169
PUSHER AXLE BRAKE ACTUATOR HOUSING AND RELATED PARTS	170-1	170
BRAKE BRACKET ASSEMBLY FOR INTERMEDIATE AND REAR, REAR AXLES	171-1	171
DIRT DEFLECTOR AND BRAKE LINING KIT FOR INTERMEDIATE AND REAR, REAR AXLES	172-1	172
1208-AIR BRAKE SYSTEM	173-1	
FRONT AXLE AIR BRAKE CHAMBER	173-1	173
PUSHER AXLE AIR BRAKE CHAMBER	174-1	174
TANDEM AXLE AIR BRAKE CHAMBER	175-1	175
BRAKE TREADLE VALVE ASSEMBLY	176-1	176
AIR PRESSURE TANKS AND RELATED PARTS	177-1	177
AIR PRESSURE LINES AND FITTINGS	178-1	178
SPRING BRAKE AND THROTTLE SHUT OFF VALVE ASSEMBLIES	179-1	179
VALVE BODY	180-1	180
COUPLING AND RELATED PARTS	181-1	181
CONNECTORS AND RELATED PARTS	182-1	182
BULKHEAD FITTINGS AND RELATED PARTS	83-1	183
TRAILER BRAKE CONTROL AND AIR PRESSURE GAGE LINES AND FITTINGS	184-1	184
TRAILER BRAKE CONTROL LINES AND FITTINGS	185-1	185
AIR TANK LINES AND FITTINGS	186-1	186
AIR PRESSURE GAGE'S LINES AND FITTINGS	187-1	187
RELAY VALVE	188-1	188
SPRING BRAKE VALVE AND RELATED PARTS	189-1	189
SPRING BRAKE LINES AND FITTINGS	190-1	190
BRAKE RELEASE VALVE AND FITTINGS	191-1	191
CHECK VALVES AND FITTINGS	192-1	192
AIR MANIFOLD AND RELATED PARTS	193-1	193
LOOP CLAMPS	194-1	194
ASSORTED FITTINGS AND UNIONS	195-1	195
BRAKE SHOES	196-1	196
1209-AIR COMPRESSOR ASSEMBLY	197-1	
AIR COMPRESSOR AND RELATED PARTS	197-1	197
AIR COMPRESSOR HEAD AND LOCK	198-1	198
AIR COMPRESSOR CRANKCASE	199-1	199
AIR COMPRESSOR PISTON AND CONNECTING ROD	200-1	200
AIR COMPRESSOR HOSES AND FITTINGS	201-1	201
ALCOHOL INJECTOR AND RELATED PARTS	202-1	202
1211-TRAILER BRAKE Connections AND CONTROLS	203-1	
TRAILER HOSE ASSEMBLY	203-1	203
SERVICE AND DELIVERY VALVE ASS EMBLY	204-1	204
BRAKE HAND CONTROL VALVE AND AIR MANIFOLD	205-1	205
FRONT TOWING GLADHANDS AND ATTACHING PARTS	206-1	206
REAR TOWING GLADHANDS AND ATTACHING PARTS	207-1	207
QUICK RELEASE VALVE AND ATTACHING PARTS	208-1	208
GROUP 13		
WHEELS		
1311-WHEEL ASEMBLY	209-1	
FRONT BRAKE DRUM AND HUB ASSEMBLY	209-1	209
PUSHER BRAKE DRUM EXPLODED VIEW	210-1	210
TANDEM HUB AND DRUM ASSEMBLY	211-1	211
WHEEL ASSEMBLY	212-1	212
1313-TIRES, TUBES, TIRE CHAINS	213-1	
PNEUMATIC TIRE AND INNER TUBE	213-1	213

TABLE OF CONTENTS


		Page	Illus Fig
GROUP 14	STEERING		
	1401-MECHANICAL STEERING GEAR ASSEMBLY	214-1	
	STEERING WHEEL AND RELATED PARTS	214-1	214
	STEERING WHEEL JACKET AND RELATED PARTS	215-1	215
	STEERING SPLINED SHAFT AND RELATED PARTS	216-1	216
	STEERING DRAG LINK AND POWER STEERING BOOSTER	217-1	217
	STEERING DRAG LINK WITHOUT POWER STEERING BOOSTER	218-1	218
	TIE ROD AND RELATED PARTS	219-1	219
	REMOTE CONTROL STEERING LEVER AND RELATED PARTS	220-1	220
	STEERING GEAR HOUSING AND RELATED PARTS	221-1	221
	1410-HYDRAULIC PUMP OR FLUID MOTOR ASSEMBLY	222-1	
	POWER STEERING PUMP AND RELATED PARTS	222-1	222
	1411-HOSES, LINES, FITTINGS	223-1	
	POWER STEERING HOSES AND FITTINGS	223-1	223
	1412-HYDRAULIC OR AIR Cylinders	224-1	
	POWER STEERING BOOSTER AND RELATED PARTS	224-1	224
	CONTROL END HOUSING AND RELATED PARTS	225-1	225
	1413-TANKS, Reservoirs	226-1	
	Reservoir AND FILTER ASSEMBLY	226-1	226
GROUP 15	FRAME, TOWING ATTACHMENTS AND DRAWBARS		
	1501 -FRAME ASSEMBLY	227-1	
	BUMPER AND FRAME ASSEMBLY	227-1	227
	SPRING BRACKETS AND RELATED PARTS	228-1	228
	AUXILIARY TRANSMISSION SUPPORT AND RELATED PARTS	229-1	229
	STEERING BOOSTER ANCHOR AND RELATED PARTS	230-1	230
	TRANSFER CASE MOUNTING BRACKET AND RELATED PARTS	231-1	231
	FRAME BRACKET AND RELATED PARTS	232-1	232
	CROSSMEMBERS, GUSSETS AND RELATED PARTS	233-1	233
	1503-PINTLE AND TOWING ATTACHMENTS	234-1	
	FRONT TOW BAR AND RELATED PARTS	234-1	234
	REAR TOW BAR AND PINTLE HOOK	235-1	235
	1504-SPARE WHEEL Caroler	236-1	
	SPARE TIRE WINCH AND RELATED PARTS	236-1	236
	1506-FIFTH WHEEL	237-1	
	FIFTH WHEEL AND RELATED PARTS	237-1	237
	FIFTH WHEEL EXPLODED VIEW	238-1	238
	FIFTH WHEEL LOCKS AND RELATED PARTS	239-1	239
GROUP 16	SPRINGS AND SHOCK ABSOBERS		
	1601-SPRINGS	240-1	
	FRONT SPRINGLEAFS	240-1	240
	SPRING LINK AND PRESSURE PLATE FOR SPRINGS	241-1	241
	PUSHER AXLE AIR LIFT SPRING AND RELATED PARTS	242-1	242
	PUSHER AXLE SHOCK ABSORBER AND RELATED PARTS	243-1	243
	PUSHER AXLE AIR CONTROL VALVE ASSEMBLY	244-1	244
	VALVE HANDLE AND RELATED PARTS	245-1	245
	VALVE HANDLE EXPLODED VIEW	246-1	246
	TOP SADDLE PLATE AND RELATED PARTS	247-1	247
	REAR SPRING ASSEMBLY	248-1	248
	1604-SHOCK ABSORBER Equipment	249-1	
	SHOCK ABSORBER	249-1	249
	1605-TORQUE, RADIUS AND STABILIZER ROD	250-1	
	TORQUE ROD	250-1	250
GROUP 18	BODY, CAB AND HOOD		
	1801-BODY, CAB AND HOOD ASSEMBLIES	251-1	
	RADIATOR AND HEADLIGHT GUARD	251-1	251
	ENGINE HOOD AND RELATED PARTS	252-1	252

TABLE OF CONTENTS

	Page	Illus Fig
ENGINE SIDE COVERS AND RELATED PARTS	253-1	253
CAB MOUNT PLATE AND RELATED PARTS	254-1	254
CAB ASSEMBLY	255-1	255
CAB DOOR AND RELATED PARTS	256-1	256
CAB DOOR HANDLES AND RELATED PARTS	257-1	257
SPLASH GUARD AND RELATED PARTS	258-1	258
1802-FENDERS, WINDSHIELD AND ATTACHING PARTS	259-1	
CAB WINDSHIELD AND ASSORTED GLASS	259-1	259
FENDER AND RELATED PARTS	260-1	260
1805-FLOORS, SUB FLOORS AND RELATED PARTS	261-1	
CAB FLOOR BOARD	261-1	261
1806-UPHOLSTERY SEATS AND CARPETS	262-1	
DRIVER'S SEAT SUPPORT AND RELATED PARTS	262-1	262
FLOOR MAT	263-1	263
Passenger SEAT	264-1	264
DRIVER SEAT	265-1	265
SEAT, ADJUSTERS, AND RELATED PARTS	266-1	266
BASE ASSEMBLY AND RELATED PARTS	267-1	267
1808-STOWAGE RACKS, BOXES, STRAPS AND CARRYING CASES	268-1	
WINCH PLATFORM AND RELATED PARTS	268-1	268
 GROUP 20		
WINCH, CAPSTAN, WINDLASS POWER CONTROL UNIT AND POWER TAKEOFF		
2001-CAPSTAN, WINDLASS AND WINCH ASSEMBLY	269-1	
CONSOLE PANEL AND RELATED PARTS	269-1	269
REAR WINCH AND MOUNTING BRACKETS	270-1	270
WINCH ASSEMBLY	271-1	271
WINCH ASSEMBLY AND EXPLODED VIEW	272-1	272
WINCH CABLE DRUM AND RELATED PARTS	273-1	273
HYDRAULIC MOTOR ASSEMBLY	274-1	274
AIR REGULATING VALVE	275-1	275
VALVE RELIEF SLEEVE AND RELATED PARTS	276-1	276
POWER TAKE OFF CONTROL VALVE AND RELATED PARTS	277-1	277
WINCH CONTROL	278-1	278
WINCH CONTROL VALVE	279-1	279
ROTARY PUMP AND RELATED PARTS	280-1	280
RESERVOIR ASSEMBLY AND RELATED PARTS	281-1	281
RESERVOIR ASSEMBLY EXPLODED VIEW	282-1	282
POWER TAKE OFF TO WINCH SPLINED SHAFT ASSEMBLY	283-1	283
POWER TAKE OFF WINCH ASSEMBLY	284-1	284
AIR SHAFT ASSEMBLY, P. T. O	285-1	285
SPLIT FLANGE INLET AND OUTLET AND RELATED PARTS	286-1	286
ADAPTERS FOR HYDRAULIC WINCH	287-1	287
 GROUP 22		
BODY CHASSIS AND ACCESSORY ITEMS		
2202-ACCESSORY ITEMS	288-1	
SUPPLY VALVE AIR CONNECTORS AND RELATED PARTS	288-1	288
WINDSHIELD WASHER ASSEMBLY	289-1	289
WIPER ASSEMBLY	290-1	290
MIRROR ASSEMBLY AND RELATED PARTS	291-1	291
REARVIEW MIRROR ASSEMBLY	292-1	292
AIR HORN VALVE AND RELATED PARTS	293-1	293
AIR HORN AND RELATED PARTS	294-1	294
HEATER, DEFROSTER AND RELATED PARTS	295-1	295
DEFLECTOR HEATER AND RELATED PARTS	296-1	296
2210 -DATA PLATES AND INSTRUCTION HOLDERS	297-1	
WARNING AND ASSORTED DECALS	297-1	297
INSTRUCTION AND INFORMATION DECALS	298-1	298
WARRANTY AND INSTRUCTION DECALS	299-1	299

TABLE OF CONTENTS

 		Page	Illus Fig
GROUP 47	GAGES (NON ELECTRICAL) WEIGHING AND MEASURING DEVICES		
	4702-GAGES, MOUNTINGS, LINES AND FITTINGS	300-1	
	AIR PRESSURE GAGE	300-1	300
GROUP 94	REPAIR KITS		
	9401-REPAIR KITS	KIT-1	
	KITS	KIT-1	KIT
GROUP 95	GENERAL USE STANDARDIZED PARTS		
	9501-BULK MATERIEL	BULK-1	
	BULK MATERIEL	BULK-1	BULK
SECTION III. SPECIAL TOOLS			
GROUP 26	TOOLS AND TEST EQUIPMENT		
	2604-SPECIAL TOOLS	301-1	
	ORGANIZATIONAL SPECIAL TOOLS	301-1	301
	DIRECT SUPPORT SPECIAL TOOL	302-1	302
	DIRECT SUPPORT SPECIAL TOOLS	303-1	303
	DIRECT SUPPORT SPECIAL TOOLS	304-1	304
	DIRECT SUPPORT SPECIAL TOOLS	305-1	305
	DIRECT SUPPORT SPECIAL TOOLS	306-1	306
	DIRECT SUPPORT SPECIAL TOOLS	307-1	307
	GENERAL SUPPORT SPECIAL TOOLS	308-1	308
	GENERAL SUPPORT SPECIAL TOOLS	309-1	309
	GENERAL SUPPORT SPECIAL TOOLS	310-1	310
SECTION IV. CROSS-REFERENCE INDEXES			
	NATIONAL STOCK NUMBER INDEX	I-1	
	PART NUMBER INDEX	1-48	
	FIGURE AND ITEM NUMBER INDEX	1-157	

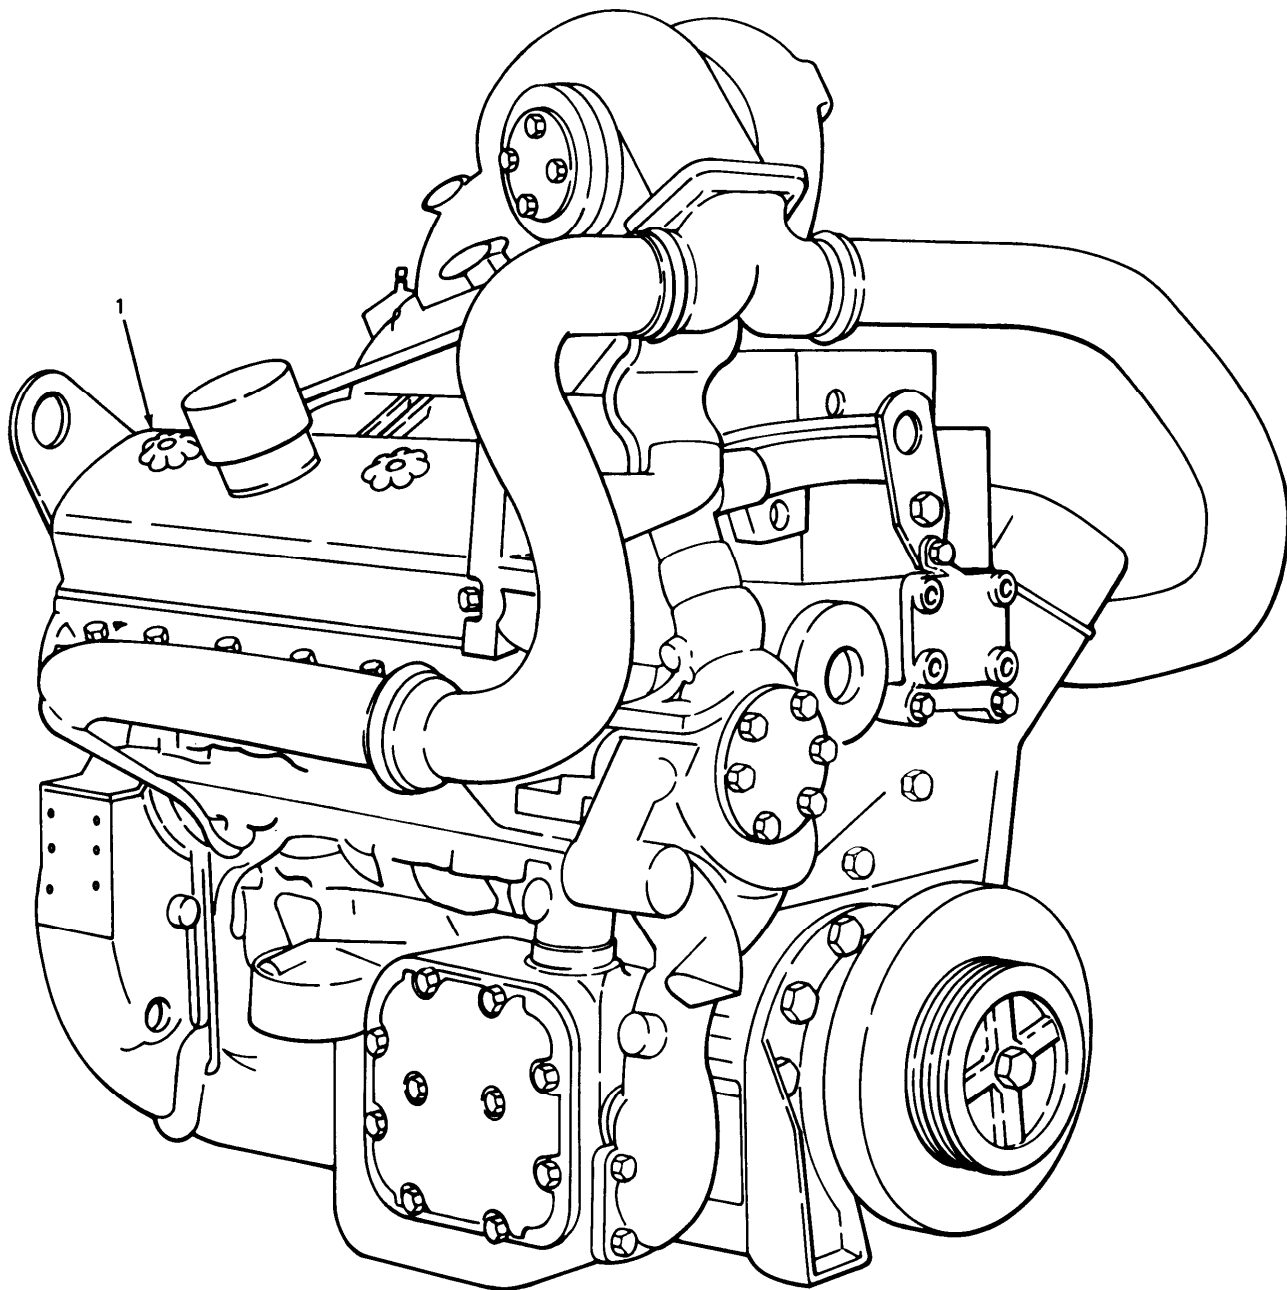

TA203600

FIGURE 1. ENGINE ASSEMBLY.

SECTION II				TM9-2320-270-34P	
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART		
NO.	CODE	FSCM	NUMBER	DESCRIPTION AND USABLE ON CODE (UOC)	QTY
				GROUP 01 ENGINE	
				GROUP 0100 ENGINE ASSEMBLY	
				FIG. 1 ENGINE ASSEMBLY.	
1	PAFHH	72582	8087-7899	ENGINE,DIESEL	1
				END OF FIGURE	


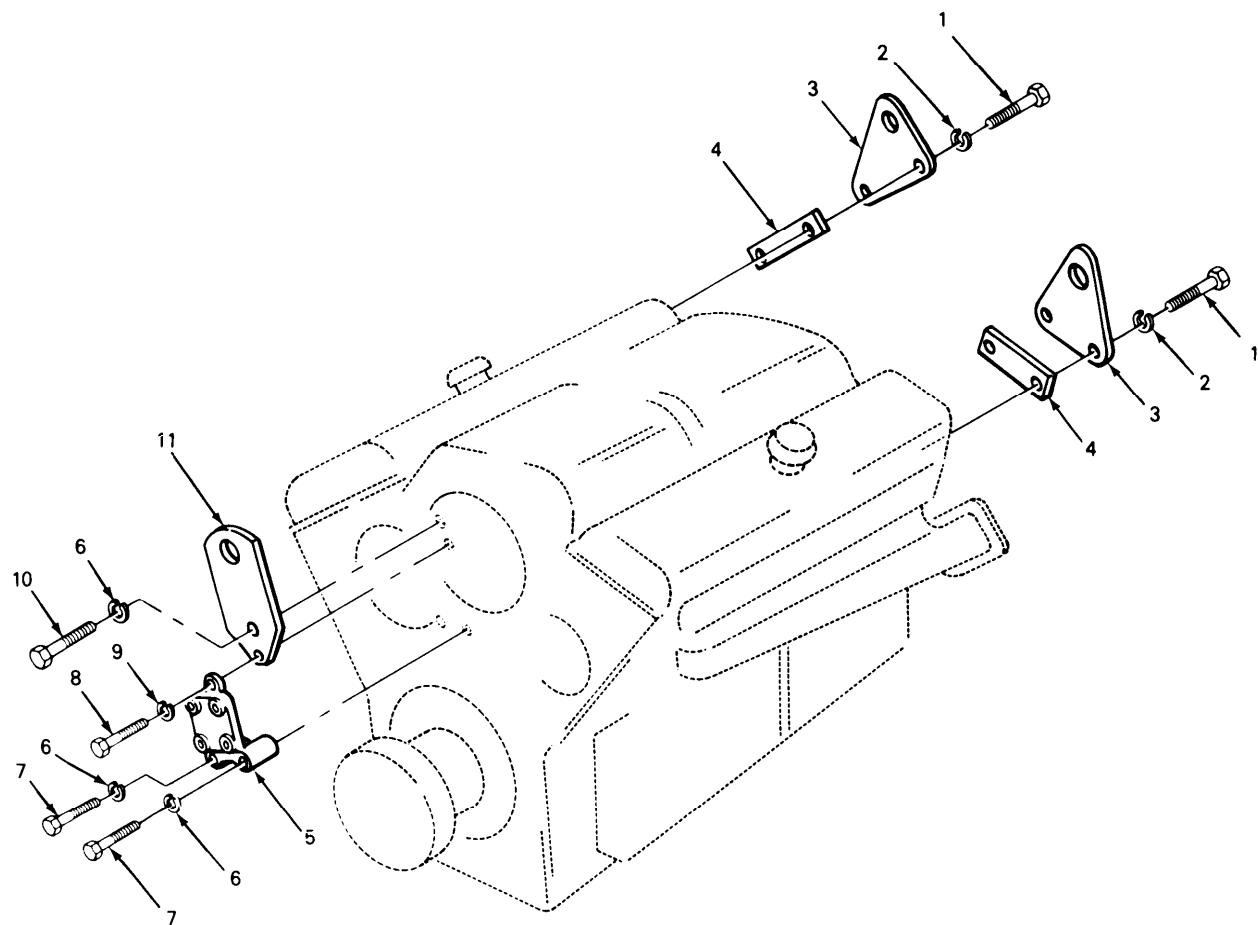 


FIGURE 2. ENGINE LIFTING BRACKETS


SECTION II		TM9-2320-270-34P			
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART		
NO.	CODE	FSCM	NUMBER	DESCRIPTION AND USABLE ON CODE (UOC)	QTY
GROUP 0100 ENGINE ASSEMBLY					
FIG. 2 ENGINE LIFTING BRACKETS.					
1	PFFZZ	72582	454933	SCREW,CAP,HEXAGON H REAR LIFTING BRACKETS TO CYLINDER HEAD,LEFT (2), RIGHT (2)	4
2	PFFZZ	96906	MS35338-47	WASHER,LOCK REAR LIFTING BRACKET, LEFT(2),RIGHT(2)	4
3	PFFZZ	72582	5117174	BRACKET,SPECIAL REAR,ENGINE LIFTING,LEFT AND RIGHT CYLINDER HEAD,LEFT (1),RIGHT (1)	2
4	PAFZZ	72582	5117332	GASKET	2
5	PAFZZ	72582	8924109	SUPPORT,FAN	1
6	PAFZZ	96906	MS35338-50	WASHER,LOCK	3
7	PAFZZ	72582	271574	BOLT,MACHINE	2
8	PFFZZ	81381	190270	SCREW,CAP,HEXAGON H	1
9	PAFZZ	96906	MS35338-48	WASHER,LOCK SCREW,TOP FAN SUPPORT BRACKET TO BOTTOM LIFTING BRACKET TO ENGINE FRONT COVER	1
10	PAFZZ	72582	223435	SCREW,CAP,HEXAGON H BOTTOM ENGINE LIFTING BRACKET TO ENGINE FRONT COVER TO ENGINE FRONT COVER	1
11	PAFZZ	72582	5109900	BRACKET,SPECIAL ENGINE LIFTING, FRONT	1
END OF FIGURE					

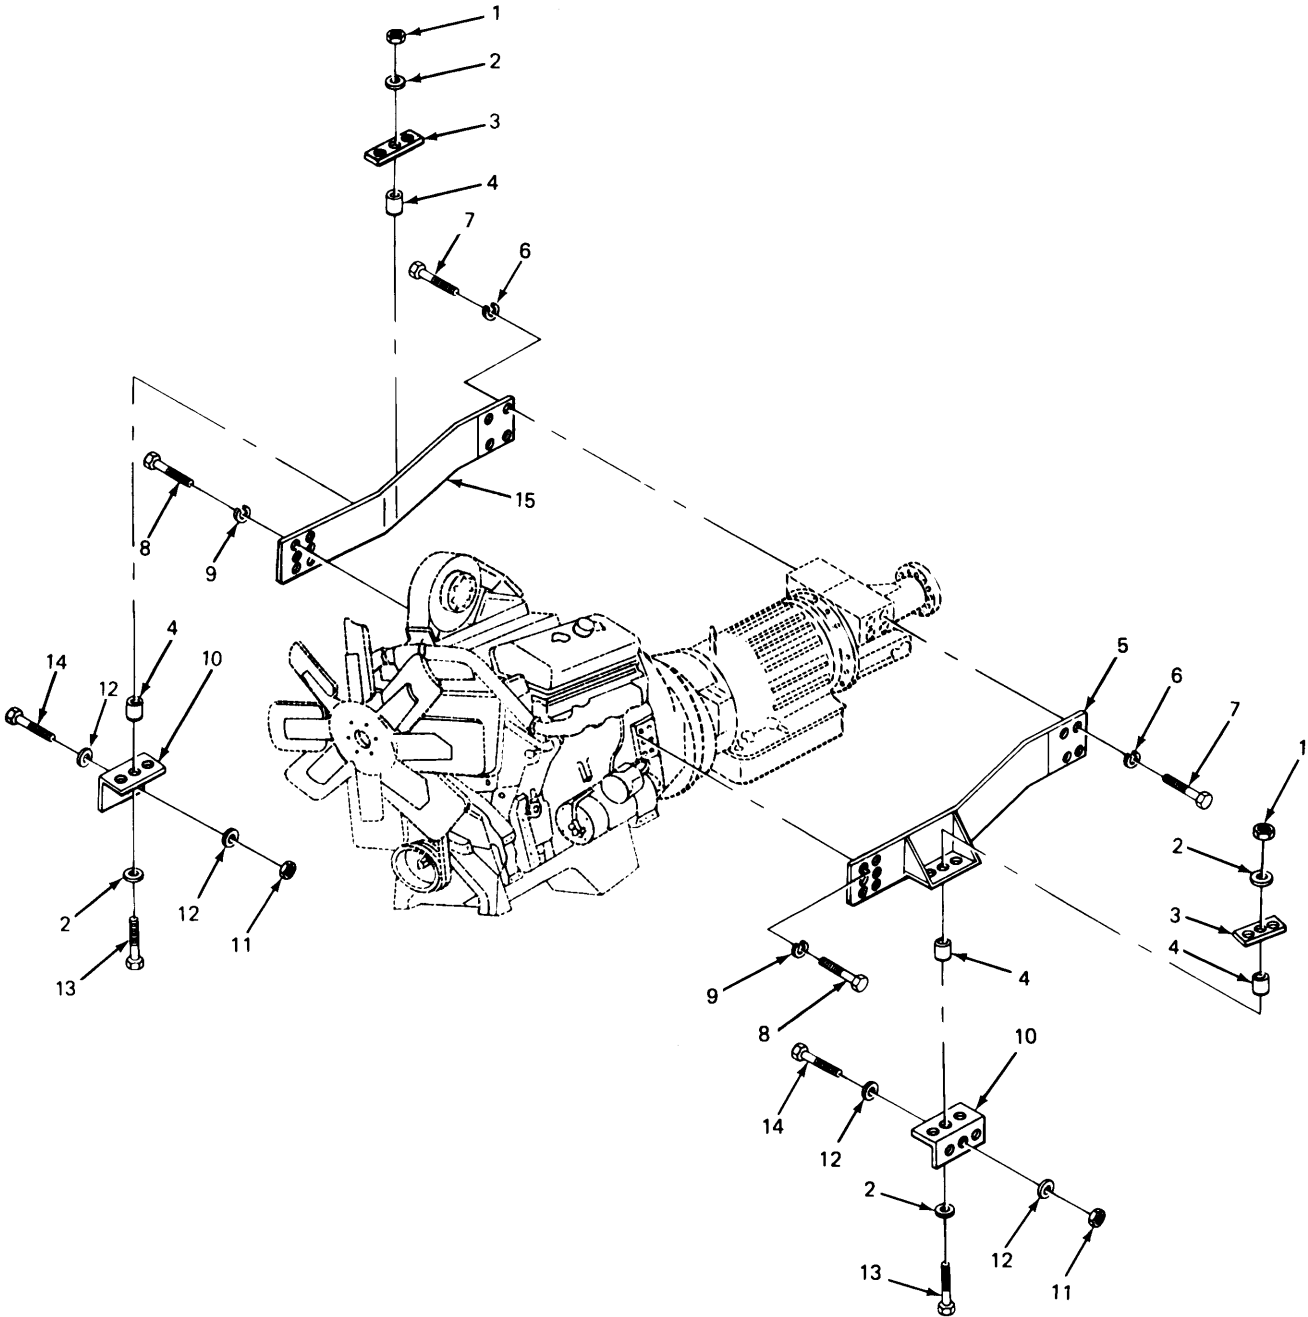 

TA212200

FIGURE 3. ENGINE SIDE SUPPORT BRACKETS AND RELATED PARTS.


SECTION II (1) ITEM NO.	(2) SMR CODE	(3) FSCM	TM9-2320-270-34P (4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
GROUP 0100 ENGINE ASSEMBLY					
FIG. 3 ENGINE SIDE SUPPORT BRACKETS AND RELATED PARTS.					
1	PAFZZ	45152	2881HX	NUT, SELF-LOCKING, HE SCREW SUPPORT CRADLE BRACKET TO COVER PLATE, UPPER RUBBER CUSHIONS, LEFT (3), RIGHT (3)	6
2	PAFZZ	96906	MS27183-21	WASHER, FLAT	12
3	XDFZZ	45152	21810AX	PLATE COVER, UPPER RUBBER CUSHIONS, CRADLE SUPPORT BRACKET, LEFT (1) RIGHT (1)	2
4	PAFZZ	19207	10863416-1	MOUNT, RESILIENT OVAL, CRADLE SUPPORT BRACKET, LEFT (6), RIGHT (6)	12
5	XDFZZ	45152	64654DXW	BRACKET CRADLE, POWER PLANT MOUNTING, LEFT REAR	1
6	PAFZZ	45152	///-A	WASHER, LOCK SCREW BRACKET, POWER PLANT MOUNTING TO TRANSMISSION HOUSING, LEFT (4), RIGHT (4)	8
7	PAFZZ	45152	2406-H	SCREW HEAD	8
8	PAFZZ	45152	49743-AX	SCREW, CAP, HEXAGON H BRACKET, POWER PLANT MOUNTING TO ENGINE BLOCK, LEFT (6), RIGHT (6)	12
9	PAFZZ	45152	318B	WASHER, LOCK SCREW, BRACKET, POWER PLANT MOUNTING TO ENGINE BLOCK, LEFT (6), RIGHT	12
10	XDFZZ	45152	66431CXW	BRACKET POWER PLANT MOUNTING BRACKET TO VEHICLE FRAME, LEFT (1), RIGHT 0 (1)	2
11	PAFZZ	45152	60861A	NUT, PLAIN, HEXAGON PATENTED, CADMIUM PLATED, SCREW, BRACKET TO FRAME, LEFT (3), RIGHT 0, (3)	6
12	PAFZZ	45152	8865G	WASHER, FLAT SCREW, BRACKET TO FRAME, LEFT (6), RIGHT (6)	12
13	PAFZZ	96906	MS16208-150	SCREW, CAP, HEXAGON H BRACKET FRAME TO BRACKET POWER PLANT MOUNTING, LEFT (3), RIGHT (3)	6
14	PAFZZ	45152	55518AX	SCREW, CAP, SOCKET HE	6
15	XDFZZ	45152	64653DXW	SCREW, CAP, SOCKET HE BRACKET CRADLE, POWER PLANT MOUNTING, RIGHT REAR	6
END OF FIGURE					

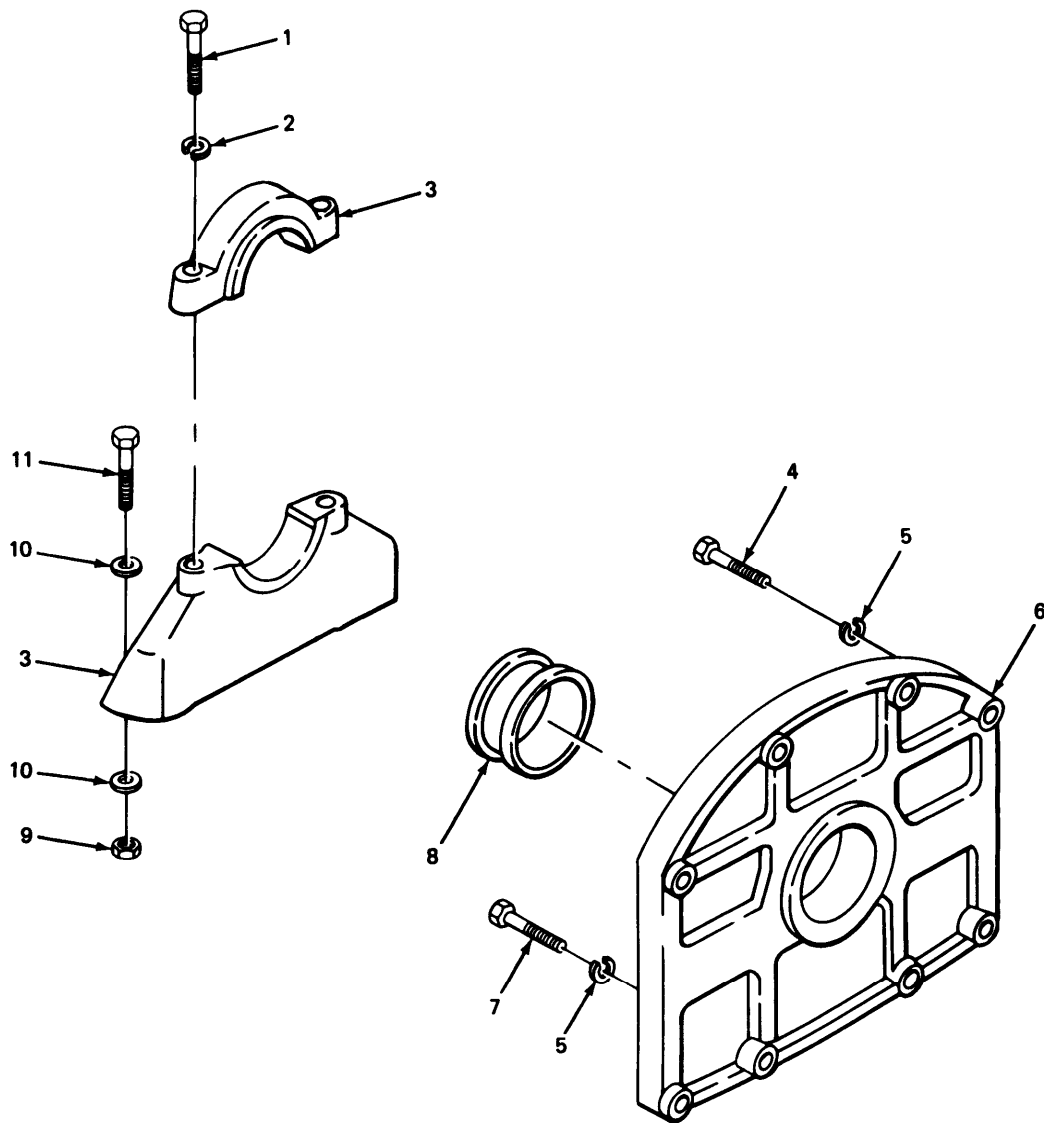 

TA212201

FIGURE 4. ENGINE TRUNNION MOUNTING SUPPORT.

SECTION II		TM9-2320-270-34P			
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART		
NO.	CODE	FSCM	NUMBER	DESCRIPTION AND USABLE ON CODE (UOC)	QTY
GROUP 0100 ENGINE ASSEMBLY					
FIG. 4 ENGINE TRUNNION MOUNTING SUPPORT.					
1	PTFZZ	72582	454934	SCREW,CAP,HEXAGON H ENGINE FRONT SUPPORT ASSEMBLY	2
2	PAFZZ	96906	MS35338-47	WASHER, LOCK SCREW, ENGINE FRONT SUPPORT ASSEMBLY	2
3	PTFZZ	72582	5103957	SUPPORT ASSEMBLY, RE ENGINE FRONT TRUNNION MOUNTING TO VEHICLE FRAME	1
4	PAFZZ	72582	9415559	BOLT HEAD, TRUNNION TO OIL PUMP BODY	4
5	PAFZZ	96906	MS35338-46	WASHER, LOCK	8
6	PTFZZ	72582	5148894	TRUNNION OIL PUMP BODY WITH ENGINE SUPPORT MOUNTING, FRONT	1
7	PAFZZ	72582	455537	BOLT TRUNNION TO OIL PUMP BODY	4
8	PAFZZ	72582	5103566	RING ENGINE FRONT TRUNNION MOUNTING SUPPORT CUSHION	1
9	PAFZZ	45152	60861A	NUT, PLAIN, HEXAGON SCREW, SUPPORT, ENGINE FRONT TRUNNION MOUNTING TO VEHICLE FRAME	2
10	PTFZZ	45152	88656	WASHER, FLAT SCREW, SUPPORT, ENGINE FRONT TRUNNION MOUNTING TO VEHICLE FRAME	4
11	PAFZZ	45152	49743-AX	SCREW, CAP, HEXAGON H	2
END OF FIGURE					

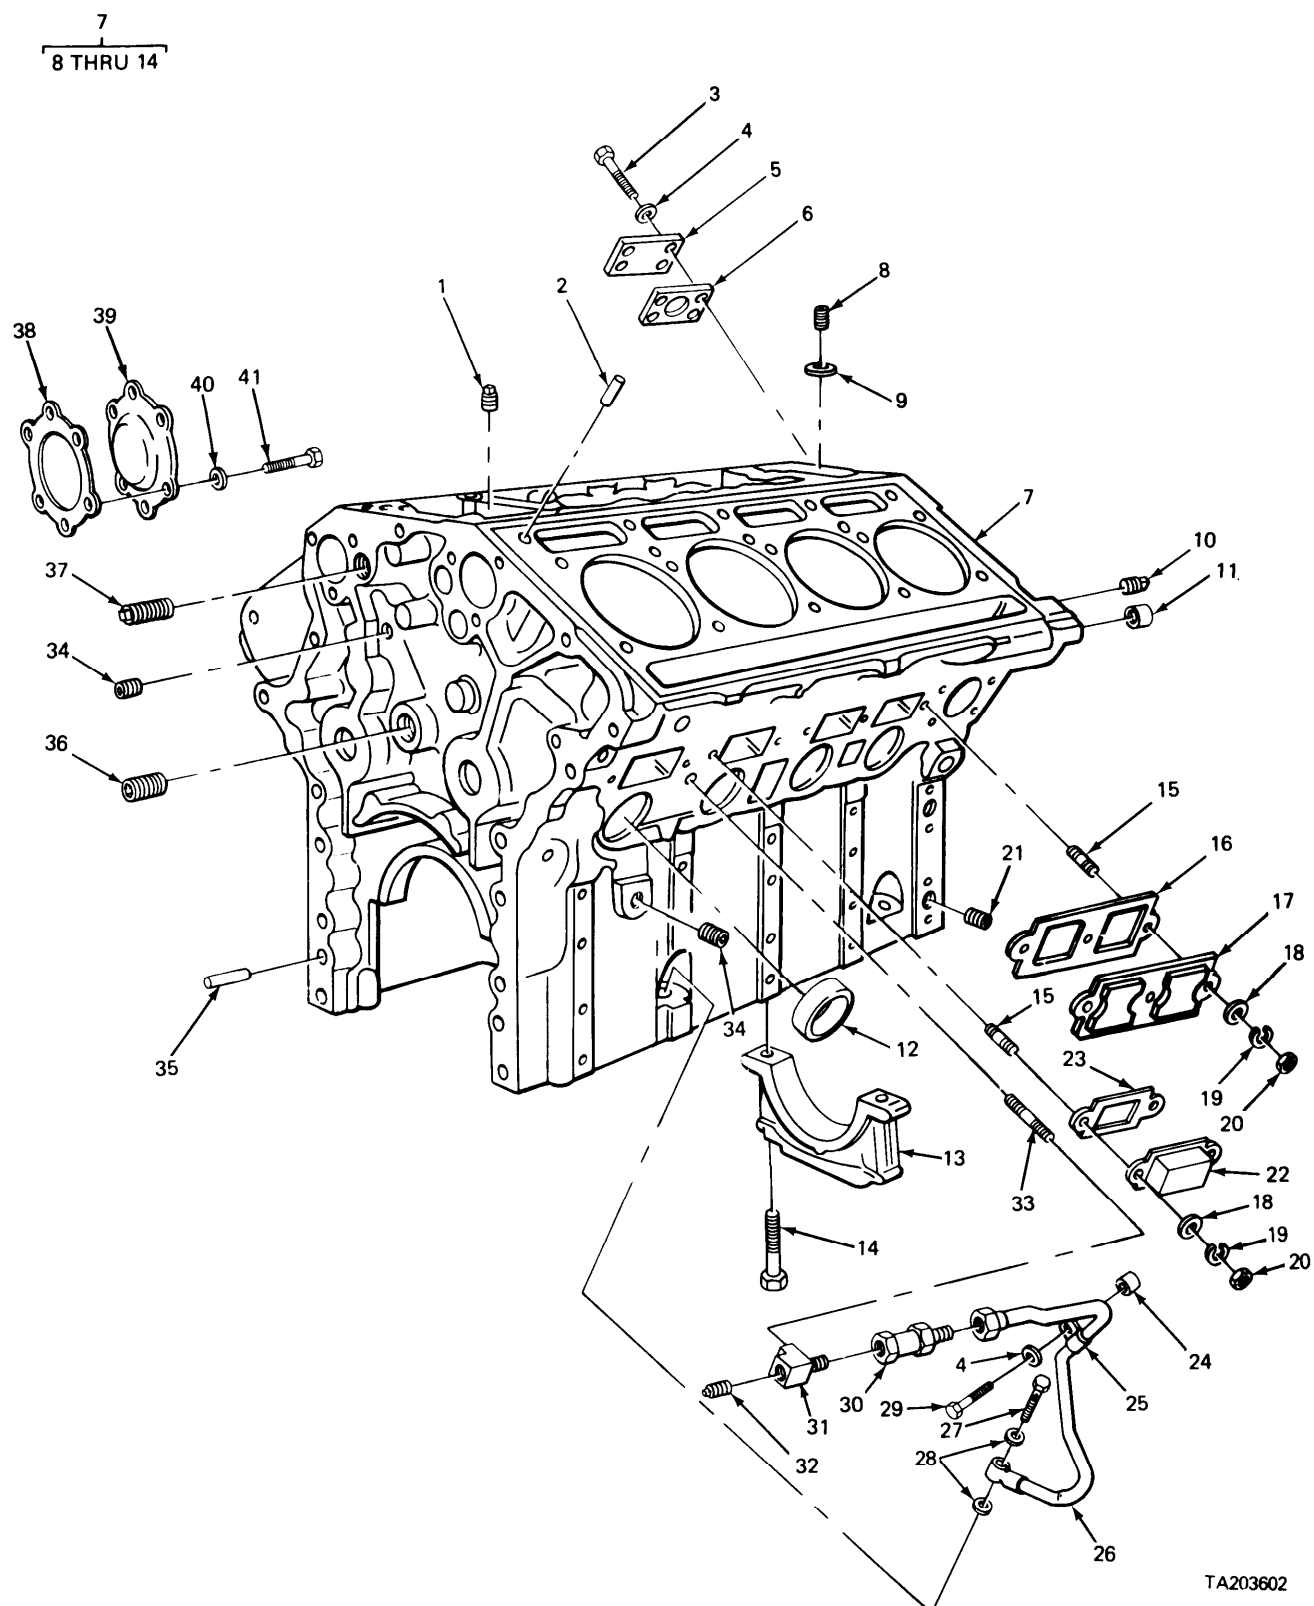 

TA203602

FIGURE 5, ENGINE BLOCK AND RELATED PARTS.

SECTION II		TM9-2320-270-34P			
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART		
NO.	CODE	FSCM	NUMBER	DESCRIPTION AND USABLE ON CODE (UOC)	QTY
GROUP 0101 CRANKCASE, BLOCK, CYLINDER HEAD					
FIG. 5 ENGINE BLOCK AND RELATED PARTS.					
1	PAHZZ	81343	WW-P-471AASBCB	PLUG,PIPE HEXAGON SOCKET,BLOCK TOP.	7
2	PAHZZ	72582	141214	PIN,STRAIGHT,HEADLE UNUSED	3
3	PAFZZ	96906	MS90725-60	PASSAGE TO CAMSHAFT BORES	
4	PAFZZ	96906	MS27183-14	SCREW,CAP,HEXAGON H LEFT SIDE	4
5	PAFZZ	72582	5117733	WATER HOLE COVER TO BLOCK	
6	PAFZZ	72582	5117734	WASHER,FLAT WATER HOLE COVER TO BLOCK	6
7	PFHHH	72582	8923317	COVER,ACCESS PLAIN,LEFT SIDE WATER HOLE,BLOCK	1
8	PAHZZ	72582	5138646	GASKET WATER HOLE COVER PART OF KIT P/N 5199617	1
9	PAHZZ	72582	5138659	ENGINE BLOCK DIESEL CYLINDER, DIESEL ENGINE	1
10	PAHZZ	72582	8924751	PLUG,PROTECTIVE,DUS SPECIAL,CORE HOLE	2
11	PAFZZ	72582	5132410	GASKET PLUG,COPPER PART OF KIT P/N 5199617	2
12	PAFZZ	72582	5139989	PLUG,PIPE SQUARE SOCKET,BLOCK FRONT END	1
13	PAHZZ	72582	5149220	PLUG,EXPANSION BLOCK FRONT END	2
13	PAHZZ	72582	5146497	PLUG,EXPANSION CYLINDER BLOCK	8
14	PAHZZ	72582	8924272	CAP,PILLOW BLOCK MAIN BEARING, CRANKSHAFT,FINISHED	5
15	PAFZZ	72582	5152121	BEARING MAIN BEARING,CRANKSHAFT, UNFINISHED	5
16	PAFZZ	72582	5132572	BOLT,MACHINE SPECIAL,MAIN BEARING CAP	10
17	PAFZZ	72582	5144186	STUD,PLAIN SMALL AND LARGE ACCESS COVERS TO BLOCK	14
18	PAFZZ	96906	MS27183-11	GASKET LARGE ACCESS COVERS TO BLOCK,RIGHT SIDE (1), LEFT SIDE (1).	2
19	PAFZZ	96906	MS35338-45	COVER,ACCESS ACCESS,HAND HOLE,LARGE WASHER,FLAT SMALL AND LARGE ACCESS COVERS TO BLOCK	12
20	PAFZZ	96906	MS35691-624	WASHER,LOCK SMALL AND LARGE ACCESS COVERS TO BLOCK	12
21	PAFZZ	00501	87708-S	NUT,PLAIN,HEXAGON SMALL AND LARGE ACCESS COVERS TO BLOCK	12
22	PAFZZ	72582	5132458	PLUG,PIPE HEXAGON SOCKET,LARGE ACCESS COVER,RIGHT (2) LEFT (2)	4
23	PAFZZ	72582	5132924	COVER,ACCESS ACCESS,HAND HOLE,SMALL GASKET SMALL ACCESS COVER,RIGHT SIDE (2),LEFT SIDE (2)	4
24	PAFZZ	72582	5196119	SPACER,TRUCK ADVERS AIR BOX DRAIN TUBE	2
25	PAFZZ	72582	5151883	CLAMP,LOOP AIR BOX DRAIN TUBE	2