 


TECHNICAL MANUAL
UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
FOR
TRUCK, 5-TON, 6X6, M939, M939A1, M939A2
SERIES TRUCKS (DIESEL)

FEBRUARY 1999

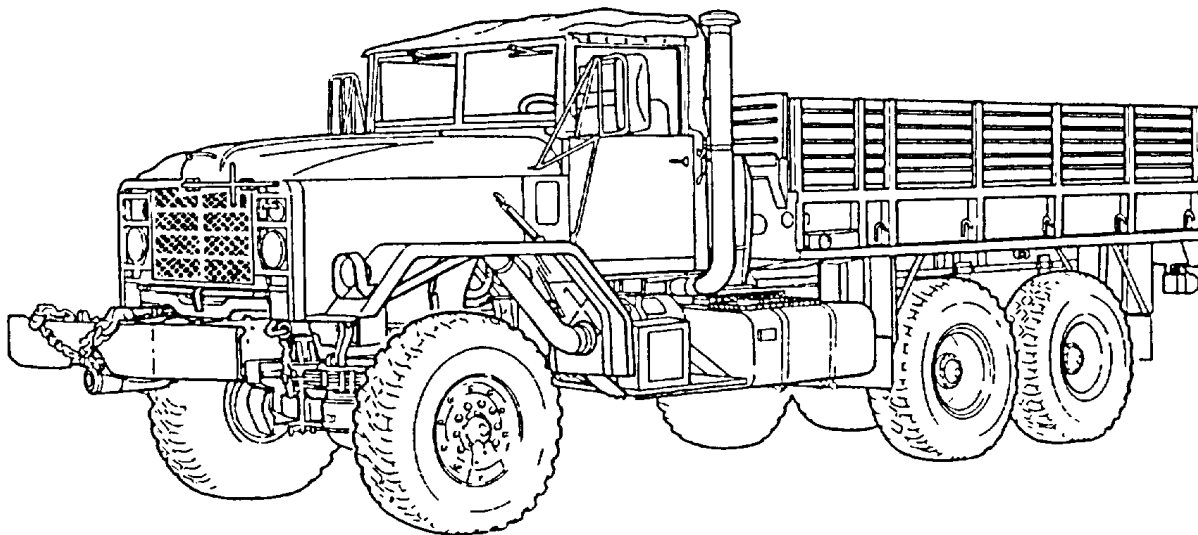

TRUCK, CARGO: 5-TON, 6X6, DROPSIDE,
M923 (2320-01-050-2084) (EIC: BRY); M923A1 (2320-01-206-4087) (EIC: BSS); M923A2 (2320-01-230-0307) (EIC: BS7);
M925 (2320-01-047-8769) (EIC: BRT); M925A1 (2320-01-206-4088) (EIC: BST); M925A2 (2320-01-230-0308) (EIC: BS8);

TRUCK, CARGO: 5-TON, 6X6 XLWB,
M927 (2320-01-047-8771) (EIC: BRV); M927A1 (2320-01-206-4089) (EIC: BSW); M927A2 (2320-01-230-0309) (EIC: BS9);
M928 (2320-01-047-8770) (EIC: BRU); M928A1 (2320-01-206-4090) (EIC: BSX); M928A2 (2320-01-230-0310) (EIC: BTM);

TRUCK, DUMP: 5-TON, 6X6,
M929 (2320-01-047-8756) (EIC: BTH); M929A1 (2320-01-206-4079) (EIC: BSY); M929A2 (2320-01-230-0305) (EIC: BTN);
M930 (2320-01-047-8755) (EIC: BTG); M930A1 (2320-01-206-4080) (EIC: BSZ); M930A2 (2320-01-230-0306) (EIC: BTO);

TRUCK, TRACTOR: 5-TON, 6X6,
M931 (2320-01-047-8753) (EIC: BTE); M931A1 (2320-01-206-4077) (EIC: BS2); M931A2 (2320-01-230-0302) (EIC: BTP);
M932 (2320-01-047-8752) (EIC: BTD); M932A1 (2320-01-205-2684) (EIC: BS55); M932A2 (2320-01-230-0303) (EIC: BTQ);

TRUCK, VAN, EXPANSIBLE: 5-TON, 6X6,
M934 (2320-01-047-8750) (EIC: BTB); M934A1 (2320-01-205-2682) (EIC: BS4); M934A2 (2320-01-230-0300) (EIC: BTR);

TRUCK, MEDIUM WRECKER: 5-TON, 6X6,
M936 (2320-01-047-8754) (EIC: BTF); M936A1 (2320-01-206-4078) (EIC: BS6); M936A2 (2320-01-230-0304) (EIC: BTT).

DISTRIBUTION STATEMENT A - Approved for public release; distribution is unlimited.

DEPARTMENTS OF THE ARMY AND THE AIR FORCE

TECHNICAL MANUAL
NO. 9-2320-272-24P-1

HEADQUARTERS
DEPARTMENTS OF THE ARMY AND THE AIR FORCE
Washington D.C., 1 February 1999

TECHNICAL ORDER
NO. 36A12-1C-1155-4-1

**UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
FOR
TRUCK, 5-TON, 6X6, M939, M939A1, AND M939A2 SERIES TRUCKS (DIESEL)**

TRUCK	MODEL	EIC	NSN WITHOUT WINCH	NSN WITH WINCH
Cargo, Dropside	M923	BRY	2320-01-050-2084	
Cargo, Dropside	M923A1	BSS	2320-01-206-4087	
Cargo, Dropside	M923A2	BS7	2320-01-230-0307	
Cargo, Dropside	M925	BRT		2320-01-047-8769
Cargo, Dropside	M925A1	BST		2320-01-206-4088
Cargo, Dropside	M925A2	BS8		2320-01-230-0308
Cargo	M927	BRV	2320-01-047-8771	
Cargo	M927A1	BSW	2320-01-206-4089	
Cargo	M927A2	BS9	2320-01-230-0309	
Cargo	M928	BRU		2320-01-047-8770
Cargo	M928A1	BSX		2320-01-206-4090
Cargo	M928A2	BTM		2320-01-230-0310
Dump	M929	BTH	2320-01-047-8756	
Dump	M929A1	BSY	2320-01-206-4079	
Dump	M929A2	BTN	2320-01-230-0305	
Dump	M930	BTG		2320-01-047-8755
Dump	M930A1	BSZ		2320-01-206-4080
Dump	M930A2	BTO		2320-01-230-0306
Tractor	M931	BTE	2320-01-047-8753	
Tractor	M931A1	BS2	2320-01-206-4077	
Tractor	M931A2	BTP	2320-01-230-0302	
Tractor	M932	BTD		2320-01-047-8752
Tractor	M932A1	BS5		2320-01-205-2684
Tractor	M932A2	BTQ		2320-01-230-0303
Van, Expansible	M934	BTB	2320-01-047-8750	
Van, Expansible	M934A1	BS4	2320-01-205-2682	
Van, Expansible	M934A2	BTR	2320-01-230-0300	
Medium Wrecker	M936	BTF		2320-01-047-8754
Medium Wrecker	M936A1	BS6		2320-01-206-4078
Medium Wrecker	M936A2	BTT		2320-01-230-0304

REPORTING OF ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in back of this manual, directly to: Director, Armament and Chemical Acquisition and Logistics Activity, ATTN: AMSTA-AC-NML, Rock Island, IL 61299-7630. A reply will be furnished to you. You may also provide DA Form 2028-2 information via datafax or e-mail:

- E-mail: amsta-ac-nml.@ria-emh2.army.mil
- Fax: DSN 783-0726 or commercial (309) 782-0726

DISTRIBUTION STATEMENT A - Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

		Page	Illus Figure
Section I	INTRODUCTION	1	
Section II	REPAIR PARTS LIST	1-1	
Group 01	ENGINE	1-1	1
	0100 Engine and Container Assembly (M939, M939A1)	1-1	1
	0100 Engine and Container Assembly (M939A2)	2-1	2
	0100 Engine Lifting Brackets (M939, M939A1)	3-1	3
	0100 Engine Lifting Brackets (M939A2)	4-1	4
	0100 Engine Mounts (M939, M939A1)	5-1	5
	0100 Engine Mounts (M939A2)	6-1	6
	0101 Cylinder Block Assembly (M939, M939A1)	7-1	7
	0101 Cylinder Block Assembly (M939A2)	8-1	8
	0101 Cylinder Head Assembly, Gasket, and Mounting Hardware (M939, M939A1)	9-1	9
	0101 Cylinder Head Assembly, Gasket, and Mounting Hardware (M939A2)	10-1	10
	0101 Engine Access Cover (M939, M939A1)	11-1	11
	0102 Crankshaft Assembly (M939, M939A1)	12-1	12
	0102 Crankshaft Assembly (M939A2)	13-1	13
	0103 Flywheel Gear Assembly and Housing (M939, M939A1)	14-1	14
	0103 Flywheel Housing and Flexplate (M939A2)	15-1	15
	0103 Crankshaft Rear Cover (M939, M939A1)	16-1	16
	0104 Piston and Rod Assembly (M939, M939A1)	17-1	17
	0104 Piston and Rod Assembly (M939A2)	18-1	18
	0105 Front Gear Cover (M939, M939A1)	19-1	19
	0105 Front Gear Cover (M939A2)	20-1	20
	0105 Camshaft, Gear, and Related Parts (M939, M939A1)	21-1	21
	0105 Camshaft, Gear, and Related Parts (M939A2)	22-1	22
	0105 Cam Follower, Housing, and Push Rods (M939, M939A1)	23-1	23
	0105 Valves, Springs, Guides, and Miscellaneous Parts (M939, M939A1)	24-1	24
	0105 Valves, Springs, Guides, and Miscellaneous Parts (M939A2)	25-1	25
	0105 Rocker Arms and Miscellaneous Hardware (M939, M939A1)	26-1	26
	0105 Rocker Arms and Miscellaneous Hardware (M939A2)	27-1	27
	0105 Valve Cover and Gasket (M939, M939A1)	28-1	28
	0105 Valve Cover and Gasket (M939A2)	29-1	29
	0106 Engine Oil Filter (M939, M939A1)	30-1	30
	0106 Engine Oil Cooler Assembly (M939, M939A1)	31-1	31
	0106 Engine Oil Cooler and Filter (M939A2)	32-1	32
	0106 Engine Oil Pump (M939, M939A1)	33-1	33
	0106 Engine Oil Dipstick and Tube (M939, M939A1)	34-1	34
	0106 Engine Oil Pump and Dipstick (M939A2)	35-1	35
	0106 Engine Oil Pump Lines and Fittings (M939, M939A1)	36-1	36
	0106 Engine Oil Pan and Related Parts (M939, M939A1)	37-1	37
	0106 Engine Oil Pan and Related Parts (M939A2)	38-1	38
	0106 Engine Oil Draft Tube (M939, M939A1)	39-1	39
	0106 Crankshaft Breather Tube (M939A2)	40-1	40
	0108 Air Intake Manifold (M939, M939A1)	41-1	41
	0108 Exhaust Manifold (M939, M939A1)	42-1	42
	0108 Exhaust Manifold (M939A2)	43-1	42
	0109 Accessory Drive, Pulley, and Related Parts (M939, M939A1)	44-1	43
	0109 Tachometer Access Cover (M939A2)	45-1	44
Group 03	FUEL SYSTEM	46-1	46
	0301 Fuel Injector Assembly and Related Parts (M939, M939A1)	46-1	46
	0301 Fuel Injector Assembly (M939A2)	47-1	47

TABLE OF CONTENTS (Cont'd)

		Page	Illus Figure
0301	Fuel Injector Supply Tubes (M939A2)	48-1	48
0302	Fuel Pump Assembly, AFC (M939, M939A1)	49-1	49
0302	Fuel Pump Governor and Tachometer Drive Assembly, AFC (M939, M939A1)	50-1	50
0302	Fuel Pump Housing, AFC (M939, M939A1)	51-1	51
0302	Fuel Pump Damper (M939, M939A1)	52-1	52
0302	Fuel Gear Pump Assembly and Mounting Hardware (M939, M939A1)	53-1	53
0302	Fuel Pump Assembly with VS Governor (M939, M939A1).....	54-1	54
0302	Fuel Pump Governor and Tachometer Drive Assembly, VS (M939, M939A1)	55-1	55
0302	Fuel Pump Housing, VS (M939, M939A1)	56-1	56
0302	Fuel Injector Pump (M939A2)	57-1	57
0302	Fuel Injector Pump, Camshaft, and Related Parts (M939A2).....	58-1	58
0302	Fuel Injector Pump Plunger and Control Rack (M939A2).....	59-1	59
0302	Fuel Transfer Pump (M939A2).....	60-1	60
0304	Air Cleaner Indicator and Related Parts.....	61-1	61
0304	Air Intake System (M939, M939A1).....	62-1	62
0304	Air Intake System (M939A2).....	63-1	63
0305	Turbocharger Hoses and Clamps (M939A2).....	64-1	64
0305	Turbocharger Assembly (M939A2).....	65-1	65
0306	Fuel Crossover, Drain, and Bypass Tubing	66-1	66
0306	Fuel Tank Mounting, Single Tank, L.H.....	67-1	67
0306	Fuel Tank Mounting, Single Tank, R.H.....	68-1	68
0306	Fuel Tank Mounting, Dual Tank	69-1	69
0306	Fuel Tank Vent Lines, Single, L.H.....	70-1	70
0306	Fuel Tank Supply and Return Lines, Single, L.H. (M939, M939A1)	71-1	71
0306	Fuel Tank Supply and Return Lines, Single, L.H. (M939A2)	72-1	72
0306	Fuel Tank Vent Lines, Single, R.H.....	73-1	73
0306	Fuel Tank Supply and Return Lines, Single, R.H.....	74-1	74
0306	Fuel Tank Supply and Return Lines, Dual.....	75-1	75
0306	Fuel Tank Lines, Dual, L.H	76-1	76
0306	Fuel Tank Selector Valve to R H. Fuel Tank Lines, Dual	77-1	77
0306	Dual Fuel Tank Supply and Return Lines (M939A2).....	78-1	78
0306	Fuel Tank Fuel Lines to L.H. Tank, Wrecker	79-1	79
0306	Dual Fuel Tank Fuel Lines to R.H. Tank, Wrecker	80-1	80
0306	Fuel Tank Selector Valve Assembly and Related Parts	81-1	81
0306	Fuel Tank Assembly	82-1	82
0306	Fuel Tank Protector Plate and Mounting Hardware.....	83-1	83
0308	Fuel Pump Governor, AFC (M939, M939A1).....	84-1	84
0308	Fuel Pump Spring Pack, AFC (M939, M939A1).....	85-1	85
0308	Fuel Pump Governor, VS (M939, M939A1).....	86-1	86
0308	Fuel Pump Lower Spring Pack, VS (M939, M939A1).....	87-1	87
0308	Fuel Pump Upper Spring Pack, VS (M939, M939A1).....	88-1	88
0308	Manifold Pressure Compensator Assembly and Related Parts (M939A2).....	89-1	89
0308	Governor Cover and Related Parts (M939A2).....	90-1	90
0308	Flyweight Assembly (M939A2).....	91-1	91
0308	Governor Housing (M939A2).....	92-1	92
0309	Fuel Filter, Water Separator, and Mounting Hardware (M939, M939A1).....	93-1	93
0309	Fuel Filter/Water Separator (M939A2)	94-1	94
0309	Fuel Pump Filter, AFC (M939, M939A1)	95-1	95
0309	Fuel Pump Filter, VS (M939, M939A1)	96-1	96

TABLE OF CONTENTS (Cont'd)

		Page	Illus Figure
	0311 Ether Start Cylinder, Switch, and Related Lines and Fittings..	97-1	97
	0311 Atomizer Nozzle (M939A2)	98-1	98
	0311 Fuel Primer Pump	99-1	99
	0312 Accelerator Controls and Linkage (M939, M939A1).....	100-1	100
	0312 Accelerator and Throttle Linkage (M939A2)	101-1	101
Group 04	EXHAUST SYSTEM	102-1	102
	0401 Muffler, Exhaust Pipes, and Related Parts.....	102-1	102
	0401 Exhaust System (M939A2).....	103-1	103
Group 05	COOLING SYSTEM	104-1	104
	0501 Radiator Hoses and Mounting Hardware (M939, M939A1)	104-1	104
	0501 Upper Radiator Mounting Hardware and Hoses (M939, M939A1).....	105-1	105
	0501 Lower Radiator Mounting Hardware (M939, M939A1)	106-1	106
	0501 Radiator Assembly and Mounting Hardware (M939A2).....	107-1	107
	0501 Radiator Assembly.....	108-1	108
	0501 Surge Tank Assembly, Hoses, and Mounting Hardware (M939, M939A1).....	109-1	109
	0501 Surge Tank Assembly (M939A2).....	110-1	110
	0501 Surge Tank Lines and Clamps (M939A2)	111-1	111
	0502 Shroud Assembly and Mounting Hardware (M939, M939A1)	112-1	112
	0502 Radiator Fan Shroud (M939A2)	113-1	113
	0503 Thermostat, Housing, Seal, and Mounting Hardware (M939, M939A1).....	114-1	114
	0503 Thermostat and Housing Assembly (M939A2)	115-1	115
	0503 Water Manifold, Cover, and Mounting Hardware (M939, M939A1).....	116-1	116
	0503 Air Compressor Coolant Lines and Related Parts (M1939, M939A1)	117-1	117
	0504 Water Pump Assembly, Seals, and Mounting Hardware (M939, M939A1).....	118-1	118
	0504 Water Pump (M939A2).....	119-1	119
	0505 Fan Clutch Assembly, Fan, and Belts (M939, M939A1).....	120-1	120
	0505 Fan Assembly (M939A2).....	121-1	121
	0505 Fan Drive Clutch Assembly (M939A2)	122-1	122
	0505 Belt Tensioner Pulley (M939A2).....	123-1	123
	0507 Engine Aftercooler (M939A2).....	124-1	124
Group 06	ELECTRICAL SYSTEM.....	125-1	125
	0601 Alternator Assembly, Mounting Hardware, Belts, and Pulley (M939, M939A1)	125-1	125
	0601 Alternator Mounting (M939A2).....	126-1	126
	0603 Starting Motor Assembly and Mounting Hardware (M939, M939A1).....	127-1	127
	0603 Starter Assembly (M939A2).....	128-1	128
	0606 Shutdown Valve and Mounting Hardware (M939, M939A1) ..	129-1	129
	0606 Throttle Control Solenoid (M939A2)	130-1	130
	0607 Control Panel, Light Switch, and Fuel Tank Selector Switch	131-1	131
	0607 Instrument Cluster Assembly	132-1	132
	0607 Instrument Cluster Assembly (M939A2).....	133-1	133
	0607 Instrument Panel, Floodlight, Heater, Warning Switches, Lamp Holder, and Auxiliary Receptacle	134-1	134
	0607 Circuit Breakers(M939, M939A1)	135-1	135
	0607 Control Unit and Directional Flasher	136-1	136
	0607 Protective Control Box, High Beam Switch, and Mounting Hardware	137-1	137
	0608 CTIS Electrical Wiring Harness (M939A2).....	138-1	138
	0609 Taillight Assembly and Mounting Hardware	139-1	139

TABLE OF CONTENTS (Cont'd)

		Page	Illus Figure
0609	Front Composite Light and Mounting Hardware.....	140-1	140
0609	Blackout Lamp and Headlight	141-1	141
0609	Taillight and Blackout Light Brackets and Mounting Hardware.....	142-1	142
0609	Side Marker Lights, Brackets, and Mounting Hardware.....	143-1	143
0609	Floodlight Assembly.....	144-1	144
0610	Fuel Pressure Transducer and Support, Fuel Level Transmitter, Parking Brake, and Warning Control Device	145-1	145
0610	Low Air Warning Switch, Mechanical Tachometer, Transmission Temperature Transmitter, Coolant Temperature Sending Unit, Oil Pressure Transmitter, and Stoplight Switch.....	146-1	146
0610	Temperature Transmitter and Tachometer Pulse Sender (M939A2).....	147-1	147
0611	Horn Assembly, Related Tubing, and Mounting Bracket	148-1	148
0611	Horn Button and Diode Coupling Assembly	149-1	149
0611	Horn Cover, Brush, and Capacitor Assembly	150-1	150
0612	Batteries, Cables, and Related Parts	151-1	151
0612	Battery Cables (M939A2)	152-1	152
0612	Battery Box Assembly, Cover, and Mounting Hardware	153-1	153
0612	Slave Receptacle, Cable Assemblies, and Mounting Hardware.....	154-1	154
0613	Electrical Ground Straps (M939, M939A1).....	155-1	155
0613	Electrical Ground Straps (M939A2).....	156-1	156
0613	Harness Assembly, Front Vehicle Lights.....	157-1	157
0613	Front Wiring Harness, Assembly.....	158-1	158
0613	Front Wiring Harness, Partial View.....	159-1	159
0613	Front Wiring Harness, Partial View (M939A2)	160-1	160
0613	Front Wiring Harness Clamps and Hardware	161-1	161
0613	Front Wiring Harness Clamps and Hardware	162-1	162
0613	Front Wiring Harness Bracket and Hardware	163-1	163
0613	Rear Wiring Harness Assembly, Cargo.....	164-1	164
0613	Rear Wiring Harness Assembly, Wrecker	165-1	165
0613	Rear Wiring Harness Assembly, Dump.....	166-1	166
0613	Rear Wiring Harness Assembly, Tractor	167-1	167
0613	Rear Wiring Harness Assembly, Van.....	168-1	168
0613	Rear Wiring Harness Assembly, Chassis.....	169-1	169
0613	Crane Wiring Leads	170-1	170
0613	Wrecker Crane Boom Wiring Harness.....	171-1	171
0613	Side Marker Light Leads.....	172-1	172
0613	Side Marker Light Leads.....	173-1	173
0613	Instrument Cluster Harness	174-1	174
Group 07	TRANSMISSION	176-1	176
0700	Transmission Assembly and Shipping Container.....	176-1	176
0700	Transmission Mounting Hardware, Fluid Dipstick, and Tube Assembly (M939, M939A1)	177-1	177
0700	Transmission Mounting Bracket (M939A2).....	178-1	178
0700	Transmission Dipstick Tube (M939A2)	179-1	179
0705	Transmission Shift Quadrant Control Cable and Neutral Safety Switch (M939, M939A1).....	180-1	180
0705	Transmission Shift Control Cable and Related Parts (M939A2).....	181-1	181
0705	Wrecker Governor Piping and Capacitor Assembly	182-1	182
0705	Transmission Modulator and Cable Assembly (M939, M939A1)	183-1	183
0705	Transmission Modulator and Cable Assembly (M939A2)	184-1	184
0708	Torque Converter and Lockup Clutch.....	185-1	185
0710	Adapter Housing and Low Planetary Carrier Assembly.....	186-1	186
0710	Housing Assembly and Forward Clutch.....	187-1	187

TABLE OF CONTENTS (Cont'd)

		Illus Page	Figure
	0710 Main Shaft and Carrier Assembly.....	188-1	188
	0710 Transmission Housing, Oil Filter, Oil Pan, and Mounting Hardware	189-1	189
	0710 Rear Cover Assembly and Related Parts.....	190-1	190
	0713 First Clutch.....	191-1	191
	0713 Second, Third, and Fourth Clutch Assembly, and Center Support (Transmission P/N 6885292).....	192-1	192
	0713 Second, Third, and Fourth Clutch Assembly, and Center Support (Transmission P/N 23040127).....	193-1	193
	0713 Low Clutch	194-1	194
	0714 Control Valve Assembly and Mounting Hardware.....	195-1	195
	0714 Modulated Lockup Valve and Mounting Hardware.....	196-1	196
	0714 Low Shift Signal Valve, Low Trimmer Valve, and Mounting Hardware	197-1	197
	0714 Transmission Tubing, Governor, and Filter Assembly.....	198-1	198
	0721 Transmission Vent Line	199-1	199
	0721 Oil Pump and Front Support Assembly (Transmission P/N 6885292)	200-1	200
	0721 Oil Pump and Front Support Assembly (Transmission P/N 23040127).....	201-1	201
	0721 Transmission Oil Cooler and Mounting Hardware	202-1	202
	0721 Transmission Oil Cooler and Fittings	203-1	203
	0721 Oil Hoses, Filter, and Mounting Hardware (M939, M939A1)	204-1	204
	0721 Oil Hoses (M939A2)	205-1	205
Group 08	TRANSFER CASE ASSEMBLY	206-1	206
	0800 Transfer Case and Shipping Container.....	206-1	206
	0801 Transfer Case Mounting Hardware, Housing, Flanges, and Speedometer Drive	207-1	207
	0801 Transfer Case Housing, Output Shaft, and Cover.....	208-1	208
	0801 Transfer Housing Input and Intermediate Drive Shafts.....	209-1	209
	0802 Transfer Clutch Assembly and Synchronizer Assemble.....	210-1	210
	0803 Transfer Controls	211-1	211
	0803 Transfer Air Control Lines	212-1	212
	0803 Transfer Air-Actuated Controls and Interlock Valve.....	213-1	213
	0803 Transfer Air-Actuated Controls and Manifold Fittings	214-1	214
	0803 Transfer Air-Actuated Controls.....	215-1	215
	0803 Transfer Shift Mechanisms	216-1	216
	0804 Transfer Oil Pump and Related Parts	217-1	217
Group 09	PROPELLER SHAFTS AND UNIVERSAL JOINTS	218-1	218
	0900 Propeller Shaft Assembly, Front Axle to Transfer Shaft (Dana) (M939, M939A1)	218-1	218
	0900 Propeller Shaft Assembly, Front Axle to Transfer Shaft (Rockwell) (M939, M939A1).....	219-1	219
	0900 Propeller Shaft Assembly, Transfer to Front Axle Shaft (Dana) (M939, M939A1).....	220-1	220
	0900 Propeller Shaft Assembly, Transfer to Front Axle Shaft (Rockwell) (M939, M939A1).....	221-1	221
	0900 Propeller Shaft Assembly, Transfer to Front Axle Shaft (M939A2).....	222-1	222
	0900 Propeller Shaft Assembly, Transmission to Transfer (M939, M939A1).....	223-1	223

TABLE OF CONTENTS (Cont'd)

		Page	Illus Figure
	0900 Propeller Shaft Assembly, Transmission to Transfer (M939A2).....	224-1	224
	0900 Propeller Shaft Assembly, Transfer to Forward Rear Axle (Longwheel Base).....	225-1	225
	0900 Propeller Shaft Assembly, Forward Rear Axle to Forward Rear Axle (Short Wheelbase).....	226-1	226
	0900 Propeller Shaft Assembly, Transfer to Forward Rear Axle (X-Long Wheelbase)	227-1	227
	0900 Propeller Shaft Assembly, Forward Rear Axle to Rear Rear Axle (Dana).....	228-1	228
	0900 Propeller Shaft Assembly, Forward Rear Axle to Rear Rear Axle (Rockwell).....	229-1	229
Group 10	FRONT AXLE	230-1	230
	1000 Front Axle and Housing Assembly (M939, M939A1).....	230-1	230
	1000 Front Axle and Housing Assembly (M939A2)	231-1	231
	1002 Front Axle Differential Assembly	232-1	232
	1002 Front Axle Differential Carrier Assembly, Access Covers, and Related Parts	233-1	233
	1002 Front Axle Differential Through Shaft, Gears, and Flange Assemblies.....	234-1	234
	1002 Front Axle Differential Helical Drive Pinion and Related Parts	235-1	235
	1004 Spindle Shaft Assembly, Universal Shaft, and Knuckle Assembly	236-1	236
Group 11	REAR AXLE	237-1	237
	1100 Forward Rear and Rear Rear Axle Assemblies (M939, M939A1).....	237-1	237
	1100 Forward Rear and Rear Rear Axle Assemblies (M939A2).....	238-1	238
	1102 Rear Axle Differential Assembly and Mounting Hardware	239-1	239
	1102 Rear Axle Differential Carrier Assembly, Access Cover, and Related Parts.....	240-1	240
	1102 Rear Axle differential Through Shaft, Gears, and Flange Assemblies.....	241-1	241
	1102 Rear Axle Differential Helical Drive Pinion and Related Parts.....	242-1	242
Group 12	BRAKES	243-1	243
	1201 Parking Brake Lever Assembly, Cable, and Mounting Hardware	243-1	243
	1201 Parking Brake Shoe Assembly, Drum, Dust Shield, and Related Parts.....	244-1	244
	1202 Front Axle Brake and Spider Assembly	245-1	245
	1202 Rear Axle Brake and Spider Assembly	246-1	246
	1202 Service Brake Mounting Plate (M939A2)	247-1	247
	1206 Treadle Valve Assembly.....	248-1	248
	1206 Treadle Valve Assembly, Basic.....	249-1	249
	1208 Air Chambers, Front and Rear Brakes.....	250-1	250
	1208 Rear Axle Fail-safe Brake Chamber Assembly.....	251-1	251
	1208 Front Service Half Coupling, Air Brake Valve, and Related Parts.....	252-1	252
	1208 Air Control Lines, Front Service Check Valve to Brake Chambers	253-1	253
	1208 Double-check Valves and Related Service Air Lines.....	254-1	254
	1208 Rear Service Half Coupling and Mounting Hardware	255-1	255
	1208 Quick Release Valve, Air Brake Valves, and Related Lines	256-1	256
	1208 Treadle Valve to Secondary Relay Valve and Primary Relay Valve to Half Coupling Lines	257-1	257
	1208 Primary and Secondary Relay Valve, Mounting Hardware, and Related Lines	258-1	258

TABLE OF CONTENTS (Cont'd)

		Page	Illus Figure
1208	Forward Rear Axle Air Brake Chamber Control Lines and Mounting Hardware.....	259-1	259
1208	Rear Rear Axle Air Brake Chamber Control Lines and Mounting Hardware.....	260-1	260
1208	Front Emergency Half Coupling and Related Lines	261-1	261
1208	Rear Emergency Half Couplings and Mounting Hardware	262-1	262
1208	Air Compressor to Wet Reservoir Air Supply Lines	263-1	263
1208	Primary, Secondary, Wet Reservoirs, and Related Lines	264-1	264
1208	Air Tank Reservoirs, Drainvalves, and Related Lines	265-1	265
1208	Spring Brake Reservoir, Mounting Hardware, Spring Brake Release Valve, and Related Air Supply Lines	266-1	266
1208	Air Supply Lines, Double-check Valve to Coupling to Push-Pull Valve, and Supply Line Quick Release Valve to Tee to Fail-Safe Tee	267-1	267
1208	Fail-safe Air Brake Chamber Lines	268-1	268
1208	Air Supply Lines, Treadle Valve to Primary and Secondary Air Tanks, and Relay Valves	269-1	269
1208	Dash Control Air Supply Lines, Spring Brake Control Valve to Primary and Secondary Air Reservoirs	270-1	270
1208	Treadle Valve to Quick Release Valve and Air Intake Tubing	271-1	271
1208	Front Brake Chamber Vent Lines and Limiting Valve.....	272-1	272
1208	Vent Lines, Air Intake Manifold to Primary and Secondary Relay Valves, and Rear Axle Vent Lines.....	273-1	273
1208	Secondary Vent Lines, Rear Axle Brake Chambers to Fail-safe Brake Chamber.....	274-1	274
1208	Primary Vent Lines, Rear Axle Air Brake.....	275-1	275
1208	Alcohol Evaporator and Air Compressor to Air Governor Lines	276-1	276
1208	Clutch Fan Actuator and Related Air Lines	277-1	277
1208	Pressure Regulator, Double-check Valves, and Air Lines	278-1	278
1208	Brake Lock Valve and Air Lines	279-1	279
1208	Front Air Brake Chamber Valve Assembly	280-1	280
1208	Rear Brake Relay Valve Assembly.....	281-1	281
1208	Air Brake Governor Assembly and Mounting Hardware	282-1	282
1208	Spring Brake Release Control Valve Assembly.....	283-1	283
1209	Air Compressor Assembly (M939, M939A1).....	284-1	284
1209	Air Compressor Mounting and Lines (M939A2)	285-1	285
1209	Air Compressor Assembly (M939A2).....	286-1	286
1209	Air Compressor Lines (M939A2).....	287-1	287
1211	Trailer Brake Control Valve, Hand Valve, and Related Lines	288-1	288
1211	Trailer Air Supply Valve Assembly.....	289-1	289
1211	Tractor Protection Valve, Double-check Valve, and Trailer Service Air Lines	290-1	290
1211	Trailer Brake Lines, Emergency and Service Couplings, and Related Lines	291-1	291
Group 13	WHEELS.....	292-1	292
1311	Wheel Assembly.....	292-1	292
1311	Front Wheel Hub and Drum Assembly (M939, M939A1).....	293-1	293
1311	Front Wheel Hub and Drum Assembly (M939A2).....	294-1	294
1311	Rear Wheel Hub and Drum Assembly (M939, M939A1).....	295-1	295
1311	Rear Wheel Hub and Drum Assembly (M939A2).....	296-1	296
1311	Front Axle Wheel Valve Installation (M939A2).....	297-1	297
1311	Wheel Valve Assembly (M939A2)	298-1	298
1311	Rear Axle Wheel Valve Assembly (M939A2).....	299-1	299
1313	Tire and Tube Assembly.....	300-1	300

TABLE OF CONTENTS (Cont'd)

		Page	Illus Figure
Group 14	STEERING.....	301-1	301
	1401 Steering Column, Wheel, and Propeller Shaft	301-1	301
	1401 Stone Shield and Pitman Arm	302-1	302
	1401 Tie Rod Assemblies	303-1	303
	1407 Steering Gear Assembly and Mounting Hardware	304-1	304
	1407 Steering Gear Sector Shaft and Housing Assembly (M939, M939A1)	305-1	305
	1407 Steering Gear, Worm, and Valve (M939, M939A1)	306-1	306
	1407 Sheppard Steering Gear Assembly and Mounting Hardware	307-1	307
	1407 Steering Gear Sector Shaft and Housing Assembly	308-1	308
	1407 Steering Gear, Worm, and, Valve (M939A2)	309-1	309
	1410 Power Steering Pump Assembly, Pulley Assembly, Mounting Hardware, and Belts	310-1	310
	1410 Power Steering Pump Assembly (M939, M939A1)	311-1	311
	1410 Power Steering Pump Assembly (M939A2)	312-1	312
	1411 Power Steering Hydraulic Lines and Fittings	313-1	313
	1411 Power Steering Hydraulic Lines and Fittings (cont'd)	314-1	314
	1411 Power Steering Oil Cooler, Hydraulic Lines, and Fittings (M939A2)	315-1	315
	1412 Tie Rod End, Steering Cylinder Assembly, and Booster Shield.. ..	316-1	316
	1412 Power Steering Cylinder Assembly	317-1	317
Group 15	FRAME AND TOWING ATTACHMENTS	318-1	318
	1501 Frame Assembly, Standard Cargo, and Dropside Cargo	318-1	318
	1501 Frame Assembly, Dump	319-1	319
	1501 Frame Assembly, Wrecker	320-1	320
	1501 Frame Assembly, Van	321-1	321
	1501 Frame Assembly, Tractor	322-1	322
	1501 Frame Assembly, Long Wheel Base Cargo	323-1	323
	1501 Frame Assembly, Chassis (M939)	324-1	324
	1501 Frame Assembly (M939A2)	325-1	325
	1501 Front Bumper, Lifting Shackle, Hood Latch, and Mounting Hardware	326-1	326
	1501 Rear Bumperette and Shackle Assembly	327-1	327
	1501 Front and Rear Field Clock Anchors (M939, M939A1)	328-1	328
	1503 Pintle Hook Assembly	329-1	329
	1503 Towing Pintle Mounting Brackets, Tractor	330-1	330
	1503 Towing Pintle Mounting Brackets, Dump	331-1	331
	1503 Towing Pintle Mounting Brackets	332-1	332
	1504 Spare Wheel Carrier, Dump (M939)	333-1	333
	1504 Spare Wheel Carrier, Dump (M939A1, M939A2)	334-1	334
	1504 Spare Wheel Carrier, Cargo and Van (M939)	335-1	335
	1504 Spare Wheel Carrier, Cargo and Van (M939A1, M939A2)	336-1	336
	1504 Spare Wheel Carrier, Tractor (M939)	337-1	337
	1504 Spare Wheel Carrier, Tractor (M939A1, M939A2)	338-1	338
	1504 Lifting Device and Davit Assemblies (M939, M939A1) ..	339-1	339
	1504 Davit Assembly, Spare Wheel Carrier (M939A1, M939A2)	340-1	340
	1504 Spare Wheel Davit and Winch Assembly, Van (M939, M939A1)	341-1	341
	1504 Spare Wheel Carrier, Wrecker (M939)	342-1	342
	1506 Fifth Wheel Assembly and Mounting Plates (M939, M939A1)	343-1	343
	1506 Fifth Wheel Assembly, Basic Leveling Wedge, and Subbase	344-1	344
	1506 Fifth Wheel Assembly, Basic	345-1	345

TABLE OF CONTENTS (Cont'd)

		Page	Illus Figure
Group 16	SPRINGS AND SHOCKS.....	346-1	346
	1601 Front Leaf Spring Assembly and Related Parts.....	346-1	346
	1601 Rear Leaf Spring Mounting Hardware.....	347-1	347
	1601 Rear Leaf Spring and Seat Assemblies	348-1	348
	1604 Shock Absorber and Mounting Hardware.....	349-1	349
	1605 Torque Rod and Mounting Hardware.....	350-1	350
Group 18	BODY, CAB, AND HOOD.....	351-1	351
	1801 Front Guard Assembly and Hood Mounting Hardware	351-1	351
	1801 Radiator Baffle Assemblies and Mounting Hardware	352-1	352
	1801 Hood and Related Parts	353-1	353
	1801 Hood Support and Stop Cables.....	354-1	354
	1801 Splash Guard Assembly and Related Parts, L.H.....	355-1	355
	1801 Splash Guard Assembly and Related Parts, R.H.....	356-1	356
	1801 Splash Panel Extension (M939A2).....	357-1	357
	1801 Cab Assembly Mounting Hardware	358-1	358
	1801 Cab Body Assembly and Related Parts	359-1	359
	1801 Basic Cab Assembly and Engine Cover (M939A2)	360-1	360
	1801 Door Assemblies, Machine Gun Mounting Bracket, and Related Parts	361-1	361
	1801 Door, Cab Assembly	362-1	362
	1801 Window Frame Assembly, Cab Door.....	363-1	363
	1802 Fender, Fender Extension, and Splash Panel Assemblies	364-1	364
	1802 Splash Guards, Dump	365-1	365
	1802 Windshield Assembly and Mounting Hardware.....	366-1	366
	1802 Windshield and Frame Assemblies	367-1	367
	1802 Running Board, Step, and Mounting Hardware	368-1	368
	1805 Transmission Access Door and Spring Brake Plate.....	369-1	369
	1806 Operator's Seat Assembly	370-1	370
	1806 Companion Seat Assembly	371-1	371
	1806 Cab and Hood Insulation.....	372-1	372
	1806 Cab Insulation (M939A2)	373-1	373
	1808 Toolbox, Step Assembly, and Mounting Hardware	374-1	374
	1808 Map Compartment and Mounting Hardware.....	375-1	375
	1808 Toolbox Fuel Can Bracket and Mounting Hardware.....	376-1	376
	1808 Toolbox and Mounting Hardware, Tractor	377-1	377
	1808 Tool Frame Assembly, Pioneer	378-1	378
	1808 Van Cable Reel, Cable, and Mounting Hardware.....	379-1	379
	1810 Standard Cargo, Dropside Cargo, and Mounting Hardware.....	380-1	380
	1810 Cargo Body, Long Wheel Base Mounting Hardware	381-1	381
	1810 Cargo Body Side Rack and Gate Assemblies, and Troop Seats.....	382-1	382
	1810 Cargo Body Side Gates, Tailgate, and Related Parts, Basic and Dropside.....	383-1	383
	1810 Cargo Body, Tailgate and Side Rack Assemblies, Long Wheel Base	384-1	384
	1810 Cargo Body Personnel Seat Assembly, Side Rack and Gate Assemblies, Dropside	385-1	385
	1810 Cargo Body Assembly, Basic, Side Racks, Tailgate Assembly, and Related Parts	386-1	386
	1810 Cargo Body Rack Assemblies, Troop Seats, Long Wheel Base.....	387-1	387
	1810 Cargo Body Splash Guard Assembly and Related Parts	388-1	388
	1810 Dump Body and Hoist Assembly, Cab Shield, and Mounting Hardware	389-1	389
	1810 Dump Body, Basic, Tailgate, and Related Parts	390-1	390
	1810 Dump Tailgate Controls, Safety Catch, and Related Parts	391-1	391

TABLE OF CONTENTS (Cont'd)

		Page	Illus Figure
1812	Wrecker Crane and Body Assembly.....	392-1	392
1812	Wrecker Crane and Body Mounting Hardware	393-1	393
1812	Wrecker Crane and Body Floor Plate, Cover, and Housing Assembly	394-1	394
1812	Wrecker Body Assembly	395-1	395
1812	Wrecker Strap and Welding Tank Straps	396-1	396
1812	Wrecker Splash Guards	397-1	397
1812	Wrecker Outrigger Jack Assembly and Related Parts.....	398-1	398
1812	Wrecker Fuel Can Bracket and Fire Extinguisher Bracket	399-1	399
1812	Van Body Assembly and Mounting Hardware.....	400-1	400
1812	Van Body Splash Guard Assemblies	401-1	401
1812	Van Side Lock Handle, Lifting Brackets, Rod Retainer, and Related Parts.....	402-1	402
1812	Van Rear Wall Panels and Mounting Hardware.....	403-1	403
1812	Van Hinged End Panel Assemblies	404-1	404
1812	Van Body Door Assembly, Left Rear	405-1	405
1812	Van Body Door Assembly, Right Rear	406-1	406
1812	Van Sash Assembly, Rear Doors	407-1	407
1812	Van Underframe Assembly.....	408-1	408
1812	Van Retractable Beams, Ratchet Shaft, and Rollers	409-1	409
1812	Van Hinged Floor Assembly	410-1	410
1812	Van Body Counterbalance Assembly and Mounting Hardware..	411-1	411
1812	Van Side Assemblies, Right and Left Side	412-1	412
1812	Van Interior Side Panels, Right and Left Side.....	413-1	413
1812	Van Side Panel Door Checks, Interior Latch Assemblies, and Related Parts, Right and Left Side	414-1	414
1812	Van Retractable Window Sash Assembly and Related Parts, Right and Left Side.....	415-1	415
1812	Van Body Door Assemblies, Right and Left Side	416-1	416
1812	Van Interior and Exterior Ceiling, Frame, and Related Parts	417-1	417
1812	Van Air Conditioning Duct and Related Parts.....	418-1	418
1812	Van Hinged Roof Assembly, Latch, and Related Parts, Right and Left Side.....	419-1	419
1812	Van Hinged Roof Assembly, Holder Assemblies, Panels, and Related Parts.....	420-1	420
1812	Van Front Wall and Fire Extinguisher Bracket	421-1	421
1812	Van Heater Fuel Pump, Cover, Lines, and Fittings	422-1	422
1812	Van Heater Fuel Pump, Lines, and Fittings	423-1	423
1812	Van Bonnet Frame and Related Parts	424-1	424
1812	Van Heater, Exhaust, and Vent Door Controls	425-1	425
1812	Van Air Conditioner, Drain Tube, and Mounting Hardware.....	426-1	426
1812	Van Bonnet Access Door Assembly	427-1	427
1812	Van Bonnet Door Assembly, Right and Left Side.....	428-1	428
1812	Van Main Wiring Harness Mounting Hardware	429-1	429
1812	Van Main Wiring Harness, Right and Left Side.....	430-1	430
1812	Van Air Conditioning and Heater Wiring Harnesses.....	431-1	431
1812	Van Heater Fuel Pump and Circuit Breaker Harnesses	432-1	432
1812	Van Blackout By-Pass and 10IKW Electric Heater Wiring Harnesses	433-1	433
1812	Van Blackout and Clearance Light Wiring Harness.....	434-1	434
1812	Van Blackout Wiring Harness, Right and Left Side	435-1	435
1812	Van Emergency Lamp Wiring Harness, Right and Left Side.....	436-1	436
1812	Van Auxiliary Hydraulic Pump and 400Hz Converter Wiring Harnesses	437-1	437

TABLE OF CONTENTS (Cont'd)

		Page	Illus Figure
1812	Van Auxiliary Hydraulic Pump and 400Hz Converter Wiring Harnesses	438-1	438
1812	Van 400Hz Wiring Harness	439-1	439
1812	Van Telephone Jack and 3-Phase Receptacle Harness.....	440-1	440
1812	Van Electrical Load Center and Mounting Hardware.....	441-1	441
1812	Van Electrical Junction Box and Related Parts	442-1	442
1812	Van 400Hz Converter Junction Box, Auxiliary Hydraulic Pump, Electrical Connector Box, and Related Parts	443-1	443
1812	Van Circuit Breakers, Control Box, and Related Parts	444-1	444
1812	Van 400Hz Converter, Circuit Breaker, and Mounting Hardware	445-1	445
1812	Van Heater Thermostatic Switch and Fluorescent Starter	446-1	446
1812	Van Telephone Jack and Related Parts, Interior and Exterior.....	447-1	447
1812	Van Hinged Roof Plunger and Blackout Light Switch.....	448-1	448
1812	Van 3-Phase and 400Hz Receptacles	449-1	449
1812	Van Ceiling Switch, Front Wall Switch, Receptacle Assembly, and Related Parts	450-1	450
1812	Van Blackout and Emergency Switches.....	451-1	451
1812	Van Blackout and Emergency Lamps	452-1	452
1812	Van Ceiling Lamp Fixtures and Bulb	453-1	453
Group 20	HOIST, WINCH, AND POWER TAKEOFF	454-1	454
2001	Front Winch Controls and Mounting Hardware	454-1	454
2001	P.T.O. and Winch Controls	455-1	455
2001	Front Winch Pump, Linear Valve, and Related Hoses.....	456-1	456
2001	Front Winch Filter and Reservoir Assembly	457-1	457
2001	Front Winch Reservoir Assembly and Mounting Hardware.....	458-1	458
2001	Winch Pump Drive, Hydraulic Tubing	459-1	459
2001	Front Winch Pump, Linear Valve, Related Hoses and Fittings, Wrecker	460-1	460
2001	Front Winch Pump, Linear Valve, Related Hoses and Fittings, Dump.....	461-1	461
2001	Front Winch Pump Assembly.....	462-1	462
2001	Front Winch Linear Valve Assembly.....	463-1	463
2001	Front Winch Linear Valve Assembly, Dump	464-1	464
2001	Front Winch Propeller Driveshaft Assembly	465-1	465
2001	Propeller Drive Shaft, Front Winch, and Pump Controls.....	466-1	466
2001	Front Winch Motor and Mounting Hardware.....	467-1	467
2001	Front Winch Brackets and Mounting Hardware	468-1	468
2001	Front Winch Assembly Complete and Wire Rope Assembly, Wrecker	469-1	469
2001	Front Winch Assembly Complete and Wire Rope Assembly.....	470-1	470
2001	Front Winch Sheave Assembly, Wrecker.....	471-1	471
2001	Front Winch Tensioner Assembly, Roller Assembly, and Related Parts.....	472-1	472
2001	Front Winch Basic, Drum and Related Parts	473-1	473
2001	Front Winch Basic, Gear Case and Related Parts	474-1	474
2001	Wrecker Tackle Block and Wire Rope Assembly.....	475-1	475
2001	Wrecker Rear Winch Vertical Roller and Mounting Hardware.....	476-1	476
2001	Wrecker Rear Winch Horizontal Roller and Mounting Hardware	477-1	477
2001	Wrecker Hydraulic Oil Tank Assembly and Mounting Hardware	478-1	478
2001	Wrecker Hydraulic Fluid Filter Assembly.....	479-1	479
2001	Wrecker Hydraulic Tubing, Swivel to Elevating Cylinder and Control Valve.....	480-1	480
2001	Wrecker Hydraulic Tubing, Control Valve to Hoist Motor.....	481-1	481
2001	Wrecker Hydraulic Tubing, Control Valve to Elevating Cylinder and Filter to Elevating Cylinder	482-1	482

TABLE OF CONTENTS (Cont'd)

		Page	Illus Figure
2001	Wrecker Hoist Hydraulic Winch Motor and Crane Motor Assembly	483-1	483
2001	Wrecker Crane Gearcase Assembly and Mounting Hardware.....	484-1	484
2001	Wrecker Crane Boom Elevating Cylinder Assembly.....	485-1	485
2001	Wrecker Sheave and Operator Guard	486-1	486
2001	Wrecker Boom Assembly	487-1	487
2001	Crane Hoist Winch and Mounting Hardware.....	488-1	488
2001	Wrecker Boom Hoist Winch Housing, Worm Gear, and Brake.....	489-1	489
2001	Wrecker Inner Boom Extension Assembly	490-1	490
2001	Wrecker Inner Boom Extension Cylinder Assembly	491-1	491
2001	Crane Gondola Assembly, Warning Light and Instruction Plate.	492-1	492
2001	Gondola Hoist Control Valve Assembly	493-1	493
2001	Crane Gondola Control Valve Assembly, Basic.....	494-1	494
2001	Wrecker Turntable Assembly.....	495-1	495
2001	Crane Hydraulic Swivel Assembly	496-1	496
2001	Crane Support, Turntable, and Bearing Guard.....	497-1	497
2001	Wrecker Rear Winch Tensioner Chamber Assembly	498-1	498
2001	Wrecker Rear Winch Assembly Complete and Wire Rope Assembly	499-1	499
2001	Wrecker Rear Winch Sheave Swivel and Trolley	500-1	500
2001	Wrecker Rear Winch Cable Tensioner.....	501-1	501
2001	Wrecker Rear Winch Assembly, Basic	502-1	502
2001	Wrecker Rear Winch Hydraulic Tubing and Control Valves	503-1	503
2001	Wrecker Rear Winch Hydraulic Tubing, Control Valves, and Motor	504-1	504
2001	Wrecker Rear Winch Hydraulic Tubing and Controls	505-1	505
2001	Wrecker Hydraulic Pump and Drive Shaft	506-1	506
2001	Dump Hydraulic Hoist Assembly.....	507-1	507
2001	Dump Hoist Safety Latch Assembly, Hoses, and Filter	508-1	508
2001	Dump Control Pump, Valve, and Related Parts.....	509-1	509
2001	Dump Control Pump Assembly	510-1	510
2001	Dump Control Valve Assembly.....	511-1	511
2001	Dump Control Propeller Drive Shaft Assembly	512-1	512
2001	Dump Controls, Lever Assembly, Cable, and Mounting Hardware	513-1	513
2001	Van Hydraulic Liftgate Assembly and Mounting Hardware	514-1	514
2001	Liftgate Platform Assembly and Hinge Plate.....	515-1	515
2001	Liftgate Frame and Linkage	516-1	516
2001	Liftgate Controls and Safety Latch.....	517-1	517
2001	Liftgate Control Assembly, L.H. and R.H.....	518-1	518
2001	Liftgate Hydraulic Tubing, Oil Tank, and Pump Motor.....	519-1	519
2001	Liftgate Pump Assembly.....	520-1	520
2001	Liftgate Hydraulic Tubing and Flow Control Valve.....	521-1	521
2001	Liftgate Cylinder Assembly and Mounting Hardware.....	522-1	522
2001	Liftgate Closing Cylinder Assemblies.....	523-1	523
2001	Liftgate Pump Drive Shafts	524-1	524
2004	Power Takeoff Controls, Lever Assembly, Cable Mounting Hardware	525-1	525
2004	Transfer Power Takeoff Assembly and Related Parts.....	526-1	526
2004	Transfer Power Takeoff Main Shaft and Drive Couplings	527-1	527
2004	Transmission Power Takeoff Shift Controls.....	528-1	528
2004	Transmission P.T.O. Assembly (M939A2).....	529-1	529
2004	Transmission Power Takeoff Assembly	530-1	530

TABLE OF CONTENTS (Cont'd)

		Page	Illus Figure
Group 22	BODY AND CHASSIS ACCESSORY ITEMS.....	531-1	531
	2201 Wrecker Gondola Canopy and Seat	531-1	531
	2201 Cargo Bow and Stake Assembly and Related Parts	532-1	532
	2201 Soft Top Assembly and Related Parts	533-1	533
	2201 Soft Top Post Assembly	534-1	534
	2201 Tarpaulin Extension Kit, LWB Cargo	535-1	535
	2201 Splash Guard Assemblies	536-1	536
	2201 Adjustable Safety Strap and Bow Stowage Strap	537-1	537
	2202 Windshield Wiper Air Lines and Control Assembly	538-1	538
	2202 Windshield Wiper Arm, Blade, and Motor Assembly	539-1	539
	2202 Windshield Wiper Arm, Blade, and Motor Assembly	540-1	540
	2202 Washer Bottle, Jet, and Control Assembly	541-1	541
	2202 Washer Bottle, Jet, and Control Assembly	542-1	542
	2202 Rearview Mirrors.....	543-1	543
	2202 Cargo Body Reflectors and Mounting Hardware.....	544-1	544
	2202 Dump Body Reflectors and Mounting Hardware.....	545-1	545
	2202 Wrecker Body Reflectors and Mounting Hardware	546-1	546
	2202 Tractor Reflectors and Mounting Hardware.....	547-1	547
	2202 Van Body Reflectors and Mounting Hardware.....	548-1	548
	2207 Hot Water Heater, Hoses, Control Assembly, and Mounting Hardware.....	549-1	549
	2207 Hot Water Heater Valve (M939A2)	550-1	550
	2207 Hot Water Heater, Diverter, Air Ducts, and Controls	551-1	551
	2210 Data Plates, Instrument Panel.....	552-1	552
	2210 Data Plates, Engine	553-1	553
	2210 Data Plates, Transmission	554-1	554
	2210 Data Plates, Fuel Pump and Transfer.....	555-1	555
	2210 Engine Data Plates	556-1	556
	2210 Data Plates, Air Cleaner, Radiator, Air Cleaner Indicator, Surge Tank, and Fuel Water Selector.....	557-1	557
	2210 Data Plates, Battery Box, and Generator.....	558-1	558
	2210 Data Plates, Service and Emergency Couplings.....	559-1	559
	2210 Data Plates, Hardtop and Fifth Wheel.....	560-1	560
	2210 Data Plates, Cab, Dump Cab Protector, and Cab Door	561-1	561
	2210 Data Plates, Cargo Body Side Gate and Tailgate.....	562-1	562
	2210 Data Plates, Front and Rear Winches.....	563-1	563
	2210 Data Plates, Hydraulic Reservoir Tank	564-1	564
	2210 Data Plates, Power Takeoff	565-1	565
	2210 Data Plates, Wrecker Body and Gondola.....	566-1	566
	2210 Data Plates, Hydraulic Control Valves and Towbar.....	567-1	567
	2210 Data Plates, Control Box Harness.....	568-1	568
	2210 Data Plates, Transfer, Transmission and Engine Container	569-1	569
	2210 Data Plates, Van Body	570-1	570
	2210 Data Plates, Van Body Interior, Front Wall.....	571-1	571
	2210 Data Plates, Van Body Interior, Rear Wall	572-1	572
	2210 Data Plates, Van Body Ceiling, Left Side	573-1	573
	2210 Data Plates, Van Body Ceiling, Right Side.....	574-1	574
Group 33	SPECIAL PURPOSE KITS	575-1	575
	3301 Engine Container Assembly.....	575-1	575
	3301 Transmission Container Assembly	576-1	576
	3301 Transfer Case Container Assembly.....	577-1	577
	3303 Radiator and Hood Cover Kit	578-1	578
	3303 Hardtop Kit	579-1	579
	3303 Engine Coolant Heater Kit, Heater Control Box, and Wiring Harness.....	580-1	580

TABLE OF CONTENTS (Cont'd)

		Page	Illus Figure
	3303 Engine Coolant Heater Kit, Heater Assembly, Pump, and Related Parts.....	581-1	581
	3303 Engine Coolant Heater Kit, Hoses, Fittings, and Pad Assembly.....	582-1	582
	3303 Engine Coolant Heater Kit, Oil Pan Shroud, and Related Parts	583-1	583
	3303 Engine Coolant Heater Kit, Control Box, and Related Parts	584-1	584
	3303 Engine Coolant Heater Kit, Heater Assembly, Pump Assembly, and Related Parts	585-1	585
	3303 Swingfire Heater Kit, Heater, Cover, and Bracket	586-1	586
	3303 Swingfire Heater Kit, Wiring Harness.....	587-1	587
	3303 Swingfire Heater Kit, Wiring Harness.....	588-1	588
	3303 Swingfire Heater Mounting Kit.....	589-1	589
	3303 Swingfire Heater Mounting Kit.....	590-1	590
	3303 Swingfire Heater Mounting Kit.....	591-1	591
	3303 Fuel Burning Personnel Heater Kit, Control Box, Heater, and Wiring Harness.....	592-1	592
	3303 Fuel Burning Personnel Heater Kit	593-1	593
	3303 Fuel Burning Personnel Heater Kit, Control Box, Heater, and Wiring Harness.....	594-1	594
	3303 Fuel Burning Personnel Heater Kit, Pump, Filter, and Related Parts.....	595-1	595
	3305 Deep Water Fording Kit, Valve Assembly, and Related Parts.....	596-1	596
	3305 Deep Water Fording Kit Air Hoses and Cover Plate.....	597-1	597
	3305 Deep Water Fording Kit, Regulator, Selector, and Related Parts	598-1	598
	3305 Deep Water Fording Kit, Connectors, and Related Parts	599-1	599
	3307 Pioneer Tool Bracket Kit.....	600-1	600
	3307 Rifle Mounting Kit.....	601-1	601
	3307 Lightweight Weapon Station Kit	602-1	602
	3307 Air Brake Kit, Control Valves, and Lines	603-1	603
	3307 Air Brake Kit, Air Lines, and Double-check Valves	604-1	604
	3307 Air Brake Kit, Air Lines, and Tractor Protection Valve	605-1	605
	3307 Chemical Agent Alarm Mounting Kit.....	606-1	606
	3307 A-Frame Components Kit.....	607-1	607
	3307 Alternator Kit, 60 to 100 AIP.....	608-1	608
	3307 Dump Body Troop Seat and Tarpaulin Kit.....	609-1	609
	3307 Fire Extinguisher Kit.....	610-1	610
	3307 Convoy Warning Light Kit	611-1	611
	3307 Convoy Warning Light Kit, Dump	612-1	612
	3307 Convoy Warning Light Kit, Van	613-1	613
	3307 European Light Kit.....	614-1	614
	3307 Seat Belt Kit	615-1	615
	3307 Wrecker Front Counterweight Kit	616-1	616
Group 43	CENTRAL TIRE INFLATION SYSTEI.....	617-1	617
	4316 Exhaust Valve Lines and Fittings, Front	617-1	617
	4316 Exhaust Valve Lines and Fittings, Rear	618-1	618
	4316 CTIS Air Dryer Assembly.....	619-1	619
	4317 Air Dryer Lines and Fittings.....	620-1	620
	4317 Air Dryer Lines and Fittings, Water Separator, and Governor	621-1	621
	4317 Relief Safety Valve Assembly	622-1	622
	4317 Electronic Control Unit and Pneumatic Controller	623-1	623
Group 47	GAUGES.....	624-1	624
	4701 Speedometer Drive Adapter, Cable, and Gauge Assembly	624-1	624
	4701 Tachometer Cable and Gauge Assembly.....	625-1	625
	4702 Primary and Secondary Air Pressure Gauges	626-1	626
	4702 Speedometer Drive Cable Clamp.....	627-1	627
	4702 Tachometer Drive	628-1	628

TABLE OF CONTENTS (Cont'd)

		Page	Illus Figure
Group 94	REPAIR KITS.....		KIT-1
	9401 Repair Kits		KIT-1
Group 95	GENERAL USE STANDARDIZED PARTS		BULK-1
	9501 Bulk		BULK-1
Section III	SPECIAL TOOLS.....	629-1	629
Group 26	SPECIAL TOOLS AND TEST EQUIPMENT.....	629-1	629
	2604 Peculiar End Item Special Tools.....	629-1	629
	2604 Special Tools.....	630-1	630
	2604 Special Tools.....	631-1	631
Section IV	CROSS REFERENCE INDEXES.....	I-1	
	NATIONAL STOCK NUMBER INDEX.....	I-1	
	PART NUMBER INDEX.....	I-111	

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

Section I. INTRODUCTION

1. Scope.

This Repair Parts and Special Tools List (RPSTL) lists and authorizes spares and repair parts; special tools; Test, Measurement, and Diagnostic Equipment (TMDE); and other special support equipment required for performance of unit, direct support, and general support maintenance of the 5-ton, 6x6, M939, M939A1, and M939A2 series vehicles. It authorizes the requisitioning, issue, and disposition of spares, repair parts, and special tools as indicated by the Source, Maintenance, and Recoverability (SMR) codes.

2. General.

This RPSTL is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within section II. Repair parts for reparable special tools are also listed in this section. Items listed are shown on the associated illustration(s)/figure(s).

 
b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. National Stock Number and Part Number Index. A list, in ascending National Item Identification Number (NIIN) (last nine numerals) sequence, of all National stock numbered items appearing in the listing, followed by a list, in alphanumeric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns (Sections II and III).

a. Item No. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR Code (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

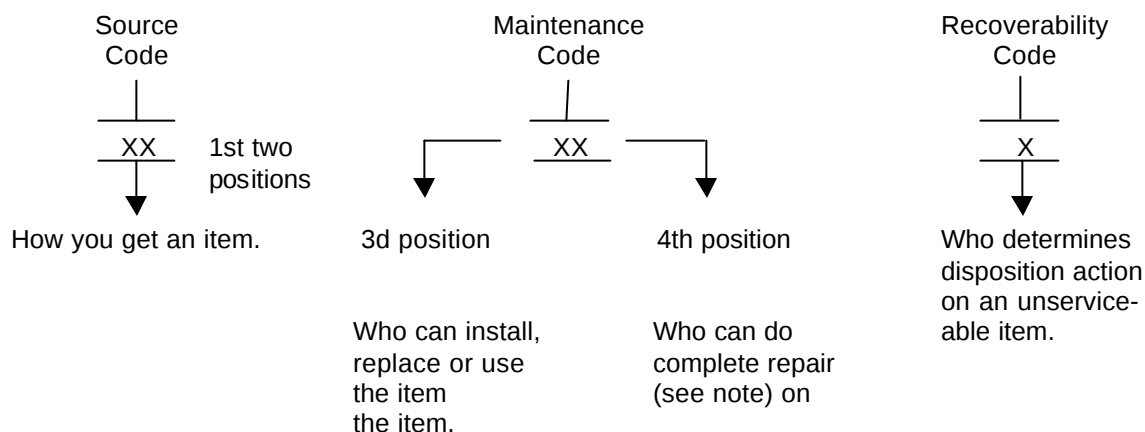

* Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "repair" function in a use/user environment in order to restore serviceability to a failed item.

1 —
2
thru
5

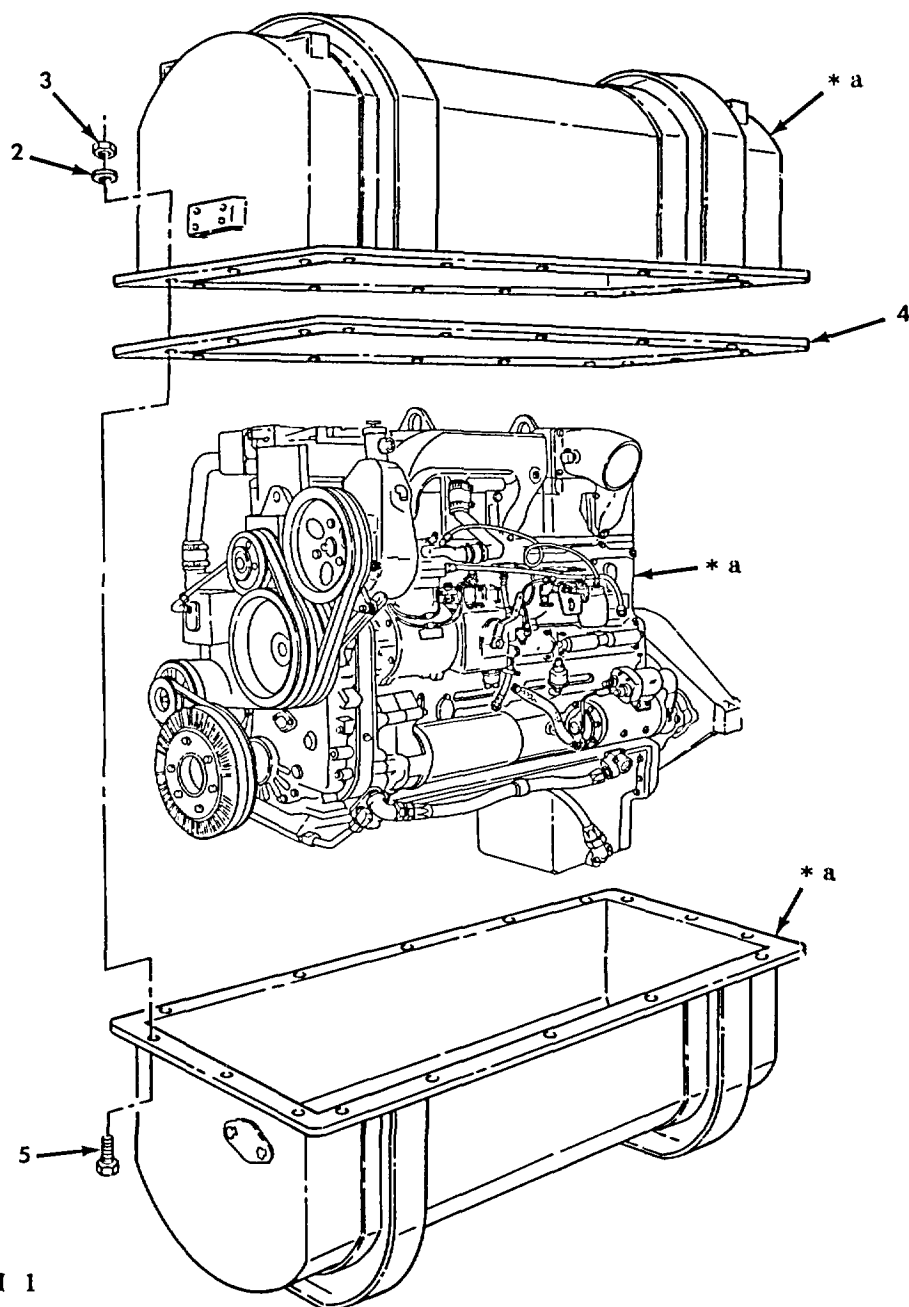 


Figure 1. Engine and Container Assembly (M939, M939A1).

SECTION II					TM 9-2320-272-24P-1	
(1)	(2)	(3)	(4)	(5)	(6)	(7)
ITEM	SMR			PART		
NO	CODE	NSN	CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES (UOC)	QTY
GROUP 01 ENGINE						
0100 ENGINE ASSEMBLY						
FIG. 1 ENGINE AND CONTAINER ASSEMBLY						
(M939,M939A1)						
1	PAFHH	2815011112262	19207	5704507	ENGINE, DIESEL	1
					UOC:DAA, DAB, DAC, DAD, DAE, DAF, DAG, DAH, DAJ, DAK, DAL, DAW, DAX, V12, V13, V14, V15, V16, V17, V18, V19, V20, V21, V22, V24, V25, V39	
2	PAFZZ	5310008206653	96906	MS35338-50	.WASHER, LOCK	42
					UOC:DAA, DAB, DAC, DAD, DAE, DAF, DAG, DAH, DAJ, DAK, DAL, DAW, DAX, V12, V13, V14, V15, V16, V17, V18, V19, V20, V21, V22, V24, V25, V39	
3	PAFZZ	5310007638920	96906	MS51967-20	.NUT, PLAIN, HEXAGON	42
					UOC:DAA, DAB, DAC, DAD, DAE, DAF, DAG, DAH, DAJ, DAK, DAL, DAW, DAX, V12, V13, V14, V15, V16, V17, V18, V19, V20, V21, V22, V24, V25, V39	
4	PAFZZ	5330011377090	19207	11648657	.SEAL, NONMETALLIC RO	1
					UOC:DAA, DAB, DAC, DAD, DAE, DAF, DAG, DAH, DAJ, DAK, DAL, DAW, DAX, V12, V13, V14, V15, V16, V17, V18, V19, V20, V21, V22, V24, V25, V39	
5	PAFZZ	5305007247222	80204	B1821BH063C200N	.SCREW, CAP, HEXAGON H	42
					UOC:DAA, DAB, DAC, DAD, DAE, DAF, DAG, DAH, DAJ, DAK, DAL, DAW, DAX, V12, V13, V14, V15, V16, V17, V18, V19, V20, V21, V22, V24, V25, V39	

END OF FIGURE

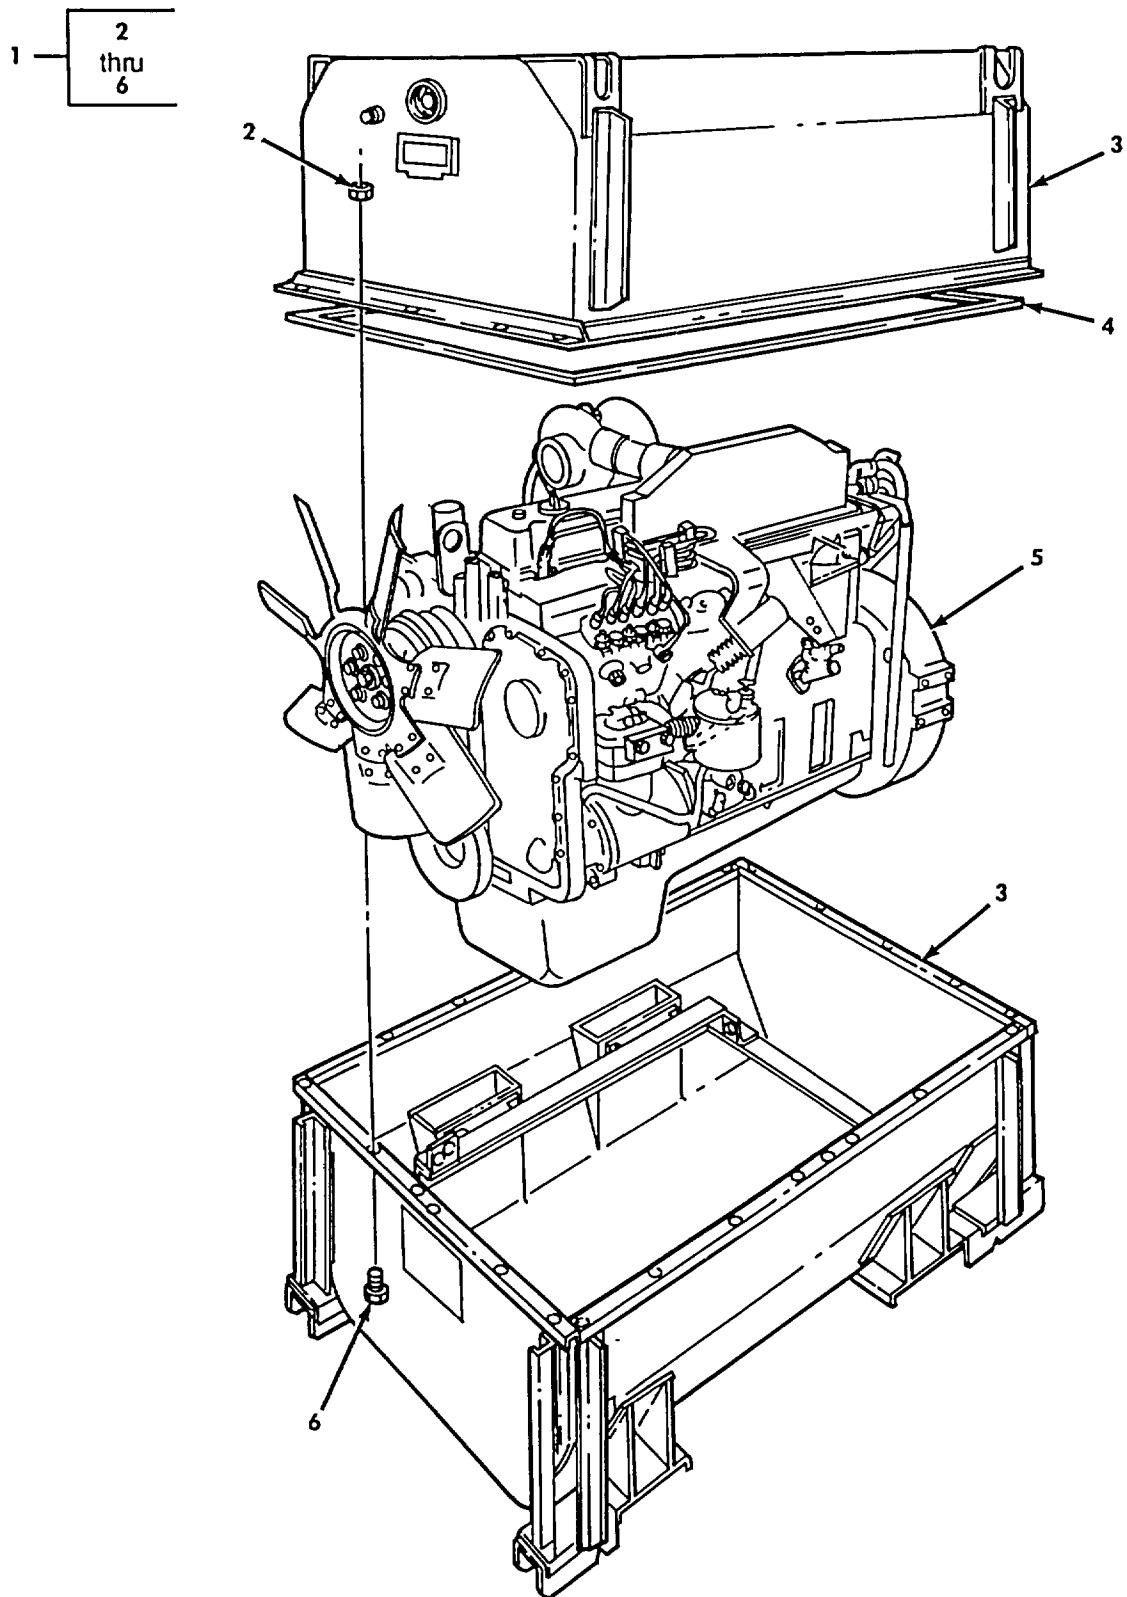 


Figure 2. Engine and Container Assembly (M939A2).

SECTION II					TM 9-2320-272-24P-1	
(1)	(2)	(3)	(4)	(5)	(6)	(7)
ITEM	SMR			PART		
NO	CODE	NSN	CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES (UOC)	QTY
GROUP 0100 ENGINE ASSEMBLY						
FIG. 2 ENGINE AND CONTAINER ASSEMBLY (M939A2)						
1	PAFHH	2815013747539	19207	57K3194	ENGINE,DIESEL ASSEMBLY W/CONTAINER.	1
					UOC:ZAA,ZAB,ZAC,ZAD,ZAE,ZAF,ZAG,ZAH, ZAJ, ZAK, ZAL	
2	PAFZZ	5310007680318	96906	MS51967-14	.NUT,PLAIN,HEXAGON	24
					UOC:ZAA,ZAB,ZAC,ZAD,ZAE,ZAF,ZAG,ZAH, ZAJ, ZAK, ZAL	
3	XDFHH	B145013173498	19207	12363644	.SHIPPING AND STORAG	1
					UOC:ZAA,ZAB,ZAC,ZAD,ZAE,ZAF,ZAG,ZAH, ZAJ, ZAK, ZAL	
4	PAFZZ	5330013506119	19207	12363654	.GASKET FOR STORAGE CONTAINER	1
					UOC:ZAA,ZAB,ZAC,ZAD,ZAE,ZAF,ZAG,ZAH, ZAJ,ZAK,ZAL	
5	XAFHH		19207	12363270 XA	.ENGINE,DIESEL ASSEMBLY	1
					UOC:ZAA,ZAB,ZAC,ZAD,ZAE,ZAF,ZAG,ZAH, ZAJ,ZAK,ZAL	
6	PAFZZ	5305000712067	80204	B1821BH050C125N	.SCREW,CAP,HEXAGON H.....	24
					UOC:ZAA,ZAB,ZAC,ZAD,ZAE,ZAF,ZAG,ZAH, ZAJ,ZAK,ZAL	
END OF FIGURE						

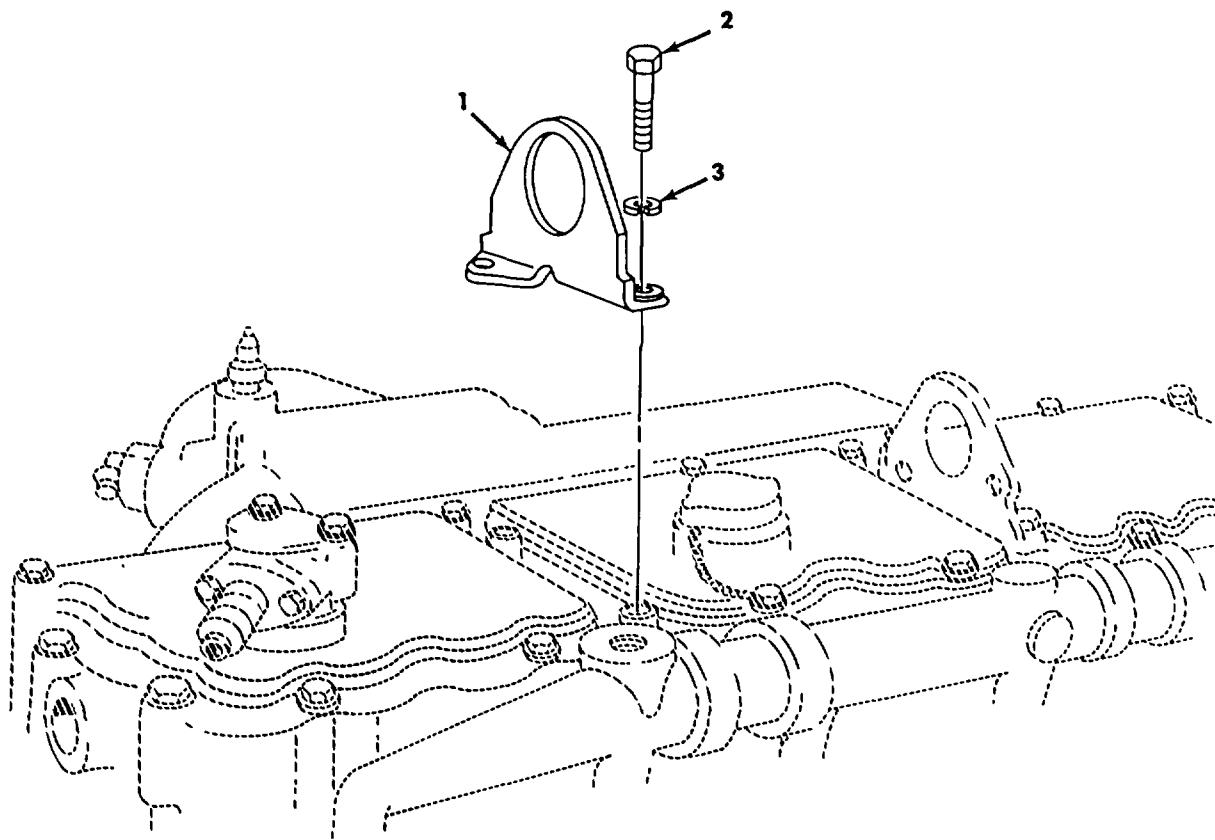 


Figure 3. Engine Lifting Brackets (M939, M939A1).

SECTION II					TM 9-2320-272-24P-1	
(1)	(2)	(3)	(4)	(5)	(6)	(7)
ITEM	SMR			PART		
NO	CODE	NSN	CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES (UOC)	QTY
GROUP 0100 ENGINE ASSEMBLY						
FIG. 3 ENGINE LIFTING BRACKETS(M939, M939A1)						
1	PAFZZ	5342004042946	15434	170226	BRACKET, ENGINE LIFT UOC: DAA, DAB, DAC, DAD, DAE, DAF, DAG, DAH, DAJ, DAK, DAL, DAW, DAX, V12, V13, V14, V15, V16, V17, V18, V19, V20, V21, V22, V24, V25, V39	2
2	PAFZZ	5305007959343	15434	S-176	SCREW,CAP,HEXAGON H UOC: DAA, DAB, DAC, DAD, DAE, DAF, DAG, DAH, DAJ, DAK, DAL, DAW, DAX, V12, V13, V14, V15, V16, V17, V18, V19, V20, V21, V22, V24, V25, V39	4
3	PAFZZ	5310012001318	15434	S-608	WASHER, LOCK UOC: DAA, DAB, DAC, DAD, DAE, DAF, DAG, DAH, DAJ, DAK, DAL, DAW, DAX, V12, V13, V14, V15, V16, V17, V18, V19, V20, V21, V22, V24, V25, V39	4
END OF FIGURE						

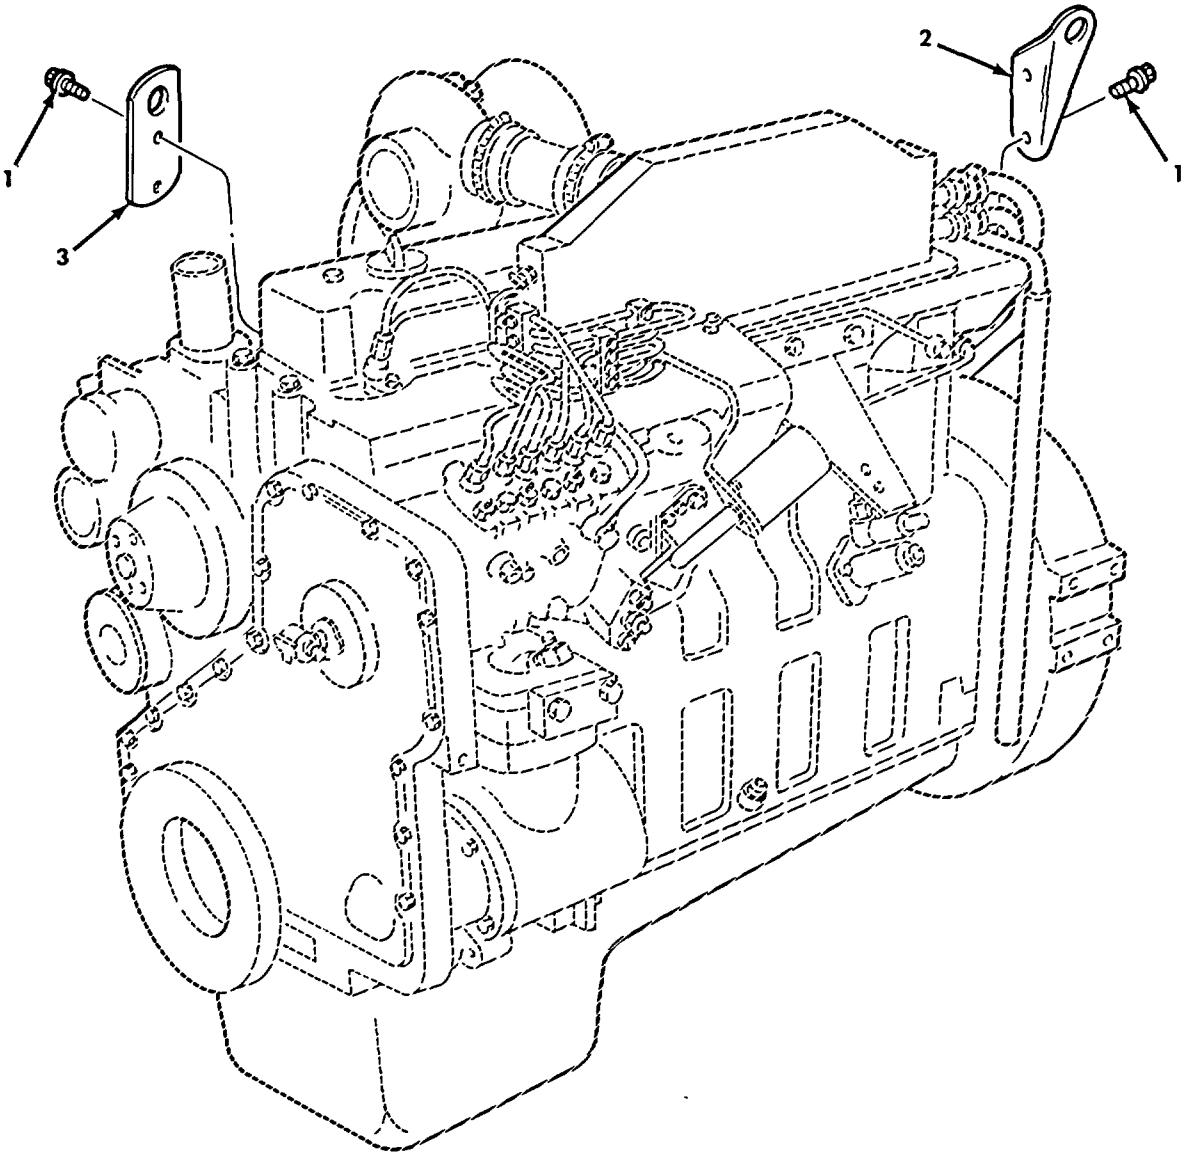 


Figure 4. Engine Lifting Brackets (M939A2).

SECTION II					TM 9-2320-272-24P-1	
(1)	(2)	(3)	(4)	(5)	(6)	(7)
ITEM	SMR			PART		
NO	CODE	NSN	CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES (UOC)	QTY
GROUP 0100 ENGINE ASSEMBLY						
FIG. 4 ENGINE LIFTING BRACKETS (M939A2)						
1	PAFZZ	5305012685558	15434	3903200	SCREW,CAP,HEXAGON H	4
					UOC: ZAA, ZAB, ZAC, ZAD, ZAE, ZAF, ZAG, ZAH, ZAJ, ZAK, ZAL	
2	PAFZZ	5342012726724	15434	3906440	BRACKET, ENGINE ACCE	1
					UOC: ZAA, ZAB, ZAC, ZAD, ZAE, ZAF, ZAG, ZAH, ZAJ, ZAK, ZAL	
3	PAFZZ	5342012726725	15434	3907861	BRACKET, ENGINE ACCE	1
					UOC: ZAA, ZAB, ZAC, ZAD, ZAE, ZAF, ZAG, ZAH, ZAJ, ZAK, ZAL	
END OF FIGURE						