 


TECHNICAL MANUAL

**UNIT, DIRECT SUPPORT AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
FOR
CARRIER, AMMUNITION, TRACKED**

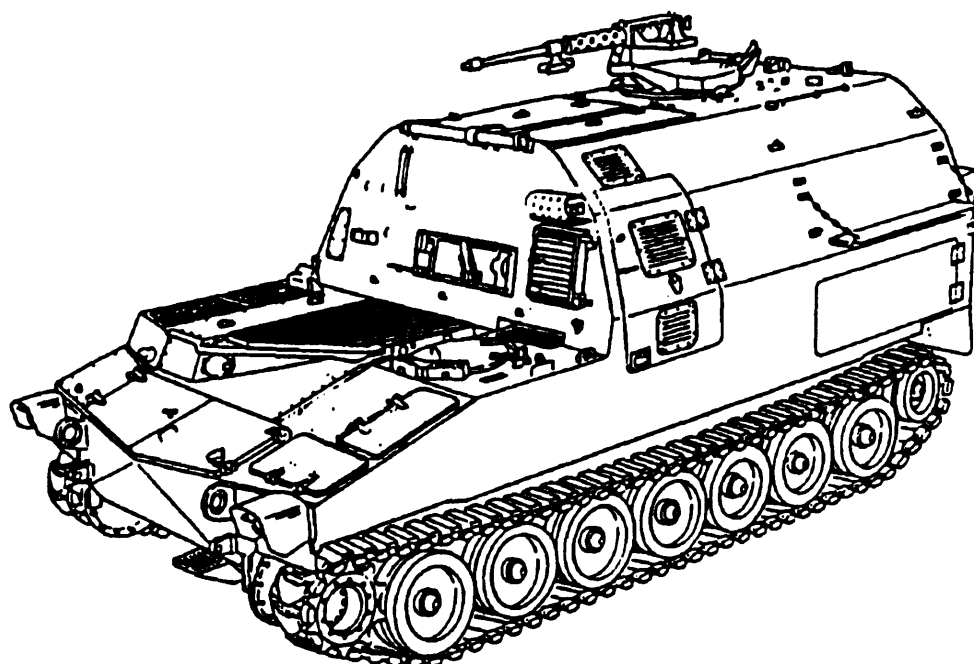

M992
(2350-01-110-4660)
EIC:AEW

Approved for public release; distribution is unlimited.

*This manual supersedes TM9-2350-267-20P, Jan 88 and TM9-2350-267-34P, Feb 86.

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST FOR CARRIER, AMMUNITION, TRACKED M992

(NSN 2350-01-110-4660)

EIC:AEW

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2, located in the back of this manual, direct to: Commander, U.S. Army Tank-Automotive Command, ATTN: AMSTA-MB, Warren, MI 48397-5000. A reply will be furnished to you.

Approved for public release; distribution is unlimited

Current as of 6 Jan 1994

TABLE OF CONTENTS		Page	Illus Figure
Section I.	INTRODUCTION	1	
Section II.	REPAIR PARTS LIST		
Group 01	Engine		
Group 0100	Engine Assembly		
	0100 Engine and Container Assembly	1-1	1
	0100 Engine Mounting Base Assembly, Mounts and Brackets	2-1	2
Group 0102	Crankshaft		
	0102 Flywheel Vibration Damper	3-1	3
Group 0106	Engine Lubrication System		
	0106 Engine Oil Filter Hoses, Mount Assembly and Transmission Oil Hoses, and Oil Transmitter Fittings	4-1	4
	0106 Engine and Transmission Oil Sampling System	5-1	5
	0106 Engine Oil Filter	6-1	6
	0106 Oil Pan Plug, Oil Fill Cap and Liquid (Lube Oil) Level Gages	7-1	7
	0106 Cylinder Valve Cover Breather Hose	8-1	8
	0106 Accessory Drive Assembly and Mounting Hardware	9-1	9
Group 03	Fuel System		
Group 0302	Fuel Pumps		
	0302 Pump and Hanger Assembly, Right Side Lower Fuel Tank	10-1	10
	0302 Pump and Hanger Assembly, Left Side Lower Fuel Tank	11-1	11

*This manual supersedes TM9-2350-267-20P, Jan 88 and TM9-2350-267-34P, Feb 86.

TABLE OF CONTENTS-Continued

	Page	Illus Figure
0302 Electrical Fuel Pump	12-1	12
0302 Fuel Pump, Engine Driven	13-1	13
Group 0304 Air Cleaner		
0304 Air Cleaner Duct, Hoses and Clamps	14-1	14
0304 Air Cleaner and Hoses	15-1	15
0304 Air Cleaner Fan Assembly	16-1	16
0304 Air Cleaner Assembly, Filter Element and Gaskets	17-1	17
Group 0306 Tanks, Lines, Fittings, Headers		
0306 Fuel Lines, Turbocharger Lines and Fittings	18-1	18
0306 Fuel Lines and Fittings	19-1	19
0306 APU Fuel Lines and Fittings	20-1	20
0306 Engine Fuel Lines and Fittings	21-1	21
0306 Upper and Lower Fuel Tanks and Related Parts	22-1	22
0306 Upper Fuel Tank Retainer, Strap and Channel Assembly (USBL EFF 1 thru 344)	23-1	23
0306 Upper Fuel Tank Retainer, Strap and Channel Assembly (USBL EFF 345 and Above)	24-1	24
0306 Upper Fuel Tank Heat Shield	25-1	25
0306 Upper Fuel Tank Heat Shield Seals	26-1	26
Group 0309 Fuel Filters		
0309 Primary and Secondary Fuel Filters	27-1	27
Group 0312 Accelerator, Throttle, or Choke Controls		
0312 Accelerator and Throttle Control Linkage	28-1	28
0312 Engine Fuel Shut Off Control	29-1	29
Group 04 Exhaust System		
Group 0401 Muffler and Pipes		
0401 Engine Exhaust Piping and Insulation	30-1	30
Group 05 Cooling System		
Group 0501 Radiator, Evaporative Cooler, or Heat Exchanger		
0501 Radiator Surge Tank, Valve Hoses and Fittings	31-1	31
0501 Engine Coolant Radiator and Mountings	32-1	32
0501 Aeration Detector Assembly and Wiring Harness	33-1	33
Group 0502 Cowling, Deflectors, Air Ducts, Shrouds, Etc.		
0502 Engine Coolant Shroud and Mountings	34-1	34
Group 0503 Water Manifold, Headers, Thermostats, and Housing Gasket		
0503 Engine Coolant Thermostats, Hoses, Tubes and Fittings	35-1	35
Group 0505 Fan Assembly		
0505 Engine Cooling Fan Drive Assembly	36-1	36
0505 Engine Cooling Vane Axial Fan (NOAAH)	37-1	37

TABLE OF CONTENTS-Continued

		Page	Illus Figure
Group 06	Electrical System		
Group 0601	Generator, Alternator		
	0601 Generator (Alternator)	38-1	38
Group 0602	Generator Regulator (Voltage)		
	0602 Generator Voltage Regulator, Armature Relays and Bilge Pump Circuit Breakers	39-1	39
	0602 Rectifier Assembly	40-1	40
	0602 Winterization Kit Receptacle Cover Plate	41-1	41
Group 0603	Starting Motor		
	0603 Engine Electrical Starter and Related Parts	42-1	42
Group 0607	Instrument or Engine Control Panel		
	0607 Drier's Portable Instrument Panel Assembly	43-1	43
	0607 Driver's Portable Instrument Panel Wiring Harness	44-1	44
	0607 Low Coolant Indicator Light Assembly and Wiring Harness	45-1	45
	0607 Driver's Instrument Panel Assembly	46-1	46
	0607 Driver's Instrument Panel Support Assembly	47-1	47
	0607 Accessory Control Box Assembly	48-1	48
	0607 Accessory Control Box Cable Assembly	49-1	49
	0607 Accessory Control Box Wiring Harness	50-1	50
	0607 Accessory Control Box Power Lead	51-1	51
	0607 Accessory Control Box Ventilator Blower Switch Lead Assembly	52-1	52
	0607 Accessory Control Box Assembly, Electrical Leads	53-1	53
	0607 Circuit Breaker Panel and Chemical Agent Detector Circuit Breaker	54-1	54
	0607 Circuit Breaker Panel, Hull Electrical	55-1	55
	0607 Air Cleaner Blower Motor Assembly Relay	56-1	56
	0607 APU Voltage Regulator	57-1	57
	0607 Hydraulic Control Gage Panel Assembly	58-1	58
	0607 Hydraulic Control Gage Panel Wiring Harness	59-1	59
	0607 NBC Power Control Box	60-1	60
	0607 NBC Power Control Box Harness Assemblies	61-1	61
	0607 NBC Power Control Box Electrical Leads	62-1	62
	0607 Stacker Control Switch Box Assembly	63-1	63
	0607 STE/ICE Resistor Box Assembly.	64-1	64
	0607 STE/ICE Control Box Wiring Harness	65-1	65
	0607 Headlight Dimmer Switch	66-1	66
Group 0608	Miscellaneous Items		
	0608 Master Relay and Housing Assembly	67-1	67
	0608 Auxiliary Power Unit Control Box Assembly	68-1	68
	0608 Auxiliary Power Unit Control Box High Air Temperature and Low Oil Pressure Indicator Lights	69-1	69
	0608 Auxiliary Power Unit Control Box Wiring Harness Assembly	70-1	70
	0608 Rear Door Upper Control Switch	71-1	71
	0608 Rear Door Lower Control Switch	72-1	72
	0608 Conveyor Override Safety Switch	73-1	73
	0608 Intercom Power Supply Bracket and Attaching Hardware	74-1	74

TABLE OF CONTENTS-Continued

	Page	Illus Figure
0608 Radio Power Supply Mounting Hardware	75-1	75
0608 Antenna Attaching Hardware	76-1	76
0608 Intercom Cable Attaching Hardware	77-1	77
0608 Exterior Phone Terminals	78-1	78
0608 Parking Brake Light Switch Assembly	79-1	79
0608 Stoplight Control Switch	80-1	80
Group 0609 Lights		
0609 Dome Light Assembly	81-1	81
0609 Headlight Mount Assembly	82-1	82
0609 Headlight Assembly	83-1	83
0609 Headlight Resilient Mount Headlight Wiring Harness	84-1	84
0609 Service Taillight, Stop and Blackout Taillight	85-1	85
0609 Master Warning Light Assembly	86-1	86
Group 0610 Sending Units and Warning Switches		
0610 Powerplant Pressure and Temperature Switches	87-1	87
Group 0612 Batteries, Storage (Wet or Dry)		
0612 Storage Batteries, Cables and Supports	88-1	88
Group 0613 Hull or Chassis Wiring Harness		
0613 Hull Front Wiring Harness	89-1	89
0613 Engine Disconnect Bracket to Driver's Bulkhead Wiring Harness	90-1	90
0613 Engine Bracket to Driver's Bulkhead Wiring Harness	91-1	91
0613 Powerpack Wiring Harness	92-1	92
0613 Engine Electrical Ground Lead	93-1	93
0613 Engine Electrical Wiring Harness Bracket	94-1	94
0613 Rectifier to Regulator Wiring Harness	95-1	95
0613 Battery to Driver's Bulkhead Cable Assembly	96-1	96
0613 Bulkhead to Portable Instrument Panel Wiring Harness	97-1	97
0613 Cargo Compartment Power Cable Assembly	98-1	98
0613 Cargo Compartment Wiring Harness	99-1	99
0613 Driver's Bulkhead to APU Voltage Regulator Wiring Harness	100-1	100
0613 Driver's Instrument Panel Wiring Harness	101-1	101
0613 Lead, Flame Heater Master Switch	102-1	102
0613 Air Cleaner Blower Motor Relay Lead Assembly	103-1	103
0613 Circuit Breaker to "Y" Connector Lead Assembly	104-1	104
0613 Hull Lighting, Accessory Control Box, Personnel Heater and Air Cleaner Blower Wiring Harness	105-1	105
0613 Passive Night Viewer Cable Assembly	106-1	106
0613 Rear NATO Intervehicular Slave Connector	107-1	107
0613 Front NATO Intervehicular Slave Connector	108-1	108
0613 NATO Intervehicular Slave Connector Ground Lead	109-1	109
0613 NBC Power Control Box to NBC Heaters and Air Purifier Wiring Harness	110-1	110
0613 NBC System Ground Lead	111-1	111
0613 NBC Air Purifier Filter/Blower Wiring Harness	112-1	112
0613 Conveyor Control Switch to Conveyor Override Switch Cable Assembly	113-1	113

TABLE OF CONTENTS-Continued

	Page	Illus Figure
0613 Stacker Control Switch Cable Assembly	114-1	114
0613 Stacker Solenoid to Stacker Disconnect Wiring Harness	115-1	115
0613 Auxiliary Power Unit Control Box to APU Voltage Regulator Cable Assembly	116-1	116
0613 Intervehicular Ground Cable Assembly	117-1	117
0613 Telephone Wiring Harness	118.1	118
0613 Trailer Receptacle and Cable Assembly	119-1	119
0613 Chemical Agent Detector Wiring Harness	120-1	120
0613 STE/ICE Wiring Harness, DCA to Driver's Bulkhead	121-1	121
0613 STE/ICE Wiring Harness, Driver's Bulkhead to Engine Disconnect	122-1	122
0613 STE/ICE Wiring Harness, Engine Transducers to Engine Electrical Disconnect	123-1	123
0613 SCEA Cable Assembly (USBL EFF 1 thru 344)	124-1	124
0613 SCEA Cable Assembly (USBL EFF 345 and Above)	125-1	125
0613 OFSA Cable Assembly (USBL EFF 1 thru 344)	126-1	126
0613 OFSA Cable Assembly (USBL EFF 345 and Above)	127-1	127
0613 AFES Engine Cable Assembly	128.1	128
0613 Crew Fire Extinguisher Cable Assembly (USBL EFF 1 thru 344)	129-1	129
0613 Crew Fire Extinguisher Cable Assembly (USBL EFF 345 and Above)	130-1	130
0613 Accessory Control Box to AFES Harness, AFES Relays and Personnel Ventilation Blower Wiring Harness	131-1	131
0613 Automatic Fire Extinguisher Circuit Breaker Cable Assembly	132-1	132
0613 Wiring Harness Attaching Hardware	133-1	133
0613 Harness Guards and Taillight Wiring Covers	134-1	134
Group 0616 Ventilating Equipment		
0616 Personnel Ventilating Air Duct Fan (NOAAH)	135-1	135
Group 07 Transmission		
Group 0705 Transmission Shifting Components		
0705 Transmission Shift Control Linkage and Neutral Safety Switch	136-1	136
0705 Transmission Shift Control Quadrant Assembly	137-1	137
Group 0710 Transmission Assembly (Hydraulic, Hydrostatic, Torquamatic, Crossdrive) and Associated Parts		
0710 Transmission Support	138.1	138
0710 Transmission and Shipping Container	139-1	139
Group 0721 Coolers, Pumps, Motors		
0721 Transmission Supports, Pressure Check Plugs, Oil Screen, Gage Rod and Inspection Plates	140-1	140
Group 08 Transfer, Final Drive, Planetary, and Drop Gearbox Assemblies		
Group 0801 Power Transfer, Final Drive, Planetary, or Drop Gearbox Assemblies		
0801 Power Input Transfer Breather and Mount	141-1	141
0801 Power Transfer and Shipping Container Assembly	142-1	142
0801 Universal Joints	143-1	143
0801 Final Drive with Shipping Container Assembly	144-1	144

TABLE OF CONTENTS-Continued

		Page	Illus Figure
	0801 Final Drive Assembly	145-1	145
	0801 Final Drive Skid Plates	146-1	146
Group 12	Brakes		
Group 1201	Handbrakes		
	1201 Parking Brake Control Linkage and Latch Assembly	147-1	147
Group 1206	Mechanical Brake System		
	1206 Service Brake Control Linkage	148-1	48
Group 13	Wheels and Tracks		
Group 1301	Suspension Assembly		
	1301 Torsion Bar Assemblies	149-1	49
	1301 Suspension Arm, Hub Assembly and Roadwheel	150-1	50
Group 1303	Track Idlers and Brackets		
	1303 Track Adjusting Idler Arm and Hub Assembly		
	Support and Wheels	151-1	151
	1303 Track Adjuster Assembly	152-1	152
Group 1304	Track Drive Sprockets		
	1304 Track Drive Sprockets and Hub	153-1	153
Group 1305	Track Assembly		
	1305 Vehicle Double Pin Track Shoe Assembly	154-1	154
Group 14	Steering		
Group 1401	Mechanical Steering Gear Assembly		
	1401 Steering Control Linkage	155.1	155
Group 15	Frame, Towing Attachments, Drawbars, and Articulation Systems		
Group 1503	Pintles and Towing Attachments		
	1503 Towing Pintle Assembly	156-1	156
	1503 Tow Cable Hook	157-1	157
	1503 Tow Attachments	158-1	158
Group 16	Springs and Shock Absorbers		
Group 1604	Shock Absorber Equipment		
	1604 Suspension Shock Absorber	159-1	159
Group 18	Body, Cab, Hood, and Hull		
Group 1801	Body, Cab, Hood, and Hull Assemblies		
	1801 Hull Front Intake and Exhaust Grilles and Fan Access	160-1	160
	1801 Hull Front Plates	161-1	161
	1801 Transmission and Battery Access Doors	162-1	162
	1801 Personnel Air Ventilator and Fan Filter, Door and Grille	163-1	163
	1801 Engine Compartment Bulkhead Insulation, Shields and		
	Engine Access Cover Assembly	164-1	164
	1801 Top Right and Top Left Doors	165-1	165
	1801 Top Left Door Hold-Open Lock	166-1	166
	1801 Top Right Door Hold-Open Lock	167-1	167

TABLE OF CONTENTS-Continued

	Page	Illus Figure
1801 Top Center Door	188-1	168
1801 Top Center Door Hold-Open Lock	169-1	169
1801 Right Side Canister Door (USBL EFF 1 thru 33)	170-1	170
1801 Right Side Canister Door (USBL EFF 34 and Above)	171-1	171
1801 Left Side Canister Door (USBL EFF 1 thru 33)	172-1	172
1801 Left Side Canister Door (USBL EFF 34 and Above)	173-1	173
1801 Personnel Door (USBL EFF 1 thru 33)	174-1	174
1801 Personnel Door (USBL EFF 34 and Above)	175-1	175
1801 Upper Rear Door Assembly	176-1	176
1801 Upper Rear Door Mechanical Safety Lock	177-1	177
1801 Lower Rear Door Assembly with Lock Handle	178-1	178
1801 APU Compartment Side Door	179-1	179
1801 APU Compartment Front Door	180-1	180
1801 APU Compartment Access Plate and Cap Assembly	181-1	181
1801 APU Compartment Soundproof Panels	182-1	182
1801 APU Compartment Louvered Grille	183-1	183
1801 Fuel Fill and Filter Access Door Assembly	184-1	184
1801 AFES Fire Extinguisher Box (USBL EFF 345 and Above)	185-1	185
1801 Antenna, Mounting Hole Plate and Commander's Station Assist Handles	186-1	186
1801 Driver's Portable Instrument Panel Mounting Bracket	187-1	187
1801 Commander's Cupola, Machine Gun Support and Ring Assemblies	188-1	188
1801 Commander's Cupola Hatch Door	189-1	189
Group 1802 Fenders, Running Boards with Mounting and Attaching Parts, Outriggers, Windshield Glass, Etc.		
1802 Front Fenders and Retaining Plates	190-1	190
1802 Rear Track Splash Guard	191-1	191
Group 1803 Driver's Hatches, Drive's Periscopes, Etc.		
1803 Driver's Hatch Cover, Latch and Torsion Bar	192-1	192
1803 Driver's Hatch Security Latch	193-1	193
1803 Driver's Hatch Cam Lock	194-1	194
1803 Driver's Periscope M45 Cover, Doors, Seals, Sleeves and Control Cams	195-1	195
Group 1804 Drain Valves, Drain Plugs, Etc.		
1804 Engine Compartment Hull Floor Plates	196-1	196
1804 Crew Compartment Hull Floor Plates and Drain Plugs	197-1	197
Group 1806 Upholstery, Seats, and Carpets		
1806 Driver's Seat Assembly	198-1	198
1806 Commander's Seat	199-1	199
1806 Commander's Seat Assembly	200-1	200
1806 Right Side Double Crew Seat	201-1	201
1806 Right Side Single Crew Seat	202-1	201
1806 Left Side Double Crew Seat	203-1	203
1806 Left Side Single Crew Seat	204-1	204
1806 Crew Compartment Fatigue Mats	205-1	205

TABLE OF CONTENTS-Continued

	Page	Illus Figure
Group 1808 Stowage Racks, Boxes, Straps, Carrying Cases, Cable Reels		
Hose Reels, Etc.		
1808 Right and Left Rear Stowage Boxes and Baskets (USBL EFF 1 thru 344)	206-1	206
1808 Left Rear Stowage Boxes and Basket (USBL EFF 345 and Above)	207-1	207
1808 Right and Left Top Stowage Boxes	208-1	208
1808 Right and Left Bottom Stowage Boxes	209-1	209
1808 Pioneer Kit, Towing Cable Straps, Water Can Straps and Track Fixture Strap	210.1	210
1808 Crow Bar Stop, Barrel Straps and Rack Hoist Straps	211-1	211
1808 Right Side Duffle Bag Stowage	212.1	212
1808 Left Side Duffle Bag Stowage	213-1	213
1808 Interior Stowage	214-1	214
1808 Portable Fire Extinguisher Bracket Connecting Hardware	215-1	215
1808 Commander's Binocular Securing Strap	216-1	216
1808 Decontamination Apparatus Bracket and Fuze Stowage Straps	217-1	217
1808 Driver's Stowage Box Assembly Door	218-1	218
1808 NBC Stowage Box	219-1	219
1808 Projectile Rack Stowage Box Guard Plate Assembly	220-1	220
1808 Projectile Rack Supports and Vehicle Wall-Mounted Restraints	221-1	221
1808 Projectile Rack Base	222-1	222
1808 Projectile Rack	223-1	223
1808 Projectile Rack Canister Stowage Boxes, Braces, and Rack Removal Aid	224-1	224
1808 Right Rear Canister Compartment Supports, 155mm Charges	225-1	225
1808 Right Rear Canister Compartment Shelving, 155mm Charges	226-1	226
1808 Left Rear Canister Compartment Supports	227-1	227
1808 Left Rear Canister Compartment Shelving	228-1	228
1808 Left Rear Canister Compartment Wear Strips and Guard	229-1	229
1808 Right Front Canister Compartment Shelf Assembly	230-1	230
1808 Left Front Canister Compartment Shelf Assembly	231-1	231
1808 Right Side Canister Restraints	232-1	232
1808 Left Side Canister Restraints	233-1	233
1808 Left Rear Top Canister Compartment Restraint Bar Assembly	234-1	234
1808 Left Rear Bottom Canister Compartment Restraint Bar Assembly	235-1	235
1808 Right Rear Bottom Canister Compartment Restraint Bar Assembly	236-1	236
1808 Right Rear Top Canister Compartment Restraint Bar Assembly	237.1	237
1808 Telephone Cable Reel and Guide with Hand Crank	238-1	238
Group 22 Body, Chassis, and Hull Accessory Items		
Group 2201 Canvas, Rubber, or Plastic Items		
2201 Shroud Assembly	239-1	239

TABLE OF CONTENTS-Continued

		Page	Illus Figure
Group 2202	Accessory Items		
	2202 Heating and Ventilating Duct	240-1	240
Group 2205	Bilge Pumps (Special Application)		
	2205 Bilge Pump	241-1	241
	2205 Bilge Pump Strainer and Outlet Tubing	242-1	242
Group 2207	Winterization Equipment		
	2207 Personnel Heater Assembly	243-1	243
	2207 Personnel Heater Exhaust Pipe and Hose	244-1	244
	2207 Personnel Heater Mounting Clamps, Saddle, Ducts, Hoses, Fuel Pumps and Filter	245-1	245
Group 2210	Data Plates and Instruction Holders		
	2210 Hand Pump Instruction Plates	246-1	246
	2210 APU Control Box Identification Plate	247-1	247
	2210 Upper Rear Door and Conveyor Identification Plates	248-1	248
	2210 APU Fuel Filter Instruction Plate	249-1	249
	2210 Vehicle Identification Plate	250-1	250
	2210 Driver's Compartment Markers (Decals)	251-1	251
	2210 Noise Warning Instruction Plates	252-1	252
	2210 Fuel Shutoff Control Identification Plate	253-1	253
	2210 Air Intake Grille Thermal Wire Warning Label	254-1	254
	2210 Personnel Heater Warning Signs	255-1	255
Group 24	Hydraulic and Fluid Systems		
Group 2400	Hydraulic and Fluid Systems		
	2400 Conveyor Support Cables	256-1	256
	2400 Conveyor Stowage Strap, Upper Support Brackets and Cable Stowage Clips	257-1	257
	2400 Upper and Lower Conveyor Supports	258-1	258
	2400 Conveyor Support Stand	259-1	259
	2400 Conveyor Support Stand Attaching Hardware and Springs	260-1	260
	2400 Conveyor Dead-End Sections and Latch Assemblies	261-1	261
	2400 Conveyor Drive-End Section Assembly	262-1	262
	2400 Conveyor Center Section Assembly	263-1	263
	2400 Conveyor Take-Up End Section Assembly	264-1	264
	2400 Conveyor Subassembly	265-1	265
	2400 Stacker Assembly	266-1	266
	2400 Stacker Manual Winch Assembly	267-1	267
	2400 Stacker Carrier Sliding Tray, Sliding Bars and Sliding Guides	268-1	268
	2400 Stacker Foot Brake	269-1	269
	2400 Stacker Wear Strips, Plate and Bar Assembly	270-1	270
	2400 Stacker Support Assembly	271-1	271
	2400 Hydraulic Reservoir Assembly (USBL EFF 1 thru 344)	272-1	272
	2400 Hydraulic Reservoir Assembly (USBL EFF 345 and Above)	273-1	273
Group 2401	Pump and Motor		
	2401 APU Hydraulic Pump, Fittings, U-Bolt Assembly and Adapter Plate	274-1	274
	2401 Stacker Hydraulic Brake	275-1	275

TABLE OF CONTENTS-Continued

	Page	Illus Figure
2401 Backup Hydraulic System Clutch Support and Pump Assembly	276-1	276
2401 Backup Hydraulic System Clutch	277-1	277
2401 Backup Hydraulic System Hand Pump Assembly and Selector Valve	278-1	278
Group 2402 Manifold and or Control Valves		
2402 Hydraulic Control Panel Tube Assemblies, Flow Regulator and Relief Valve	279-1	279
2402 Hydraulic Control Panel Hose Assemblies, Shuttle Valve and Counterbalance Valve	280-1	280
2402 Hydraulic Control Panel Directional Valve Assemblies, Subplates and Bracket	281-1	281
Group 2404 Tilt Cylinders and Tilt Crank		
2404 Upper Rear Door Hydraulic Actuator	282-1	282
Group 2406 Strainers, Filters, Lines, and Fittings, Etc.		
2406 Upper Rear Door Actuator Hose, Tubes and Fittings	283-1	283
2406 Hydraulic Filler and Cap, Return Line Filter, Hoses, Suction Ball Valve and Associated Parts	284-1	284
2406 Stacker Hydraulic Hoses and Fittings	285-1	285
2406 Stacker Hydraulic Hoses, Tubes and Fittings	286-1	286
2406 Conveyor Hydraulic Hoses and Fittings	287-1	287
2406 APU Compartment Hydraulic Pump Hoses and Fittings	288-1	288
2406 Backup Hydraulic Pump Assembly Hoses and Fittings	289-1	289
2406 Backup Hydraulic System Hoses, Tubes and Fittings	290-1	290
2406 Hydraulic Return Line Tubing	291-1	291
Group 29 Auxiliary Generator and Engine, and Controls		
Group 2901 Generator and Engine Assembly		
2901 APU Assembly, APU Support Assembly and Resilient Mounts	292-1	292
2901 APU Support Stand and Hourmeter (Time Totalizing Meter)	293-1	293
Group 2916 Engine Lubrication System		
2916 APU Oil Drain Line Extension	294-1	294
Group 2933 Engine Air Cleaner		
2933 APU Air Cleaner and Air Intake Ducting	295-1	295
Group 2937 Engine Fuel Filter		
2937 APU Fuel Filters	296-1	296
Group 2938 Engine Priming System, Lines and Pumps		
2938 APU Fuel Lines and Fittings	297-1	297
Group 2941 Engine Muffler, Exhaust, and Tail Pipes		
2941 APU Exhaust Muffler, Pipes and Shield	298-1	298

TABLE OF CONTENTS-Continued

		Page	Illus Figure
Group 2952	Engine Cowling Deflectors, Air Ducts, and Shrouds		
	2952 APU Exhaust Cooling Ducts and Engine Shrouds	299-1	299
Group 2961	Generator		
	2961 APU Generator, Air Duct, and Plenum	300-1	300
Group 2963	Starter, Solenoids, Circuit Breakers, Wiring and Switches		
	2963 APU Relay and Preheat Solenoid Leads	301-1	301
	2963 APU Hydraulic Pressure Switch Assembly	302-1	302
	2963 APU Branched Wiring Harness	303-1	303
	2963 APU Sending Units Wiring Harness	304-1	304
	2963 APU Hourmeter Wiring Harness	305-1	305
	2963 APU Cable Assembly	306-1	306
	2963 APU High Air Temperature Switch Lead	307-1	307
	2963 APU Ground Leads	308-1	308
	2963 APU Generator Ground Lead	309-1	309
	2963 APU Harness Attaching Hardware	310-1	310
Group 33	Special Purpose Kits		
Group 3301	Reusable Shipping Containers		
	3301 Final Drive Shipping Container Mounting Hardware	311-1	311
Group 3303	Winterization Kits		
	3303 Winterization Kit, M992	312-1	312
	3303 Winterization Kit Battery Boxes and Insulation	313-1	313
	3303 Winterization Kit Battery Heater, Coolant Heater Circulating Pump and Hoses	314-1	314
	3303 Winterization Kit Coolant Heater, Exhaust Tube, Fuel Pump, Fuel Lines, Fuel Fitter, and Mounting Hardware	315-1	315
	3303 Winterization Kit Coolant Heater Control Box Assembly	316-1	316
	3303 Winterization Kit Bulkhead to Coolant Heater Control Box Wiring Harness	317-1	317
	3303 Winterization Kit Coolant Heater to Bulkhead Wiring Harness	318-1	318
	3303 Winterization Kit Vehicle Air Intake Grille Cover	319-1	319
	3303 Winterization Kit APU Compartment	320-1	320
	3303 Winterization Kit APU Doors	321-1	321
	3303 Winterization Kit Personnel Ventilation Duct Cover	322-1	322
	3303 Ventilation Kit	323-1	323
Group 42	Electrical Equipment		
Group 4209	Signaling Devices		
	4209 STE/ICE Current Shunt	324-1	324
	4209 STE/ICE Fuel Pressure Transducer	325-1	325
	4209 STE/ICE Airbox Pressure Transducer	326-1	326
	4209 STE/ICE Pulse Tachometer	327-1	327
	4209 STE/ICE Air Cleaner Pressure Transducer	328-1	328
Group 47	Gages (Nonelectrical), Weighing and Measuring Devices		
Group 4701	Instruments (Speed and Distance)		
	4701 Speedometer Drive Shaft, Adapters and Fittings	329-1	329
	4701 Tachometer Drive Shaft, Adapters and Fittings	330-1	330

TABLE OF CONTENTS-Continued

	Page	Illus Figure
Group 76	Fire Fighting Equipment Components	
Group 7639	Fixed Fire Fighting Equipment (Vehicular)	
7639	Fire Extinguisher Bottles (USBL EFF 1 thru 344)	331-1 331
7639	Fire Extinguisher Bottles (USBL EFF 345 and Above)	332-1 332
7639	Crew Compartment Fire Extinguisher Nozzles	333-1 333
7639	Crew Compartment, Rear, Fire Extinguisher Nozzles (USBL EFF 345 and Above)	334-1 334
7639	Engine Compartment Halon Discharge Tubes and Fittings	335-1 335
7639	Fire Extinguisher Brackets (USBL EFF 1 thru 344)	336-1 336
7639	Crew Compartment Fire Extinguisher Brackets (USBL EFF 345 and Above)	337-1 337
7639	Engine Compartment Fire Extinguisher Brackets (USBL EFF 345 and Above)	338-1 338
7639	Engine Compartment Fire Extinguisher Mounting Sub-Brackets	339-1 339
7639	Engine AFES-Engine Compartment Fire Sensing Components . . .	340-1 340
7639	Engine AFES-Thermal Wire Attaching Components	341-1 341
7639	Engine AFES-Electrical Relays	342-1 342
7639	Engine AFES-Remote Status Indicator (RSI)	343-1 343
7639	Engine Compartment Test and Alarm (T/A) Panel	344-1 344
7639	Optical Fire Sensing Assemblies (OFSA)	345-1 345
7639	Crew AFES Standard Control Electronic Amplifier (SCEA) . . .	346-1 346
7639	Crew Compartment Test and Alarm (T/A) Panel	347-1 347
7639	AFES Manual Discharge Handle and Associated Parts	348-1 348
7639	AFES Manual Discharge Cable Attaching Hardware	349-1 349
7639	AFES Manual Discharge Actuator Assembly	350-1 350
Group 7&15	Identification and Instruction Plates	
7645	AFES Bottle Warning Labels (USBL EFF 1 thru 344)	351-1 351
7645	AFES Bottle Warning Labels (USBL EFF 345 and Above)	352-1 352
7645	AFES Engine and Crew Compartment Test and Alarm Panel Caution Labels	353-1 353
Group 91	Chemical, Biological, and Radiological (CBR) Equipment	
Group 9111	Gas-Particulate Filter Units	
9111	NBC Ventilated Face Piece System, M2A2 Air Purifier	354-1 354
9111	NBC Ventilated Face Piece System, M2A2 Air Purifier Guard	355-1 355
9111	NBC Ventilated Face Piece System, M2A2 Air Purifier Frame Assembly	356-1 356
9111	NBC Ventilated Face Piece System, M3 Electric Air Heater and Adapters	357-1 357
9111	NBC Ventilated Face Piece System, Commander's Station Heater to Connector Hoses	358-1 358
9111	NBC Ventilated Face Piece System, Driver's Station Heater to Connector Hoses	359-1 359
9111	NBC Ventilated Face Piece System, Left Side Crew Upper Station Heater to Connector Hoses	360-1 360
9111	NBC Ventilated Face Piece System, Left Side Crew Lower Station Heater to Connector Hoses	361-1 361

TABLE OF CONTENTS-Continued

		Page	Illus Figure
Group 9130	Warning And Detection Systems		
	9130 NBC Ventilated Face Piece System, M43 NBC Alarm		
	Detector Mounting Bracket (Vehicles 1 thru 377)	362-1	362
	9130 NBC Ventilated Face Piece System, M43 NBC Alarm		
	Detector Mounting Bracket (Vehicles 378 and Above)	363-1	363
	9130 NBC Ventilated Face Piece System, M42 NBC Alarm		
	Chassis Base	364-1	364
	9130 NBC Remote Detector Terminals	365-1	365
Group 94	Repair Kits		
Group 9401	Repair Kits		
	9401 Repair Kits	KITS-1	KIT
Group 95	General Use Standardized Parts		
Group 9501	Bulk Material		
	9501 Bulk Material	BULK-1	BULK
Section III.	Special Tools List		
Group 26	Tools and Test Equipment		
Group 2604	Special Tools		
	2604 Special Tools	366-1	366
Section IV.	Cross-Reference Indexes		
	National Stock Number Index	I-1	
	Part Number Index	1-62	
	Figure and Item Index	1-191	

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

Section I. INTRODUCTION

1. SCOPE.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of organizational, direct support, and general support maintenance of the M992 Carrier, Ammunition, Tracked. It authorizes the requisitioning, issue, and disposition of spares, repair parts, and special tools as indicated by the source, maintenance, and recoverability (SMR) codes.

 
2. GENERAL.

In addition to Section 1, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

- a. **Section II. Repair Parts List** A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II.
- b. **Section III. Special Tools List.** A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL for the performance of maintenance.
- c. **Section IV. Cross-reference Index** A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration/figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGE, and part numbers.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III).

- a. **ITEM NO. [Column (1)].** Indicates the number used to identify items called out in the illustration.
- b. **SMR CODE [Column (2)].** The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

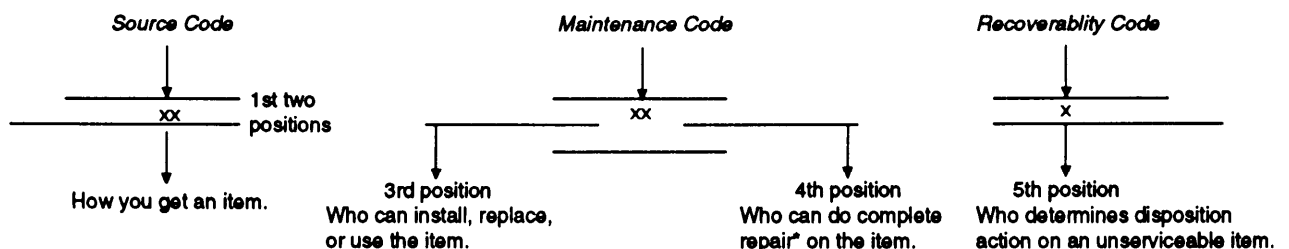

* **Complete Repair:** Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

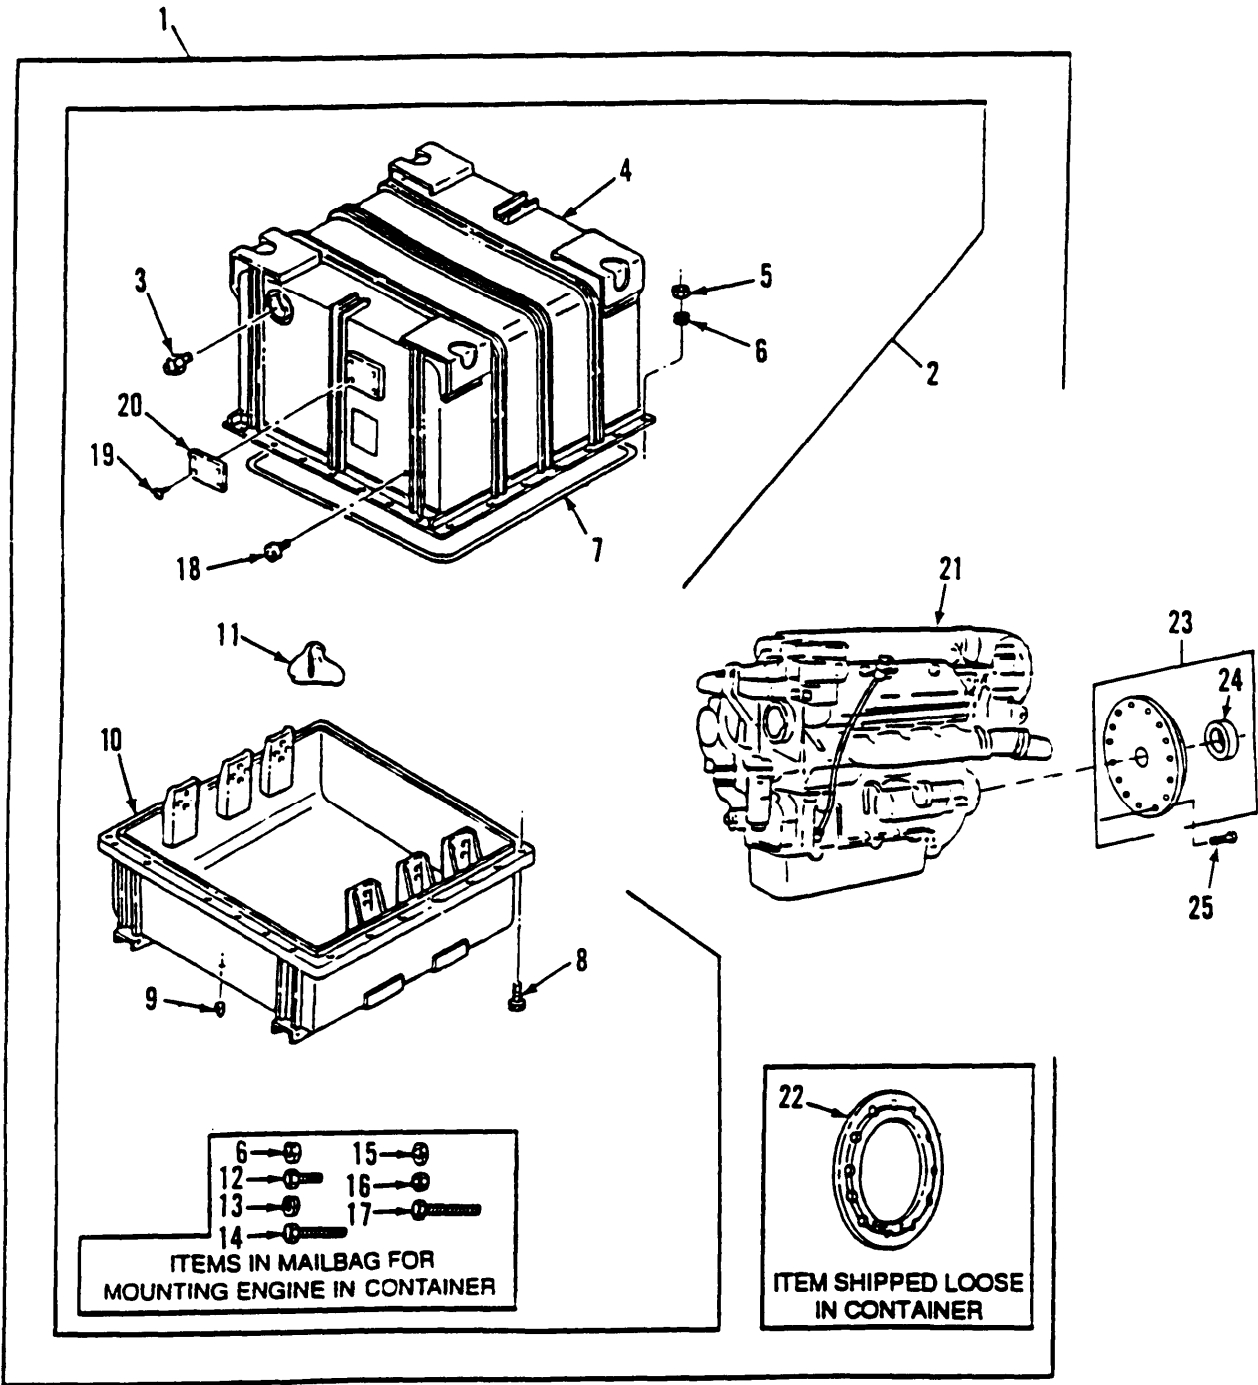 


Figure 1. Engine and Container Assembly

SECTION II

TM9-2350-267-24P

(1) ITEM NO	(2) SMR CODE	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODES (UOC)	(6) QTY
GROUP 01 ENGINE					
GROUP 0100 ENGINE ASSEMBLY					
FIG.1 ENGINE AND CONTAINER ASSEMBLY					
1	PAFHD	19207	5705713	ENGINE,W CONTAINER SEE TM9-2815-202-34P FOR PARTS BREAKDOWN	1
2	PAFHD	19207	12268285	SHIPPING AND STORAG	1
3	PAFZZ	10001	2642880	VALVE,BREATHER	1
4	XAFZZ	19207	12268287	CONTAINER,UPPER	1
5	PAFZZ	13305	235C7	NUT,PLAIN,HEXAGON	28
6	PAFZZ	96906	MS35338-48	WASHER, LOCK	32
7	PAFZZ	19207	12268291	SEAL, NONMETALLIC	1
8	PAFZZ	80204	B1821BH050C175N	SCREW, CAP, HEXAGON	28
9	PAFZZ	96906	MS20913-6S	PLUG, PIPE	1
10	XAFZZ	19207	12268286	CONTAINER LOWER	1
11	PAFZZ	19207	10890481	BAG, MAIL	1
12	PAFZZ	96906	MS35338-47	SCREW, CAP, HEXAGON	4
13	PAFZZ	96906	MS35338-47	WASHER, LOCK	2
14	PAFZZ	80204	B1821BH044C325N	SCREW, CAP, HEXAGON	2
15	PAFZZ	96906	MS27183-17	WASHER, FLAT	2
16	PAFZZ	96906	MS51967-11	NUT, PLAIN, HEXAGON	2
17	PAFZZ	80204	B1821BH050C500N	SCREW, CAP, HEXAGON	4
18	PAFZZ	00334	SK2155	INDICATOR, HUMIDITY	1
19	PAFZZ	96906	MS21318-46	SCREW, DRIVE	4
20	PAFZZ	19207	7973326	PLATE, IDENTIFICATIO	1
21	XAFHD	19207	12260210	ENGINE,DIESEL SEE TM9-2815-202-34P FOR PARTS BREAKDOWN	1
22	PAFZZ	72582	5174549	RING, MASS	1
23	PAFZZ	19207	11662761	COUPLING, SHAFT, FLEX	1
24	PAFZZ	81349	M83248/1-235	PACKING, PREFORMED	1
25	PAFZZ	96906	MS35764-1291	BOLT, SELF-LOCKING	12

END OF FIGURE

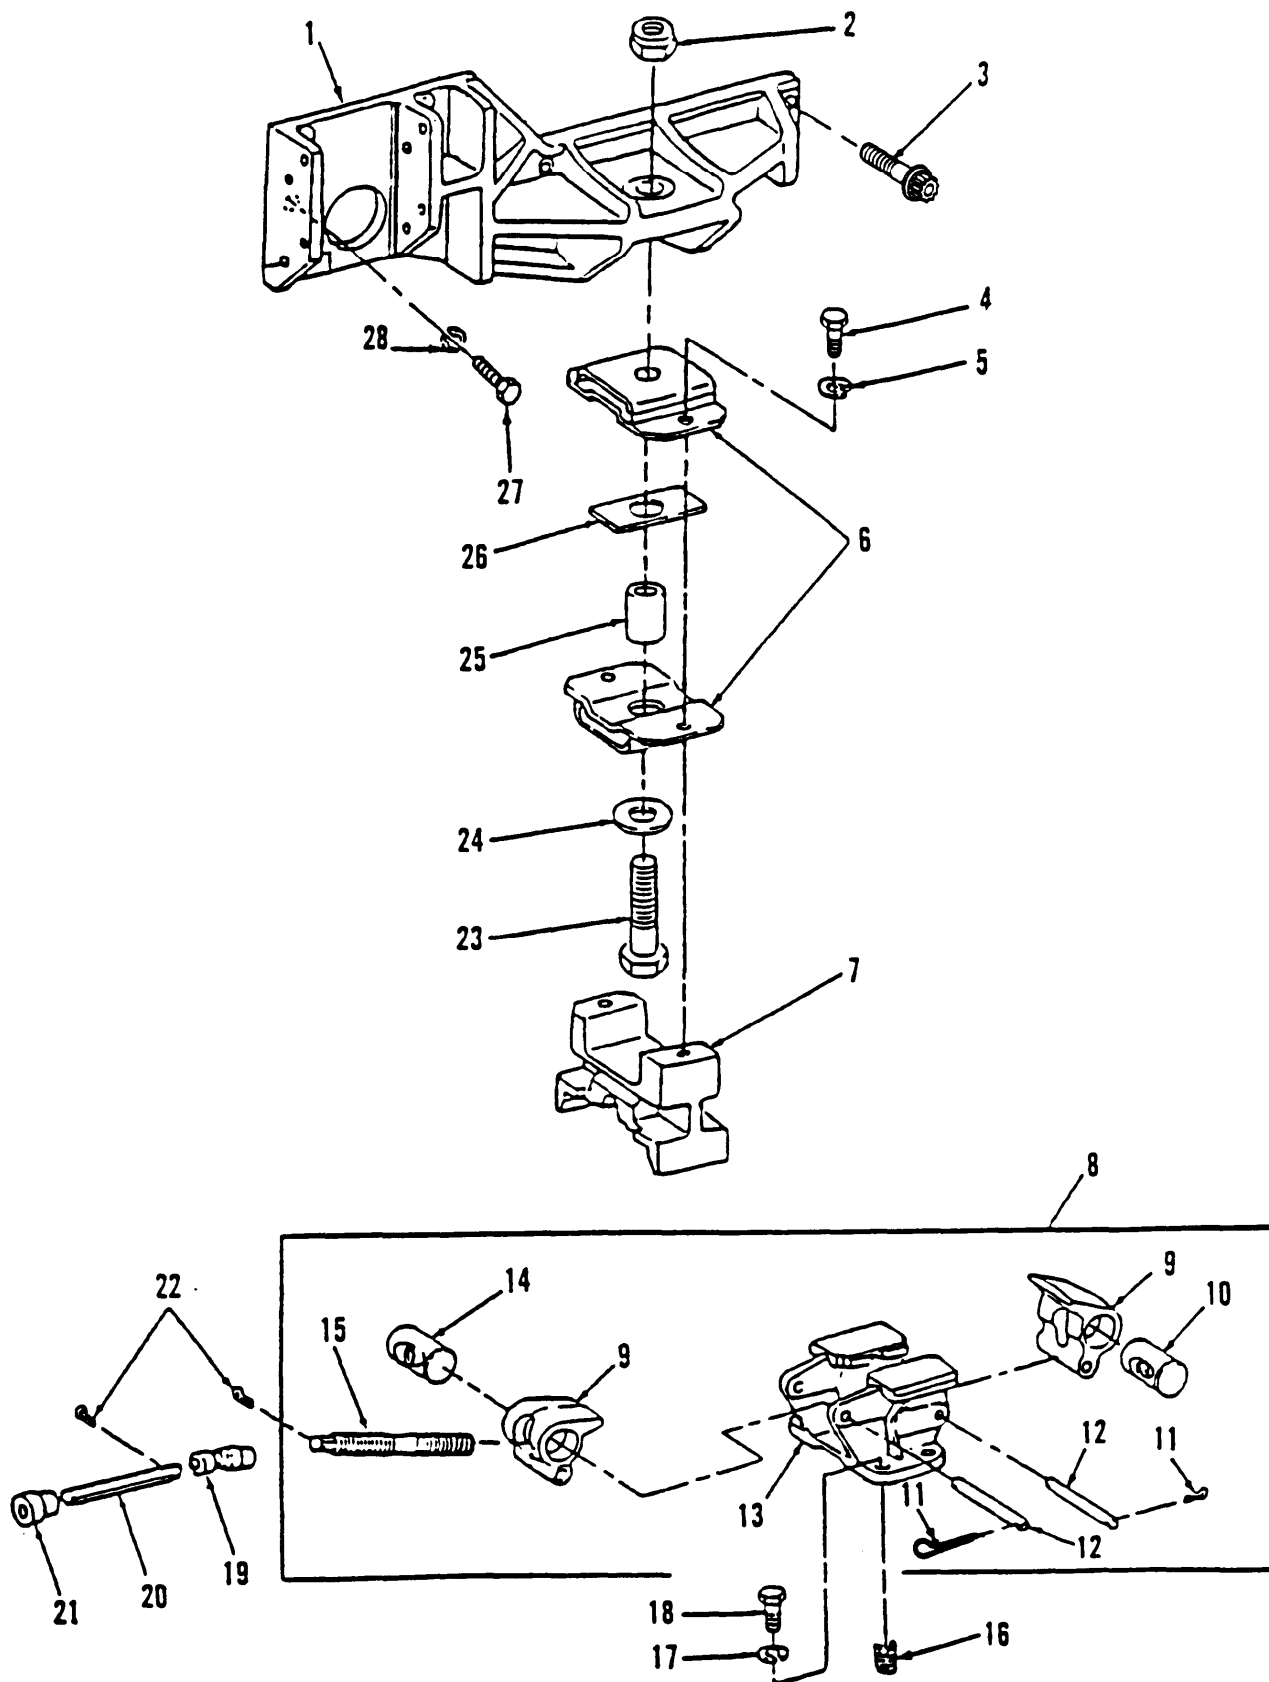 


Figure 2. Engine Mounting Base Assembly, Mounts and Brackets

(1) ITEM NO	(2) SMR CODE	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODES (UOC)	(6) QTY
GROUP 0100 ENGINE ASSEMBLY FIG.2 ENGINE MOUNTING BASE ASSEMBLY, MOUNTS AND BRACKETS					
1	PA0ZZ	19207	10922919	BRACKET, ENGINE ACCE	1
2	PA0ZZ	96906	MS51922-68	NUT, SELF-LOCKING, HE	1
3	PA0ZZ	19207	10930585	SCREW, SELF-LOCKING	8
4	PA0ZZ	96906	MS90727-136	SCREW, CAP, HEXAGON H	2
5	PA0ZZ	96906	MS35338-68	WASHER, LOCK	2
6	PC0ZZ	19207	10917096	MOUNT, RESILIENT	2
7	PA0ZZ	19207	10922512	BRACKET, ENGINE MOUN	1
8	PAFFF	19207	7527607	BRACKET, MOUNTING	1
9	PAFZZ	19207	7525543	JAW ENGINE MOUNTING	2
10	PAFZZ	19207	7525381	NUT, PLAIN, BARREL	1
11	PAFZZ	96906	MS24665-353	PIN, COTTER	4
12	PAFZZ	19207	7525465	PIN, STRAIGHT, HEADLE	2
13	PAFZZ	19207	7527609	BRACKET, MOUNTING	1
14	PAFZZ	19207	7525380	NUT, PLAIN, BARREL	1
15	PAFZZ	19207	7355451	TIE ROD, TENSIONINING	1
16	PAFZZ	29372	KNHH1018J-14	INSERT, SCREW THREAD	4
17	PA0ZZ	96906	MS35338-69	WASHER, LOCK	4
18	PA0ZZ	96906	MS90727-164	SCREW, CAP, HEXAGON H	4
19	PA0ZZ	03705	16-612	UNIVERSAL JOINT	1
20	PA0ZZ	19207	10942227	BAR, LOWER, ENGINE MO	1
21	PC0ZZ	19207	10922511	BUSHING, NONMETALLIC	1
22	PA0ZZ	96906	MS24665-497	PIN, COTTER	2
23	PA0ZZ	96906	MS90727-219	SCREW, CAP, HEXAGON H	1
24	PA0ZZ	96906	MS27183-25	WASHER, FLAT	1
25	PA0ZZ	19207	10922510	SPACER, SLEEVE	1
26	PA0ZZ	19207	10936511	SPACER, PLATE	1
27	PA0ZZ	80204	B1821BH038C150N	SCREW, CAP, HEXAGON H	3
28	PA0ZZ	96906	MS35338-65	WASHER, LOCK	3

END OF FIGURE

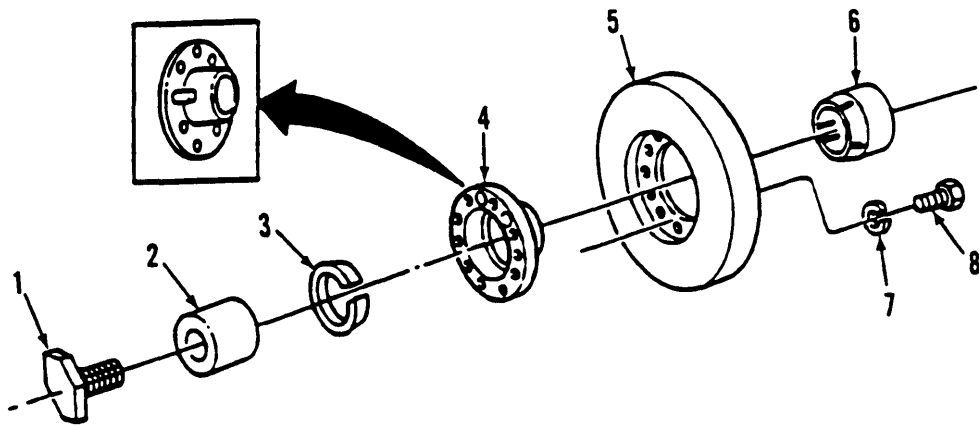 


Figure 3. Flywheel Vibration Damper

SECTION II

TM9-2350-267-24P

(1) ITEM NO	(2) SMR CODE	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODES (UOC)	(6) QTY
GROUP 0102 CRANKSHAFT					
FIG.3 FLYWHEEL VIBRATION DAMPER					
1	PAFZZ	72582	5130479	BOLT,MACHINE	1
2	PAFZZ	72582	5132357	BUSHING,SLEEVE	1
3	PAFZZ	72582	5162811	CONE,VIBRATION DAMP	1
4	PAFZZ	72582	5186050	HUB,VIBRATION DAMPE	1
5	PAFZZ	72582	8922491	DAMPER,VIBRATION SHIPPED LOOSE WITH ENGINE IN CONTAINER	1
6	PAFZZ	72582	5134917	RING,VIBRATION	1
7	PAFZZ	96906	MS35338-47	WASHER,LOCK SHIPPED LOOSE WITH ENGINE IN CONTAINER	6
8	PAFZZ	96906	MS90727-84	SCREW,CAP,HEXAGON H SHIPPED LOOSE WITH ENGINE IN CONTAINER	6

END OF FIGURE

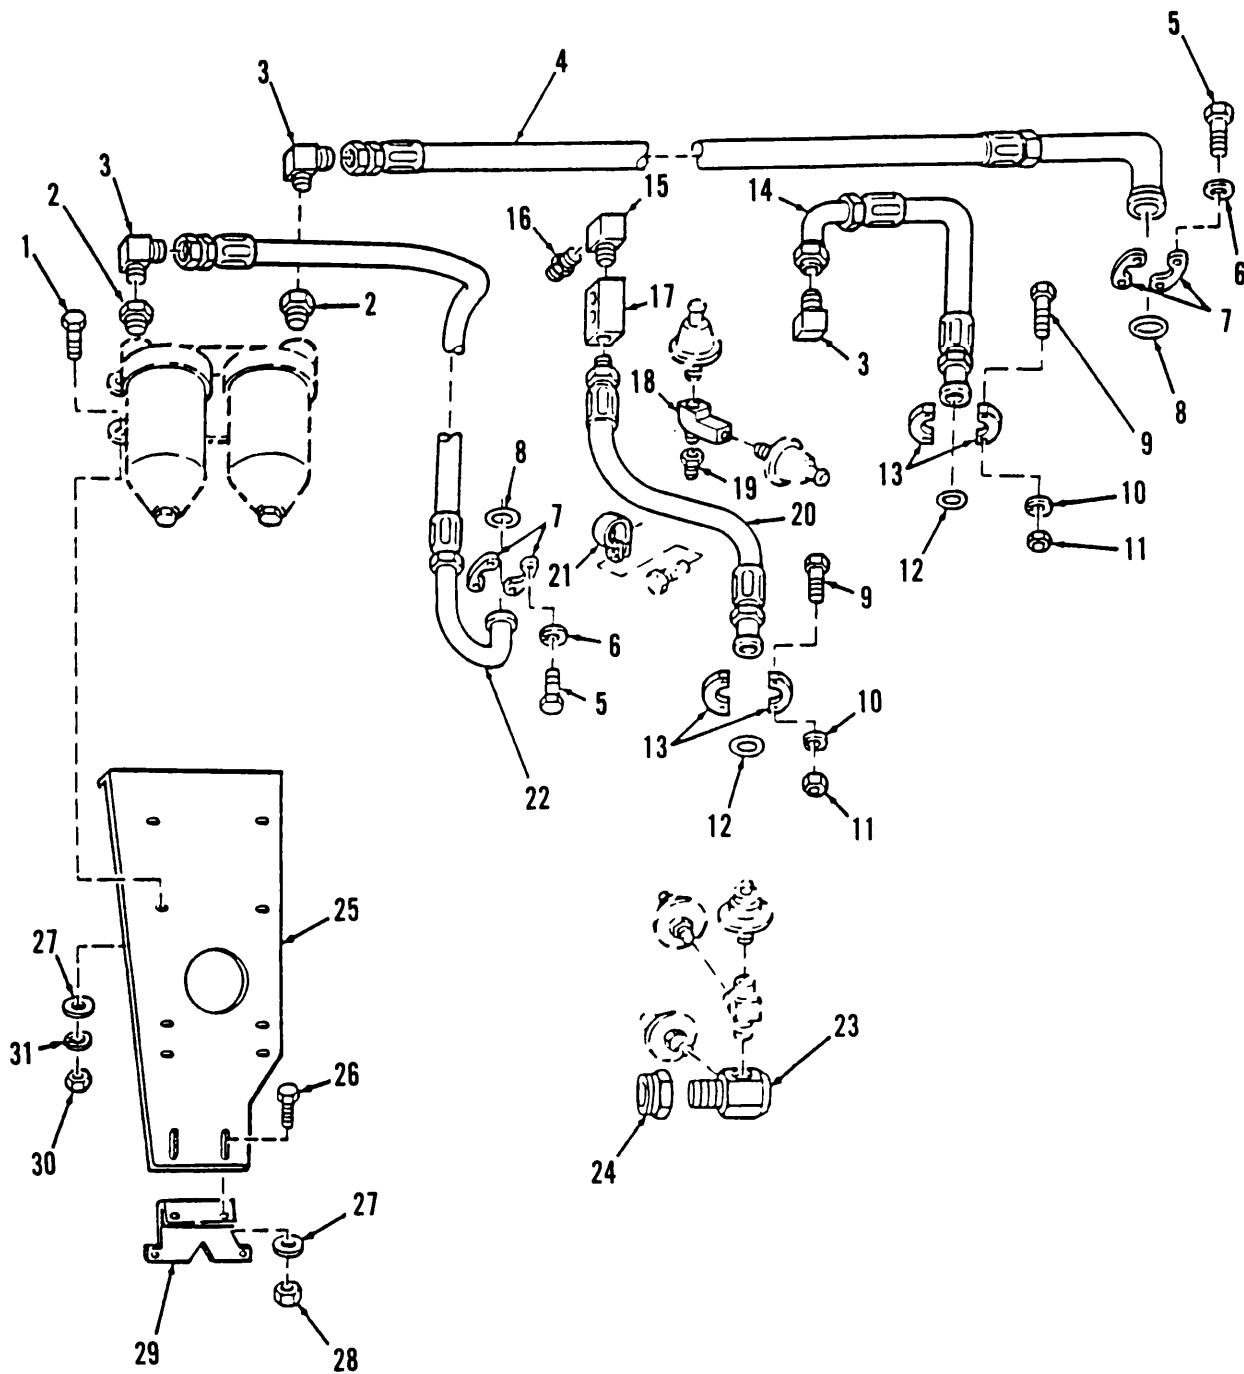 


Figure 4. Engine Oil Filter Hoses, Mount Assembly and Transmission Oil Hoses, and Oil Transmitter Fittings

(1) ITEM NO	(2) SMR CODE	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODES (UOC)	(6) QTY
GROUP 0106 ENGINE LUBRICATION SYSTEM FIG.4 ENGINE OIL FILTER HOSES, MOUNT ASSEMBLY AND TRANSMISSION OIL HOSES, AND OIL TRANSMITTER FITTINGS					
1	PA0ZZ	80204	B1821BH038F125N	SCREW,CAP,HEXAGON H	4
2	PA0ZZ	19207	10921184	BUSHING,PIPE	2
3	PA0ZZ	96906	MS20822-16	ELBOW,PIPE TO TUBE	3
4	PA0ZZ	19207	10921189	HOSE ASSEMBLY, NONME	1
5	PA0ZZ	80204	B1821BH044C125N	SCREW,CAP,HEXAGON H	8
6	PA0ZZ	96906	MS35338-66	WASHER, LOCK	8
7	PA0ZZ	19207	8395524	FLANGE,PIPE,SWIVEL	4
8	PA0ZZ	96906	MS29513-222	PACKING,PREFORMED	2
9	PA0ZZ	80204	B1821BH050C350N	SCREW,CAP,HEXAGON H	8
10	PA0ZZ	96906	MS35338-67	WASHER, LOCK	8
11	PA0ZZ	96906	MS51967-15	NUT,PLAIN,HEXAGON	8
12	PA0ZZ	88044	AN123888	PACKING,PREFORMED	2
13	PA0ZZ	19207	8395525	FLANGE,PIPE	4
14	PA0ZZ	19207	10921190	HOSE ASSEMBLY,NONME	1
15	PA0ZZ	19207	454113	ELBOW,PIPE	1
16	PA0ZZ	96906	MS51953-125	NIPPLE,PIPE	1
17	PA0ZZ	19207	10921164	MANIFOLD,ENGINE COO	1
18	PA0ZZ	81343	4-4-4 140424C	TEE,PIPE	1
19	PA0ZZ	88044	AN912-2J	BUSHING,PIPE	1
20	PA0ZZ	19207	10921186	HOSE ASSEMBLY,NONME	1
21	PA0ZZ	19207	12268212	CLAMP,LOOP	1
22	PA0ZZ	19207	10921191	HOSE ASSEMBLY,NONME	1
23	PA0ZZ	19207	10922811	FITTING,CLUSTER,3 W	1
24	PA0ZZ	19207	7324411	SEAL NUT,PIPE	1
25	PA0ZZ	19207	10921166	BRACKET,MOUNTING	1
26	PA0ZZ	96906	MS90727-60	SCREW,CAP,HEXAGON H	2
27	PA0ZZ	19200	10910174-3	WASHER,FLAT	6
28	PA0ZZ	96906	MS21044N6	NUT,SELF-LOCKING,HE	2
29	PA0ZZ	19207	10921167	BRACKET,ANGLE	1
30	PA0ZZ	96906	MS51968-8	NUT,PLAIN,HEXAGON	4
31	PA0ZZ	96906	MS35338-65	WASHER, LOCK	4

END OF FIGURE