 


TECHINICAL MANUAL
UNIT, DIRECT SUPPORT AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
FOR
CARRIER, AMMUNITION, TRACKED

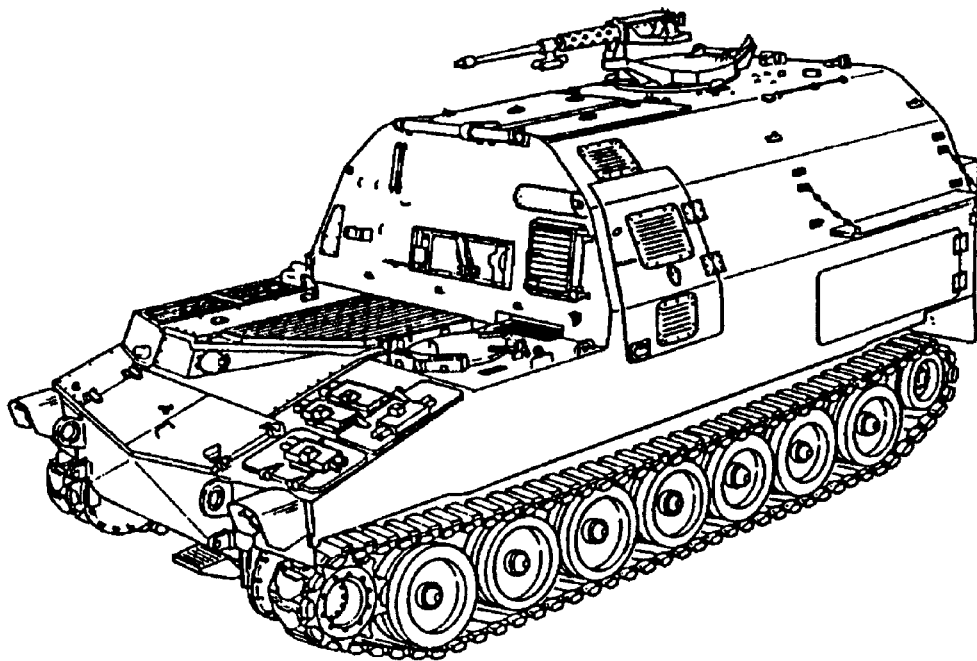

M992A1
(2350-01-352-3021)

EIC:AE6

Approved for public release; distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY
OCTOBER 1993

**UNIT, DIRECT SUPPORT, AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
FOR
CARRIER, AMMUNITION, TRACKED
M992A1
(NSN 2350-01-352-3021)
EIC:AE6**

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2, located in the back of this manual, direct to: Commander, U.S. Army Tank-Automotive Command, ATTN: AMSTA-MB, Warren, MI 48397-5000. A reply will be furnished to you.

Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

	Page	Illus Figure
Section I. INTRODUCTION.....	1	
Section II. REPAIR PARTS LIST		
Group 01 Engine		
Group 0100 Engine Assembly		
0100 Engine and Container.....	1-1	1
0100 Engine Mounting Base Assembly, Mounts and Brackets	2-1	2
Group 0102 Crankshaft		
0102 Flywheel Vibration Damper.....	3-1	3
Group 0106 Engine Lubrication System		
0106 Engine Oil Filter Hoses, Mount Assembly and Transmission Oil Hoses, Oil Transmitter Fittings, and Protective Cover	4-1	4
0106 Engine and Transmission Oil Sampling System	5-1	5
0106 Engine Oil Filter	6-1	6
0106 Oil Pan Plug and Oil Fill Cap.....	7-1	7
0106 Liquid (Lube Oil) Level Gage.....	8-1	8
0106 Cylinder Valve Cover Breather Hose.....	9-1	9
Group 0108 Manifolds		
0108 Exhaust Manifolds	10-1	10
Group 0109 Accessory Driving Mechanisms		
0109 Accessory Drive Assembly and Mounting Hardware.....	11-1	11

TABLE OF CONTENTS-Continued

		Page	Illus Figure
Group 03	Fuel System		
Group 0302	Fuel Pumps		
	0302 Right Side Lower Fuel Tank Pump and Hanger Assembly	12-1	12
	0302 Left Side Lower Fuel Tank Pump and Hanger Assembly	13-1	13
	0302 Electrical Fuel Pump	14-1	14
	0302 Fuel Pump, Engine Driven	15-1	15
Group 0304	Air Cleaner		
	0304 Air Cleaner Duct, Hoses and Clamps	16-1	16
	0304 Air Cleaner and Hoses	17-1	17
	0304 Air Cleaner Fan Assembly.....	18-1	18
	0304 Air Cleaner Assembly, Filter Element and Gaskets	19-1	19
Group 0305	Supercharger, Blower, Turbocharger or Altitude Compensator		
	0305 Turbocharger Lines and Fittings	20-1	20
Group 0306	Tanks, Lines, Fittings, Headers		
	0306 Fuel Lines.....	21-1	21
	0306 Fuel Lines and Fittings	22-1	22
	0306 APU Fuel Lines and Fittings.....	23-1	23
	0306 Engine Fuel Lines and Fittings.....	24-1	24
	0306 Upper and Lower Fuel Tanks and Related Parts	25-1	25
	0306 Upper Fuel Tank Retainer, Strap and Channel Assembly	26-1	26
	0306 Upper Fuel Tank Heat Shield.....	27-1	27
	0306 Upper Fuel Tank Heat Shield Seals.....	28-1	28
Group 0309	Fuel Filters		
	0309 Fuel Filter and Fuel Strainer.....	29-1	29
Group 0311	Engine Starting Aids		
	0311 Glow Plug and Controller	30-1	30
Group 0312	Accelerator, Throttle, or Choke Controls		
	0312 Accelerator and Throttle Control Linkage.....	31-1	31
	0312 Engine Fuel Shut Off Control	32-1	32
Group 04	Exhaust System		
Group 0401	Muffler and Pipes		
	0401 Engine Exhaust Piping and Insulation.....	33-1	33
Group 05	Cooling System		
Group 0501	Radiator, Evaporative Cooler, or Heat Exchanger		
	0501 Radiator Surge Tank, Valve Hoses and Fittings	34-1	34
	0501 Engine Coolant Radiator and Mountings.....	35-1	35
	0501 Aeration Detector Assembly and Wiring Harness	36-1	36
Group 0502	Cowling, Deflectors, Air Ducts, Shrouds, Etc		
	0502 Engine Coolant Shroud and Mountings.....	37-1	37
Group 0503	Water Manifold, Headers, Thermostats, and Housing		
	0503 Engine Coolant Thermostats, Hoses, Tubes and Fittings.....	38-1	38

TABLE OF CONTENTS-Continued

		Page	Illus Figure
Group 0505	Fan Assembly		
	0505 Engine Cooling Fan Drive Assembly.....	39-1	39
	0505 Engine Cooling Vane Axial Fan (NOAAH)	40-1	40
Group 06	Electrical System		
Group 0601	Generator, Alternator		
	0601 Generator (Alternator)	41-1	41
Group 0602	Generator Regulator (Voltage)		
	0602 Generator Voltage Regulator, Starter and Bilge Pump Relays	42-1	42
	0602 Rectifier Assembly.....	43-1	43
	0602 Winterization Kit Receptacle Cover Plate.....	44-1	44
Group 0603	Starting Motor		
	0603 Engine Electrical Starter and Related Parts	45-1	45
Group 0607	Instrument or Engine Control Panel		
	0607 Driver's Portable Instrument Panel Assembly	46-1	46
	0607 Driver's Portable Instrument Panel Wiring Harness.....	47-1	47
	0607 Low Coolant Indicator Light Assembly and Wiring Harness	48-1	48
	0607 Driver's Instrument Panel Assembly	49-1	49
	0607 Panel Assembly, Drivers	50-1	50
	0607 Driver's Instrument Panel Support Assembly.....	51-1	51
	0607 Accessory Control Box Assembly	52-1	52
	0607 Accessory Control Box Cable Assembly.....	53-1	53
	0607 Accessory Control Box Wiring Harness	54-1	54
	0607 Accessory Control Box Power Lead.....	55-1	55
	0607 Accessory Control Box Ventilator Blower Switch Lead Assembly	56-1	56
	0607 Accessory Control Box Assembly, Electrical Leads.....	57-1	57
	0607 Circuit Breaker Panel and Chemical Agent Detector Circuit Breaker.....	58-1	58
	0607 Circuit Breaker Panel, Hull Electrical.....	59-1	59
	0607 Air Cleaner Blower Relay and Intake Fuel Pump System Relay	60-1	60
	0607 APU Voltage Regulator	61-1	61
	0607 Hydraulic Control Gage Panel Assembly	62-1	62
	0607 Hydraulic Control Gage Panel Wiring Harness	63-1	63
	0607 NBC Power Control Box.....	64-1	64
	0607 NBC Power Control Box Harness Assemblies.....	65-1	65
	0607 NBC Power Control Box Electrical Leads	66-1	66
	0607 STE/ICE Resistor Box Assembly	67-1	67
	0607 STE/ICE Control Box Wiring Harness.....	68-1	68
	0607 Headlight Dimmer Switch	69-1	69
Group 0608	Miscellaneous Items		
	0608 Master Relay and Housing Assembly	70-1	70
	0608 Auxiliary Power Unit Control Box Assembly	71-1	71

TABLE OF CONTENTS-Continued

	Page	Illus Figure
0608 Auxiliary Power Unit Control Box High Air Temperature and Low Oil Pressure Indicator Lights.....	72-1	72
0608 Auxiliary Power Unit Control Box Wiring Harness Assembly	73-1	73
0608 Rear Door Upper Control Switch.....	74-1	74
0608 Rear Door Lower Control Switch.....	75-1	75
0608 Conveyor Override Safety Switch.....	76-1	76
0608 Combat Override Switch Assembly.....	77-1	77
0608 Intercom Power Supply Bracket and Attaching Hardware	78-1	78
0608 Radio Power Supply Mounting Hardware.....	79-1	79
0608 Antenna Attaching Hardware	80-1	80
0608 Intercom Cable Attaching Hardware	81-1	81
0608 Exterior Phone Terminals.....	82-1	82
0608 Parking Brake Light and Stoplight Control Switches.....	83-1	83
0608 Engine Electrical Wiring Harness Bracket	84-1	84
 Group 0609 Lights		
0609 Dome Light Assembly	85-1	85
0609 Headlight Mount Assembly.....	86-1	86
0609 Headlight Assembly.....	87-1	87
0609 Headlight Resilient Mount Wiring Harness.....	88-1	88
0609 Service Taillight, Stop and Blackout Taillight	89-1	89
0609 Master Warning Light Assembly	90-1	90
 Group 0610 Sending Units and Warning Switches		
0610 Powerplant Pressure and Temperature Switches.....	91-1	91
 Group 0612 Batteries, Storage (Wet or Dry)		
0612 Storage Batteries, Cables and Supports.....	92-1	92
 Group 0613 Hull or Chassis Wiring Harness		
0613 Hull Front Wiring Harness	93-1	93
0613 Engine Disconnect Bracket to Driver's Bulkhead Wiring Harness.....	94-1	94
0613 Bulkhead to Override Switch Lead Assembly	95-1	95
0613 Fuel Pump Circuit to Circuit Breaker Leads	96-1	96
0613 Diode Harness Assembly	97-1	97
0613 Engine Bracket to Driver's Bulkhead Wiring Harness.....	98-1	98
0613 Powerpack Wiring Harness	99-1	99
0613 Engine Disconnect Bracket to Batteries Lead Assembly	100-1	100
0613 Starter to Engine Electrical Disconnect.....	101-1	101
0613 Engine Electrical Ground Lead.....	102-1	102
0613 Rectifier to Regulator Wiring Harness.....	103-1	103
0613 Battery to Drivers Bulkhead Cable Assembly.....	104-1	104
0613 Bulkhead to Portable Instrument Panel Wiring Harness.....	105-1	105
0613 Cargo Compartment Power Cable Assembly	106-1	106
0613 Cargo Compartment Wiring Harness	107-1	107
0613 Drivers Bulkhead to Batteries and Shunt Lead Assembly.....	108-1	108
0613 Driver's Bulkhead to Slave Receptacles	109-1	109
0613 Driver's Bulkhead to APU Voltage Regulator Wiring Harness	110-1	110
0613 Drivers Instrument Panel Wiring Harness.....	111-1	111
0613 In Tank Fuel Pumps and Generator System Lead Assembly	112-1	112

TABLE OF CONTENT-Continued

	Page	Illus Figure
0613 Air Cleaner Blower Lead Assembly.....	113-1	113
0613 Circuit Breaker to "Ye Connector Lead Assembly.....	114-1	114
0613 Hull Lighting, Accessory Control Box, Personnel Heater and Air Cleaner Blower Wiring Harness	115-1	115
0613 Passive Night Viewer Cable Assembly	116-1	116
0613 Rear NATO Intervehicular Slave Connector	117-1	117
0613 Front NATO Intervehicular Slave Connector.....	118-1	118
0613 NATO Intervehicular Slave Connector Ground Lead	119-1	119
0613 NBC Power Control Box to NBC Heaters and Air Purifier Wiring Harness.....	120-1	120
0613 NBC System Ground Lead.....	121-1	121
0613 NBC Air Purifier Filter/Blower Wiring Harness	122-1	122
0613 Conveyor Control Switch to Conveyor Override Switch Cable Assembly.....	123-1	123
0613 Combat Override Switch Ground Lead	124-1	124
0613 Auxiliary Power Unit Control Box to APU Voltage Regulator Cable Assembly.....	125-1	125
0613 Intervehicular Ground Cable Assembly.....	126-1	126
0613 Telephone Wiring Harness.....	127-1	127
0613 Trailer Receptacle and Cable Assembly	128-1	128
0613 Chemical Agent Detector Wiring Harness	129-1	129
0613 STE/ICE Wiring Harness, DCA to Driver's Bulkhead.....	130-1	130
0613 STE/ICE Wiring Harness, Drivers Bulkhead to Engine Disconnect	131-1	131
0613 STE/ICE Wiring Harness, Engine Transducers to Engine Electrical Disconnect	132-1	132
0613 SCEA Cable Assembly.....	133-1	133
0613 OFSA Cable Assembly.....	134-1	134
0613 AFES Engine Cable Assembly.....	135-1	135
0613 Crew Fire Extinguisher Cable Assembly.....	136-1	136
0613 Accessory Control Box to AFES Harness, AFES Relays and Personnel Ventilation Blower Wiring Harness.....	137-1	137
0613 Automatic Fire Extinguisher Circuit Breaker Cable Assembly	138-1	138
0613 Wiring Harness Attaching Hardware	139-1	139
0613 Harness Guards and Taillight Wiring Covers	140-1	140
Group 0616 Ventilating Equipment		
0616 Personnel Ventilating Air Duct Fan (NOAAH)	141-1	141
Group 07 Transmission		
Group 0705 Transmission Shifting Components		
0705 Transmission Shift Control Linkage and Neutral Safety Switch.....	142-1	142
0705 Transmission Shift Control Quadrant Assembly	143-1	143
Group 0710 Transmission Assembly (Hydraulic, Hydrostatic, Torquamatic, Crossdrive) and Associated Parts		
0710 Transmission Support	144-1	144
0710 Transmission and Shipping Container	145-1	145

TABLE OF CONTENTS-Continued

		Page	Illus Figure
Group 0721	Coolers, Pumps, Motors		
	0721 Transmission Supports, Pressure Check Plugs, Oil Screen, Gage Rod and Inspection Plates.....	146-1	146
Group 08	Transfer, Final Drive, Planetary, and Drop Gearbox Assemblies		
Group 0801	Power Transfer, Final Drive, Manetary, or Drop Gearbox Assemblies		
	0801 Power Input Transfer Breather and Mount.....	147-1	147
	0801 Power Transfer and Shipping Container Assembly.....	148-1	148
	0801 Universal Joints.....	149-1	149
	0801 Fnal Drive with Shipping Container Assembly.....	150-1	150
	0801 Fnal Drive Assembly	151-1	151
	0801 Final Drive Skid Plates	152-1	152
Group 12	Brakes		
Group 1201	Handbrakes		
	1201 Parking Brake Control Linkage and Latch Assembly	153-1	153
Group 1206	Mechanical Brake System		
	1206 Service Brake Control Linkage.....	154-1	154
Group 13	Wheels and Tracks		
Group 1301	Suspension Assembly		
	1301 Torsion Bar Assemblies	155-1	155
	1301 Suspension Arm, Hub Assembly and Roadwheel.....	156-1	156
Group 1303	Track Idlers and Brackets		
	1303 Track Adjusting Idler Arm and Hub Assembly Support and Wheels.....	157-1	157
	1303 Track Adjuster Assembly	158-1	158
Group 1304	Track Drive Sprockets		
	1304 Track Drive Sprockets and Hub	159-1	159
Group 1305	Track Assembly		
	1305 Vehicle Double Pin Track Shoe Assembly.....	160-1	160
Group 14	Steering		
Group 1401	Mechanical Steering Gear Assembly		
	1401 Steering Control Linkage.....	161-1	161
Group 15	Frame, Towing Attachments, Drawbars, and Articulation Systems		
Group 1503	Pintles and Towing Attachments		
	1503 Towing Pintle Assembly	162-1	162
	1503 Tow Cable Hook.....	163-1	163
	1503 TowAttachments	164-1	164
Group 16	Springs and Shock Absorbers		
Group 1604	Shock Absorber Equipment		
	1604 Suspension Shock Absorber	165-1	165
Group 18	Body, Cab, Hood, and Hull		
Group 1801	Body, Cab, Hood, and Hull Assemblies		

TABLE OF CONTENT-Continued

	Page	Illus Figure
1801 Hull Front Intake and Exhaust Grilles and Fan Access.....	166-1	166
1801 Hull Front Plates.....	167-1	167
1801 Transmission and Battery Access Doors	168-1	168
1801 Personnel Air Ventilator and Fan Filter, Door and Grille	169-1	169
1801 Engine Compartment Bulkhead Insulation, Shields and Engine Access Cover Assembly	170-1	170
1801 Top Right and Top Left Doors	171-1	171
1801 Top Left Door Hold-Open Lock	172-1	172
1801 Top Right Door Hold-Open Lock.....	173-1	173
1801 Top Center Door.....	174-1	174
1801 Top Center Door Hold-Open Lock	175-1	175
1801 Right Side Canister Door.....	176-1	176
1801 Left Side Canister Door.....	177-1	177
1801 Personnel Door	178-1	178
1801 Upper Rear Door Assembly	179-1	179
1801 Upper Rear Door Mechanical Safety Lock.....	180-1	180
1801 Lower Rear Door Assembly with Lock Handle.....	181-1	181
1801 APU Compartment Side Door	182-1	182
1801 APU Compartment Front Door.....	183-1	183
1801 APU Compartment Access Plate and Cap Assembly	184-1	184
1801 APU Compartment Soundproof Panels	185-1	185
1801 APU Compartment Louvered Grille.....	186-1	186
1801 Fuel Fill and Filter Access Door Assembly.....	187-1	187
1801 AFES Fire Extinguisher Box.....	188-1	188
1801 Antenna, Mounting Hole Plate and Commander's Station Assist Handles.....	189-1	189
1801 Driver's Portable Instrument Panel Mounting Bracket.....	190-1	190
1801 Commander's Cupola, Machine Gun Support and Ring Assemblies.....	191-1	191
1801 Commander's Cupola Hatch Door	192-1	192
Group 1802 Fenders, Running Boards with Mounting and Attaching Parts, Outriggers, Windshield Glass, Etc.		
1802 Front Fenders and Retaining Plates.....	193-1	193
1802 Rear Track Splash Guard	194-1	194
Group 1803 Driver's Hatches, Driver's Periscopes, Etc.		
1803 Driver's Hatch Cover, Latch and Torsion Bar.....	195-1	195
1803 Driver's Hatch Security Latch.....	196-1	196
1803 Driver's Hatch Cam Lock	197-1	197
1803 Driver's Periscope M45 Cover, Doors, Seals, Sleeves and Control Cams	198-1	198
Group 1804 Drain Valves, Drain Plugs, Etc.		
1804 Engine Compartment Hull Floor Plates.....	199-1	199
1804 Crew Compartment Hull Floor Plates and Drain Plugs	200-1	200
Group 1806 Upholstery, Seats, and Carpets		
1806 Driver's Seat Assembly	201-1	201
1806 Commander's Seat.....	202-1	202
1806 Commander's Seat Assembly.....	203-1	203

TABLE OF CONTENTS-Continued

	Page	Illus Figure
1806 Right Side Double Crew Seat.....	204-1	204
1806 Left Side Single Crew Seat	205-1	205
1806 Crew Compartment Fatigue Mats and Sponson Pad.....	206-1	206
Group 1808 Stowage Racks, Boxes, Straps, Carrying Cases, Cable Reels Hose Reels, Etc		
1808 Left Rear Basket	207-1	207
1808 Pioneer Kit, Towing Cable Straps, Water Can Straps and Track Fixture Straps	208-1	208
1808 Crow Bar Stop, Barrel Straps and Rack Hoist Straps	209-1	209
1808 Right Side Duffle Bag Stowage	210-1	210
1808 Left Side Duffle Bag Stowage	211-1	211
1808 Interior Stowage	212-1	212
1808 Portable Fire Extinguisher Bracket Connecting Hardware	213-1	213
1808 Commander's Binocular Securing Strap	214-1	214
1808 Track Shoe Stowage	215-1	215
1808 Fuze Stowage.....	216-1	216
1808 Drivees Stowage Box Assembly Door.....	217-1	217
1808 NBC Stowage Box.....	218-1	218
1808 Projectile Rack Stowage Box Guard Plate Assembly	219-1	219
1808 Projectile Rack Supports and Vehicle Wall-Mounted Restraints	220-1	220
1808 Projectile Rack Base	221-1	221
1808 Projectile Rack	222-1	222
1808 Projectile Rack Canister Stowage Boxes, Braces, and Rack Removal Aid	223-1	223
1808 Right Rear Canister Compartment Supports, 155mm Charges	224-1	224
1808 Right Rear Canister Compartment Shelving, 155mm Charges	225-1	225
1808 Left Rear Canister Compartment Supports	226-1	226
1808 Left Rear Canister Compartment Shelving	227-1	227
1808 Left Rear Canister Compartment Wear Strips and Guard	228-1	228
1808 Right Front Canister Compartment Shelf Assembly	229-1	229
1808 Left Front Canister Compartment Shelf Assembly.....	230-1	230
1808 Right Side Canister Restraints	231-1	231
1808 Left Side Canister Restraints.....	232-1	232
1808 Left Rear Canister Compartment Restraint Bar Assembly	233-1	233
1808 Right Rear Canister Compartment Restraint Bar Assembly	234-1	234
1808 Telephone Cable Reel and Guide with Hand Crank	235-1	235
Group 22 Body, Chassis, and Hull Accessory Items		
Group 2201 Canvas, Rubber, or Plastic Items		
2201 Shroud Assembly	236-1	236
Group 2202 Accessory Items		
2202 Heating and Ventilating Duct.....	237-1	237

TABLE OF CONTENTS Continued

		Page	Illus Figure
Group 2205	Bilge Pumps (Special Application)		
	2205 Bilge Pump.....	238-1	238
	2205 Bilge Pump Strainer and Outlet Tubing.....	239-1	239
Group 2207	Winterization Equipment		
	2207 Personnel Heater Assembly.....	240-1	240
	2207 Personnel Heater Exhaust Pipe and Hose.....	241-1	241
	2207 Personnel Heater Mounting Clamps, Saddle, Ducts, Hoses and Filter.....	242-1	242
Group 2210	Data Plates and Instruction Holders		
	2210 Hand Pump Instruction Plates.....	243-1	243
	2210 APU Control Box Identification Plate.....	244-1	244
	2210 Upper Rear Door and Conveyor Identification Plates	245-1	245
	2210 APU Fuel Filter Instruction Plate	246-1	246
	2210 Vehicle Identification Plate	247-1	247
	2210 Driver's Compartment Markers (Decals).....	248-1	248
	2210 Noise Warning Instruction Plate.....	249-1	249
	2210 Fuel Shutoff Control Identification Plate.....	250-1	250
	2210 Air Intake Grille Thermal Wire Warning Label	251-1	251
	2210 Personnel Heater Warning Signs.....	252-1	252
Group 24	Hydraulic and Fluid Systems		
Group 2400	Hydraulic and Fluid Systems		
	2400 Conveyor Support Cable Assemblies.....	253-1	253
	2400 Conveyor Stowage Strap, Cable Stowage Clips and Hanger	254-1	254
	2400 Lower Conveyor Struts.....	255-1	255
	2400 Conveyor Support Stand.....	256-1	256
	2400 Conveyor Support Stand Attaching Hardware and Springs	257-1	257
	2400 Conveyor Forward Dead-End Section and Latch Assembly	258-1	258
	2400 Conveyor Rear Dead-End Section and Latch Assembly.....	259-1	259
	2400 Conveyor Drive End Section Assembly 260-1.....	260-1	260
	2400 Conveyor Center Section Assembly 261-1	261-1	261
	2400 Conveyor Take-Up End Section Assembly	262-1	262
	2400 Conveyor Subassembly.....	263-1	263
	2400 Hydraulic Reservoir Assembly	264-1	264
Group 2401	Pump and Motor		
	2401 APU Hydraulic Pump, U-Bolt Assembly and Adapter Plate	265-1	265
	2401 Backup Hydraulic System Clutch Support and Pump Assembly	266-1	266
	2401 Backup Hydraulic System Clutch	267-1	267
	2401 Backup Hydraulic System Hand Pump Assembly and Selector Valve	268-1	268
	2401 Accumulator Lines and Fittings	269-1	269
Group 2402	Manifold and/or Control Valves		
	2402 Hydraulic Control Panel Tube Assemblies, Flow Regulator and Relief Valve	270-1	270
	2402 Hydraulic Control Panel Hose Assemblies, Shuttle Valve and Counterbalance Valve	271-1	271

TABLE OF CONTENTS-Continued

	Page	Illus Figure
2402 Hydraulic Control Panel Directional Valve Assemblies, Subplates and Bracket	272-1	272
2402 Relief Valve and Mounting Hardware.....	273-1	273
Group 2403 Accumulator and Mounting Hardware		
2403 Accumulator and Mounting Hardware	274-1	274
Group 2404 Tilt Cylinders and Tilt Crank		
2404 Upper Rear Door Hydraulic Actuator.....	275-1	275
Group 2406 Strainers, Filters, Lines, and Fittings, Etc.		
2406 Upper Rear Door Actuator Hose, Tubes and Fittings	276-1	276
2406 Hydraulic Filler and Cap, Return Line Filter, Hoses, Suction Ball Valve and Associated Parts.....	277-1	277
2406 Conveyor Hydraulic Hoses and Fittings	278-1	278
2406 APU Compartment Hydraulic Pump Hoses and Fittings.....	279-1	279
2406 Backup Hydraulic Pump Assembly Hoses and Fittings	280-1	280
2406 Backup Hydraulic System Hoses, Tubes and Fittings	281-1	281
2406 Hydraulic Return Line Tubing.....	282-1	282
Group 29 Auxiliary Generator and Engine, and Controls		
Group 2901 Generator and Engine Assembly		
2901 APU Assembly, APU Support Assembly and Resilient Mounts.....	283-1	283
2901 APU Support Stand and Hourmeter (Time Totalizing Meter).....	284-1	284
Group 2916 Engine Lubrication System		
2916 APU Oil Drain Line Extension	285-1	285
2916 APU Oil Filler Cap, Filter Element, Gage, Lines and Fittings.....	286-1	286
Group 2919 Driving Mechanisms		
2919 APU Driving Mechanism Assembly.....	287-1	287
Group 2933 Engine Air Cleaner		
2933 APU Air Cleaner and Air Intake Ducting.....	288-1	288
Group 2937 Engine Fuel Filter		
2937 APU Fuel Filters	289-1	289
Group 2938 Engine Priming System, Lines and Pumps		
2938 APU Fuel Lines and Fittings.....	290-1	290
Group 2941 Engine Muffler, Exhaust, and Tail Pipes		
2941 APU Exhaust Muffler, Pipes and Shield.....	291-1	291
Group 2952 Engine Cowling Deflectors, Air Ducts, and Shrouds		
2952 APU Exhaust Cooling Ducts and Engine Shrouds.....	292-1	292
Group 2961 Starter/Generator Assembly		
2961 APU Generator and Mounting Strap	293-1	293
2961 APU Generator Air Duct, Plenum and Data Plate	294-1	294

TABLE OF CONTENTS-Continued

		Page	Illus Figure
Group 2963	Starter, Solenoids, Circuit Breakers, Wiring and Switches		
	2963 APU Relay and Housing Assembly	295-1	295
	2963 APU Hydraulic Pressure Switch Assembly	296-1	296
	2963 APU Preheat Solenoid Leads.....	297-1	297
	2963 APU Branched Wiring Harness	298-1	298
	2963 APU Sending Units Wiring Harness	299-1	299
	2963 APU Hourmeter Wiring Harness	300-1	300
	2963 APU Cable Assembly	301-1	301
	2963 APU High Air Temperature Switch Lead.....	302-1	302
	2963 APU Ground Leads	303-1	303
	2963 APU Generator Ground Lead.....	304-1	304
	2963 APU Harness Attaching Hardware	305-1	305
Group 33	Special Purpose Kits		
Group 3307	Special Purpose Kits		
	3307 Ventilation Kit.....	306-1	306
Group 42	Electrical Equipment		
Group 4209	Signaling Devices		
	4209 STE/ICE Current Shunt.....	307-1	307
	4209 STE/ICE Fuel Pressure Transducer.....	308-1	308
	4209 STE/ICE Airbox Pressure Transducer	309-1	309
	4209 STE/ICE Pulse Tachometer	310-1	310
	4209 STE/ICE Air Cleaner Pressure Transducer.....	311-1	311
Group 47	Gages (Nonelectrical), Weighing and Measuring Devices		
Group 4701	Instruments (Speed and Distance)		
	4701 Speedometer Drive Shaft, Adapters and Fittings.....	312-1	312
	4701 Tachometer Drive Shaft, Adapters and Fittings	313-1	313
	4701 Tachometer Drive	314-1	314
Group 76	Free Fighting Equipment Components		
Group 7639	Fixed Fire Fighting Equipment (Vehicular)		
	7639 Fire Extinguisher Bottles	315-1	315
	7639 Crew Compartment Fire Extinguisher Nozzles	316-1	316
	7639 Crew Compartment, Rear, Fire Extinguisher Nozzles	317-1	317
	7639 Engine Compartment Halon Discharge Tubes and Fittings	318-1	318
	7639 Crew Compartment Fire Extinguisher Brackets	319-1	319
	7639 Engine Compartment Fire Extinguisher Brackets	320-1	320
	7639 Engine Compartment Fire Extinguisher Mounting Sub-Brackets.....	321-1	321
	7639 Engine AFES-Engine Compartment Fire Sensing Components....	322-1	322
	7639 Engine AFES Thermal Wire Attaching Components	323-1	323
	7639 Engine AFES-Electrical Relays	324-1	324
	7639 Engine AFES-Remote Status Indicator (RSI)	325-1	325
	7639 Engine Compartment Test and Alarm (T/A) Panel	326-1	326
	7639 Optical Fire Sensing Assemblies (OFSA)	327-1	327
	7639 Crew AFES Standard Control Electronic Amplifier (SC EA)	328-1	328
	7639 Crew Compartment Test and Alarm (T/A) Panel	329-1	329
	7639 AFES Manual Discharge Handles and Associated Parts.....	330-1	330

TABLE OF CONTENT-Continued

	Page	Illus Figure
7639 AFES Manual Discharge Cable Attaching Hardware	331-1	331
7639 AFES Manual Discharge Actuator Assembly	332-1	332
Group 7645 Identification and Instruction Plates		
7645 AFES Bottle Warning Labels	333-1	333
7645 AFES Engine and Crew Compartment Test and Alarm Panel Caution Labels	334-1	334
Group 91 Chemical, Biological, and Radiological (CBR) Equipment		
Group 9111 Gas-Particulate Filter Units		
9111 NBC Ventilated Face Piece System, M2A2 Air Purifier	335-1	335
9111 NBC Ventilated Face Piece System, M2A2 Air Purifier Guard	336-1	336
9111 NBC Ventilated Face Piece System, M2A2 Air Purifier Frame Assembly	337-1	337
9111 NBC Ventilated Face Piece System, M3 Electric Air Heater and Adapters	338-1	338
9111 NBC Ventilated Face Piece System, Left Side Crew, Upper Station Heater to Connector Hoses	339-1	339
9111 NBC Ventilated Face Piece System, Driver's Station Heater to Connector Hoses	340-1	340
9111 NBC Ventilated Face Piece System, Commanders Station Heater to Connector Hoses	341-1	341
9111 NBC Ventilated Face Piece System, Left Side Crew, Lower Station Heater to Connector Hoses	342-1	342
Group 9130 Warning and Detection Systems		
9130 NBC Ventilated Face Piece System, M43 NBC Alarm Detector Mounting Bracket	343-1	343
9130 NBC Ventilated Face Piece System, M42 NBC Alarm Chassis Base	344-1	344
9130 NBC Remote Detector Terminals	345-1	345
Group 94 Repair Kits		
Group 9401 Repair Kits		
9401 Repair Kits	KITS-1	KITS
Group 95 General Use Standardized Parts		
Group 9501 Bulk Material		
9501 Bulk Material	BULK-1	BULK
Section III. Special Tools List		
Group 26 Tools and Test Equipment		
Group 2604 Special Tools		
2604 Special Tools	346-1	346
2604 AFES Special Tools Kit	347-1	347
Section IV. Cross-Reference Indexes		
National Stock Number Index	I-1	
Part Number Index	I-56	
Figure and Item Index	I-176	
Ordinance to BML Cross Reference Index	I-296	

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

Section I. INTRODUCTION

1. SCOPE.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of organizational, direct support, and general support maintenance of the M992A1 Carrier, Ammunition, Tracked. It authorizes the requisitioning, issue, and disposition of spares, repair parts, and special tools as indicated by the source, maintenance, and recoverability (SMR) codes.

 
2. GENERAL.

In addition to Section I, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

- a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II.
- b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL for the performance of maintenance.
- c. Section IV. Cross-reference Index. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are crossreferenced to each illustration/figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGE, and part numbers. A list of ordinance part numbers cross-referenced to BMY part numbers.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III).

- a. ITEM NO. [Column (1)]. Indicates the number used to identify items called out in the illustration.
- b. SMR CODE [Column (2)]. The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

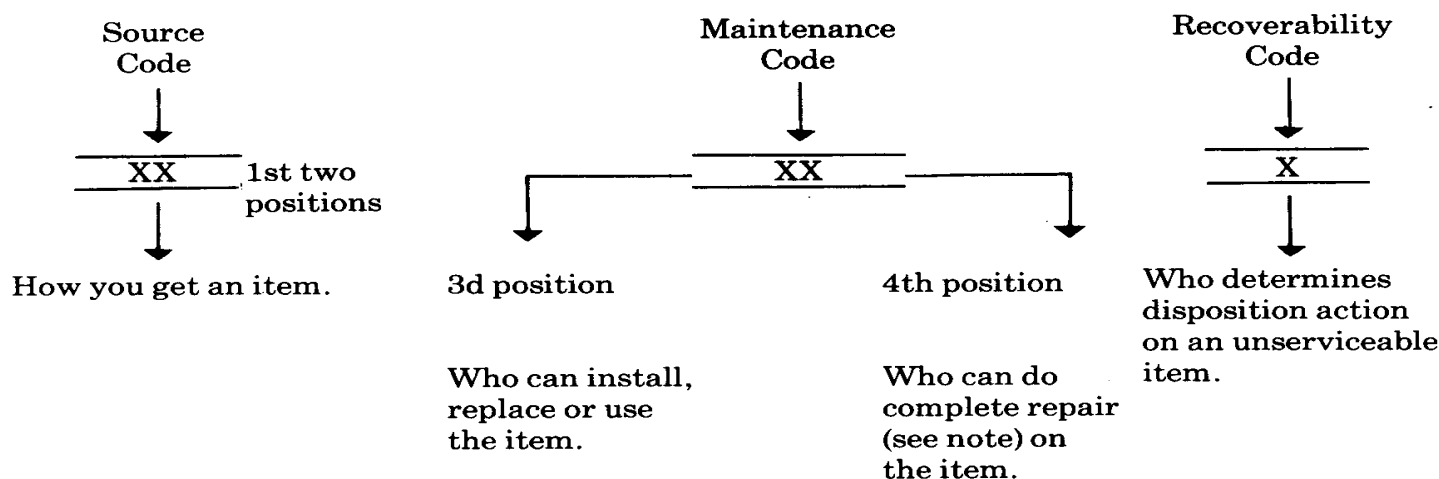

**Complete Repair.* Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

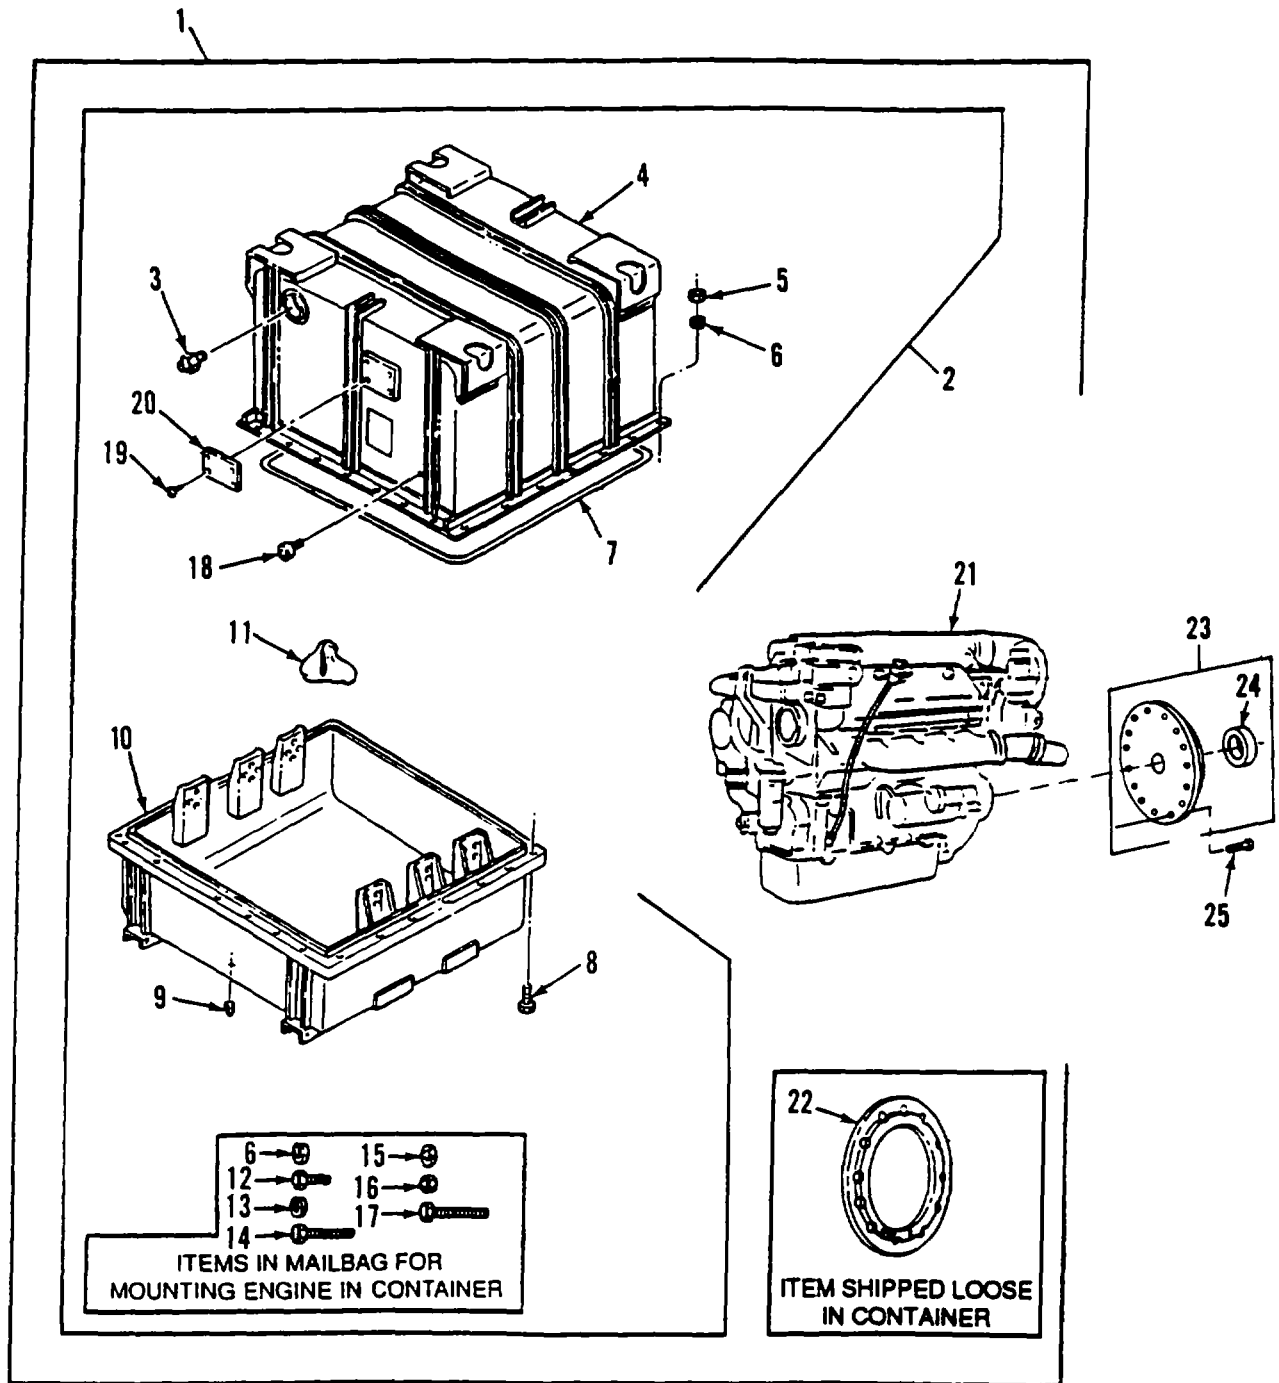 


Figure 1. Engine and Container

SECTION II					TM 9-2350-287-24P
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART		
NO	CODE	CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES (UOC)	QTY
GROUP 01 ENGINE					
GROUP 0100 ENGINE ASSEMBLY					
FIG. 1 ENGINE AND CONTAINER					
1	PAFHD	19207	57K1003	ENGINE.DIESEL.....	1
2	XAFHH	19207	12268285	..SHIPPING AND STORAG	1
3	PAFZZ	10001	2642880	..VALVE, BREATHER	1
4	XAHZZ	19207	12268287	..CONTAINER, UPPER.....	1
5	PAFZZ	13305	235C7	..NUT, PLAIN, HEXAGON	28
6	PAFZZ	96906	MS35338-48	..WASHER, L OCK 32	
7	PAFZZ	19207	12268291	..SEAL, NONMETALLIC RO	1
8	PAFZZ	80204	818218H050C175N	..SCREW, CAP, HEXAGON H.....	28
9	PAFZZ	96906	MS20913-65	..PLUG, PIPE	1
10	XAHZZ	19207	12268286	..CONTAINER, LOWER.....	1
11	PAFZZ	19207	10890481	..BAG, MAIL	1
12	PAFZZ	80204	818218H044C125N	..SCREW, CAP, HEXAGON H.....	2
13	PAFZZ	96906	MS35338-47	..WASHER, LOCK	4
14	PAFZZ	80204	B1821BH044C325N	..SCREW, CAP, HEXAGON H.....	2
15	PAFZZ	96906	MS27183-17	..WASHER, FLAT	2
16	PAFZZ	96906	MS51967-11	..NUT, PLAIN, HEXAGON	2
17	PAFZZ	80204	B1821BH050C50ON	..SCREW.CAP.HEXAGON H.....	4
18	PAFZZ	00334	SK2155	..INDICATOR, HUMIDITY	1
19	PAFZZ	96906	MS21318-46	..SCREW, DRIVE.....	4
20	PAFZZ	19207	7973326	..PLATE, IDENTIFICATIO.....	1
21	XAFHD	19207	12268500	..ENGINE, DIESEL SEE TM 9-2815-202-.....	1
24P FOR PARTS BREAKDOWN					
22	PAFZZ	72582	5174549	..RING, MASS	1
23	PAFZZ	19207	11662761	COUPLING.SHAFT, FLEX	1
24	PAFZZ	81349	M83248/1-235	..PACKING, PREFORMED	1
25	PAFZZ	96906	MS35764-1291	BOLT, SELF-LOCKING	12

END OF FIGURE

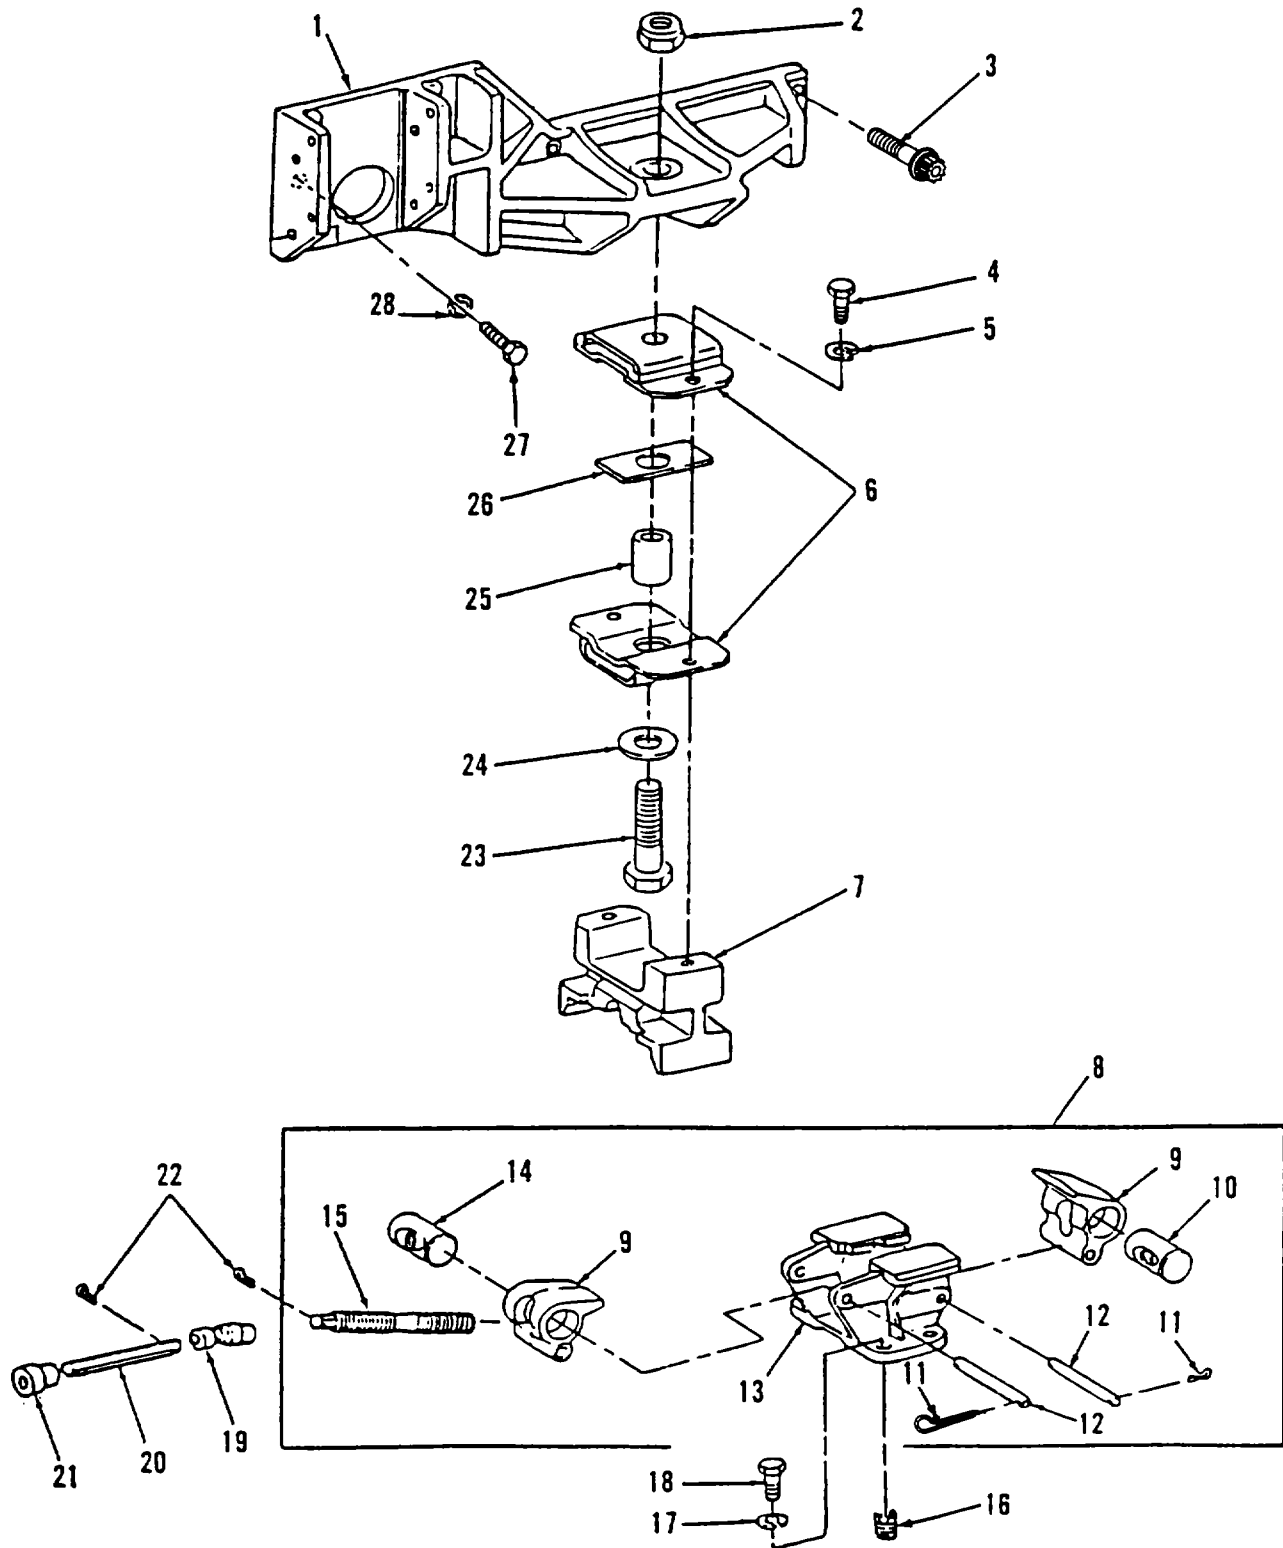 


Figure 2. Engine Mounting Base Assembly, Mounts and Brackets

SECTION II					
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART		
NO	CODE	CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES (UOC)	QTY
GROUP 0100 ENGINE ASSEMBLY					
FIG. 2 ENGINE MOUNTING BASE ASSEMBLY, MOUNTS AND BRACKETS					
1	PAOZZ	19207	10922919	BRACKET, ENGINE ACCE	1
2	PAOZZ	96906	MS51922-68	NUT, SELF-LOCKING.HE	1
3	PAOZZ	19207	10930585	SCREW, SELF-LOCKING	8
4	PAOZZ	96906	MS90727-136	SCREW.CAP.HEXAGON H.....	2
5	PAOZZ	96906	MS35338-68	WASHER, LOCK	2
6	PCOZZ	19207	10917096	MOUNT, RESILIENT	2
7	PAOZZ	19207	10922512	BRACKET, ENGINE MOUN	1
8	PAFFF	19207	7527607	BRACKET, MOUNTING	1
9	PAFZZ	19207	7525543	.JAW ENGINE MOUNTING	2
10	PAFZZ	19207	7525381	.NUT, PLAIN, BARREL	1
11	PAFZZ	96906	MS24665-353	.PIN, COTTER	4
12	PAFZZ	19207	7525465	.PIN, STRAIGHT, HEADLE.....	2
13	PAFZZ	19207	7527609	..BRACKET.MOUNTING	1
14	PAFZZ	19207	7525380	..NUT, PLAIN, BARREL	1
15	PAFZZ	19207	7355451	.TIE ROD, TENSIONING	1
16	PAFZZ	29372	KNHH1018J-14	INSERT, SCREW THREAD.....	4
17	PAOZZ	96906	MS35338-69	WASHER, LOCK	4
18	PAOZZ	96906	MS90727-164	SCREW, CAP, HEXAGON H.....	4
19	PAOZZ	03705	16-612	UNIVERSAL JOINT	1
20	PAOZZ	19207	10942227	BAR.LOWER, ENGINE MO.....	1
21	PCOZZ	19207	10922511	BUSHING, NONMETALLIC	1
22	PAOZZ	96906	MS24665-497	PIN, COTTER..	2
23	PAOZZ	96906	MS90727-219	SCREW.CAP.HEXAGON H.....	1
24	PAOZZ	96906	MS27183-25	WASHER, FLAT	1
25	PAOZZ	19207	10922510	SPACER, SLEEVE.....	1
26	PAOZZ	19207	10936511	SPACER.PLATE	1
27	PAOZZ	80204	B1821BH038C150N	SCREW.CAP, HEXAGON H.....	3
28	PAOZZ	96906	MS35338-65	WASHERLOCK	3

END OF FIGURE

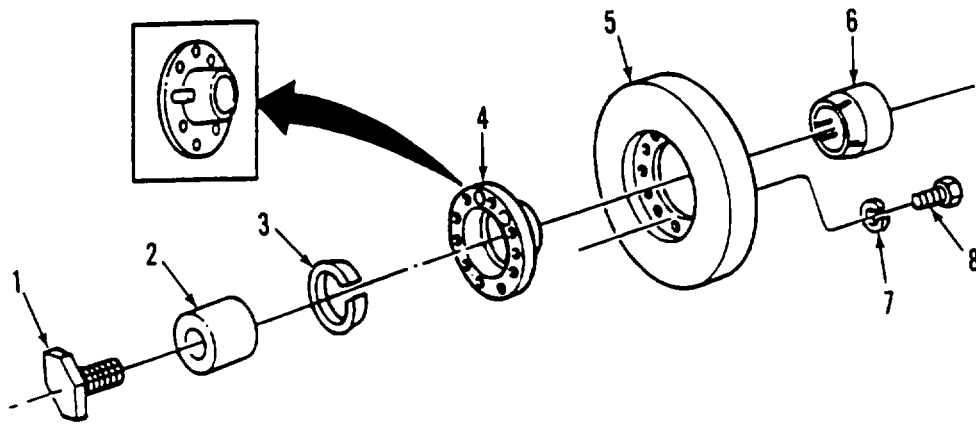 


Figure 3. Flywheel Vibration Damper

SECTION II					
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART		
NO	CODE	CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES (UOC)	QTY
GROUP 0102 CRANKSHAFT					
FIG. 3 FLYWHL VIBRATION DAMPR					
1	PAFZZ	72582	5130479	BOLT, MACHIN.....	1
2	PAFZZ	72582	5132357	BUSHING, SLEEVE.....	1
3	PAFZZ	72582	5162811	CONE, VIBRATION DAMP.....	1
4	PAFZZ	72582	5186050	HUB, VIBRATION DAMP.....	1
5	PAFZZ	72582	8922491	DAMPER, VIBRATION SHIPPED LOOSE.....	1
				WITH ENGINE IN CONTAINER	
6	PAFZZ	72582	5134917	RING, VIBRATION DAMP	1
7	PAFZZ	96906	MS35338-47	WASHER, LOCK SHIPPED LOOSE WITH	6
				ENGINE IN CONTAINER.....	
8	PAFZZ	96906	MS90127-84	SCREW, CAP, HEXAGON H SHIPPED LOOSE6	
				WITH ENGINE IN CONTAINER	

END OF FIGURE

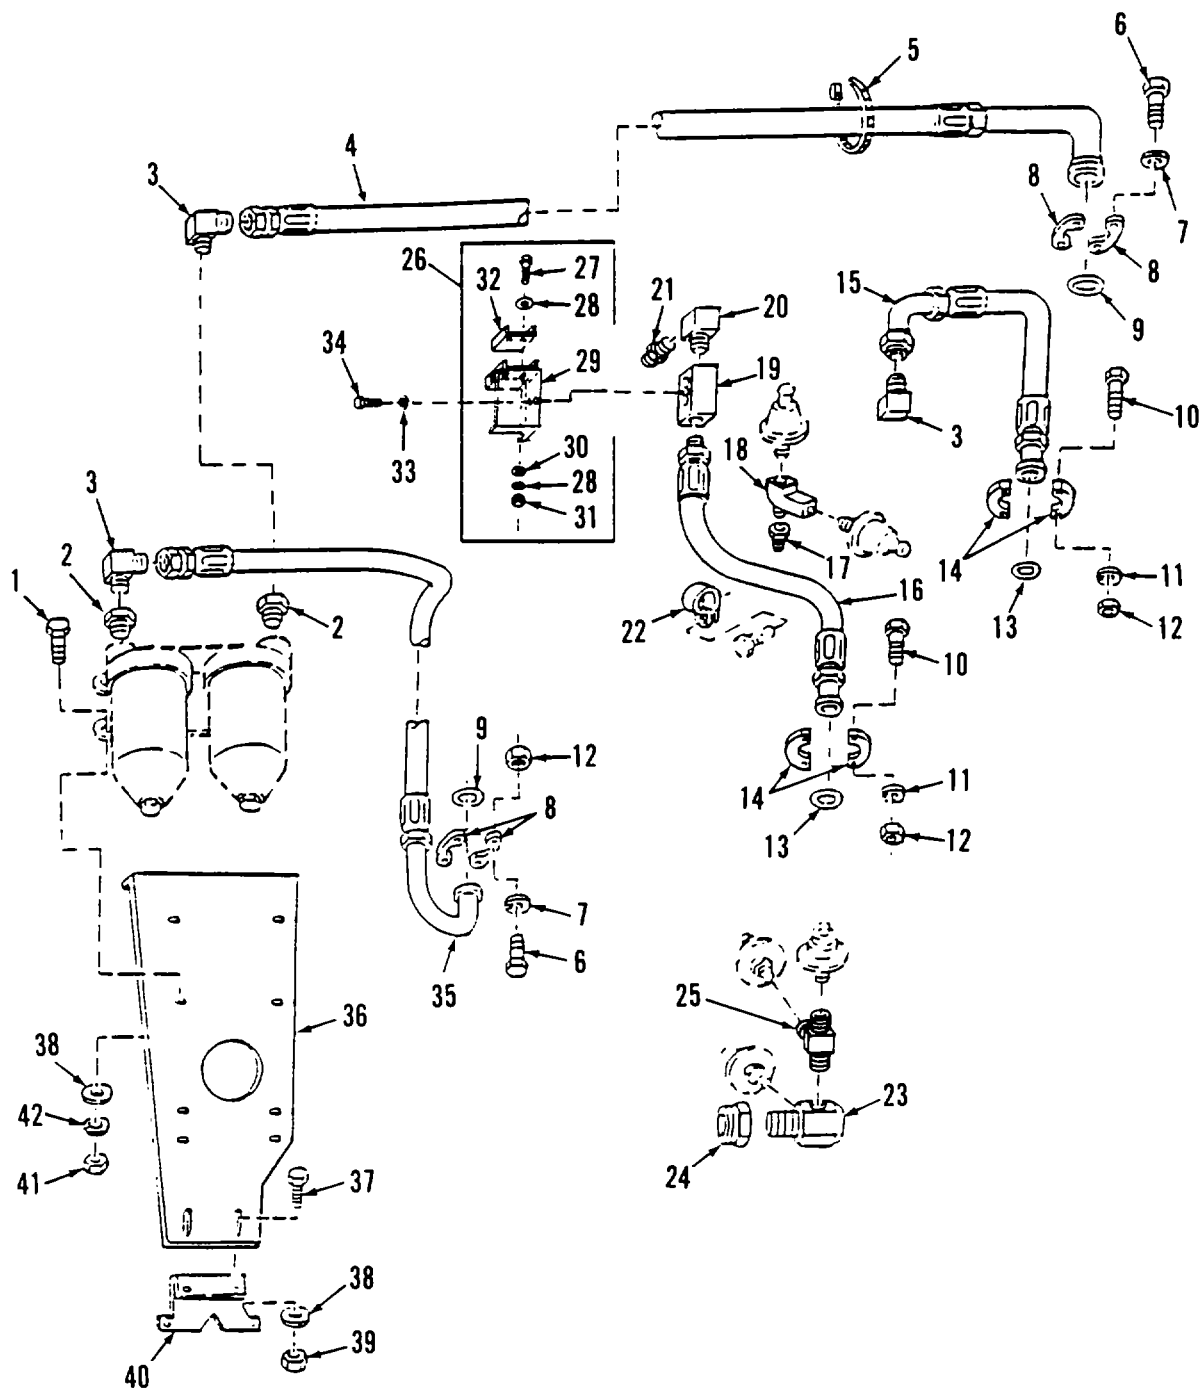 


Figure 4. Engine Oil Filter Hoses, Mount Assembly and Transmission Oil Hoses, Oil Transmitter Fittings, and Protective Cover

SECTION II

TM-9-2350-287-24P

(1) ITEM NO	(2) SMR CODE	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODES (UOC)	(6) QTY
GROUP 0106 ENGINE LUBRICATION SYSTEM FIG. 4 ENGINE OIL FILTER HOSES, MOUNT ASSEMBLY AND TRANSMISSION OIL HOSES, OIL TRANSMITTER FITTINGS, AND PROTECTIVE COVER					
1	PAOZZ	80204	B1821BH038F125N	SCREW, CAP, HEXAGON H.....	4
2	PAOZZ	79470	10921184	BUSHING, PIPE.....	2
3	PAOZZ	96906	MS20822-16	ELBOW, PIPE TO TUBE	3
4	PAOZZ	19207	10921189	HOSE ASSEMBLY, NONME	1
5	PAOZZ	19207	10921769	BAND, MARKER.....	1
6	PAOZZ	80204	818218H044C125N	SCREW, CAP, HEXAGON H.....	8
7	PAOZZ	96906	MS35338-66	WASHER, LOCK.....	8
8	PAOZZ	80713	20SF2	FLANGE, PIPE, SWIVEL	4
9	PAOZZ	96906	MS29513-222	PACKING, PREFORMED	2
10	PAOZZ	80204	018218H050C350N	SCREW, CAP, HEXAGONH.....	8
11	PAOZZ	96906	MS35338-67	WASHER, LOCK.....	8
12	PAOZZ	96906	MS51967-15	NUT, PLAIN, HEXAGON	16
13	PAOZZ	88044	AN123888	PACKING, PREFORMED	2
14	PAOZZ	63906	325F2	FLANGE, PIPE.....	4
15	PAOZZ	19207	10921190	HOSE ASSEMBLY, NONME	1
16	PAOZZ	19207	10921186	HOSE ASSEMBLY, NONME	1
17	PAOZZ	02978	MS49005-4	PLUG, PIPE	1
18	PAOZZ	10988	1062	TEE, PIPE	1
19	PAOZZ	19207	12352813	MANIFOLD, AIRLINE.....	1
20	PAOZZ	19207	454113	ELBOW, PIPE	1
21	PAOZZ	96906	MS51953-125	NIPPLE, PIPE	1
22	PAOZZ	19207	12268212	CLAMP, LOOP	1
23	PAOZZ	19207	10922811	FITTING, CLUSTER, 3 W	1
24	PAOZZ	7947C	3-059X122	SEALNUT, PIPE.....	1
25	PAOZZ	24617	444149	TEE, PIPE	1
26	AOOOO	19207	12352823	COVER, ACCESS.....	1
27	PAOZZ	80204	81821BH025C063N	.SCREW, CAP, HEXAGON H.....	2
28	PAOZZ	96906	MS27183-10	.WASHER, FLAT.....	4
29	PAOZZ	19207	12352817	.COVER, ACCESS.....	1
30	PAOZZ	55110	6220-21	.WASHER, LOCK.....	2
31	PAOZZ	96906	MS35649-2252	.NUT, PLAIN, HEXAGON	2
32	PAOZZ	19207	12352824	.BRACKET, ANGLE	1
33	PAOZZ	55110	6220-21	WASHER, LOCK.....	2
34	PAOZZ	80204	81821LH025C044N	SCREW, CAP, HEXAGON H.....	2
35	PAOZZ	01276	FG2213MMN0536	HOSE, ASSEMBLY, NONME	1
36	PAOZZ	19207	10921166	BRACKET, MOUNTING.....	1
37	PAOZZ	96906	MS90727-60	SCREW, CAP, HEXAGON H.....	2
38	PAOZZ	19200	10910174-3	WASHER, FLAT.....	6
39	PAOZZ	96906	MS21044N6	NUT, SELF-LOCKING, HE	2
40	PAOZZ	19207	10921167	BRACKET, ANGLE	1
41	PAOZZ	96906	MS51968-8	NUT, PLAIN, HEXAGON	4
42	PAOZZ	96906	MS35338-65	WASHER, LOCK.....	4

END OF FIGURE

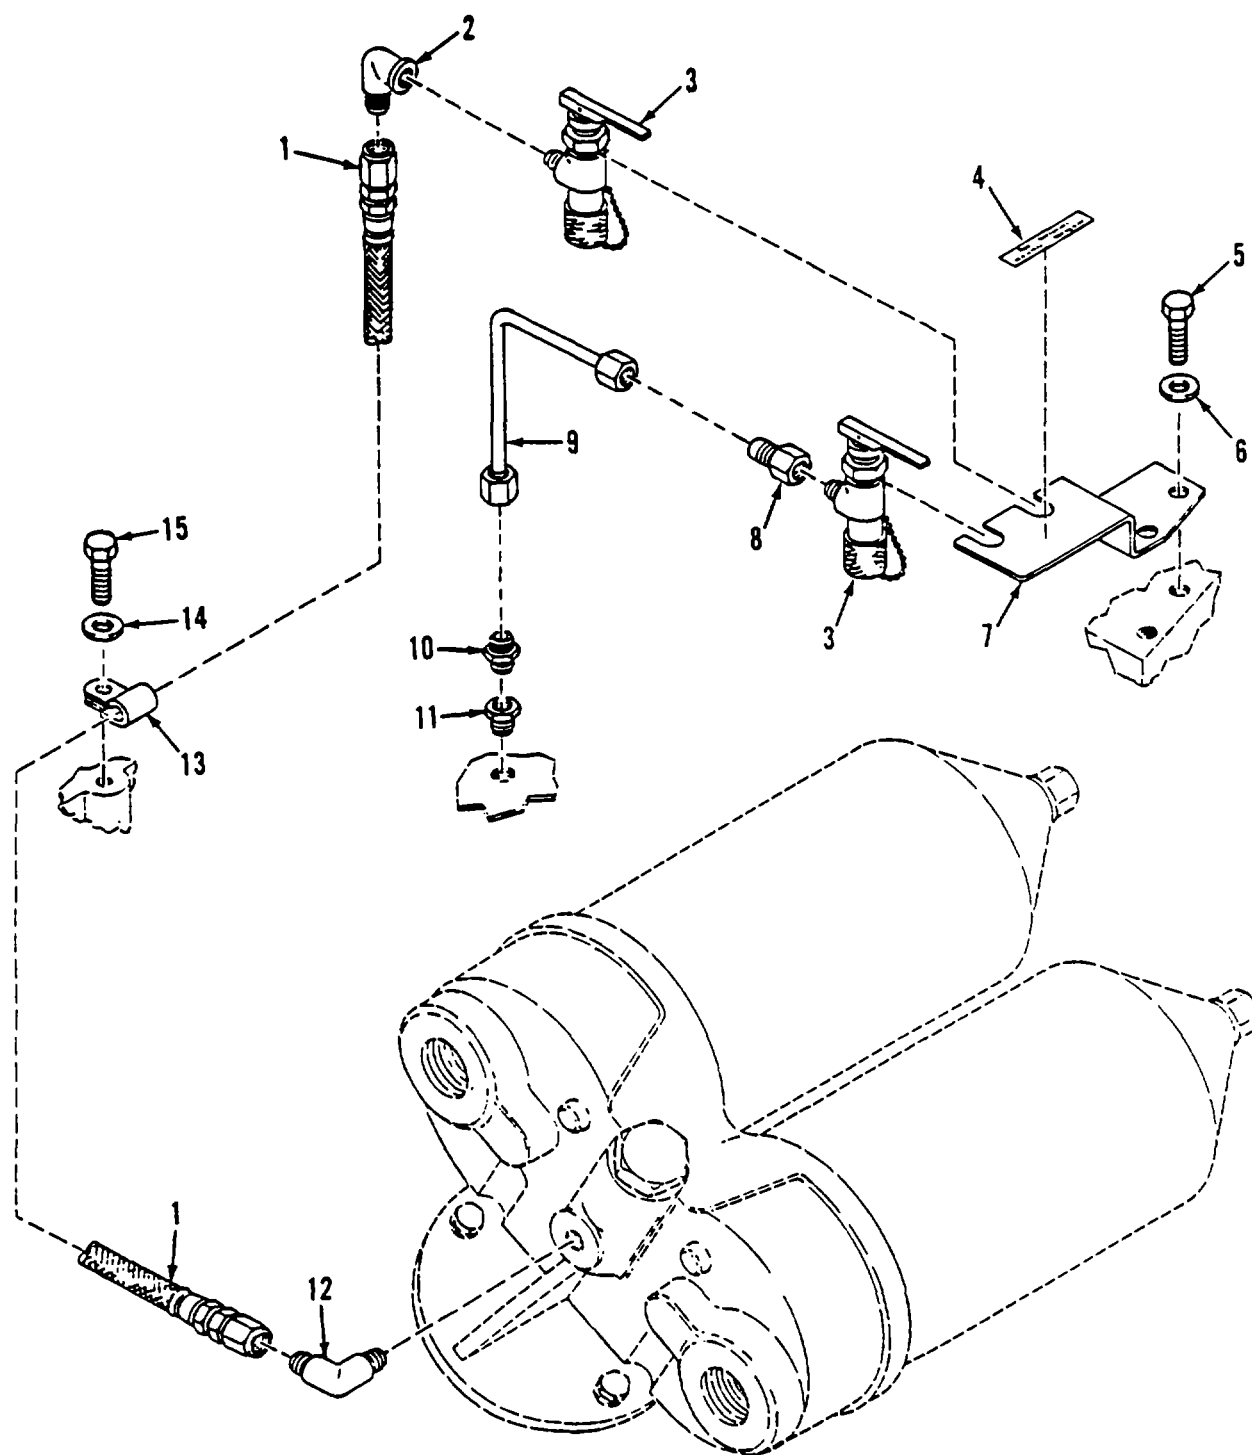 


Figure 5. Engine and Transmission Oil Sampling System

SECTION II					
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART		
NO	CODE	CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES (UOC)	QTY
GROUP 0106 ENGINE LUBRICATION SYSTEM					
FIG. 5 ENGINE AND TRANSMISSION OIL					
SAMPLING SYSTEM					
1	PAOZZ	96906	MS8000E320A	HOSE, ASSEMBLY, NONME	1
2	PAOZZ	96906	MS51506A4	ELBOW, PIPE TO TUBE	1
3	PAOZZ	19207	11669424	COCK, DRAIN.....	2
4	PAOZZ	19207	12268192	MARKER, IDENTIFICATI.....	1
5	PAOZZ	80204	B1821BH038C300N	SCREW, CAP, HEXAGON H.....	2
6	PAOZZ	96906	M535338-8	WASHER, LOCK.....	2
7	PAOZZ	19207	12268190	BRACKET, DOUBLE ANGL.....	1
8	PAOZZ	96906	MS5150384	ADAPTER, STRAIGHT, PI.....	1
9	PAOZZ	19207	12268191	TUBE ASSEMBLY, METAL	1
10	PAOZZ	96906	MS51500A4	ADAPTER, STRAIGHT, PI.....	1
11	PAOZZ	81348	WW-P-471BDQB		
			CBA	BUSHING, PIPE.....	1
12	PAOZZ	96906	MS51504A4-4	ELBOW, PIPE TO TUBE	1
13	PAOZZ	96906	MS21333-120	CLAMP, LOOP	1
14	PAOZZ	96906	MS35338-45	WASHER, LOCK.....	1
15	PAOZZ	80204	81821BH031C325N	BOLT, MACHINE	1

END OF FIGURE