
TECHNICAL MANUAL

DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE

REPAIR PARTS AND SPECIAL TOOLS LISTS

(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)

FOR

RAWIN SETS

AN/GMD-1A (NSN 6660-00-224-6137)

AND

AN/GMD-1B (NSN 6660-00-599-8252)

HEADQUARTERS, DEPARTMENT OF THE ARMY

6 MARCH 1980

TECHNICAL MANUAL

No. 11-6660-206-34P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 6 March 1980

**DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
FOR
RAWIN SETS
AN/GMD-1A (NSN 6660-00-224-6137)
AND
AN/GMD-1B (NSN 6660-00-599-8252)**

Current as of 31 August 1979

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Fores), or DA Form 2028-2 located in back of this manual direct to Commander, US Army Communications and Electronics Material Readiness Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, NJ 07703. In either case a reply will be furnished direct to you.

Table of Contents

SECTION		Page	Illus. Figure
I.	Introduction	1	
II.	Repair parts list	5	
GROUP 00	Rawinsonde Set AN/GMD-1()	5	1
01	Antenna AS-462()/GMD-1	9	2
	0101 Reflector, antenna	11	3
	010101 Mounting assembly, telescope	13	4
	0102 Spinner cup and redome assembly	15	5
	010201 Cable assembly, power electrical (W101)	19	6
	010202 Motor-generator assembly	21	7
	01020201 Generator, AC assembly (G150)	25	8
	01020202 Motor assembly (B118)	27	9
02	Cable Assembly, Special Purpose, Electrical 1216/U (W901)	29	10
03	Cable Assembly, Special Purpose, Electrical CX-1217/U (W927)	29	10
04	Cable Assembly, Special Purpose, Electrical CX-1492/U (W971)	29	10
05	Cable Assembly, Special Purpose, Electrical CX-1493/U (W941)	29	10
06	Cable Assembly, Special Purpose, Electrical CX-2043/U (W911)	30	10
07	Case Assembly CY-734/GMD-1	33	11
08	Case Assembly CY-735MGMD-1	33	11
09	Case assembly CY-736/GMD-1	33	11
10	Case Assembly CY-737A/GMD-1	33	11
11	Case Assembly CY-1157/GMD-1	33	11
12	Case Assembly CY-1895/GMD-1	33	11
13	Antenna Control C-578()/GMD-1	39	12
	1301 Capacitor-resistor board assembly (TB601)	47	13
	1302 Capacitor-resistor board assembly (TB602)	49	14
	1303 Resistor board assembly (TB603)	51	15
	1304 Resistor board assembly (TB604)	53	16
	1305 Capacitor-resistor board assembly (TB605)	55	17
	1306 SCR switching unit	57	18
	1307 Chassis assembly	59	19
14	Control Recorder C-577()/GMD-1	61	20
	1401 Electrical equipment cabinet	63	21

***This manual supersedes** TM 11-6660-206-35P, 18 February 1972

		Page	Illus. Figure
	1402 Control-recorder assembly	65	22
	140201 Folding table	67	23
	140202 Main chassis assembly	75	24-26
	14020201 Time chassis assembly	87	27
	14020202 Motor assembly (B101, B102)	91	28
	14020203 Indicator azimuth	93	29
	14020204 Indicator elevation	95	30
	14020205 Shaft assembly	97	31
	14020206 Paper roller assembly	99	32
	14020207 Tension unit assembly	101	33
	14020208 Print hammer assembly	103	34
	14020209 Cam assembly	105	35
	14020210 Ribbon printing assembly	107	36
	14020211 Azimuth printer assembly	109	37
	14020212 Elevation printer assembly	111	38
	140203 Panel control assembly	115	39
	140204 Chassis assembly	119	40
G R O U P	15 Ground rod and cable assembly	123	41
	16 Telesco M-17 modified	125	42
	17 Test Set TS-538()/U (See TM 11-6625-213-35P for parts)		
	18 Holder, Cable REEL MT-1421/U	127	43
	19 Packing kit	129	44
	20 Pedestal AB-159()/GMD-1	131	45
	2001 Housing and frame assembly	137	46-49
	200101 Swing link assembly (TB302)	147	50
	2002 Elevation assembly	151	51-55
	200201 Drive assembly	163	56-58
	200202 Elevation indicator assembly	171	59
	200203 Stow lock assembly	173	60
	200204 Counter assembly	175	61
	2003 Azimuth assembly	181	62
	200301 Indicator assembly	187	63
	20030101 Indicator assembly, azimuth	189	64
	200302 Stow lock assembly (same as group 200203)		
	200303 Elevation drive assembly	191	65
	20030301 Motor generator assembly	195	66
	2003030101 Drive assembly	195	66
	200304 Turntable assembly	197	67
	200305 Contact finger assembly	199	68
	200306 Cover assembly	201	69
	2004 Cable Assembly, Special Purpose, CX-1285/U (W951)	203	70
	21 Rawin Receiver R-301()/GMD-I	209	71
	2101 Cable Assembly, RFCG-4W/U (W121)	215	72
	2102 Cable Assembly, RFCG-530/U (W131)	217	73
	2103 Mixer stage assembly	219	74
	2104 Cable assembly, RF(W501)	221	75
	2105 Cable assembly, RF(W502)	223	76
	2106 Cable assembly, RF(W104)	225	77
	2107 Capacitor-resistor board assembly (TB1001A)	227	78
	2108 Capacitor-resistor board assembly (TB1009A)	229	79
	2109 Capacitor-resistor board assembly (TB1010A)	231	80
	2110 Capacitor-resistor board assembly (TB1012A)	233	81
	2111 Capacitor-resistor board assembly (TB1013A)	235	82
	2112 Capacitor-resistor board assembly (TB1014A)	237	83
	2113 Capacitor-resistor board assembly (TB1015A)	239	84
	2114 Tuner RF assembly	243	85
	211401 Resistor board assembly	247	86
	211402 vacillator, RF assembly, plunger assembly	249	87
	2115 Amplifier IF assembly	253	88
	211501 Amplifier, IF chassis assembly	253	88-90
	2116 Receiver, radio panel and Chassis Assembly	261	91
	22 Meteorological Data Processing Group OL-192 ()/GMD-I (No parts authorized)		
SECTION III.	Special tools list (Not applicable)		
IV.	National stock number and part number index	262	

SECTION I INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of direct support and general support maintenance of the AN/GMD-1A and AN/GMD-1B. It authorize the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. Special Tools List. Not applicable.

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the Wings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration. This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. Source, Maintenance, and Recoverability (SMR) Codes.

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code	Definition
PA	Item procured and stocked for anticipated or known
XD-A	Support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft sup-

port items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code	Application/Explanation
O	-Support item is removed, replaced, used at the organizational level.
F	-Support item is removed, replaced, used at the direct support level.
H	-Support item is removed, replaced, used at the general support level.
D	-Support items that are removed, replaced, used at depot, mobile depot, specialized repair activity only.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identify the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Code	Application/Explanation
O	-The lowest maintenance level capable of complete repair of the support item is the organizational level.
F	-The lowest maintenance level capable of complete repair of the support item is the direct support level.
H	-The lowest maintenance level capable of complete repair of the support item is the general support level.
D	-The lowest maintenance level capable of complete repair of the support item is the depot level.
Z	-Nonreparable. No repair is authorized.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

Recoverability codes	Definition
Z	-Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.
O	-Reparable item. When uneconomically repairable, condemn and dispose at organizational level.
F	-Reparable item. When uneconomically repairable,

Recoverability codes	Definition
	condemn and dispose at the direct support level.
H -Reparable item.	When uneconomically reparable, condemn and dispose at the general support level.
D -Reparable item.	When beyond lower level repair capability, return to depot. Condemnation and disposal not authorized below depot level.
c. National Stock Number.	Indicates the National stock number assigned to the item and will be used for requisitioning purposes.
d. Part Number.	Indicates the primary number used by the manufacturer (individual, company, firm, corporation, or Government activity), which controls the design and characteristic of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items.

NOTE

- When a stock numbered item is requisitioned, the repair part received may have a different part number than the part been replaced.
- e. *Federal Supply Code for Manufacturer (FSCM)*. The FSCM is a 5-digit numeric code listed in SB 708-42 which is used to identify the manufacturer, distributor, or Government agency, etc.
- f. *Description*. Indicates the Federal item name and, if required, a minimum description to identify the item.
- g. *Unit of Measure (U/M)*. Indicates the standard of the basic quantity of the listed item as used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation (e.g., ea, in, pr, etc). When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.
- h. *Quantity Incorporated in Unit*. Indicates the quantity of the item used in the breakout shown on the illustration figure, which is prepared for a fictional group, subfunctional group, or an assembly.

4. Special Information

- a. Usable on codes are shown in the description column. Uncoded items are applicable to all models. Identification of the usable on codes used in this publication are:

Code	Used on
2H5	AN/GMD-1A
2JH	AN/GMD-1B

- b. The following publications pertain to the AN/GMD-1A, AN/GMD-1B, and their components:
- TM 11-6625-213-12, Test Sets TS-538/U, TS-538A/U, TS538B/U, and TS-538C/U
- TM 11-6625-213-20P, Test Sets TS-538/U, TS-538A/U, TS-538B/U, and TS-538C/U
- TM 11-6625-213-35, Test Sets TS-538/U, TS-538A/U, TS-538B/U, and TS-538C/U
- TM 11-6625-213-35P, Test Sets TS-538KJ, TS-538A/U, TS-538B/U, and TS-538C/U
- TM 11-6660-206-12, Rawin Sets AN/GMD-1A and AN/GMD-1B
- TM 11-6660-206-20P, Rawin Sets AN/GMD-1A and AN/GMD-1B
- TM 11-6660-206-35, Rawin Sets AN/GMD-1A and AN/GMD-1B


5. How to Locate Repair Parts

- a. When National stock number or part number is unknown.
- (1) *First*. Using the table of contents, determine the functional group within which the item belongs. This is necessary since illustrations are prepared for functional groups and listings are divided into the same groups.
- (2) *Second*. Find the illustration covering the functional group to which the item belongs.
- (3) *Third*. Identify the item on the illustration and note the illustration figure and item number of the item.
- (4) *Fourth*. Using the Repair Parts Listing, find the figure and item number noted on the illustration.
- b. When National stock number or part number is known.
- (1) *First*. Using the Index of National Stock Numbers and Part Numbers, find the pertinent National stock number or part number. This index is in NIIN sequence followed by a list of part numbers in alphameric sequence, cross-referenced to the illustration figure number and item number.
- (2) *Second*. After finding the figure and item number, locate the figure and item number in the repair parts list.

6. Abbreviations


Not applicable.

(Next printed page is 4.1)

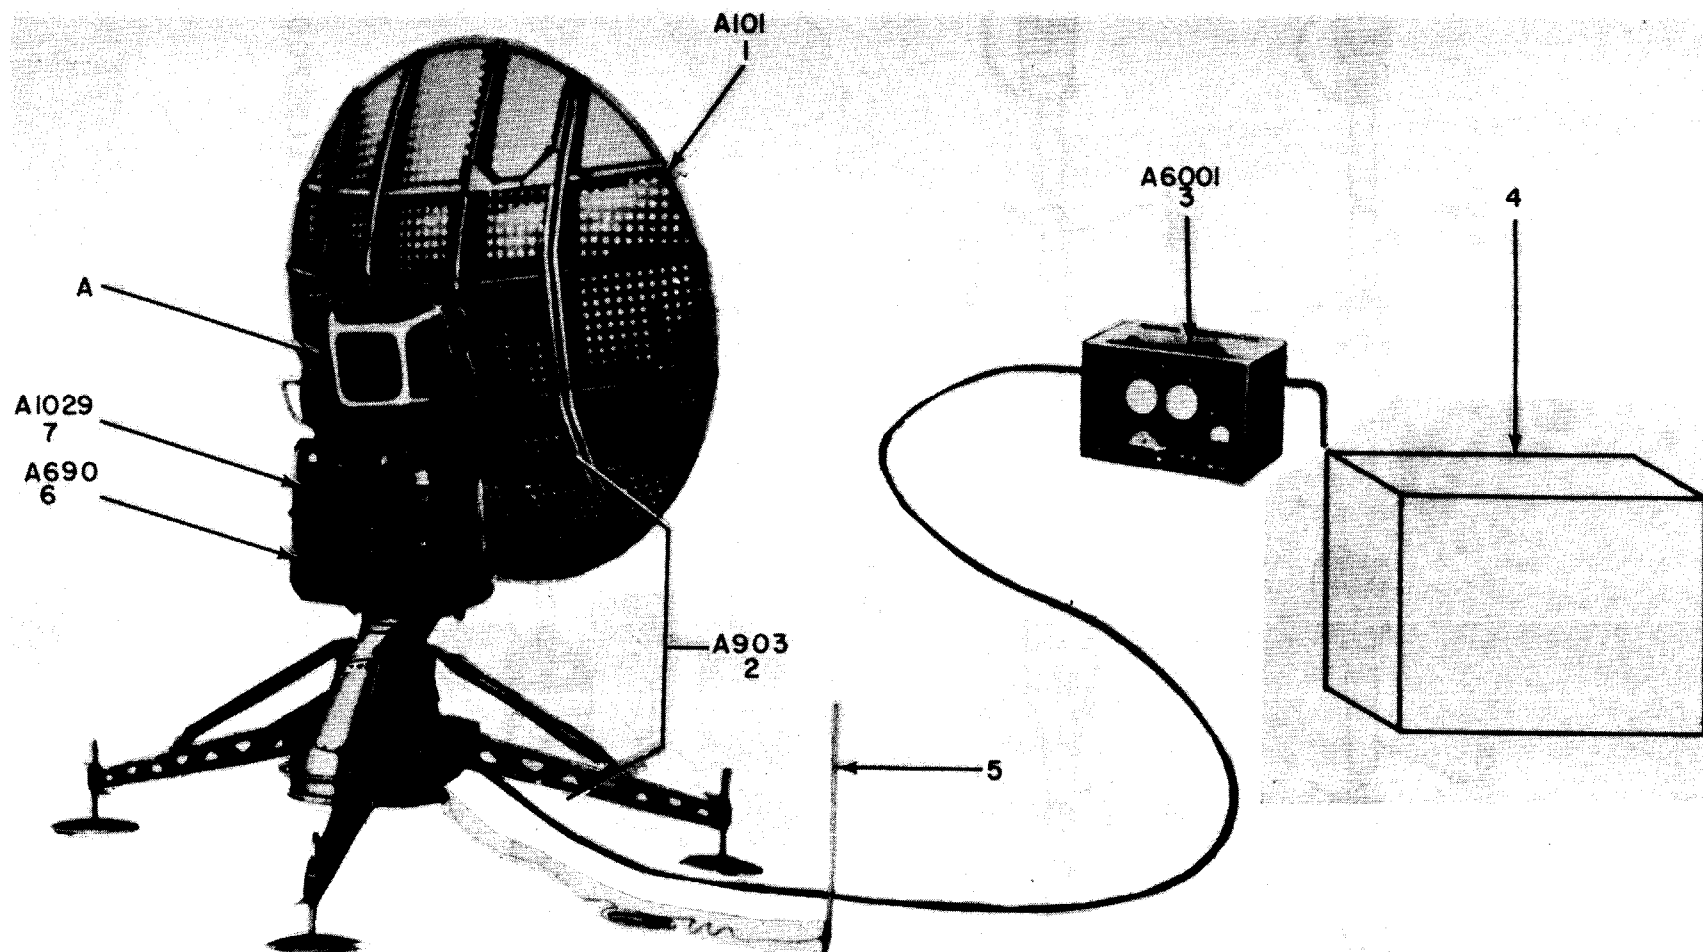

EL5CP001

Figure 1. Rawinsonde Set AN/GMD-1() (Sheet 1 of 4).

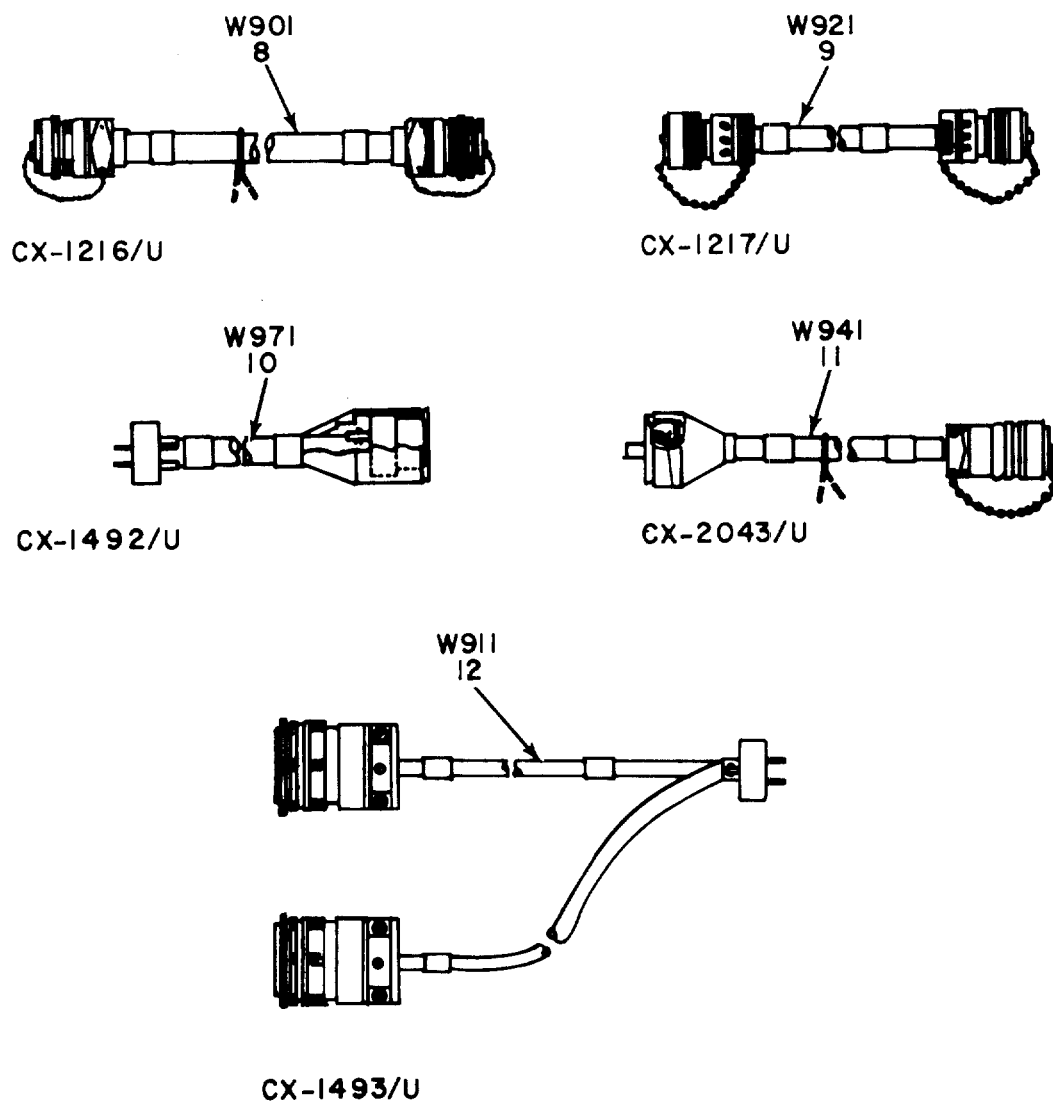

EL5CP002

Figure 1. Rawinsonde Set AN/GMD-1() (Sheet 2 of 4)