


TECHNICAL MANUAL

OPERATORS MANUAL FOR

MODULAR CAUSEWAY SYSTEM (MCS) ROLL-ON/ROLL-OFF DISCHARGE FACILITY(RRDF) RRDF-1 NSN 1945-01-473-2282

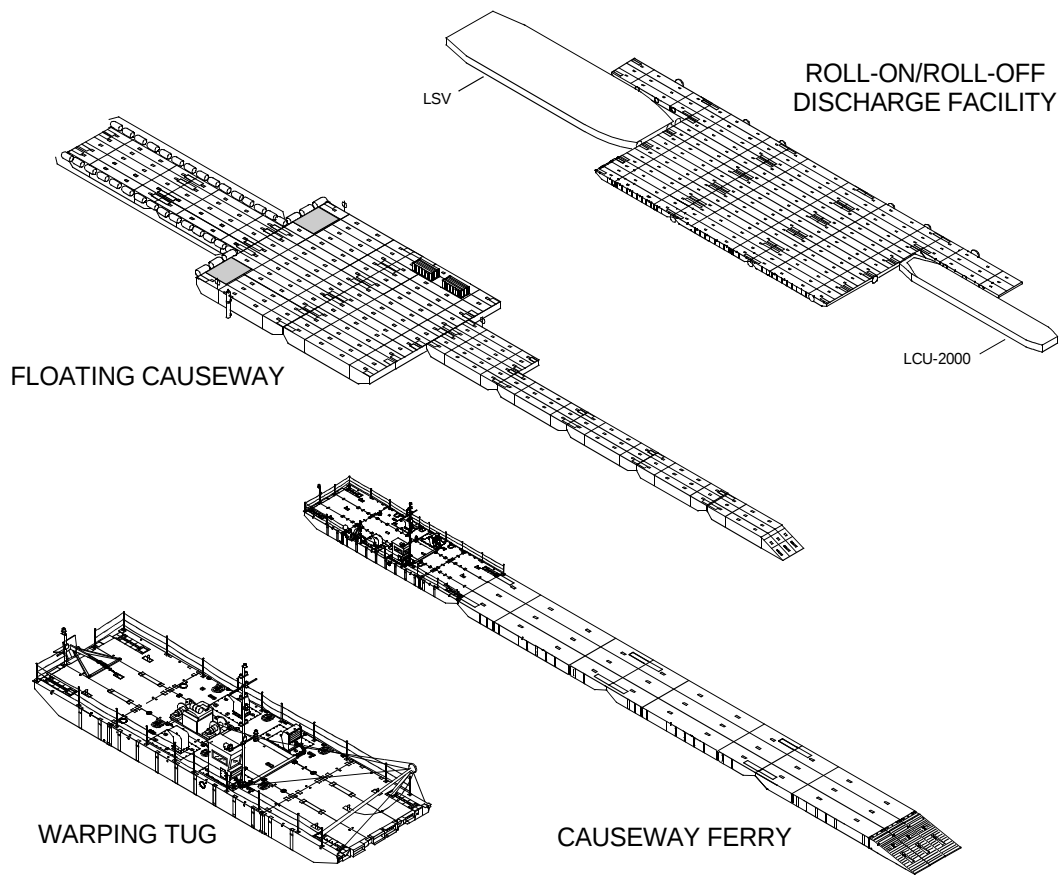

This manual supersedes TM 55-1945-205-10 dated 29 August 1997 including all changes.

DISTRIBUTION STATEMENT A - Approved for public release, distribution is unlimited.

**HEADQUARTERS, DEPARTMENT OF THE ARMY
15 MAY 2002**

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C. 15 MAY 2002

TECHNICAL MANUAL
OPERATORS MANUAL
FOR
MODULAR CAUSEWAY SYSTEM (MCS)
ROLL-ON/ROLL-OFF DISCHARGE FACILITY (RRDF)
RRDF-1
NSN 1945-01-473-2282

Current as of 15 MAY 2002

This manual supersedes TM 55-1945-205-10 dated 29 August 1997 including all changes.

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this publication. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Submit your DA Form 2028-2 (Recommended Changes to Equipment Technical Publications), through the Internet, on the Army Electronic Product Support (AEPS) website. The Internet address is <http://aeeps.ria.army.mil>. If you need a password, scroll down and click on "ACCESS REQUEST FORM". The DA Form 2028 is located in the ONLINE FORMS PROCESSING section of the AEPS website. Fill out the form and click on "SUBMIT". Using this form on the AEPS website will enable us to respond quicker to your comments and better manage the DA Form 2028 program. You may also mail, E-mail or fax your letter, DA Form 2028, or DA Form 2028-2 directly to: Commander, U.S. Army Tank-Automotive and Armaments Command, ATTN: AMSTA-LC-CIP-WT, Rock Island, IL 61299-7630. The E-mail address is TACOM-TECH-PUBS@ria.army.mil. The fax number is DSN 793-0726 or Commercial (309) 782-0726.

DISTRIBUTION STATEMENT A - Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

WP Sequence No.

WARNING SUMMARY

HOW TO USE THIS MANUAL

CHAPTER 1 - DESCRIPTION AND THEORY OF OPERATION

General Information	0001 00
Description and Data, Equipment Characteristics, Capabilities and Features	0002 00
Description and Data, Location and Description of Major Components	0003 00
Description and Data, Equipment Data	0004 00
Description and Data, Equipment Configuration	0005 00
Theory of Operation	0006 00

CHAPTER 2 - OPERATOR INSTRUCTIONS

Operator Controls and Indicators, Description and Use	0007 00
Module ISOPAK, Preparation for Use	0008 00
Male and Female Guillotine Connectors, Preparation for Use	0009 00
D-Ring/Cloverleaf and Deck Cleat Fittings, Preparation for Use	0010 00
Module Strings, Preparation for Use	0011 00
Intermediate Section, Preparation for Use	0012 00
Combination Beach/Sea End Section, Preparation for Use	0013 00
Segment, Preparation for Use	0014 00
Platform, Preparation for Use	0015 00
Mooring Bitts and Quick Disconnects, Preparation for Use	0016 00
Towing Bridle, Towing Interface and Towing Lights, Preparation for Use	0017 00
Fenders, Preparation for Use	0018 00
Safety Equipment, Lifeline and Dunnage Mats, Preparation for Use	0019 00
Generator Container, Preparation for Use	0020 00
Personnel Shelter, Preparation for Use	0021 00
Emergency Anchoring System (EASY), Preparation for Use	0022 00
Light Towers, Preparation for Use	0023 00
Rigid Hull Inflatable Boat (RHIB), Preparation for Use	0024 00
Mooring Sealift Vessel Platform, Operating Procedures	0025 00
EASY Mooring System, Operating Procedures	0026 00
Tactical Quiet Generator, Operating Procedures	0027 00
Generator Container Base Fuel Tank, Refueling, Operating Procedures	0028 00
Generator Container, Transferring Fuel From Generator Container Base Fuel Tank To Day Fuel Tank, Operating Procedures	0029 00
Generator Container, Fire Suppression System, Operating Procedures	0030 00
Personnel Shelter, Heating and Air Conditioning System, Operating Procedures	0031 00
Incinerator Toilet/Urinal Galley, Operating Procedures	0032 00
Personnel Shelter VHF/FM Handheld Transceiver, Operating Procedures	0033 00
Light Towers, Operating Procedures	0034 00
Rigid Hull Inflatable Boat (RHIB) and Motor, Operating Procedures	0035 00
Dunnage Mats, Preparation for Movement	0037 00
Light Towers, Preparation for Movement	0038 00
Emergency Anchoring System (EASY), Preparation for Movement	0039 00
Personnel Shelter, Preparation for Movement	0040 00

TABLE OF CONTENTS (CONT'D)

WP Sequence No.**CHAPTER 2 - OPERATOR INSTRUCTIONS (CONT'D)**

Generator Container, Preparation for Movement	0041 00
Fenders, Preparation for Movement	0042 00
Safety Equipment, Preparation for Movement	0043 00
Towing Bridle, Towing Interface and Towing Lights, Preparation for Movement	0044 00
Mooring Bitts and Quick Disconnects, Preparation for Movement	0045 00
D-Ring/Cloverleaf and Deck Cleats Fittings, Preparation for Movement	0046 00
Full and Force Opening Configurations, Preparation for Movement	0047 00
Segment, Preparation for Movement	0048 00
Combination Beach/Sea End Section, Preparation for Movement	0049 00
Intermediate Section, Preparation for Movement	0050 00
Module Strings, Preparation for Movement	0051 00
Male and Female Guillotine Connectors, Preparation for Movement	0052 00
Module ISOPAK, Preparation for Storage	0053 00
Tactical Quiet Generator, Emergency Stop, Emergency Procedures	0054 00
Generator Container, Manual Operation of Tactical Quiet Generator Fire Suppression System, Emergency Procedures	0055 00
Personnel Shelter, Emergency Escape, Emergency Procedures	0056 00
Rigid Hull Inflatable Boat (RHIB), Emergency Shutdown, Emergency Procedures	0057 00
Rigid Hull Inflatable Boat (RHIB), Emergency Starting, Emergency Procedures	0058 00
Emergency Anchoring System (EASY), Environment/Weather, Unusual	0059 00
Unusual Environment/Weather, Preparation for Towing	0060 00
Flexor Connectors, Stowage	0061 00
Tactical Quiet Generator, Stowage	0062 00
Personnel Shelter Equipment, Stowage	0063 00
Light Towers, Stowage	0064 00
Rigid Hull Inflatable Boat (RHIB) and Motor, Stowage	0065 00
EASY Anchoring System (EASY), Stowage	0066 00
Basic Issue Items (BII), Stowage	0067 00
Fenders, 3 ft By 5 ft, Stowage	0068 00
Fenders, 4 ft By 12 ft, Stowage	0069 00
Fenders, 5 ft By 10 ft, Stowage	0070 00
Fenders, 6 ft By 12 ft (Yokohama), Stowage	0071 00
Mooring Bitts, Stowage	0072 00
Dunnage Mats, Stowage	0073 00

CHAPTER 3 - OPERATOR TROUBLESHOOTING PROCEDURES

Troubleshooting Procedures Index	0074 00
Tactical Quiet Generator, Reference Only	0075 00
Generator Container, DC Lights Will Not Operate	0076 00
Generator Container, Day Tank Fuel Level Indication System Is Inoperative	0077 00
Generator Container, Manual Fuel Transfer Pump Will Not Prime	0078 00
Generator Container, Manual Fuel Transfer Pump Pumps Slowly	0079 00
Generator Container, Manual Fuel Transfer Pump Leaks	0080 00
Generator Container, Electric Fuel Transfer Pump Inoperative	0081 00
Generator Container, Fire Suppression System Inoperative	0082 00
Heating and Air Conditioning System, Fan Does Not Operate Continuously When Electrical Power Is Supplied To Personnel Shelter	0083 00

TABLE OF CONTENTS (CONT'D)
WP Sequence No.**CHAPTER 3 - TROUBLESHOOTING PROCEDURES (CONT'D)**

Heating and Air Conditioning System, Thermostat Does Not Operate System	0084 00
Heating and Air Conditioning System, Heater Does Not Produce Warm Air	0085 00
Incinerator Toilet, Reference Only	0086 00
VHF/FM Handheld Transceiver Has No Power	0087 00
VHF/FM Handheld Transceiver Does Not Receive	0088 00
VHF/FM Handheld Transceiver Does Not Transmit	0089 00
Light Tower, Lights Will Not Illuminate	0090 00
Light Tower, Engine Shuts Down	0091 00
Light Tower, Excessive Engine Vibration	0092 00
Light Tower, Engine Will Not Start/Run	0093 00
Light Tower, Engine Fails to Shutdown	0094 00
Light Tower, Engine Has No Generator Output Voltage	0095 00
Light Tower, Fluctuating Generator Frequency/Voltage and/or Oscillating Engine Speed	0096 00
Light Tower, Engine RPM Is Down	0097 00
Light Tower, Engine Is Difficult To Start	0098 00
Light Tower, Engine Has Insufficient Output	0099 00
Light Tower, Engine Suddenly Stops	0100 00
Light Tower, Large Quantity of Black Smoke from Engine Exhaust	0101 00
Light Tower, Engine Oil Lamp Lights Up During Operation	0102 00
Light Tower, Engine Overheats	0103 00
Rigid Hull Inflatable Boat (RHIB), Starter Motor Will Not Operate	0104 00
Rigid Hull Inflatable Boat (RHIB), Engine Will Not Start	0105 00
Rigid Hull Inflatable Boat (RHIB), Engine Will Not Idle Properly	0106 00
Rigid Hull Inflatable Boat (RHIB), Engine Loses Power and Will Not Accelerate	0107 00
Rigid Hull Inflatable Boat (RHIB), Engine Vibrates Excessively	0108 00
Rigid Hull Inflatable Boat (RHIB), Engine Runs, But Makes Little or No Progress	0109 00
Rigid Hull Inflatable Boat (RHIB), Warning System Activates	0110 00
Emergency Anchor System (EASY), EASY Anchor Slide Will Not Elevate	0111 00
Emergency Anchor System (EASY), EASY Anchor Drawer Will Not Extend	0112 00

CHAPTER 4 - OPERATOR MAINTENANCE INSTRUCTIONS

Preventive Maintenance Checks and Services (PMCS), Procedures Introduction	0113 00
Preventive Maintenance Checks and Services (PMCS) and Lubrication Procedures	0114 00

CHAPTER 5 - OPERATOR SUPPORTING INFORMATION

References	0115 00
Maintenance Allocation Chart (MAC), Introduction	0116 00
Maintenance Allocation Chart (MAC)	0117 00
Components of End Item (COEI) List	0118 00
Basic Issue Items (BII) List	0119 00
Expendable and Durable Items List (EDIL)	0120 00
Tool Identification List (TIL)	0121 00

INDEX

Alphabetical.....	INDEX - 1
-------------------	-----------

HOW TO USE THIS MANUAL

This manual contains certain features to improve the convenience of using this manual and increase the user's efficiency. These features include:

a. Accessing Information

Information is accessed by referring to the Table of Contents, located in the front of this manual, or by looking in the Alphabetical Index, located in the back of this manual.

b. Illustrations

Various methods are used to locate and repair components. Locator illustrations in Controls and Indicator tables, PMCS tables, exploded views and cut-away diagrams make the information in the manual easier to understand and follow.

c. Using This Manual

When using this manual, read and understand the entire maintenance action before performing the task. Also, read and understand all warnings, cautions and notes as well as general safety precautions that apply to the task to be performed. The warning summary will inform personnel of hazards associated with the equipment to be worked on. However, the summary is not all inclusive and personnel should be aware at all times of hazardous conditions that may arise.

Prior to starting the procedures in this manual, the initial setup requirements are located directly above each procedure. The information is given to ensure all materials, expendables, tools and any other equipment necessary are readily available for use. The initial setup will be accomplished prior to starting the actual steps of each maintenance procedure.

Locating Major Components

Obtain the manual for the system to be worked on. Open to the Table of Contents located in the front of this manual. Find Chapter 1, *Description and Theory of Operation*. Under the chapter title you will find the work package titled *Location and Description of Major Components*. Turn to the work package indicated. This work package will give a brief description of the major components, and show an illustration of what the component looks like and its location.

The Alphabetical Index, located in the back of this manual, contains an alphabetical list of all sections of this manual. *Location and Description of Major Components* is found in section L. The work package is found on the right side of the title where the *Location and Description of Major Components* is located. Turn to the work package indicated to find the description and location of each component.

Operator Instructions

To locate an operator task, open the manual to the Table of Contents located in the front of this manual. Locate the procedure that is to be performed. Next to the procedure, on the right, locate the work package number. Turn to the work package number in the manual. Perform the initial setup by obtaining the expendables, tools, materials and other items listed prior to starting the task. Perform the listed steps in order. The Alphabetical Index can also be used to locate the item and procedures to follow.

Tools: Lists all tools (standard or special) required to perform the task. Tools are identified with an item number and work package number from the *Tool Identification List* located in Chapter 4, *Supporting Information*.

Materials/Parts: Lists all parts or materials necessary to perform the task. Expendable and durables are identified with an item number from the applicable work package located in Chapter 4, *Supporting Information*.

Personnel Required: Lists all personnel necessary to perform the task.

Equipment Condition: Notes the conditions that must exist before starting the task. The equipment condition will also include any prerequisite maintenance tasks to be performed with reference to the work package number or to the TM number.

References: Includes any other manuals necessary to complete the task. When there are no references listed, all steps necessary to complete the task are contained within this manual. A listing of reference materials is contained in the work package *References* in Chapter 4, *Supporting Information*.

Location of Controls and Indicators

To locate a particular control and/or indicator, open the manual to the Table of Contents located in the front of the manual. Find Chapter 2, *Operator Instructions*. Locate the work package titled *Description and Use of Operator Controls and Indicators*. Turn to the work package indicated. Locate the control and, or indicator that you are attempting to identify. Take note of the number pointing to the control or indicator. Refer to the table below the picture and find the number in the column on the far left hand side. Reading from left to right, find the number that matches the number from the picture, then read the name of the control/indicator and following function of the item, as detailed in the far right hand column.

Troubleshooting Procedures

The Table of Contents or Alphabetical Index may be used to locate sections within this manual. To locate a particular troubleshooting procedure, open the manual to the Table of Contents located in the front of this manual. Find Chapter 3, *Troubleshooting Procedures*. Under this section, find a work package titled *Troubleshooting Index*. Turn to the work package indicated, which lists all of the troubleshooting procedures. Look down the list until you find the appropriate work package for the problem you are trying to solve. To the right side of the procedure will be a work package number. Turn to the work package indicated and follow the steps to complete the troubleshooting procedure. The procedures list the malfunction, symptom and the corrective action. The corrective action will indicate which maintenance procedure to go to for the repair of the symptom or what level of maintenance is capable of repair of the problem. Follow the procedures indicated to complete the task. At the top of the task you will have a section called INITIAL SETUP. There are five basic headings listed under INITIAL SETUP.

Test Equipment: Lists all test equipment (standard or special) required to troubleshoot, test and inspect the equipment covered in this manual. The test equipment is identified with an item number and work package number from the *Tool Identification List* located in Chapter 4, *Supporting Information*.

Tools: Lists all tools (standard or special) required to perform the task. Tools are identified with an item number and work package number from the *Tool Identification List* located in Chapter 4, *Supporting Information*.

Personnel Required: Lists all personnel necessary to perform the task.

Equipment Condition: Notes the conditions that must exist before starting the task. The equipment condition will also include any prerequisite maintenance tasks to be performed with reference to the work package number or to the TM number.

References: Includes any other manuals necessary to complete the task. When there are no references listed, all steps necessary to complete the task are contained within this manual. A listing of reference materials is contained in the work package *References* in Chapter 4, *Supporting Information*.

Maintenance Instructions

To locate a maintenance procedure, open the manual to the Table of Contents located in the front of this manual. Find Chapter 4, *Maintenance Instructions*. Look down the list and find the maintenance procedure to be accomplished. On the right side of the maintenance procedure will be a work package number. Turn to the work package indicated.

Before beginning the maintenance task, look through the procedure to familiarize yourself with the entire maintenance procedure. At the top of the task you will have a section called INITIAL SETUP. There are five basic headings listed under INITIAL SETUP.

Tools: Lists all tools (standard or special) required to perform the task. Tools are identified with an item number and work package number from the *Tool Identification List* located in Chapter 4, *Supporting Information*.

Materials/Parts: Lists all parts or materials necessary to perform the task. Expendable and durables are identified with an item number from the applicable work package located in Chapter 4, *Supporting Information*.

Personnel Required: Lists all personnel necessary to perform the task.

References: Includes any other manuals necessary to complete the task. When there are no references listed, all steps necessary to complete the task are contained within this manual. A listing of reference materials is contained in the work package *References* in Chapter 4, *Supporting Information*.

Equipment Condition: Notes the conditions that must exist before starting the task. The equipment condition will also include any prerequisite maintenance tasks to be performed with reference to the work package number or to the TM number.

Test Equipment: Lists all test equipment (standard or special) required to troubleshoot, test and inspect the equipment covered in this manual. The test equipment is identified with an item number and work package number from the *Tool Identification List* located in Chapter 4, *Supporting Information*.

CHAPTER 1

DESCRIPTION AND THEORY OF OPERATION FOR MODULAR CAUSEWAY SYSTEM (MCS) ROLL-ON/ROLL-OFF DISCHARGE FACILITY (RRDF)

**OPERATOR MAINTENANCE
ROLL-ON/ROLL-OFF DISCHARGE FACILITY
GENERAL INFORMATION**

SCOPE

This manual contains descriptions and operation instructions for the Roll-On/Roll-Off Discharge Facility.

Type of Manual: Operator Maintenance.

Purpose of Equipment: The system provides the capability to move rolling cargo from a sealift vessel to lighters for movement ashore.

MAINTENANCE FORMS, RECORDS AND REPORTS

Department of the Army forms and procedures used for equipment maintenance will be those prescribed by DA PAM 738-750, The Army Maintenance Management System (TAMMS); and AR 700-138, Army Logistics Readiness and Sustainability.

REPORTING EQUIPMENT IMPROVEMENT RECOMMENDATIONS (EIR)

If any component in your system needs improvement, let us know. Send us an EIR. You, the user, are the only one who can tell us what you don't like about your equipment. Let us know why you don't like the design or performance. Put it on an SF 368, Product Quality Deficiency Report. Mail it to the address specified in DA PAM 738-750 or as specified by the contracting activity. We will send you a reply.

CORROSION PREVENTION AND CONTROL (CPC)

CPC of Army materiel is a continuing concern. It is important that any corrosion problems with this item be reported so that the problem can be corrected and improvements can be made to prevent the problem in future items.

While corrosion is typically associated with rusting of metals, it can also include deterioration of other materials, such as rubber and plastic. Unusual cracking, softening, swelling or breaking of the materials may be a corrosion problem. If a corrosion problem is identified, it can be reported using an SF 368, Product Quality Deficiency Report. Use of key words, such as "corrosion", "rust", "deterioration" or "cracking", will ensure that the information is identified as a CPC problem. The form should be submitted to the address specified in DA PAM 738-750, Functional Users Manual for The Army Maintenance Management System (TAMMS).

OZONE DEPLETING SUBSTANCES (ODS)

The continued use of ODS has been prohibited by Executive Order 12856 of 3 August 1993.

DESTRUCTION OF ARMY MATERIEL TO PREVENT ENEMY USE

The procedures for destruction of Army materiel to prevent enemy use are contained in TM 750-244-6.

PREPARATION FOR STORAGE AND SHIPMENT REFERENCE

Reference WP 0061 00 through WP 0073 00 for preparation of storage or shipment of the RRDF system.

**OPERATOR MAINTENANCE
ROLL-ON/ROLL-OFF DISCHARGE FACILITY
MAJOR COMPONENTS
DESCRIPTION AND DATA**


EQUIPMENT CHARACTERISTICS, CAPABILITIES AND FEATURES

The roll-on/roll-off discharge facility (RRDF) is a floating discharge platform for ocean-going roll-on/roll-off sealift vessels. It provides the capability to move rolling cargo from the sealift vessel to lighters for movement ashore. The RRDF platform consists of an assembly of 153 non-powered floating modules. These modules are assembled into five sub-assemblies, which are then connected together using the Navy flexor and shear connector system which forms a hinge joint between them. The five sub-assemblies are 80 ft long and of differing widths. The width depends on the sub-assemblies location in the platform and on whether the RRDF platform will be used at the side ramp or the stern ramp of the sealift vessel. The overall dimensions of the RRDF platform are 400 ft long by 120 ft wide.

The RRDF is maneuvered into place, either alongside or astern of the sealift vessel, by warping tugs. It is secured to the sealift vessel in position for the stern or the side ramp to land on the platform.


Up to two Landing Ships Vehicle (LSV) or two Landing Craft Utility (LCU) watercraft lighters can be loaded at a time from an RRDF platform. In addition, the platform is capable of supporting two M-1 Abrams tanks and one sealift vessel cargo ramp foot on the platform surface. The structure of the RRDF will withstand the cargo loading through Sea State 2 conditions.

The RRDF consists of up to 17 intermediate modular sections. Intermediate sections consist of three center modules and six rake end modules (two center rake modules, two right-hand rake modules and two left-hand rake modules). Other major components of the RRDF are the personnel shelter, diesel generator set, trailer-mounted light towers, lifeline subsystem, communications equipment, rigid hull inflatable boat (RHIB) and the emergency anchoring system (EASY).

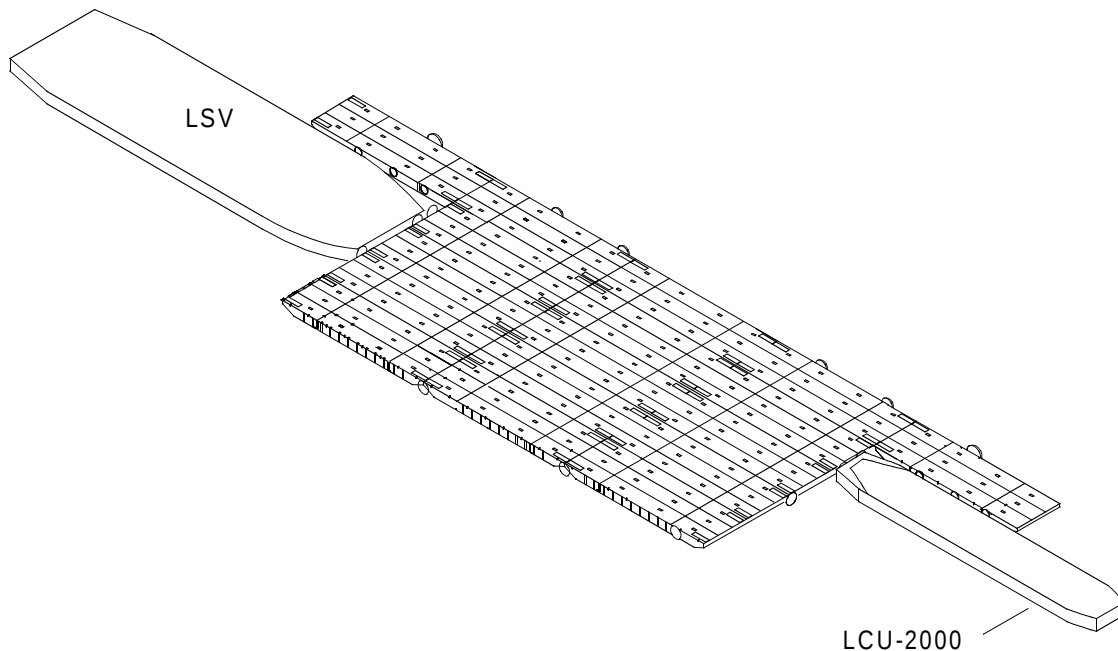

INTERMEDIATE MODULAR CAUSEWAY SECTION

The intermediate section is made up of three non-powered center modules and six end rake modules. The center module is 8 ft wide and 40 ft long. Each end rake is 8 ft wide and 20 ft long. All of the modules have a depth of 4 ft 6 in. The complete assembled intermediate section weighs approximately 142,500 lbs.

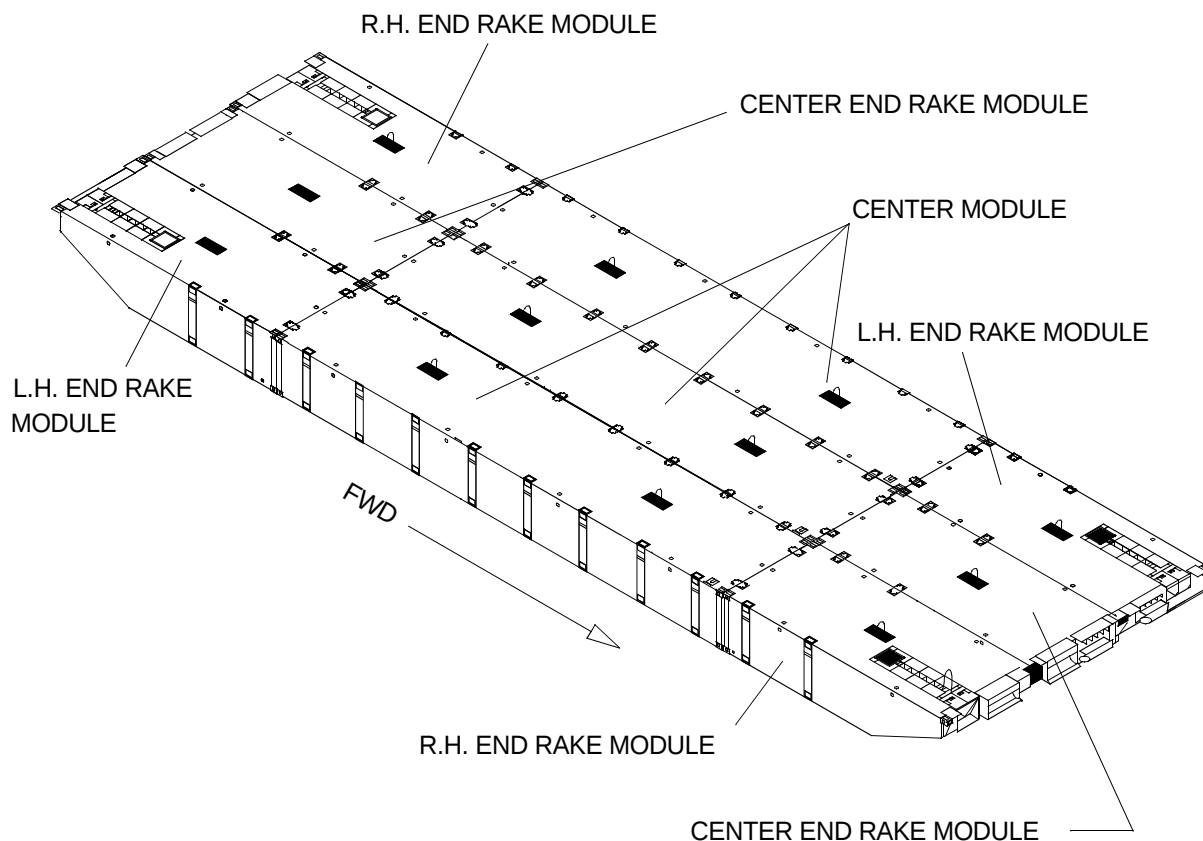

PERSONNEL SHELTER

The personnel shelter is a 20 ft ISO container which has been outfitted with insulation, interior bulkheads, fluorescent lighting, electrical power distribution, table, benches, heating/cooling unit, communications equipment, electrical outlets, emergency lighting and a rest room with an electrically powered incinerator toilet.

DIESEL GENERATOR SET

The skid mounted tactical quiet 10 KW or 15 KW diesel generator set is provided to power electrical loads in the personnel shelter. It is contained in a 20 ft ISO container which will be located near the personnel shelter. It is equipped with controls, instruments, fire suppression system, a 1000 gallon fuel system and accessories necessary for operation. The generator set consists of a diesel engine, brushless generator, excitation system, speed governing system, 24 volts DC starting system, control system and fault system. A power cable with a plug end, stored in the personnel shelter, is used to connect to the generator set. (Refer to TM 9-6115-642-10 and TM 9-6115-643-10 for additional information.)

LIGHTING SYSTEM

The RRDF lighting system consists of four trailer-mounted light towers which are stowed in two 20 ft ISO containers. Each light tower is powered by a 6 KW diesel generator and supports four metal-halide lamps. Each lamp delivers 1000 watts of light intensity. Lamps are a high pressure sodium bulbs with a NEMA 6 design for large area coverage. The aluminum reflector housings have tempered impact resistant glass lenses. The lamps come with weather resistant twist-lock connections for connecting floodlights to the light tower.

The light tower is a three-section telescoping mast which extends from 12 to 30 ft and has a rotation range of 360° with a position lock. The mast is easily extended with dual hand-operated winches that incorporate an automatic safety brake. The tower retracts and stows horizontally for travel.

The light system comes with a 30 gallon translucent polyethylene fuel tank, single point lifting bail, forklift slots, heavy-duty outriggers, leveling indicator and removable drawbar. The control panel comes with one GFI protected, 120 volt, 20 amp duplex receptacle; one 240 volt, 25 amp receptacle; individual lamp switches and a non-resettable hourmeter to track records for periodic maintenance.

The overall length is (in./cm) 174/442, width is (in./cm) 79/201, height is (in./cm) 89/226 (travel position), standard tower height is (ft/m) 30/9 and shipping weight is (lb/kg) 2010/912.

LIFELINE SUBSYSTEM

The lifeline subsystem is installed along the sides of the RRDF platform to protect personnel from falls overboard. The stanchions for the lifelines are installed in the turn-tube fittings and ISO corner fittings of the section modules. The lifelines are installed on the inboard side of the lifeline stanchion. Chain is used to span the gap between the sections.

COMMUNICATIONS EQUIPMENT

The communications equipment consists of eight VHF/FM handheld transceivers. The transceivers have a frequency range of 156.025 to 163.275 mhz. All channels currently allocated in the USA, Canadian and International channels are available for use, plus ten weather channels.

The VHF/FM handheld transceiver has an RF power output with the CNB350 battery of 5.0 watts (high) and 1.0 watts (low). The operating voltage is 7.2 volts DC. The current drain in standby mode is 40 ma, in receive mode 200 ma, in the transmit mode 1.8 amps (high power) and 0.7 amps (low power). The battery life (5% Tx, 5% rcv, 90% standby) is approximately 10 hrs (high) and 15 hrs (low).

The dimensions of the unit are 5.51in. H X 2.1in. W X 1.50 in. D. The weight is 1.0 lb.

The transmitter has a conducted spurious emissions of 65 dB (high) and 55 dB (low). The audio response is within +2/-8 of 6 dB/octave pre-emphasis characteristic from 300 hz to 3000 hz. The AF Harmonic Distortion of the transmitter is 3%. The transmitter has a hum and noise rating of 37 dB and a frequency stability (-20°C to +50°C) of $\pm 0.0005\%$.

The receiver has a sensitivity rating of 20 dB quieting at 0.35 uv and 12 dB SINAD at 0.30 uv. The squelch sensitivity (threshold) is 0.20 uv. Modulation acceptance bandwidth is ± 4.5 khz receiver selectivity: spurious and image, rejection 60 dB, intermodulation regulation 60 dB and channel spacing 25 khz.

RIGID HULL INFLATABLE BOAT

The rigid hull inflatable boat, which is stored in 20 ft ISO containers, provides transportation for the crew of the RRDF. It has a seven person capacity and is fitted with a 70 horsepower gasoline outboard motor. The boat is approximately 15 ft 5 in. (4.70 m) long and has a beam of 6 ft 7 in. (2.01 m). The inflatable tube has a diameter of 20 in. Lifting weight is approximately 1000 lbs. The max loading capacity for the boat is 1903 lbs.

EMERGENCY ANCHORING SYSTEM (EASY)

The EASY is provided to anchor the RRDF platform in the event that the sealift vessel(s) departs the operating area due to weather or some other contingency. It is designed to hold the RRDF platform in its anchored position through Sea State 4 conditions. In more severe conditions, the EASY will control the drift of the platform.

The EASY is housed in a 20 ft ISO container which is placed and secured on the deck of the RRDF near the forward edge. The container is 20 ft long, 8 ft wide and 8 ft 5 in. high. The container is a full access container, which means that both sides and both ends of container open to give full access to the interior.

The mooring consists of one 2400 lbs NAVMOOR anchor, 200 ft of 2½ in. stud link chain and 500 ft of 10 in. circumference nylon line with a two-leg, 10 in. circumference nylon bridle.

DECK MATTING

The deck matting is used as dunnage and is placed where the cargo ramps of the sealift vessel and the lighters will land on the RRDF deck. The individual mats are a high density polyethylene material and are approximately 10 ft long, 4 ft wide and 1½ in. thick. Each mat weighs 300 lbs.

DECK CLEAT AND D-RING/CLOVERLEAF FITTINGS

The modular sections are provided with deck fittings to meet various operational needs. These fittings have a 15,000 lb load capacity and are inserted into the tube turns. There are ten tube turns per non-powered module and five per end rake.

MOORING BITT

The mooring bitts provide securing points on the RRDF platform for lighters and for fenders. They attach to the platform at the module connector locks. The bitts are designed for up to a 6 in. circumference mooring line. The mooring bitts are lifted and installed using the forklift adaptor. Each bitt weighs 235 lbs and is 6 ft 5 in. long. Thirty mooring bitts are provided with the RRDF system.

FENDERS (WITH ATTACHMENT CHAINS)

There are four types of fenders authorized for use on the RRDF: 6 ft X 12 ft (Yokohama), 5 ft X 10 ft, 4 ft X 12 ft and 3 ft X 5 ft. The 6 ft X 12 ft fender (Yokohama) weighs approximately 4500 lbs with chain and tire net. The 5 ft X 10 ft fender weighs approximately 1500 lbs. The 4 ft X 12 ft fender weighs approximately 1450 lbs. The 3 ft X 5 ft fender weighs approximately 300 lbs.

**OPERATOR MAINTENANCE
ROLL-ON/ROLL-OFF DISCHARGE FACILITY
DESCRIPTION AND DATA**

LOCATION AND DESCRIPTION OF MAJOR COMPONENTS

CENTER MODULE

Location

The center modules are located between, and attached to, the end rake modules.

Description

The center module is an empty container. Nominal dimensions of the center module are 8 ft wide, 40 ft long and 4 ft 6 in. deep. Each center module has two 25 ton capacity lifting shackles, which are flush mounted in the deck. The textured deck and smooth bottom are free of any protrusions that might obstruct packing. Access for internal leak detection of each compartment is provided by three recessed threaded plugs. Alternating male and female connectors are equally spaced along both sides and ends of the module. These lock assemblies are stowed flush with the surface and, when deployed, they connect modules with minimum clearance. Weight of the center module is approximately 22,500 lbs.

