 


TM 55-1945-205-24P-3

TECHNICAL MANUAL

REPAIR PARTS AND SPECIAL TOOLS LIST (RPSTL) FOR

WARPING TUG WT1 NSN 1945-01-473-2285

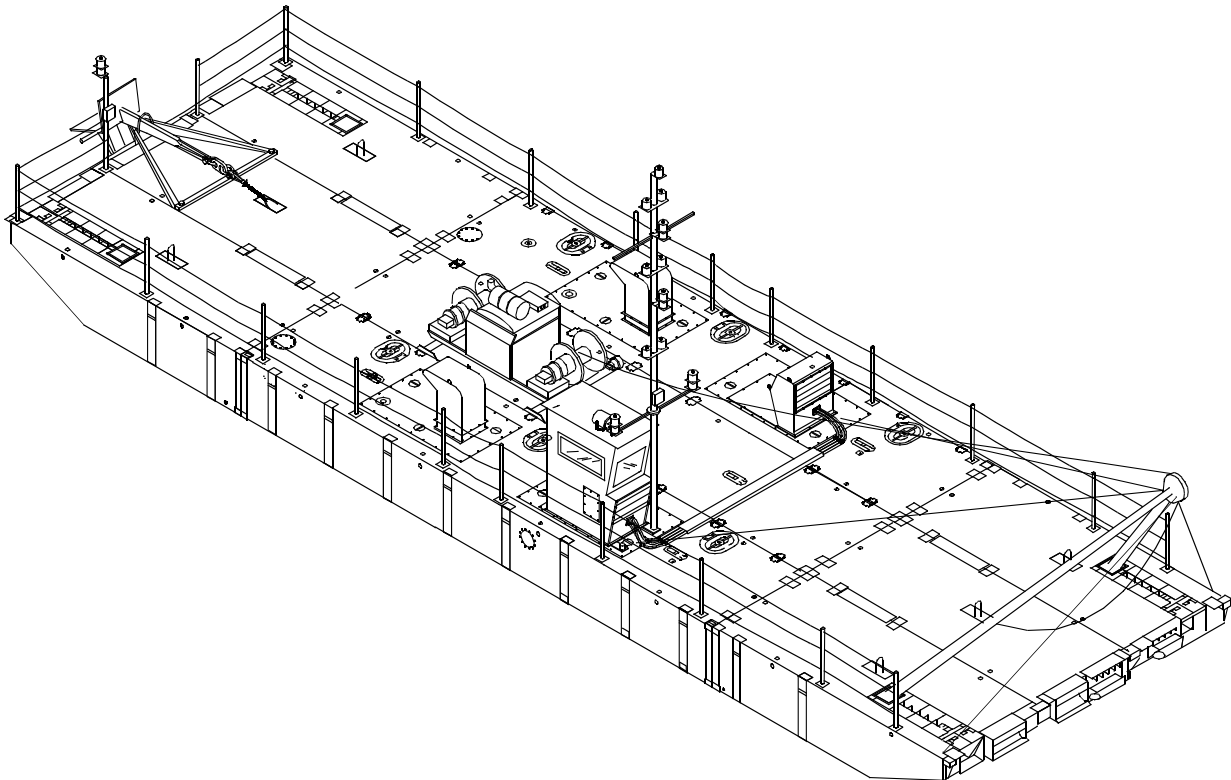

DISTRIBUTION STATEMENT A - Approved for public release, distribution is unlimited.

**HEADQUARTERS, DEPARTMENT OF THE ARMY
31 DECEMBER 2003**

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C. 31 December 2003

TECHNICAL MANUAL

**REPAIR PARTS AND SPECIAL TOOL LIST (RPSTL)
FOR
MODULAR CAUSEWAY SYSTEM (MCS)
WARPING TUG (WT)
WT1
NSN 1945-01-398-3856**

Current as of 12 June 2003

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this publication. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Submit your DA Form 2028 (Recommended Changes to Equipment Technical Publications), through the Internet, on the Army Electronic Product Support (AEPS) website. The Internet address is <http://aeaps.ria.army.mil>. If you need a password, scroll down and click on "ACCESS REQUEST FORM". The DA Form 2028 is located in the ONLINE FORMS PROCESSING section of the AEPS. Fill out the form and click on SUBMIT. Using this form on the AEPS will enable us to respond quicker to your comments and better manage the DA Form 2028 program. You may also mail, fax or email your letter or DA Form 2028 direct to: AMSTA-LC-CI / TECH PUBS, TACOM-RI, 1 Rock Island Arsenal, Rock Island, IL 61299-7630. The email address is TACOM-TECH-PUBS@ria.army.mil. The fax number is DSN 793-0726 or Commercial (309) 782-0726.

TABLE OF CONTENTS

WP Sequence No.

INTRODUCTION	i
--------------------	---

GROUP 01

Fig. 1	Propulsion Module	0001 00
Fig. 2	Engine Cooling System Installation	0002 00
Fig. 3	Duplex Strainer Assembly	0003 00
Fig. 4	Diesel Engine	0004 00
Fig. 5	Cylinder Block Assembly	0005 00
Fig. 6	Air Box Drains	0006 00
Fig. 7	Cylinder Head Assembly	0007 00
Fig. 8	Engine Lifter Brackets	0008 00
Fig. 9	Crankshaft/Stabilizers Assembly	0009 00
Fig. 10	Vibration Damper Assembly	0010 00
Fig. 11	Crankshaft Pulley Assembly	0011 00
Fig. 12	Flywheel Assembly	0012 00
Fig. 13	Flywheel Housing Assembly	0013 00
Fig. 14	Connecting Rod And Piston Assembly	0014 00
Fig. 15	Camshaft And Gear Train Assembly	0015 00
Fig. 16	Balance Weight Cover Assembly	0016 00
Fig. 17	Exhaust Valve And Injector Assembly	0017 00
Fig. 18	Rocker Cover Assembly	0018 00
Fig. 19	Fuel Injector Assembly	0019 00
Fig. 20	Fuel Pump Assembly	0020 00
Fig. 21	Fuel Filter Mount Assembly	0021 00
Fig. 22	Fuel Manifold Connections Assembly	0022 00
Fig. 23	Fuel Lines Filter And Fuel/Water Separator	0023 00
Fig. 24	Electronic Governor Assembly	0024 00
Fig. 25	Injector Controls Assembly	0025 00
Fig. 26	Air Inlet Housing Assembly	0026 00
Fig. 27	Blower And Drive Assembly	0027 00
Fig. 28	Blower And Drive Shaft Assembly	0028 00
Fig. 29	Turbocharger Assembly	0029 00
Fig. 30	Oil Pump Assembly	0030 00
Fig. 31	Oil Distribution Assembly	0031 00
Fig. 32	Oil Pressure Regulator And Pressure Relief Valve Assembly	0032 00
Fig. 33	Oil Filter Assembly	0033 00
Fig. 34	Oil Cooler/Gear Lines Assembly	0034 00
Fig. 35	Oil Filler Assembly	0035 00
Fig. 36	Dipstick Group	0036 00
Fig. 37	Oil Pan Assembly	0037 00
Fig. 38	Ventilation Assembly	0038 00
Fig. 39	Fresh Water Pump Assembly	0039 00
Fig. 40	Manifold Water Outlet Assembly	0040 00
Fig. 41	Thermostat Assembly	0041 00
Fig. 42	Water Bypass Tube Assembly	0042 00
Fig. 43	Water Connection Assembly	0043 00
Fig. 44	Heat Exchanger Assembly	0044 00
Fig. 45	Raw Water Pump Assembly	0045 00
Fig. 46	Water Filter Assembly	0046 00
Fig. 47	Exhaust Manifold Assembly	0047 00
Fig. 48	Starting Motor Assembly	0048 00
Fig. 49	Instrument Sending Units	0049 00
Fig. 50	Tachometer Drive Assembly	0050 00
Fig. 51	Shutoff Assembly	0051 00
Fig. 52	Pushbuttons Assembly	0052 00
Fig. 53	Wire Harness Assembly	0053 00
Fig. 54	Heater Connections Assembly	0054 00
Fig. 55	Fuel Priming Pump Assembly	0055 00
Fig. 56	Cold Weather Starting Assembly	0056 00

TABLE OF CONTENTS

WP Sequence No.

GROUP 01 (Continued)

Fig. 57	Engine Mounting Bracket	0057 00
Fig. 58	Marine Gear Mounting Hardware	0058 00
Fig. 59	Marine Gear	0059 00
Fig. 60	Transfer Case Assembly	0060 00
Fig. 61	Pump Jet Assembly	0061 00
Fig. 62	Hydro-Pump Assembly	0062 00
Fig. 63	Valve Unit	0063 00
Fig. 64	Hydro-Handpump Assembly	0064 00
Fig. 65	Drive Train Assembly	0065 00
Fig. 66	Tank Assembly	0066 00
Fig. 67	Fast Lube Oil Change Assembly	0067 00
Fig. 68	Transfer Case Installation	0068 00
Fig. 69	Alternator And Bracket Assembly	0069 00
Fig. 70	Machinery Guard Assembly	0070 00
Fig. 71	Engine Exhaust Assembly	0071 00
Fig. 72	Hydraulic Reservoir Assembly	0072 00
Fig. 73	Bilge System Installation	0073 00
Fig. 74	Fire Suppression System Installation	0074 00
Fig. 75	Fuel System Installation	0075 00
Fig. 76	Bilge Pump Panel	0076 00
Fig. 77	Single Bilge Pump Control Assembly	0077 00
Fig. 78	Engine Junction Box Assembly	0078 00
Fig. 79	Power Module Circuit Breaker Assembly	0079 00
Fig. 80	Power System Panel	0080 00
Fig. 81	Propulsion Module Junction Box	0081 00
Fig. 82	Battery Installation	0082 00
Fig. 83	Battery Jumper Cables	0083 00
Fig. 84	Thruster Junction Box	0084 00
Fig. 85	Vent Fan Relay Enclosure Assembly	0085 00
Fig. 86	Direct/Auxiliary Battery Box	0086 00
Fig. 87	Propulsion Modular Electrical Assembly	0087 00
Fig. 88	Propulsion Module Structure	0088 00
Fig. 89	Emergency Steering System	0089 00
Fig. 90	Center Module Assembly	0090 00
Fig. 91	Left End Rake	0091 00
Fig. 92	Center End Rake	0092 00
Fig. 93	Right End Rake	0093 00
Fig. 94	Bow Fender	0094 00
Fig. 95	Middle Control Panel	0095 00
Fig. 96	Lower Control Panel	0096 00
Fig. 97	Operator Cab Circuit Breaker	0097 00
Fig. 98	Terminal Strip Assembly	0098 00
Fig. 99	Starboard Receptacle Assembly	0099 00
Fig. 100	Port Receptacle Assembly	0100 00
Fig. 101	Navigational Set	0101 00
Fig. 102	Switchbox	0102 00
Fig. 103	Electrical Components	0103 00
Fig. 104	Public Address System	0104 00
Fig. 105	Receiver Transmitter	0105 00
Fig. 106	Spotlight	0106 00
Fig. 107	Radio Set	0107 00
Fig. 108	Mast Enclosure Assembly	0108 00
Fig. 109	Operators Cab	0109 00
Fig. 110	Intake Plenum Assembly	0110 00
Fig. 111	Fender Assembly	0111 00
Fig. 112	Mooring Cleat Assembly	0112 00
Fig. 113	Mooring D-ring Assembly	0113 00
Fig. 114	Exhaust Plenum Assembly	0114 00

TABLE OF CONTENTS

WP Sequence No.

GROUP 01 (Continued)

Fig. 115	Enclosure Assembly	0115 00
Fig. 116	Stern Light Assembly	0116 00
Fig. 117	Main Mast Navigation Assembly	0117 00
Fig. 118	Main Mast Winch	0118 00
Fig. 119	Navigation Lights Terminal Box	0119 00
Fig. 120	Starboard Navigation Light Assembly	0120 00
Fig. 121	Port Navigation Light Assembly	0121 00
Fig. 122	Vessel Aground Navigation Light Assembly	0122 00
Fig. 123	Masthead Navigation Light Assembly	0123 00
Fig. 124	Anchor Navigation Light Assembly	0124 00
Fig. 125	Single Task Light Assembly	0125 00
Fig. 126	Module Electrical Interconnect Assembly	0126 00
Fig. 127	Railing Installation	0127 00

GROUP 02

Fig. 128	Deck Box	0128 00
Fig. 129	Canopy Assembly	0129 00
Fig. 130	Life Ring Stanchion	0130 00
Fig. 131	Dual Drum Winch	0131 00
Fig. 132	Deck Winch Foundation	0132 00
Fig. 133	Skeg	0133 00
Fig. 134	Anchor And Anchor Frame Assembly	0134 00
Fig. 135	A-frame Assembly	0135 00

GROUP 03

Fig. 136	Bulk Material List	0136 00
----------	--------------------------	---------

GROUP 04

Fig. 137	Special Tool List	0137 00
----------	-------------------------	---------

INDEX

National Stock Index	0138 00
Part Number Index	0139 00

**UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
WARPING TUG (WT)
REPAIR PARTS AND SPECIAL TOOL LIST (RPSTL)**

INTRODUCTION**SCOPE**

This RPSTL lists and authorizes spares and repair parts; special tools, special test, measurement and diagnostic equipment (TMDE); and other special support equipment for performance of organizational maintenance of the Warping Tug. It authorizes the requisitioning, issue, and disposition of spares, repair parts, and special tools as indicated by the source, maintenance, and recoverability (SMR) codes.

GENERAL

In addition to the Introduction work package, this RPSTL is divided into the following work packages.

1. **Repair Parts List Work Packages.** Work packages containing lists of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. These work packages also include parts which must be removed for the replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Sending units, brackets, filters, and bolts are listed with the component they mount on. Bulk materials are listed by item name in FIG. BULK at the end of the work packages. Repair parts kits are listed separately in their own functional group and work package. Repair parts for reparable special tools are also listed in a separate work package. Items listed are shown on the associated illustrations.
2. **Specials Tools List Work Packages.** Work packages containing lists of special tools, special TMDE and special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in the DESCRIPTION AND USABLE ON CODE (UOC) column). Tools that are components of the common tool sets and/or Class VII are not listed.
3. **Cross-Reference Indexes Work Packages.** There are (enter applicable number) cross-reference indexes work packages in this RPSTL: (The National Stock Number (NSN) Index work package, the Part Number (PN) Index work package, and the Reference Designator Index work package. The National Stock Number Index work package refers you to the figure and item number. The Part Number Index work package refers you to the figure and item number. The Reference Designator Index work package refers you to the figure and item number.)

**EXPLANATION OF COLUMNS IN THE REPAIR PARTS LIST AND SPECIAL TOOLS
LIST WORK PACKAGES**

ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

SMR CODE (Column (2)). The SMR code containing supply/requisitioning information, maintenance level authorization criteria, and disposition instruction, as shown in the following breakout.

<u>Source Code</u>	<u>Maintenance Code</u>	<u>Recoverability Code</u>
<u>xx</u>	<u>xx</u>	<u>xx</u>
1st two positions: How to get an item.	3rd position: Who can install replace, or use the item.	4th position: Who can do complete repair* on the item.
		5th position: Who determines disposition action on unserviceable items.

*Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to the failed item.

HOW TO LOCATE REPAIR PARTS

1. When NSNs or PNs Are Not Known.

First. Using the table of contents, determine the assembly group to which the item belongs. This is necessary since figures are prepared for assembly groups and subassembly groups, and lists are divided into the same groups.

Second. Find the figure covering the functional group or the subfunctional group to which the item belongs.

Third. Identify the item on the figure and note the number(s).

Fourth. Look in the repair parts list work packages for the figure and item numbers. The NSNs and part numbers are on the same line as the associated item numbers.

2. When NSN Is Known.

First. If you have the NSN, look in the STOCK NUMBER column of the NSN index work package. The NSN is arranged in NIIN sequence. Note the figure and item number next to the NSN.

Second. Turn to the figure and locate the item number. Verify that the item is the one you are looking for.

3. When PN Is Known.

First. If you have the PN and not the NSN, look in the PART NUMBER column of the PN index work package.

Identify the figure and item number.

Second. Look up the item on the figure in the applicable repair parts list work package.

NOTE: Include 4 only if the RPSTL has a reference designator index work package.

4. When Reference Designator Is Known.

First. If you know the reference designator, look in the REFERENCE DESIGNATOR column of the reference designator index work package. Note the figure and item number.

Second. Turn to the figure and locate the item number. Verify that the item is the one you are looking for.

ABBREVIATIONS

<u>Abbreviation</u>	<u>Explanation</u>
---------------------	--------------------

NOTE: Include uncommon abbreviations used in the RPSTL. List/define those not found in MIL-STD-12.

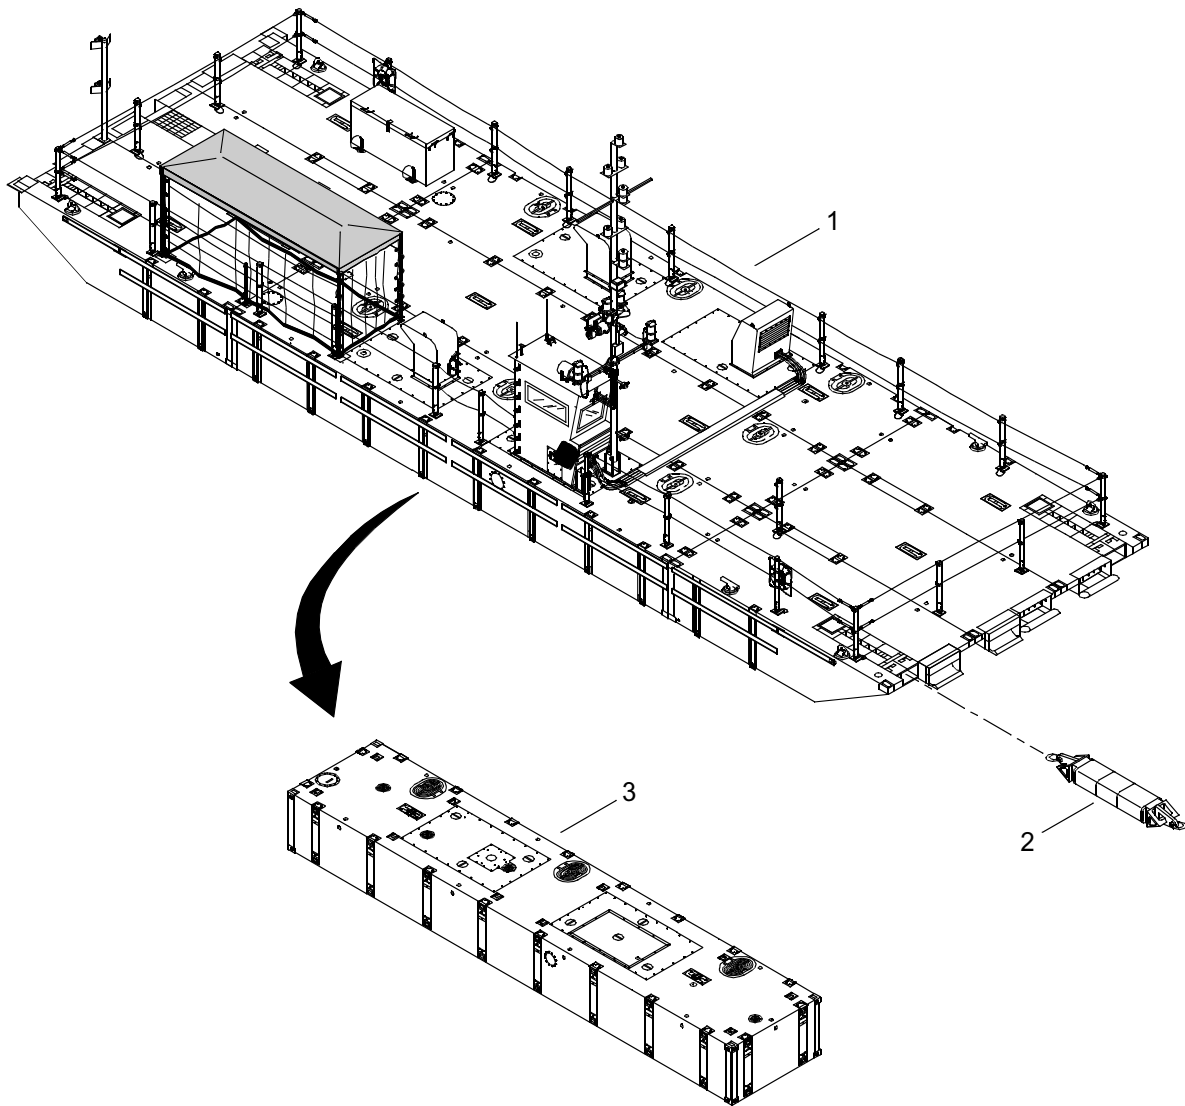 


Figure 1. Propulsion Module

(1) ITEM NO.	(2) SMR CODE	(3) NSN	(4) CAGEC	(5) PART NUMBER	(6) DESCRIPTION AND USABLE ON CODE (UOC)	(7) QTY
GROUP 01						
FIG. 1 PROPULSION MODULE						
1	XDODD		34712	E19203	POWERED SECTION	1
2	PAOLL	2040010923081	34712	E02783	.FLEXOR COUPLING,PON	1
3	XDODD		34712	E28403	.PROPULSION MODULE	1
END OF FIGURE						

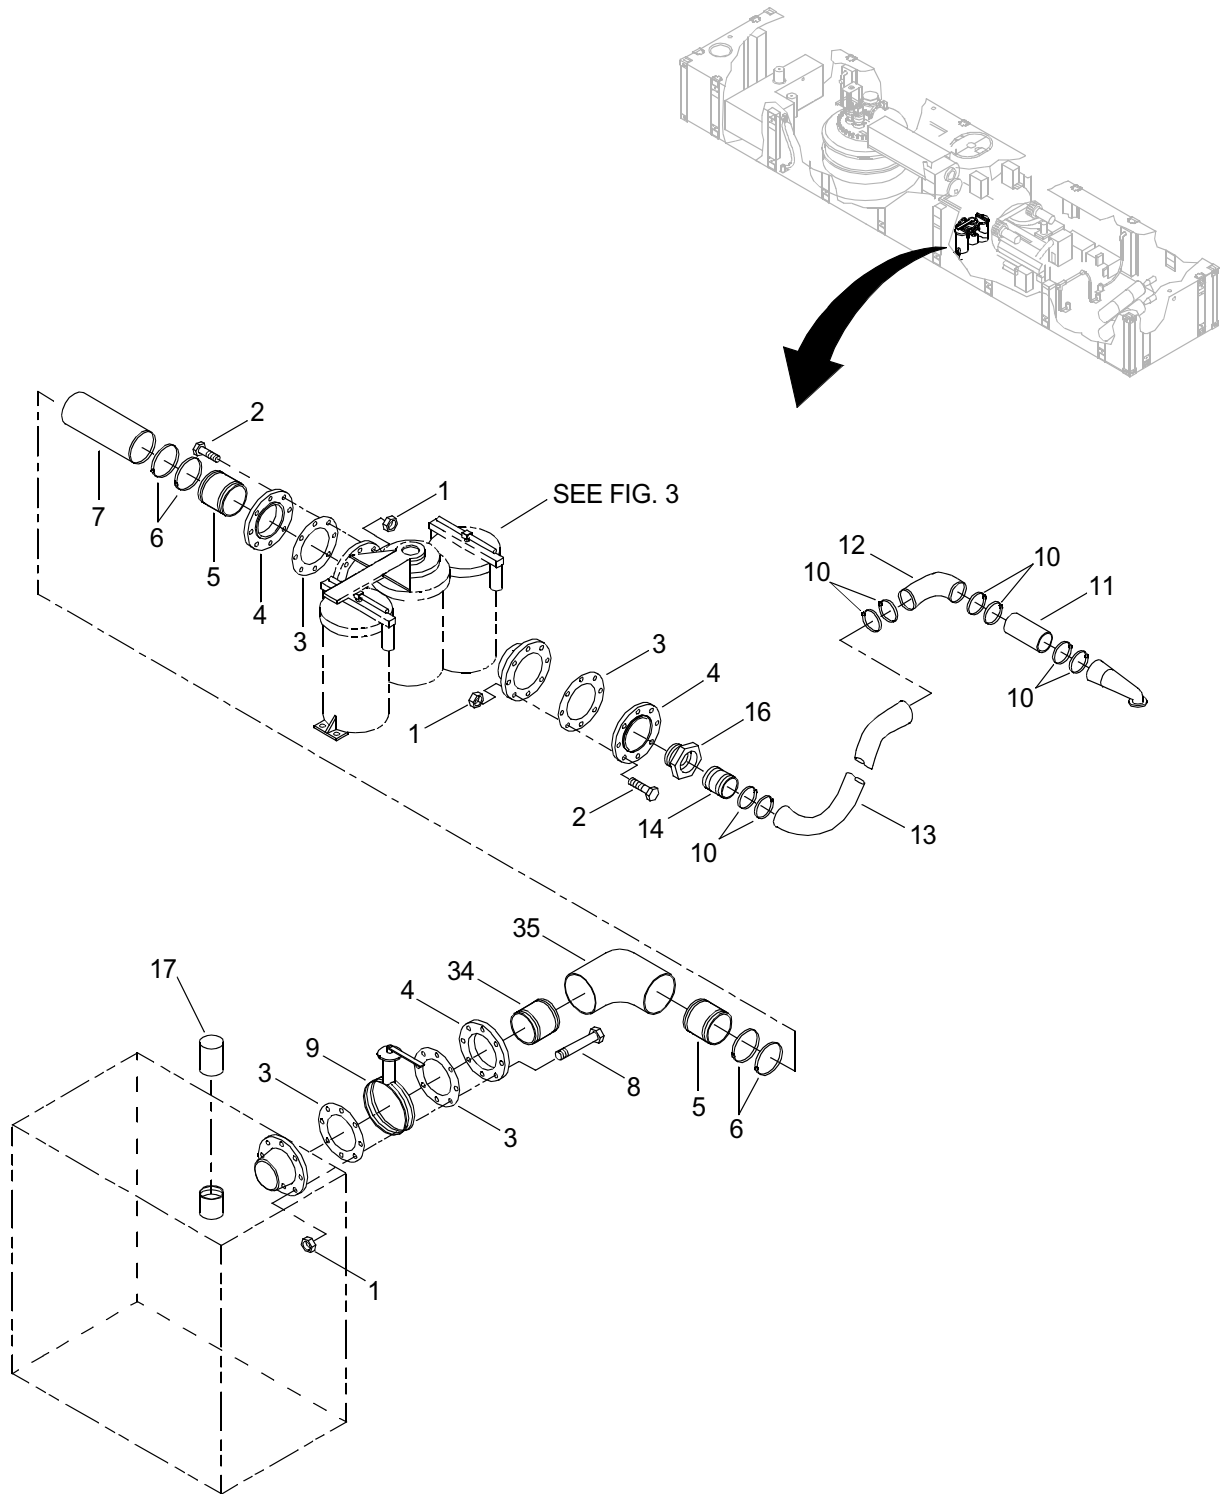 


Figure 2. Engine Cooling Installation (Sheet 1 of 2)

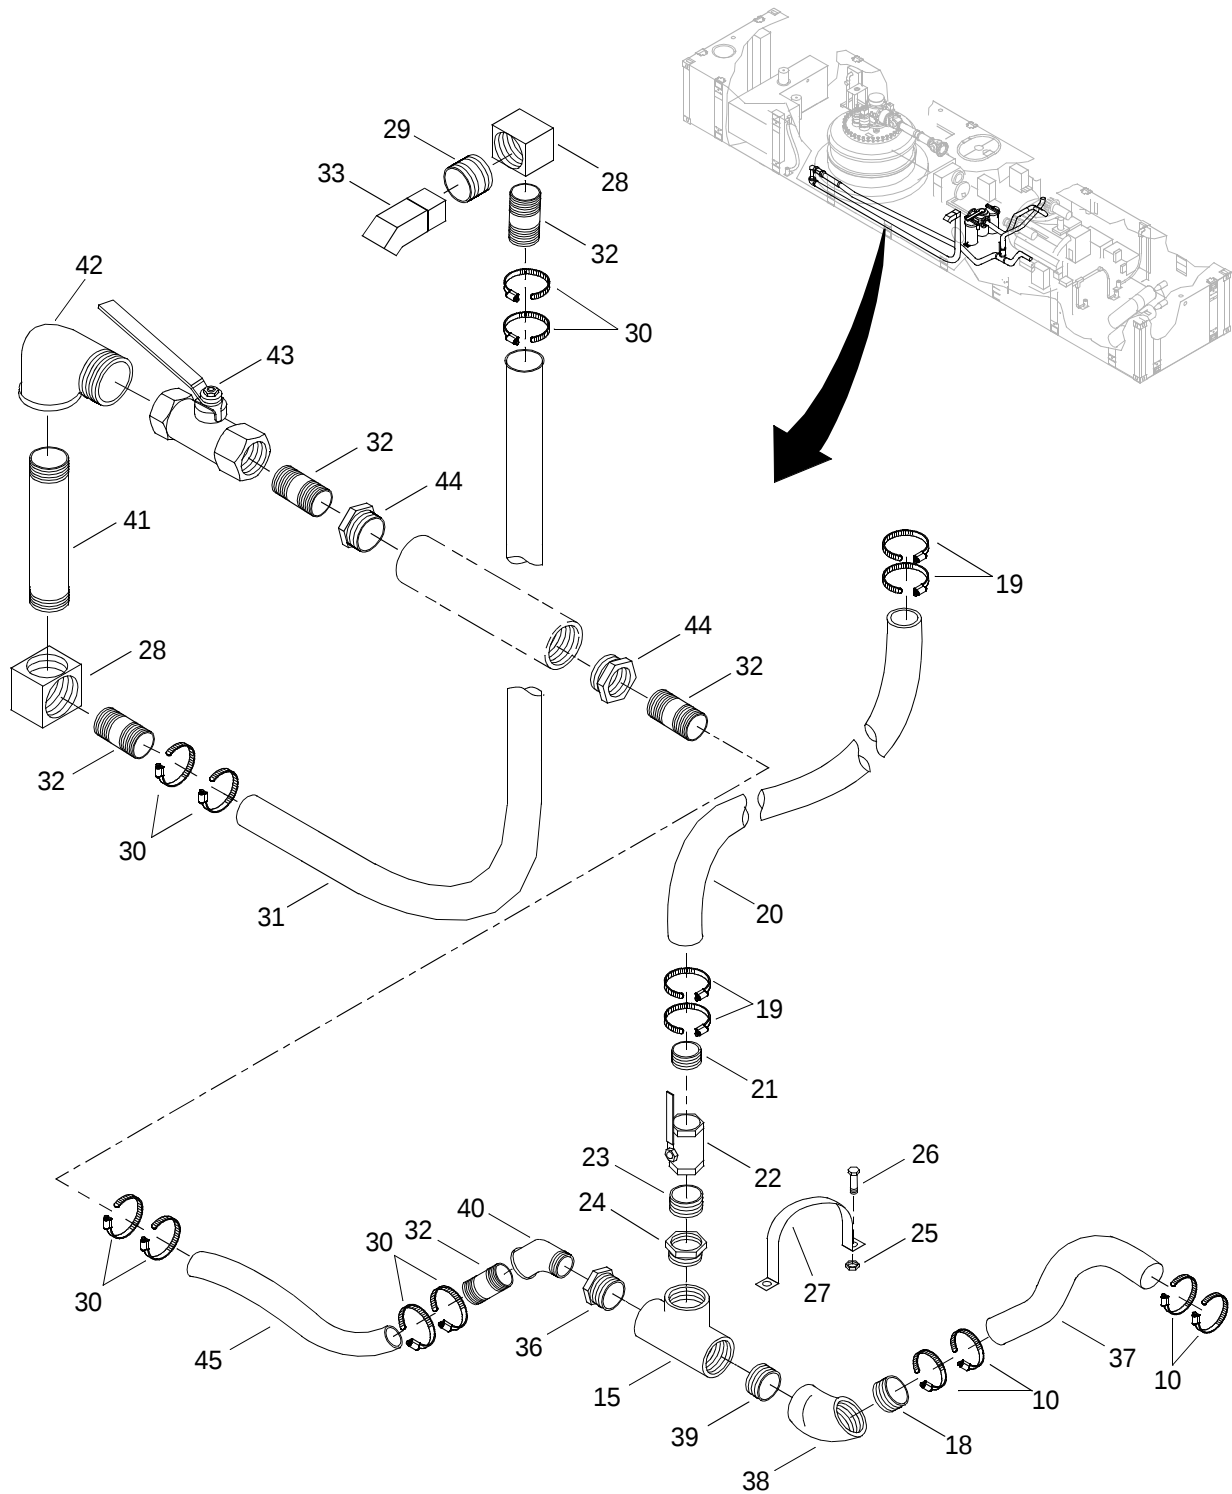 


Figure 2. Engine Cooling System Installation (Sheet 2 of 2)

(1) ITEM NO.	(2) SMR CODE	(3) NSN	(4) CAGEC	(5) PART NUMBER	(6) DESCRIPTION AND USABLE ON CODE (UOC)	(7) QTY
GROUP 01						
FIG. 2 ENGINE COOLING SYSTEM INSTALLATION						
1	XDOZZ		34712	0002434	NUT HEX	24
2	XDOZZ		34712	0002386	CAPSCREW, HEX HEAD	16
3	XDOZZ		34712	E09151	GASKET	4
4	XDOZZ		34712	E09538	FLANGE, THREADED	3
5	XDOZZ		72661	STC-40	NIPPLE, COMBINATION	2
6	XDOZZ		72661	HAS-72	CLAMP, HOSE	4
7	XDOZZ		34712	E09818-1	HOSE	1
8	XDOZZ		34712	0002379	CAPSCREW, HEX HEAD	8
9	XDOZZ		95976	3245259	VALVE, BUTTERFLY	1
10	XDOZZ		72661	HAS-48	CLAMP, HOSE	12
11	XDOZZ		34712	E09858-2	HOSE	1
12	XDOZZ		34712	E23768	ELBOW	1
13	XDOZZ		34712	E09858-3	HOSE	1
14	XDOZZ		34712	E09841	NIPPLE, PIPE	1
15	XDOZZ		34712	E09971	TEE	1
16	XDOZZ		34712	0006153	BUSHING	1
17	XDOZZ		34712	E11308	ANODE	1
18	PAOZA	4730010185813	72661	STC-30	ADAPTER, STRAIGHT, PI	1
19	XDOZZ		72661	HAS-36	CLAMP, HOSE	4
20	XDOZZ		34712	E23848-1	HOSE	1
21	PAOZZ	4730010260035	72661	STC-25	ADAPTER, STRAIGHT, PI	1
22	XDOZZ		34712	E09528	VALVE, BALL	1
23	PAOZZ	4730012828485	39428	4549K671	NIPPLE, PIPE	1
24	XDOZZ		34712	E09931	BUSHING	1
25	XDOZZ		34712	0006037	NUT, HEX	2
26	XDOZZ		34712	0002492	CAPSCREW, HEX HEAD	2
27	XDOZZ		34712	E23781	SUPPORT, CLAMP	1
28	XDOZZ		39428	4638K137	ELBOW, FEMALE	2

(1) ITEM NO.	(2) SMR CODE	(3) NSN	(4) CAGEC	(5) PART NUMBER	(6) DESCRIPTION AND USABLE ON CODE (UOC)	(7) QTY
29	XDOZZ	4730006218357	39428	4549K651	NIPPLE, CLOSE	2
30	XDOZZ		72661	HAS-32	CLAMP, HOSE	8
31	XDOZZ		34712	E13208-7	HOSE	1
32	PAOZZ		72661	STC-20	ADAPTER,STRAIGHT,PI	4
33	XDOZZ		39428	4638K237	ELBOW, FEMALE	1
34	XDOZZ		1EU68	040-4376	NIPPLE, PIPE	1
35	XDOZZ		34712	E26291	ELBOW, FEMALE	1
36	XDOZZ		34712	E26261	BUSHING.....	1
37	XDOZZ		34712	E09998-2	HOSE.....	1
38	XDOZZ		1EU68	50-03291	ELBOW, FEMALE	1
39	XDOZZ	4820011639982	1EU68	40-04214	NIPPLE, CLOSE	1
40	XDOZZ		1EU68	50-03314	ELBOW, STREET	1
41	XDOZZ		39428	4549K663	NIPPLE	1
42	XDOZZ		39428	4638K227	ELBOW, STREET	1
43	PAOZZ		81337	6-1-6200-44	VALVE,BALL	1
44	XDOZZ		1EU68	020-3536	BUSHING, REDUCER	2
45	XDOZZ		34712	E13208-6	HOSE.....	1
END OF FIGURE						

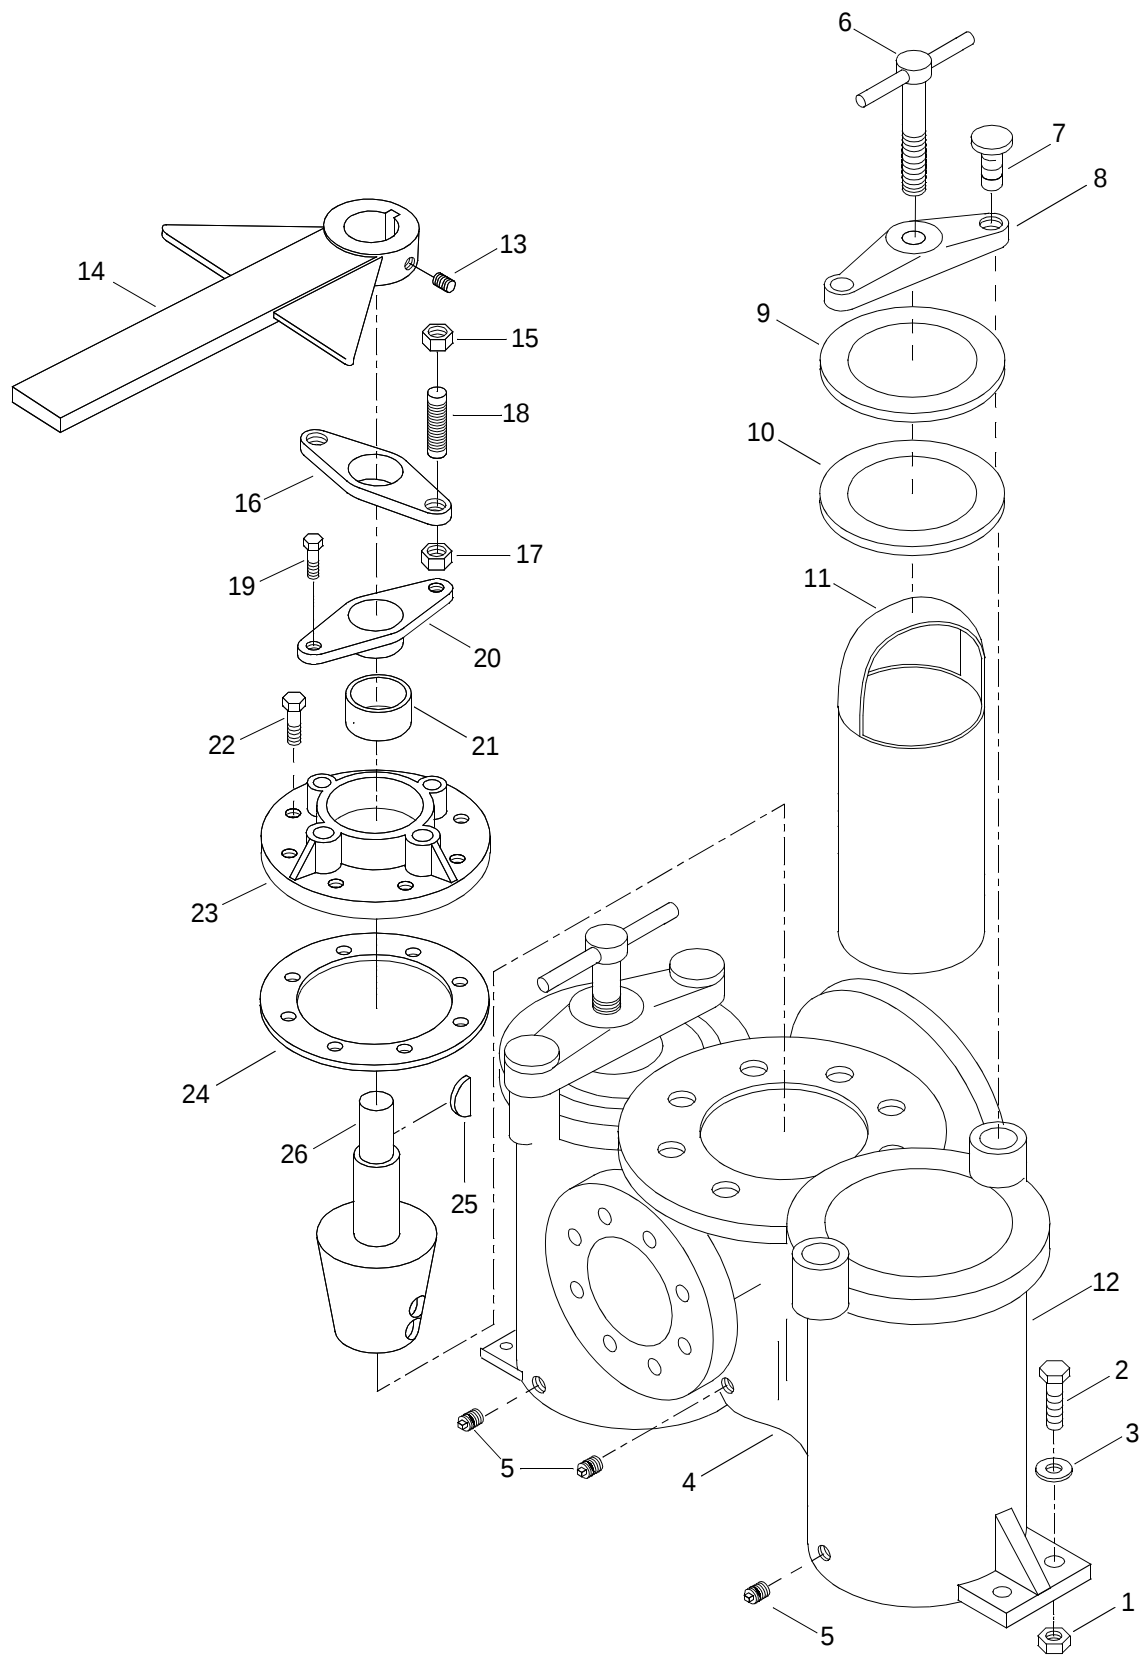 


Figure 3. Duplex Strainer Assembly

(1) ITEM NO.	(2) SMR CODE	(3) NSN	(4) CAGEC	(5) PART NUMBER	(6) DESCRIPTION AND USABLE ON CODE (UOC)	(7) QTY
GROUP 01						
FIG. 3 DUPLEX STRAINER ASSEMBLY						
1	XDOZZ		34712	0002759	NUT, HEX.	4
2	XDOZZ		34712	0003487	CAPSCREW, HEX HEAD	4
3	XDOZZ		34712	0005979	FLAT WASHER	4
4	XDOFF		34294	72-48F	STRAINER, DUPLEX.	1
5	XDOZZ		34294	72-48F-12	.PLUG	5
6	XDOZZ		34294	72-48F-17	.HANDLE, YOKE	2
7	XDOZZ		34294	72-48F-16	.STUD	4
8	XDOZZ		34294	72-48F-15	.YOKE	2
9	XDOZZ		34294	72-48F-6	.COVER	2
10	XDOZZ		34294	72-48F-7	.GASKET	2
11	XDOZZ		34294	72-48F-9	.BASKET	2
12	XDOZZ		34294	72-48F-8	.HOUSING, VALVE.	1
13	XDFZZ		34294	72-48F-29	.SCREW, SET	1
14	XDOZZ		34294	72-48F-1	.HANDLE, VALVE.	1
15	XDFZZ		34294	72-48F-2	.NUT, HEX	2
16	XDOZZ		34294	72-48F-3	.FLANGE, LOCKING	1
17	XDOZZ		34294	72-48F-4	.NUT, HEX	2
18	XDFZZ		34294	72-48F-5	.STUD	2
19	XDFZZ		34294	72-48F-20	.SCREW, CAP	2
20	XDFZZ		34294	72-48F-21	.GLAND	1
21	XDFZZ		34294	72-48F-22	.PACKING	1
22	XDFZZ		34294	72-48F-30	.SCREW, CAP	8
23	XDFZZ		34294	72-48F-23	.COVER, VALVE	1
24	XDFZZ		34294	72-48F-24	.GASKET	1
25	XDFZZ		34294	72-48F-28	.KEY.	1
26	XDOZZ		34294	72-48F-19	.PLUG ASSEMBLY	1
END OF FIGURE						

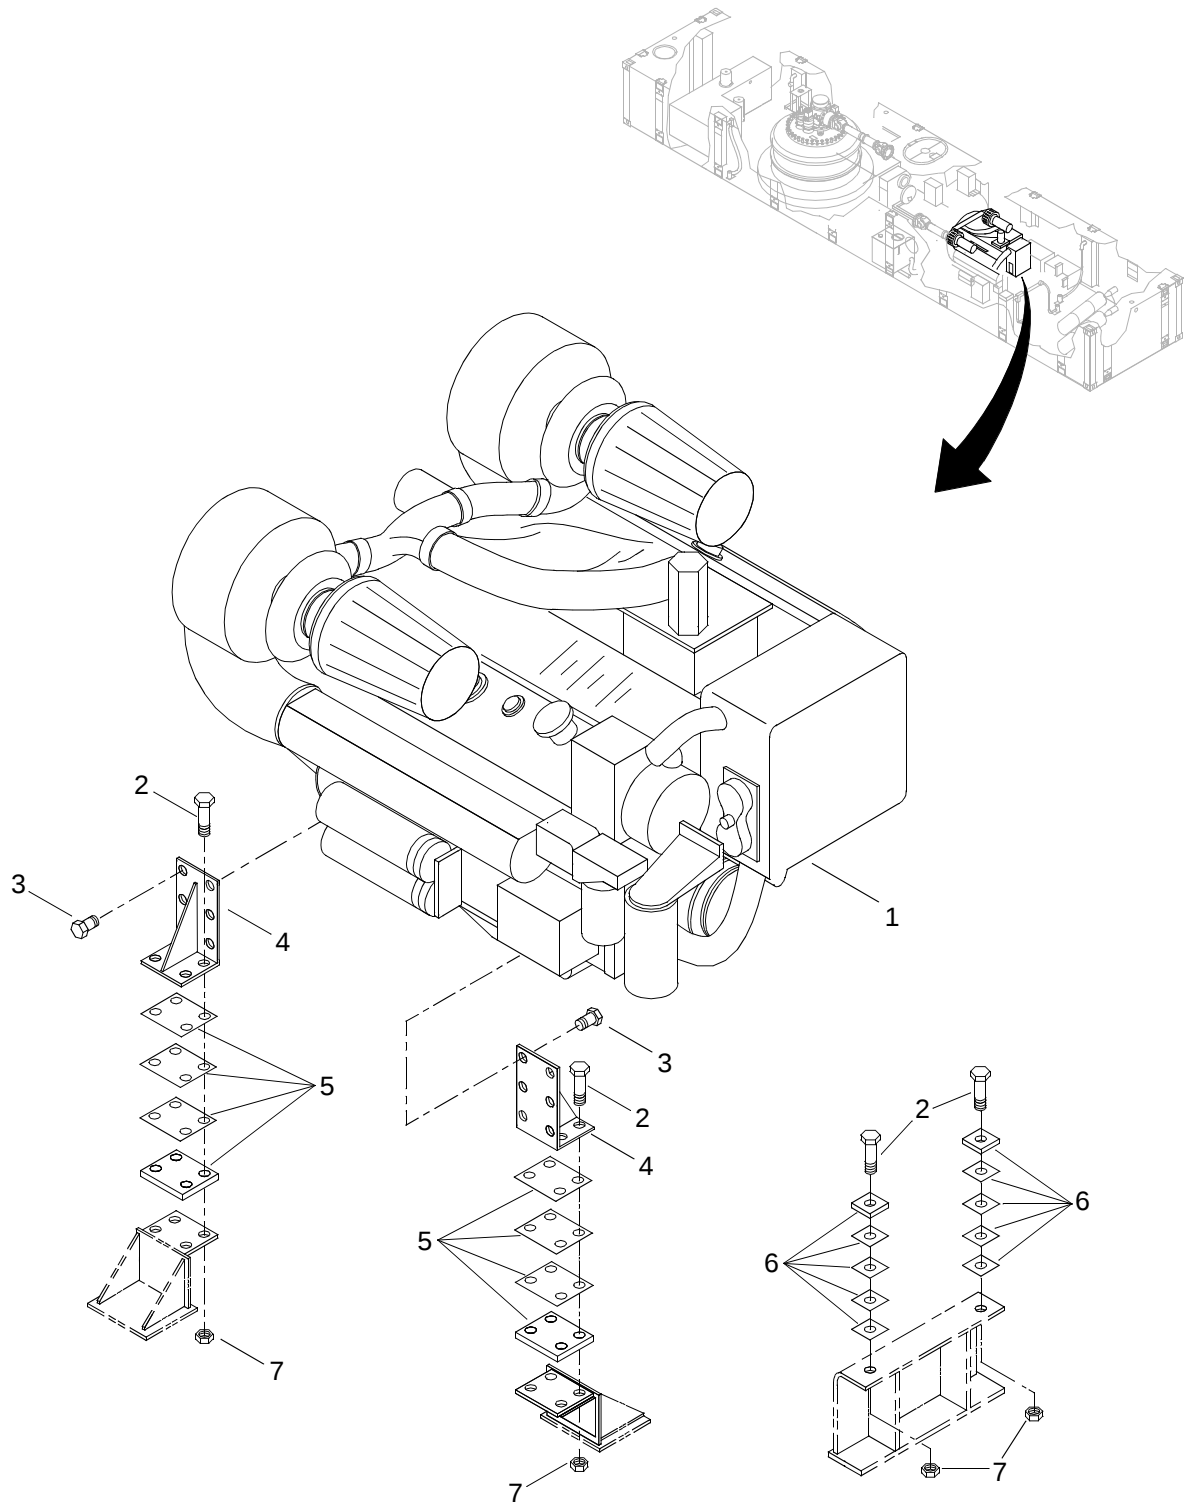 


Figure 4. Diesel Engine

(1) ITEM NO.	(2) SMR CODE	(3) NSN	(4) CAGEC	(5) PART NUMBER	(6) DESCRIPTION AND USABLE ON CODE (UOC)	(7) QTY
GROUP 01						
FIG. 4 DIESEL ENGINE						
1	PBFDD		6N512	8082-7404	ENGINE ASSY.....	1
2	XDFZZ		34712	0002387	CAPSCREW, HEX HEAD	20
3	XDFZZ		34712	0002390	CAPSCREW, HEX HEAD	20
4	XDFZZ		34712	E11792	BRACKET, FLYWHL HSG	2
5	XDFZZ		34712	E11961	SHIM SET	2
6	XDFZZ		34712	E11971	SHIM SET	6
7	XDFZZ		34712	0002641	NUT, HEX.....	22
END OF FIGURE						

1
2 Thru 41

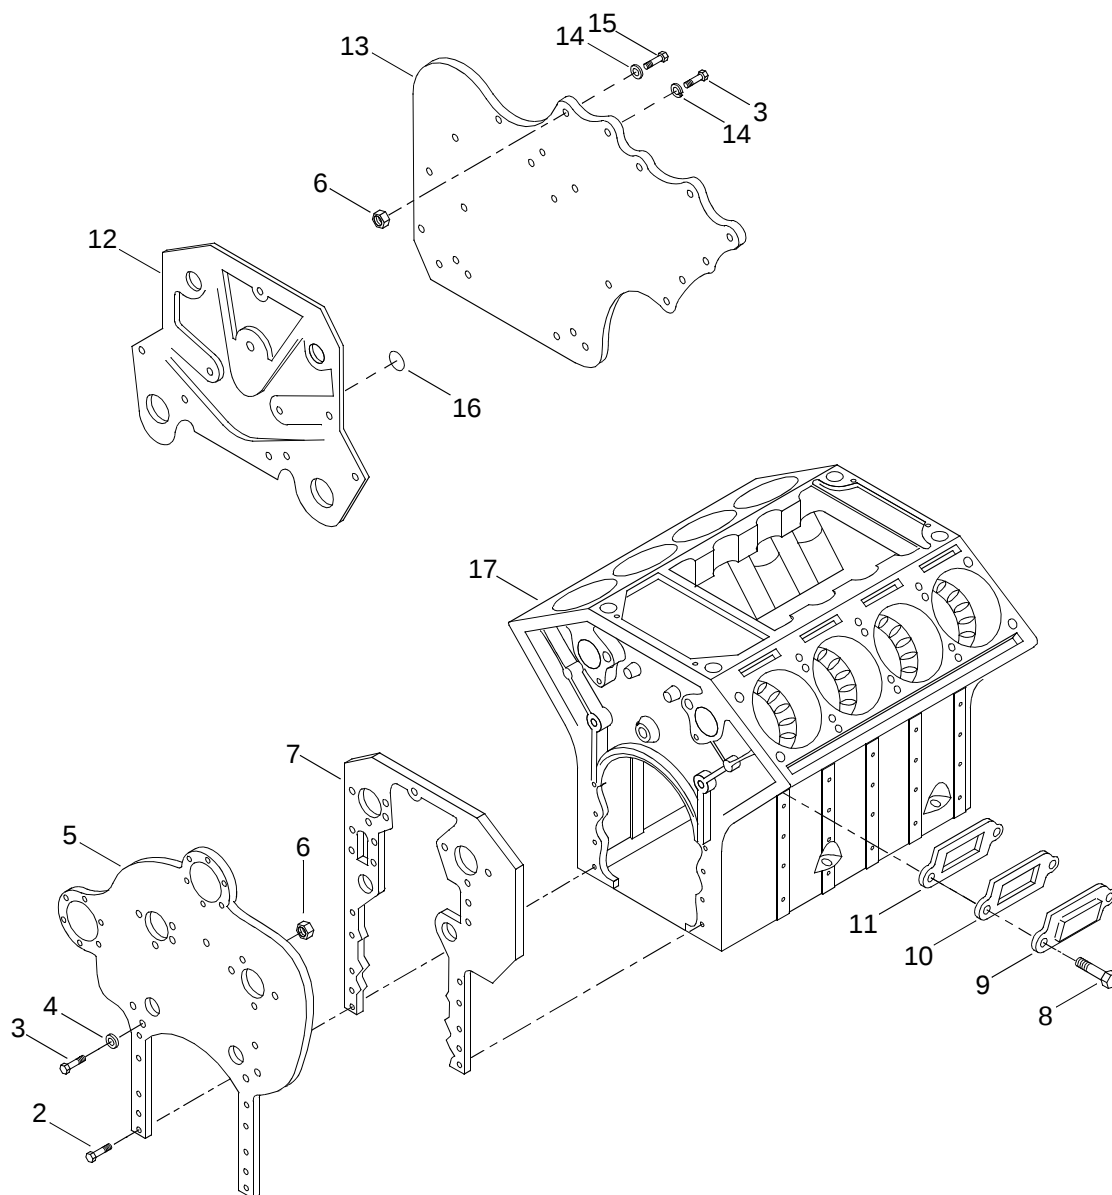 


Figure 5. Cylinder Block Assembly (Sheet 1 of 4)

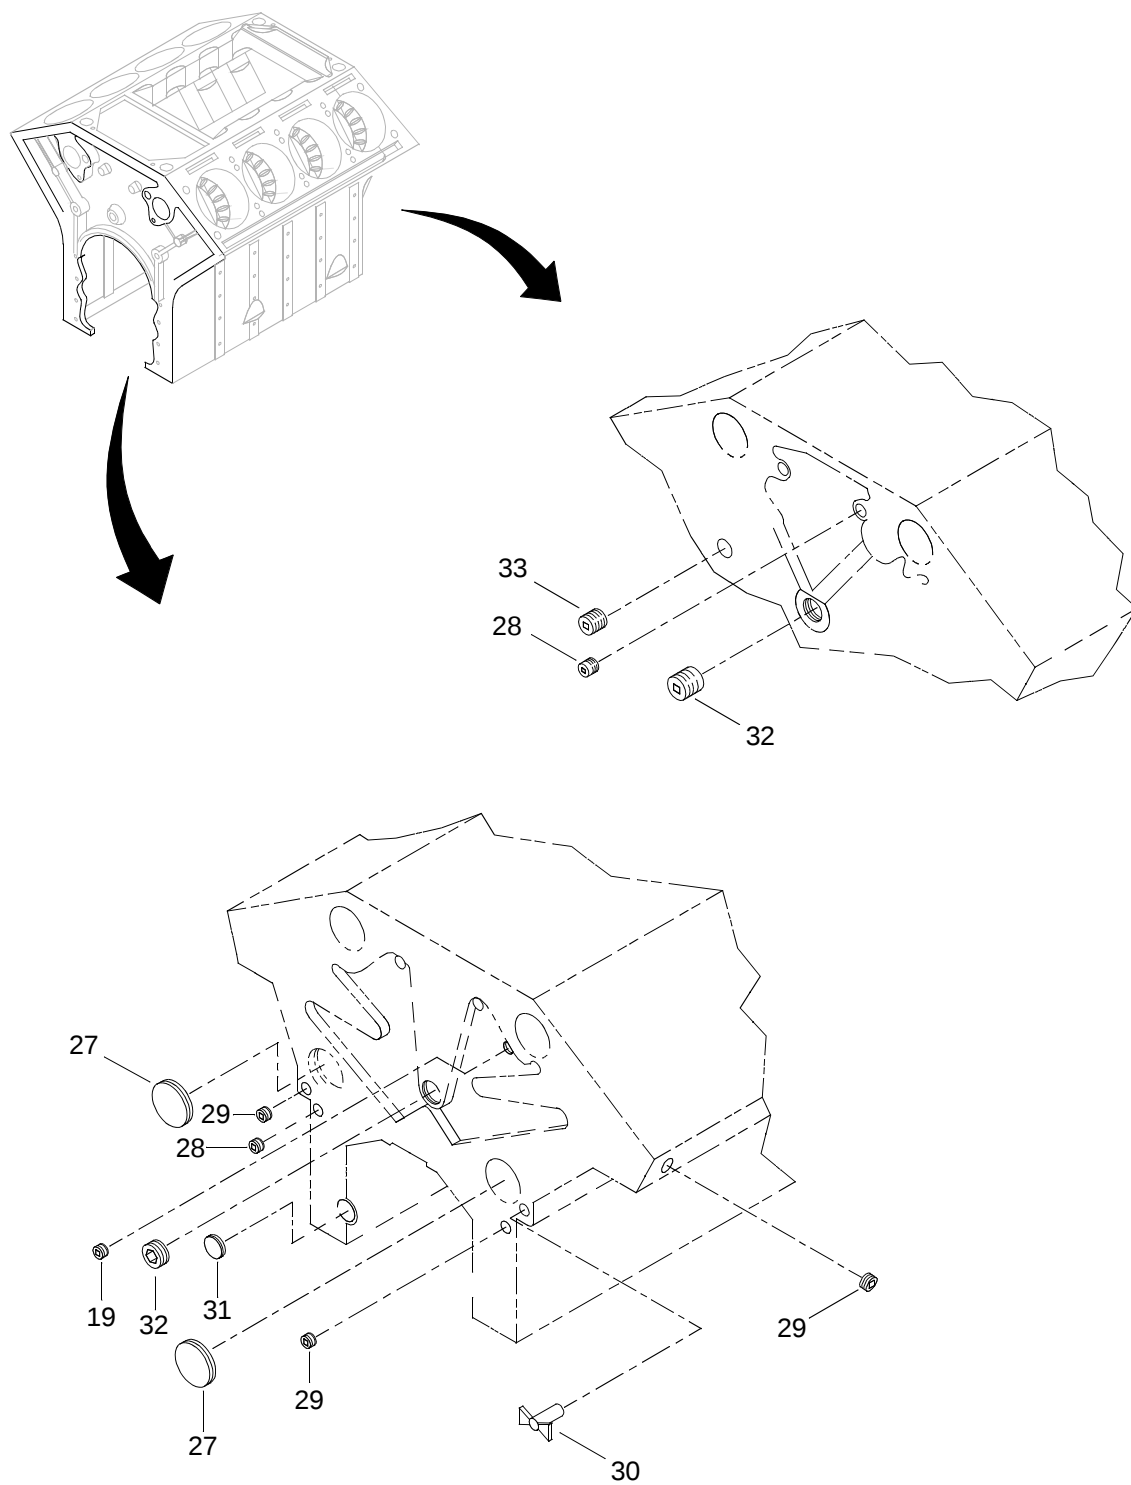 


Figure 5. Cylinder Block Assembly (Sheet 3 of 4)