

TECHNICAL MANUAL

DIRECT SUPPORT AND
GENERAL SUPPORT

MAINTENANCE MANUAL INCLUDING
REPAIR PARTS AND
SPECIAL TOOLS LIST

(INCLUDING DEPOT MAINTENANCE
REPAIR PARTS AND
SPECIAL TOOLS LIST)

VOLUME I - TROUBLESHOOTING

VOLUME II - MAINTENANCE

SIGHT, INFINITY: 8635466

(1240-00-056-4854)

VOLUME I TROUBLESHOOTING	CHAPTER 1	
	INTRODUCTION	1-1
	CHAPTER 2	
	CHECKOUT PROCEDURE	2-1
	CHAPTER 3	
	FAULT SYMPTOM INDEX	3-1
	CHAPTER 4	
	FAULT ISOLATION PROCEDURES	4-1
	APPENDIX A	
	WIRING DIAGRAM	A-1

VOLUME II MAINTENANCE	CHAPTER 1	
	INTRODUCTION	1-1
	CHAPTER 2	
	GENERAL MAINTENANCE INFORMATION	2-1
	CHAPTER 3	
	INSPECTION UPON RECEIPT	3-1
	CHAPTER 4	
	MAINTENANCE PROCEDURES	4-1
	CHAPTER 5	
	FINAL INSPECTION	5-1
	CHAPTER 6	
	PACKAGING	6-1
	APPENDIX A	
	EXPENDABLE SUPPLIES AND MATERIALS LIST	A-1
	APPENDIX B	
	MAINTENANCE TASK INDEX	B-1
	APPENDIX C	
	REPAIR PARTS AND SPECIAL TOOLS LIST	C-1

Technical Manual
No. 9-1240-322-34&P

HEADQUARTERS,
DEPARTMENT OF THE ARMY
Washington, D.C., 7 July 1980

TECHNICAL MANUAL
DIRECT SUPPORT AND
GENERAL SUPPORT
MAINTENANCE MANUAL INCLUDING
REPAIR PARTS AND SPECIAL
TOOLS LIST (INCLUDING DEPOT
MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST)

INFINITY SIGHT: 8635466
(1240-00-056-4854)

Current as of 31 July 1980.

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS
You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander U.S. Army Armament Materiel Readiness Command ATTN: DRSAR-MAS Rock Island, IL 61299 A reply will be furnished to you.

*This manual supersedes DS/GS portion of TM 9-1240-322-35, August 1964 and TM 9-1240-322-35P, January 1970, including all changes.

TABLE OF CONTENTS

		Paragraph	Page
HOW TO USE THIS MANUAL			vi
VOLUME I TROUBLESHOOTING			
CHAPTER 1.	INTRODUCTION		1-1
	Scope	1-1	1-1
	Organization	1-2	1-1
	How to Troubleshoot	1-3	1-2
	Test Equipment	1-4	1-4
	Sample Fault Isolation Procedure	1-5	1-4
CHAPTER 2.	CHECKOUT PROCEDURE		2-1
	Scope	2-1	2-1
	Checkout	2-2	2-1
CHAPTER 3.	FAULT SYMPTOM INDEX		3-1
CHAPTER 4.	FAULT ISOLATION PROCEDURES		4-1
	Scope	4-1	4-1
	Reticle Image Cannot Be Seen	4-2	4-1
	Image Not Clear or Pressure Cannot Be Held in Unit	4-3	4-9
APPENDIX A.	WIRING DIAGRAM		A-1
VOLUME II MAINTENANCE			
CHAPTER 1.	INTRODUCTION		1-1
Section 1.	General		1-1
	Scope	1-1	1-1
	Organization	1-2	1-1
Section 2.	Description and Data		1-2
	Description	1-3	1-2
	Tabulated Data	1-4	1-4
CHAPTER 2.	GENERAL MAINTENANCE INFORMATION		2-1
Section 1.	General		2-1
	Scope	2-1	2-1
Section 2.	Reference Documents		2-1
	General Maintenance	2-2	2-1
	Cleaning	2-3	2-1
	Painting	2-4	2-1
	Sealing	2-5	2-1
	Lubrication	2-6	2-1
Section 3.	Safety Procedures		2-1
	General Procedure	2-7	2-1

		Paragraph	Page
Section 4.	Special Tools and Test Equipment		2-2
	Tools and Test Equipment	2-8	2-2
CHAPTER 3.	INSPECTION UPON RECEIPT		3-1
	Scope	3-1	3-1
	Inspection Upon Receipt	3-2	3-1
CHAPTER 4.	MAINTENANCE PROCEDURES		4-1
Section 1.	General.....		4-1
	Scope.....	4-1	4-1
	List of Infinity Sight Items Contained in This Chapter	4-2	4-1
Section 2.	Machine Thread Plug		4-2
	Machine Thread Plug Maintenance Procedures Index	4-3	4-2
	Machine Thread Plug Removal	4-4	4-2
	Machine Thread Plug Installation.....	4-5	4-3
Section 3.	Valve Assembly.....		4-4
	Valve Assembly Maintenance Procedures Index.....	4-6	4-4
	Valve Assembly Removal	4-7	4-4
	Valve Assembly Installation	4-8	4-5
Section 4.	Receptacle Assembly		4-6
	Receptacle Assembly Maintenance Procedures Index.....	4-9	4-6
	Receptacle Assembly Removal	4-10	4-6
	Receptacle Assembly Installation	4-11	4-7
Section 5.	Lamp Assembly		4-8
	Lamp Assembly Maintenance Procedures Index.....	4-12	4-8
	Lamp Assembly Disassembly	4-13	4-8
	Lamp Assembly Assembly	4-14	4-10
Section 6.	Observation Window.....		4-12
	Observation Window Maintenance Procedures Index	4-15	4-12
	Observation Window Removal	4-16	4-12
	Observation Window Installation	4-17	4-14
Section 7.	Variable Resistor		4-16
	Variable Resistor Maintenance Procedures Index	4-18	4-16
	Variable Resistor Removal	4-19	4-16
	Variable Resistor Installation	4-20	4-18

		Paragraph	Page
Section 8.	Fixed Resistor.....		4-20
	Fixed Resistor Maintenance		
	Procedures Index.....	4-21	4-20
	Fixed Resistor Removal.....	4-22	4-20
	Fixed Resistor Installation	4-23	4-22
Section 9.	Toggle Switch		4-24
	Toggle Switch Maintenance Procedures		
	Index	4-24	4-24
	Toggle Switch Removal.....	4-25	4-24
	Toggle Switch Installation.....	4-26	4-26
Section 10.	Boot and Insulator		4-28
	Boot and Insulator Maintenance		
	Procedures Index	4-27	4-28
	Boot and Insulator Removal.....	4-28	4-28
	Boot and Insulator Installation	4-29	4-29
Section 11.	Elevation Boresight Knob		4-30
	Elevation Boresight Knob Maintenance		
	Procedures Index.....	4-30	4-30
	Elevation Boresight Knob Disassembly	4-31	4-30
	Elevation Boresight Knob Assembly	4-32	4-32
Section 12.	Azimuth Boresight Knob.....		4-34
	Azimuth Boresight Knob Maintenance		
	Procedures Index.....	4-33	4-34
	Azimuth Boresight Knob Disassembly	4-34	4-34
	Azimuth Boresight Knob Assembly.....	4-35	4-36
CHAPTER 5.	FINAL INSPECTION.....		5-1
	Scope	5-1	5-1
	Azimuth and Elevation Knob Adjustment.....	5-2	5-2
	Infinity Sight Purging and Charging.....	5-3	5-4
	Final Inspection	5-4	5-6
CHAPTER 6.	PACKAGING		6-1
	Scope	6-1	6-1
	Preparation for Packaging of Optical		
	Components	6-2	6-1
	Packaging of Infinity Sight	6-3	6-1
APPENDIX A.	EXPENDABLE SUPPLIES AND MATERIALS LIST		A-1
Section 1.	Introduction		A-1
	Scope	A-1	A-1
	Explanation of Columns	A-2	A-1
Section 2.	Expendable Supplies and Materials		A-2

		Paragraph	Page	Figure
APPENDIX B.	MAINTENANCE TASK INDEX		B-1	
	Scope.....	B-1	B-1	
	Maintenance Task Index.....	B-2	B-2	
APPENDIX C.	DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST (INCLUDING DEPOT MAINTENANCE REPAIRS PARTS AND SPECIAL TOOLS LIST).....		C-1	
Section I.	Introduction.....		C-1	
Section II.	Repair Parts List.....		C-7	
Group 00	Sight, Infinity Right View.....		C-8	1
00	Sight, Infinity Left View.....		C-10	2
00	Sight, Infinity Front View.....		C-12	3
Section III.	Special Tools List.....		C-15	
	Special Tools		C-16	4
Section IV.	National Stock Number and Part Number Index.		C-19	

HOW TO USE THIS MANUAL

This manual has two volumes of maintenance information you will need to repair and service the 8635466 Infinity Sight.

- Volume I - Troubleshooting
- Volume II - Maintenance

The organization paragraph in each volume tells you what information you can find in each chapter and appendix.

There are four ways to find any maintenance information you need:

- Index on the front cover which tells what information is contained in each chapter
- Table of contents located at the front of the manual which has a complete listing by paragraph number and page number
- Fault Symptom Index (Vol I, Chap 3) which lists the fault symptoms and shows where to look to fix them
- Maintenance Task Index (Vol II, App B) which lists major assemblies, subassemblies and paragraph numbers of all maintenance procedures

Before doing any maintenance, you should read and understand HOW TO TROUBLESHOOT on page 1-2, If you do not know the equipment well, you should read the section on description and data (Vol II, Chap 1).

Throughout the manual reference is made to a Job Performance Guide 113-091-9000R (JPG 41C) which helps you to develop skills in doing the maintenance tasks.

TECHNICAL MANUAL

DIRECT SUPPORT AND
GENERAL SUPPORT
MAINTENANCE MANUAL INCLUDING
REPAIR PARTS AND SPECIAL
TOOLS LIST (INCLUDING DEPOT
MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST)

VOLUME I - TROUBLESHOOTING

SIGHT, INFINITY: 8635466

CHAPTER 1

INTRODUCTION

1-1. SCOPE

This volume contains troubleshooting requirements and procedures for direct support and general support (DS/GS) maintenance of the 8635466 Infinity Sight. See Volume II for maintenance procedures.

1-2. ORGANIZATION

a. Chapter 2, Checkout Procedure, gives you flow charts to follow to check that the Infinity Sight is working right.

b. Chapter 3, Fault Symptom Index, lists the fault symptoms and where to look in this manual to fix each one.

c. Chapter 4, Fault Isolation Procedures, shows you step-by-step how to troubleshoot the fault symptoms found in Chapter 3.

d. Appendix A, Wiring Diagram, may be used to help you find the cause of a fault. The diagram can be used to trace signal flow or to find out what a voltage should be.


1-3. HOW TO TROUBLESHOOT

The following steps tell you how to troubleshoot. A diagram of these steps is on page 1-3.

- Ⓐ Do a visual check and list any faults on DA Form 2404 before making repairs. See Vol II, Chap 3 for what to check for.
- Ⓑ If you see any faults that may affect the checkout procedure, fix them now. This does not mean small things like painting scratches.
- Ⓒ Do the checkout procedure in Vol I, Chap 2 from the beginning until you find a fault symptom.
- Ⓓ When a fault is found, go to the chapter noted and follow the maintenance procedure given there. If you already know the fault, look at the fault symptom index in Chapter 3 of this volume. This will also tell you what to do.
- Ⓔ After the bad part has been repaired or replaced, do the checkout procedure in Chapter 2 again. This is to make sure the new part has fixed the problem.
- Ⓕ If all the faults are now corrected, do the maintenance tasks on DA Form 2404.
- Ⓖ Do the final inspection given in Vol II, Chap 5.
- Ⓗ The job is over and the good assembly is sent back to service.
- Ⓘ If all faults were not corrected after step E, the bad assembly is sent back to the depot for repair.

The sample fault isolation procedure (para 1-5) shows you how to use the flow charts in this volume.

1-3. HOW TO TROUBLESHOOT (CONT)

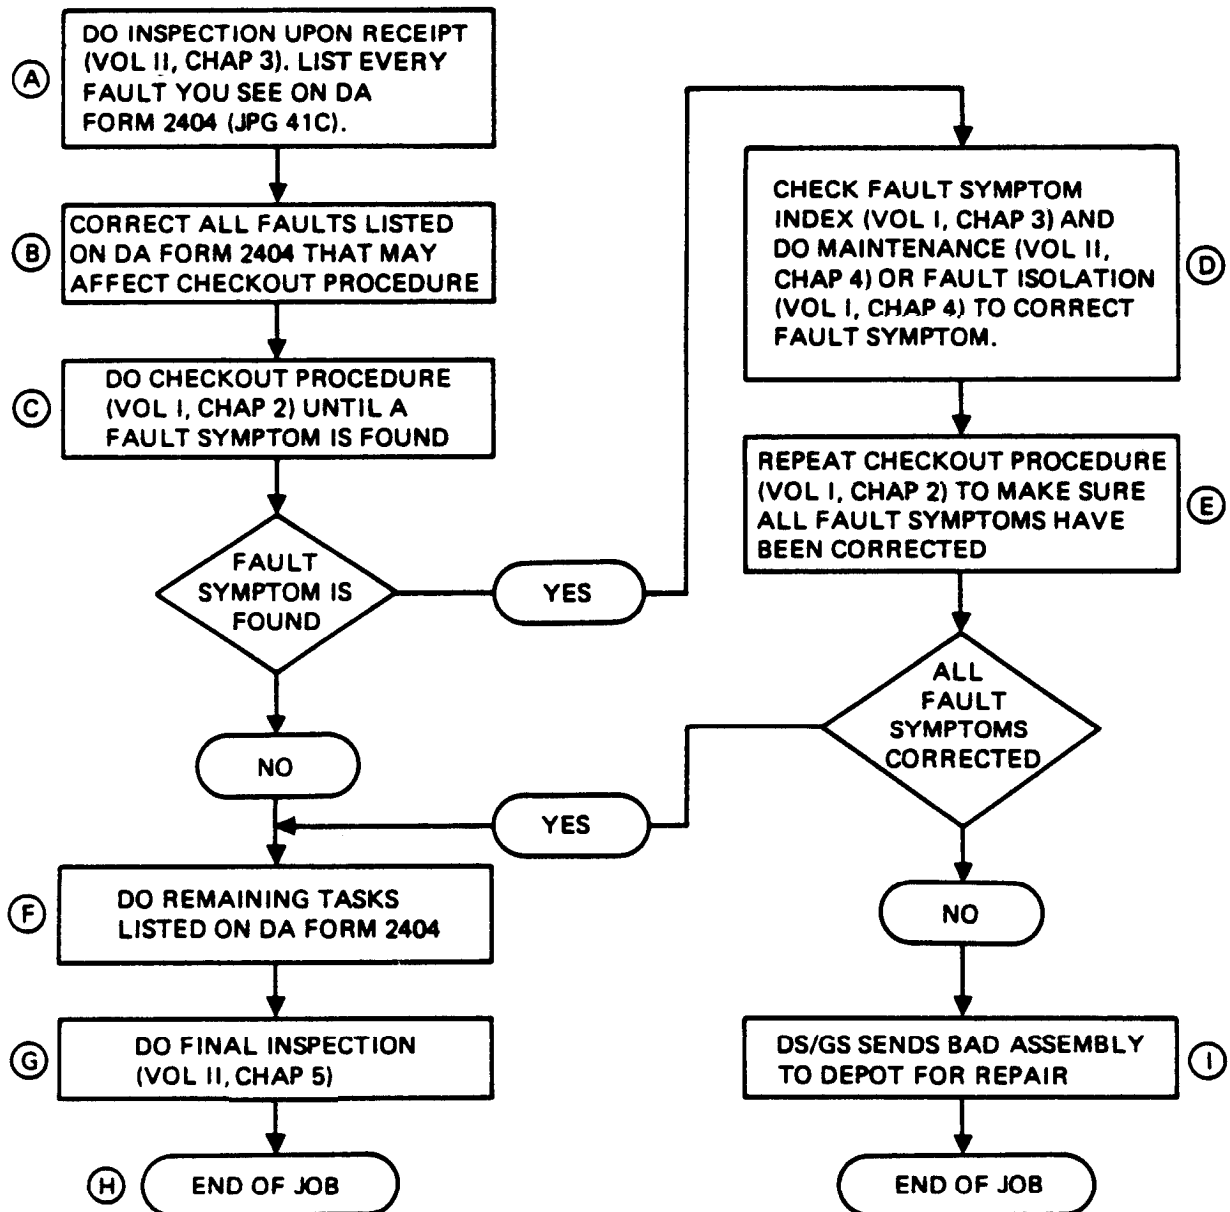

1-4. TEST EQUIPMENT

Test Equipment	National Stock Number (NSN)	Test	Reference
1. Multimeter	6625-00-964-2629	a. Resistance b. Voltage	JPG 41C
2. 0-50 VDC power supply	6130-00-435-1116	Checkout of Infinity Sight	JPG 41C

1-5. SAMPLE FAULT ISOLATION PROCEDURE

The sample fault isolation procedure tells you how to use the flow charts in Chapters 2 and 4.

Callouts	Description
Ⓐ	This is the symptom shown in the Fault Symptom Index in Chapter 3.
Ⓑ	Block number. Tells you the number of the block on the page. Block numbers start over at every page.
Ⓒ	This is a note. It gives useful information that can help you in doing the procedure. A note will always come just before the step of the procedure that it is about. A warning will be labeled at top of block. Always follow the instruction in this kind of block carefully: If you don't you may be injured or injure someone else. A caution will also be labeled at top of block. The instructions in this kind of block tell you what to do so you will not damage equipment. Be sure you always follow caution instructions carefully.
Ⓓ	Index numbers are found in the procedures and the illustration to help you find the connector, switch, knob, etc. The illustration will always be on the same or an opposite page. Remember you will never have to turn the page to find the illustration.
Ⓔ	The circle is used to send you to another sheet of procedure to keep on troubleshooting. The top number in the circle tells you what sheet to go to. The bottom number tells you what block on that sheet to start with. For example:  means that you should go to sheet 3 block 01 to keep on the procedure.