

TECHNICAL MANUAL }
No. 9-1240-335-35P }

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 1 April 1970

DIRECT SUPPORT, GENERAL SUPPORT, AND DEPOT

MAINTENANCE

REPAIR PARTS AND SPECIAL TOOLS LIST

TELESCOPE M97 (1240-360-1593), M97G

(1240-732-1470) AND M97H (1240-732-1469)

SECTION	Paragraph	Page
I. INTRODUCTION		
Scope -----	1	2
General -----	2	2
Explanation of columns -----	3	2
Special information -----	4	3
How to locate repair parts -----	5	4
Abbreviations -----	6	4
Federal supply codes for manufacturers -----	7	4
Recommendations for maintenance publications -----	8	4
II. REPAIR PARTS FOR DIRECT SUPPORT, GENERAL SUPPORT, AND DEPOT MAINTENANCE -----		5
III. SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT FOR DIRECT SUPPORT, GENERAL SUPPORT, AND DEPOT MAINTENANCE -----		27
IV. INDEX-FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS- REFERENCED TO FIGURE AND ITEM NUMBER -----		28

*This manual supersedes ORD 8 SNL F-235 Vol 16, May 52, C1, July 53, C2, 6 Feb 57, C3, 30 Jan 62, ORD 9 SNL F-235 Vol 16, Jan 53 and C1, 10 Nov 54

Section I. INTRODUCTION

1. Scope

This manual lists repair parts, special tools, and equipment required for the performance of direct support, general support, and depot maintenance of the Telescope M97, M97G and M97H.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Repair Parts-Section II. A list of repair parts for the performance of maintenance at the direct support, general support, and depot level in figure and item number sequence.

b. Special Tools, Test and Support Equipment - Section III. Not applicable.

c. Federal Stock Number and Reference Number Index-Section IV. A list of Federal stock numbers in ascending numerical sequence followed by a list of reference numbers in ascending alpha-numeric sequence, cross-referenced to the illustration figure number and item number.

3. Explanation of Columns

The following provides an explanation of columns in the tabular list in Section II.

a. Source Maintenance and Recoverability Codes (SMR), Column 1:

(1) Source code, indicates the selection status and source for the listed item. Source codes are:

Code	Explanation
P	Repair parts, special tools, and test equipment which are stocked in or supplied from the GSA/DSA, or Army supply system and authorized for use at indicated maintenance categories.
P2	Repair parts, special tools, and test equipment which are procured and stocked for insurance purposes because the combat or military essentiality of the end item dictates that a minimum quantity be available in the supply system.
P9	Assigned to items which are NSA design controlled: unique repair parts, special tools, test, measure and diagnostic equipment, which are stocked and supplied by the Army COMSEC logistic system, and which are not subject to the provisions of AR 380-41.
P10	Assigned to items which are NSA design controlled: special tools, test, measuring and diagnostic equipment for COMSEC support, which are accountable under the provision of AR 380-41, which are stocked and supplied by the Army COMSEC logistic system.
M	Repair parts which are not procured or stocked, but are to be manufactured in indicated levels.
A	Assemblies which are not procured or stocked as such, but are made up of two or more units. Such component units carry individual stock numbers and descriptions, are procured and stocked separately and can be assembled to form the required assembly at indicated maintenance categories.

Code	Explanation
X	Parts and assemblies which are not procured or stocked and the mortality of which normally is below that of the applicable end item or component. The failure of such part or assembly should result in retirement of the end item from the supply system.
X1	Repair parts which are not procured or stocked. The requirements for such items will be filled by use of the next higher assembly or component.
X2	Repair parts which are not stocked. The indicated maintenance category requiring such repair parts will attempt to obtain same through cannibalization. Where such repair parts are not obtainable through cannibalization, requirements will be requisitioned, with accompanying justification, through normal supply channels.
G	Major assemblies that are procured with PEMA funds for initial issue only as exchange assemblies at DSU and GSU level. These assemblies will not be stocked above DS and GS level or returned to depot supply level.

(2) Maintenance code, indicates the lowest category of maintenance authorized to install the listed item. The maintenance level codes are:

Code	Explanation
O	Organizational maintenance
F	Direct support maintenance
H	General support maintenance
D	Depot maintenance.

(3) Recoverability code, indicates whether unserviceable items should be returned for recovery or salvage. Items not coded are expendable. Recoverability codes are:

Code	Explanation
R	Applied to repair parts (assemblies and components) which are considered economically repairable at direct and general support maintenance levels. When the maintenance capability to repair these items does not exist, they are normally disposed of at the GS level. When supply considerations dictate, some of these spare parts may be listed for automatic return to supply for depot level repair as set forth in AR 710-50. When so listed, they will be replaced by supply on an exchange basis.
S	Repair parts and assemblies which are economically repairable at DSU and GSU activities and which normally are furnished by supply on an exchange basis. When items are determined by a GSU to be uneconomically repairable, they will be evacuated to a depot for evaluation and analysis before final disposition.

Code	Explanation
T	High dollar value recoverable repair parts which are subject to special handling and are issued on an exchange basis. Such repair parts normally are repaired or overhauled at depot maintenance activities.
U	Repair parts specifically selected for salvage by acclamation units because of precious metal content, critical materials, or high dollar value reusable casings or castings.

b. *Federal Stock Number, Column 2.* This column indicates the Federal stock number assigned to the item and will be used for requisitioning purposes.

c. *Description, Column 3* This column indicates the Federal item name and any additional description of the item required. The abbreviation "w/e" when used as a part of the nomenclature, indicates the Federal stock number includes all armament, equipment, accessories, and repair parts issued with the item. A part number or other reference number is followed by the applicable five-digit Federal supply code for manufacturers in parentheses.

d. *Unit of Measure (U/M), Column 4.* A 2 character alphabetic abbreviation indicating the amount or quantity of the item upon which the allowances are based e.g., ft, ea, pr, etc.

e. *Quantity Incorporated in Unit, Column 5* This column indicates the quantity of the item used in the assembly group. A "V" appearing in this column in lieu of a quantity indicates that a definite quantity cannot be indicated (e.g., shims, spacers, gaskets, etc.).

f. *30-Day DS/GS Maintenance Allowances, Columns 6 and 7.*

Note. Allowances in GS column are for GS maintenance only.

(1) The allowance columns are divided into three sub columns. Indicated in each subcolumn, opposite the first appearance of each item, is the total quantity of items authorized for the number of equipments supported. Subsequent appearances of the same item will have the letters "REF" in the applicable allowance columns. Items authorized for use as required but not for initial stockage are identified with an asterisk in the allowance column.

(2) The quantitative allowances for DS/GS levels of maintenance will represent initial stockage for a 30-day period for the number of equipments supported.

(3) Determination of the total quantity of parts required for maintenance of more than 100 of these equipments can be accomplished by converting the equipment quantity to a decimal factor by placing a decimal point before the next to last digit of the number to indicate hundredths, and multiplying the decimal

factor by the parts quantity authorized in the 51-100 allowance column. Example, authorized allowance for 51-100 equipments is 40; for 150 equipments multiply 40 by 1.50 or 60 parts required.

g. *1-Year Allowances Per 100 Equipments/Contingency Planning Purposes, Column 8.* This column indicates opposite the first appearance of each item the total quantity required for distribution and contingency planning purposes. The range of items indicates total quantities of all authorized items required to provide for adequate support of 100 equipments for one year.

h. *Depot Maintenance Allowance Per 100 Equipments, Column 9.* This column indicates opposite the first appearance of each item, the total quantity authorized for depot maintenance of 100 equipments. Subsequent appearances of the same item will have the letters "REF" in the allowance column. Items authorized for use as required but not for initial stockage are identified with an asterisk in the allowance column.

i. *Illustration, Column 10.* This column is divided as follows:

(1) *Figure Number, Column 10a.* Indicates the figure number of the illustration in which the item is shown.

(2) *Item Number, Column 10b.* Indicates the callout number used to reference the item in the illustration.

4. Special information

a. Telescopes M97, M97G and M97H are used with the following end items with their supporting publications:

Telescope M97

TM 9-2350-201-20P Organizational Maintenance Repair Parts and Special Tools List for Tank, Combat, Full-Tracked: 76MM Gun, M41, M41A1, M41A2 and M41A3 and Trainer, Tank Gunnery 76MM Gun M17

Telescopes M97G and M97H

TM 9-2350-208-20P Organizational Maintenance Repair Parts and Special Tools List for Tank, Combat Full-Tracked: 90MM Gun M48A2, Tank, Combat, Full-Tracked: 90MM Gun M48A2C, Tank,

Combat, Full-Track: Flame Thrower
M67A1

Telescope M97H

TM 9-7012 Operator and Organizational Maintenance Manual, Tank Combat, Full-Track 90MM Gun M48, M48A1 and M48C and Tank, Combat Full-Track, Flame Thrower M67

b. Action change codes indicated in the left hand margin of the listing page denote the following:

- N- Indicates an added item not included in previous publications
- C- Indicates a change in data
- F- Indicates a change in FSN only

5. How to Locate Repair Parts

a. When Federal stock number or reference number is unknown:

(1) *First.* Find the illustration covering the assembly group to which the repair part belongs.

(2) *Second.* Identify the repair part on the illustration and note the illustration figure and item number of the repair part.

(3) *Third.* Using the Repair Parts Listing, find the assembly group to which the repair part belongs and locate the illustration figure and item number noted on the illustration.

b. When Federal stock number or reference number is known:

(1) *First.* Using the Index of Federal Stock Numbers and Reference Numbers find the pertinent Federal stock number or reference number. This index is in ascending FSN sequence followed by a list of reference numbers in ascending alpha-numeric sequence, cross-referenced to the illustration figure number and item number.

(2) *Second.* Using the Repair Part Listing, find the assembly group of the repair part and the illustration figure number and item number referenced in the Index of Federal Stock Numbers and Reference Numbers.

6. Abbreviations

<i>Abbreviations</i>	<i>Explanation</i>
al-----	aluminum
aly-----	alloy
cd pll-----	cadmium plate
ck-----	cork
cres-----	corrosion-resistant steel
cksh-----	countersunk head
flh-----	flat head
fnsh-----	finish
fp-----	flat point
gl-----	glass
hex-----	hexagon
id .-----	inside diameter
l-----	long
NC-----	National coarse
NF-----	National fine
no-----	number
NS-----	National special
oa-----	overall
od-----	outside diameter
pnh-----	pan head
psvt-----	passivate
rec-----	recess
skt-----	socket
stl-----	steel
thk-----	thick
UNF-----	Unified fine thread

7. Federal Supply Codes for Manufacturers

<i>Code</i>	<i>Manufacturer</i>
19200	Frankford Arsenal, Philadelphia, Pa.
21450	Ordnance Corps Engineering Standards, Rock Island Arsenal, Rock Island, Illinois
71321	Carpenter Steel Co., 150 w. Bern Street, Reading, Pa.
96906	Military Standard Promulgated by Standardization Division, Directorate of Logistic Services DSA

8. Recommendations for Maintenance Publication Improvements

Report of errors, omissions, and recommendations for improving this publication by the individual user is encouraged. Reports should be submitted on DA Form 2028 (Recommended Changes to DA Publications) and forwarded direct to Commanding Officer, Frankford Arsenal, ATTN: AMSWE-SMF-W3100, Philadelphia, Pa. 19137.