

TECHNICAL MANUAL

**ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS
FOR
TEST SETS**

AN/GGM-15(V)1 (NSN 6625-00-464-1702)

AN/GGM-15(V)2 (NSN 6625-00-442-6131)

AND

GENERATOR, SIGNAL SG-860/GGM-15(V)

(NSN 6625-00-179-2525)

ANALYZER, SIGNAL DISTORTION TS-2862/GGM-15(V)

(NSN 6625-00-435-7776)

OSCILLOSCOPE OS-206/GGM-15(V)

(NSN 6625-00-442-6135)

DOLLY, TEST EQUIPMENT V-434/GGM-15(V)

(NSN 6625-00-435-7775)

TECHNICAL MANUAL }
 No. 11-6625-1668-20P }

HEADQUARTERS
 DEPARTMENT OF THE ARMY
 WASHINGTON, DC, 9 September 1977

**ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND
 SPECIAL TOOLS LISTS
 FOR
 TEST SETS
 AN/GGM-15(V)I (NSN 6625-00-464-1702)
 AN/GGM-15(V)2 (NSN 6625-00-442-6131)
 AND
 GENERATOR, SIGNAL SG-860/GGM-15(V) (NSN 6625-00-179-2525)
 ANALYZER, SIGNAL DISTORTION TS-2862/GGM-15(V)
 (NSN 6625-00-435-7776)
 OSCILLOSCOPE OS-206/GGM-15(V) (NSN 6625-00-442-6135)
 DOLLY, TEST EQUIPMENT V-434/GGM-15(V) (NSN 6625-00-435-7775)**

Current as of 28 April 1977

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 (Test) located in the back of the manual. Simply tear out the self-addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail. If there are no blank DA Form 2028-2 (Test) in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Electronics Command, ATTN: DRSEL-MA-Q, Fort Monmouth, NJ 07703. In either case a reply will be furnished direct to you.

Table of Contents

		Page	Illus Figure
Section	I. Introduction.....	1	
	II. Repair parts list.....	5	
Group	00 Test Sets, Telegraph AN/GGM-15(V)1, AN/GGM-15(V)2.....	5	
	01 Generator, Signal SG-860/GGM- 15(V) (No parts authorized)		
	0101 Panel assembly, front (1A).....	7	2
	0102 Chassis assembly (1A2).....	9	3
	010201 Component board assembly (1A2A1) (No parts authorized)		
	010202 Component board assembly (1A2)	13	4
	010203 Component board assembly (1A2A3) (No parts authorized)		
	010204 Component board assembly (1A2A4) (No parts authorized)		
	010205 Component board assembly (1A2A5) (No parts authorized)		
	010206 Component board assembly (1A2A7) (No parts authorized)		
	010207 Component board assembly (1A2A8) (No parts authorized)		
	010208 Component board assembly (1A2A9) (No parts authorized)		
	010209 Component board assembly (1A2A10) (No parts authorized)		
	010210 Component board assembly (1A2A11) (No parts authorized)		
	010211 Adapter card assembly (1A2A12) (No parts authorized)		
	0103 Panel assembly, rear (1A3) (No parts authorized)		
	010301 Cable Assembly CX-12105/U (1A3A2) (No parts authorized)		
	02 Analyzer, Signal Distortion TS-2862/GGM- 15(V) (No parts authorized)		
	0201 Panel assembly, front (2A1).....	15	5
	020101 Component board (2A1A1)	17	6
	0202 Chassis assembly, electrical equipment (2A2).....	19	7
	020201 Component board (2A2A1) (No parts authorized)		
	020202 Component board assembly (2A2A2) (No parts authorized)		
	020203 Component board assembly (2A2A3) (No parts authorized)		

*This manual supersedes so much of TM 11-6625-1668-12, 23 November 1970, as pertains to repair parts and special tools list.

		Page	Illus Figure
Group	020204 Component board assembly (2A2A4) (No parts authorized)		
	020205 Component board assembly (2A2A5) (No parts authorized)		
	020206 Component board assembly (2A2A6)	23	8
	020207 Component board assembly (No parts authorized)		
	020208 Adapter card assembly (2A2A8) (No parts authorized)		
	0203 Panel assembly, rear (2A3) (No parts authorized)		
	020301 Cable Assembly, Power, Electrical CX-12105/U (2A3A2) (No parts authorized)		
03	Oscilloscope OS-206/GGM-15(V) (No parts authorized)		
	0301 Panel assembly, front (3A)	25	9
	0302 Chassis assembly, scope (3A2).....	27	10
	0303 Cage assembly (3A3).....	29	11
	030301 Component board (3A3A1) (No parts authorized)		
	030302 Component board assembly (3A3A2)	33	12
	030303 Component board assembly (3A3A3) (No parts authorized)		
	030304 Component board assembly (3A3A4) (No parts authorized)		
	030305 Component board assembly (3A3A5) (No parts authorized)		
	030306 Component board assembly (3A3A6) (No parts authorized)		
	030307 Component board assembly (3A3A7) (No parts authorized)		
	030308 Component board assembly (3A3A8) (No parts authorized)		
	0304 Panel assembly, rear (3A4)	35	13
	030401 Component board assembly (3A4A1) (No parts authorized)		
	030402 Cable Assembly, Power Electrical CX- 12105/U (3A4A4XNo parts authorized)		
04	Case, Test Set CY-6672/GGM- 15(V) (Used on AN/GGM- 1(V)2 only) (No parts authorized)		
05	Dolly, Test Equipment V-434/GGM- 15(V) (Used on AN/GGM- 15(V)2 only) (No parts authorized)		
	0501 Dolly, test equipment carrier (5A1) (No parts authorized)		
06	Cable Assembly, Special Purpose, Electrical (CX-12024/GGM-15(V) (No parts authorized)		
Section III	Special tools list (Not applicable)		
IV	National stock number and part number index	36	

SECTION I INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational maintenance of the AN/GGM- 15(V)1, AN/GGM- 15(V)2, SG-860/ GGM-15(V), TS-2862/GGM-15(V), OS-206/GGM15(V), V-434/GGM-15(V). It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. Special Tools List. Not applicable.

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration. This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. Source, Maintenance, and Recoverability (SMR) Codes.

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

<i>Code</i>	<i>Definition</i>
-------------	-------------------

PA— Item procured and stocked for anticipated or known usage.

PD— Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.

XD— A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

<i>Code</i>	<i>Application/Explanation</i>
-------------	--------------------------------

O— Support item is removed, replaced, used at the organizational level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

<i>Code</i>	<i>Application/Explanation</i>
-------------	--------------------------------

H— The lowest maintenance level capable of complete repair of the support item is the general support level.

D— The lowest maintenance level capable of complete repair of the support item is the depot level.

Z— Nonreparable. No repair is authorized.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

<i>Recoverability codes</i>	<i>Definition</i>
-----------------------------	-------------------

Z— Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.

H— Repairable item. When uneconomically repairable, condemn and dispose at the general support level.