


TECHNICAL MANUAL


ORGANIZATIONAL MAINTENANCE MANUAL
(INCLUDING REPAIR PARTS AND SPECIAL TOOLS LIST)
FOR

THE TYPE V AIRDROP PLATFORM

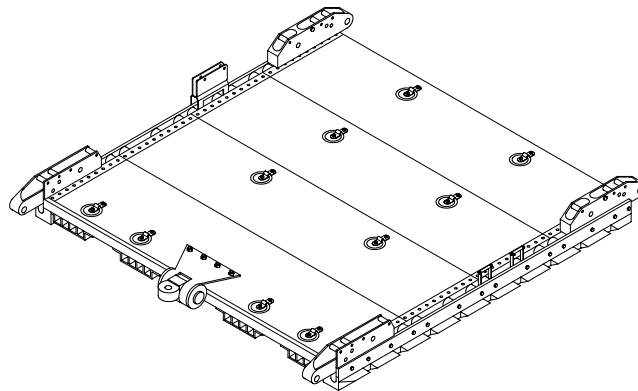

AND

THE DUAL ROW AIRDROP PLATFORM

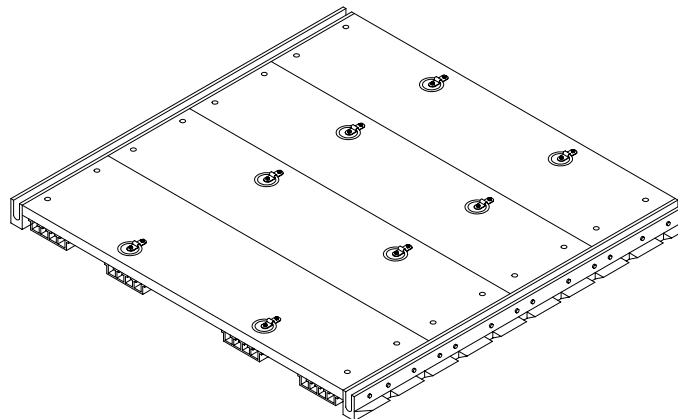

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.
* This manual supercedes TM 10-1670-268-20&P, dated 1 June 1986

TECHNICAL MANUAL

ORGANIZATIONAL MAINTENANCE MANUAL INCLUDING REPAIR PARTS AND SPECIAL TOOLS LIST FOR TYPE V AIRDROP PLATFORM

AND

DUAL ROW AIRDROP PLATFORM

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

ARMY

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2, located in the back of this manual directly to: Commander, US Army Tank-automotive & Armament Command, ATTN: AMSTA-LC-CECT, Kansas St., Natick, MA 01760. You may also submit your recommended changes by E-mail directly to: <amssbriml@natick.army.mil>. A reply will be furnished directly to you. Instructions for sending electronic 2028 may be found at the back of this manual immediately preceding the hard copy 2028.

AIR FORCE

Reports by U.S. Air Force units should be submitted on AFTO Form 22 (Technical Order Publication Improvement Report and Reply) and forwarded to the address prescribed above for the Army. An information copy of the prepared AFTO Form 22 shall be furnished to WP-ALC/TILTA, 420 2nd Street, Suite 100, Robins AFB, GA 31098-1640.

MARINE CORPS

Marine Corps personnel submit NAVMC 10772 to commander, ATTN: (Code 850), Marine Corps Logistics Bases, 814 Radford Blvd., Albany, GA 31704-1128.

NAVY

Submit NAVSEA Form 4160/1 (REV 2-99) to Commander, NSDSA Code 5E30, NAVSURFCENDIV, 4363 Missile Way, Port Hueneme, CA 93043-4307. A Reply will be sent to you.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

*This manual supercedes TM 10-1670-268-20&P, dated 01 June 1986

TABLE OF CONTENTS

	WP Sequence No.
WARNING SUMMARY	a
HOW TO USE THIS MANUAL	v
CHAPTER 1 – INTRODUCTORY INFORMATION	
General Information.....	0001 00
Equipment Description and Data.....	0002 00
CHAPTER 2 – OPERATOR MAINTENANCE INSTRUCTIONS	
Service Upon Receipt	0003 00
Assembling the Type V and Dual Row Airdrop Platform.....	0004 00
Preventive Maintenance Checks and Services (PMCS), Introduction	0005 00
Preventive Maintenance Checks and Services (PMCS)	0006 00
CHAPTER 3 – UNIT MAINTENANCE INSTRUCTIONS	
Unit Maintenance, General Information.....	0007 00
Clevis Assembly	0008 00
Extraction Bracket Assembly.....	0009 00
Inside and Outside Extraction Force Transfer Actuator (EFTA) Brackets.....	0010 00
Tandem Link / Suspension Bracket Assembly	0011 00
Side Rail	0012 00
Roller Pad.....	0013 00
Rear Panel Assembly (Type V only)	0014 00
Main Panel Assembly (Type)/ Panel Assembly (Dual Row).....	0015 00
Outrigger Assembly.....	0016 00
Preparation for Storage	0017 00
Preparation for Shipment	0018 00
References	0019 00
Maintenance Allocation Chart (MAC)	0020 00
Repair Parts and Special Tools List (RPSTL), Introduction	0021 00
Group 01 Minor Components of the Type V Airdrop Platform.....	0022 00
Group 02 Major Components of the Type V Airdrop Platform.....	0023 00
Group 0201 Main Panel Assembly, Type V Airdrop Platform	0024 00
Group 0202 Rear Panel Assembly, Type V Airdrop Platform	0025 00
Group 03 Clevis Assembly	0026 00
Group 04 Major Components of the Dual Row Airdrop Platform	0027 00
Group 0401 Panel Assembly, Dual Row Airdrop Platform	0028 00
Group 05 Outrigger Assembly, Dual Row Airdrop Platform	0029 00
Group 0501 Mast Assembly, Dual Row Airdrop Platform	0030 00
Group 0502 Link Assembly, Dual Row Airdrop Platform.....	0031 00
Group 0503 Weldment Assembly, Dual Row Airdrop Platform	0032 00
Special Tools List	0033 00
National Stock Number (NSN) Index.....	0034 00
Part Number Index	0035 00
Expendable and Durable List	0036 00
ALPHABETICAL INDEX	INDEX 1

HOW TO USE THIS MANUAL

In this manual, primary chapters appear in upper case/capital letters; work packages are presented in numeric sequence, e.g., 0001 00; paragraphs within a work package are not numbered and are presented in a titles format. For a first level paragraph, title all upper case/capital letters, e.g., INTRODUCTION, the next subordinate paragraph title will have the first letter of the first word of each principle word all upper case/capital letters, e.g., How to Use This Manual. The location of additional material that must be referenced is clearly marked. Figures supporting maintenance procedures/text are located as close as possible to their references.

FRONT MATTER. Front matter consists of front cover, warning summary, title block, table of contents, and how to use this manual page.

CHAPTER 1 - INTRODUCTION. Chapter 1 contains general information and equipment description.

CHAPTER 2 - OPERATOR INSTRUCTIONS. Chapter 2 contains maintenance instructions, provides preventive maintenance checks and services (PMCS), lubrication instructions, maintenance procedures authorized at operator level, references and expendable and durable items list.

REAR MATTER. Rear matter consists of alphabetical index, DA Form 2028, authentication page, and back cover.

Manual Organization and Page Numbering System. The Manual is divided into two major chapters that detail the topics mentioned above. Within each chapter are work packages covering a wide range of topics. Each work package is numbered sequentially starting at page 1. The work package has its own page-numbering scheme and is independent of the page numbering used by other work packages. Each page of a work package has a page number of the for XXXX YY-ZZ where XXXX is the work package number (e.g. 0010 is work package 10), YY is the revision number for that work package, and ZZ represents the number of the page within that work package. A page number such as 0010 00-1/2 blank means that page 1 contains information but page 2 of that work package has been intentionally left blank.

Finding Information. The Table of Contents permits the reader to find information in the manual quickly. The reader should start here first when looking for a specific topic. The Table of Contents lists the topics contained within each chapter and the Work Package Sequence Number where it can be found.

Example: If the reader were looking for instructions on "Replacing Roller Pad", which is a Unit Maintenance topic, the Table of Contents indicates that Unit Maintenance information can be found in Chapter 2. Scanning down the listings for Chapter 2, "Replacing Roller Pad " information can be found in WP 0013 00 (Work Package 13).


An Alphabetical Index can be found at the back of the Manual, and lists specific topics with the corresponding work package.

CHAPTER 1
INTRODUCTORY INFORMATION
FOR
THE TYPE V AND DUAL ROW
AIRDROP PLATFORM


TYPE V AND DUAL ROW AIRDROP PLATFORM
GENERAL INFORMATION

SCOPE

This manual provides organizational maintenance instructions for the Type V Platform and Dual Row Platform. This manual also provides a Repair Parts and Special Tools List (RPSTL), located in WP 0021 00 through WP 0032 00.

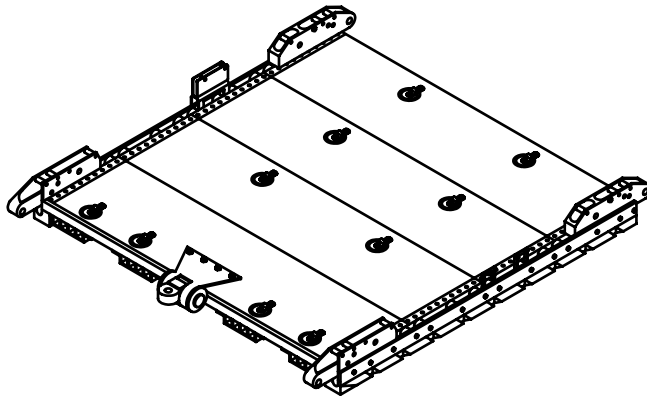

Type V Platform

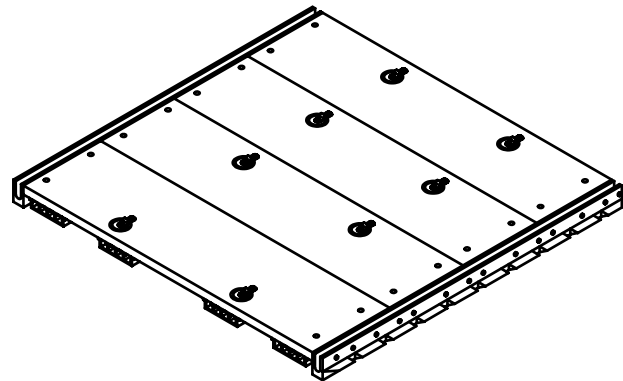

Dual Row Platform

Model and Equipment Name. Platform, Airdrop, Type V and Platform, Airdrop, Dual Row.

Purpose of Equipment. Used to airdrop equipment and supplies from Air Force cargo aircraft.

MAINTENANCE FORMS, RECORDS, AND REPORTS

Department of the Army forms and procedures used for equipment maintenance will be those prescribed by DA PAM 738-750, The Army Maintenance Management System (TAMMS), as contained in Maintenance Management Update. Air Force personnel will use AFR 66-1 for maintenance reporting and T.O. 00-35D54 for unsatisfactory equipment reporting.

Reporting of Item and Packaging Discrepancies. Fill out and forward SF 364 (Report of Discrepancy (ROD)) as prescribed in AR 735-11-2/DLAR 414.55/SECNAVINST 4355.18/AFR 400-54/MCO 4430.3J.

Transportation Discrepancy Report (TDR) (SF 361). Fill out and forward Transportation Discrepancy Report (TDR) (SF 361) as prescribed in Reporting of Transportation Discrepancies in Shipments AR 55-38/NAVUSPINST 4610.33C/AFR 75-18/MCO P4610.19D/DLAR 4500.15.