

TECHNICAL MANUAL

UNIT AND DIRECT SUPPORT (DS) MAINTENANCE MANUAL (INCLUDING REPAIR PARTS AND SPECIAL TOOLS LIST) FOR

PARACHUTES, PERSONNEL TYPE:

**35-FOOT DIAMETER, MC1-1C
TROOP BACK PARACHUTE ASSEMBLY
NSN 1670-01-262-2359**

**35-FOOT DIAMETER, MC1-1D
TROOP BACK PARACHUTE ASSEMBLY
NSN 1670-01-487-0777**

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

* This manual supercedes TM 10-1670-292-23&P, dated 16 September 1988

HEADQUARTERS, DEPARTMENT OF THE ARMY

Change 1 30 NOVEMBER 2003

**1 FEBRUARY 2002
PCN 1840475400**

TECHNICAL MANUAL

UNIT AND DIRECT SUPPORT (DS) MAINTENANCE MANUAL (INCLUDING REPAIR PARTS AND SPECIAL TOOLS LIST) FOR PARACHUTE, PERSONNEL TYPE:

35-FOOT DIAMETER, MC1-1C
TROOP BACK PARACHUTE ASSEMBLY
NSN 1670-01-262-2359

35-FOOT DIAMETER, MC1-1D
TROOP BACK PARACHUTE ASSEMBLY
NSN 1670-01-487-0777

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

ARMY

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2, located in the back of this manual directly to: Commander, US Army Tank-automotive & Armament Command, ATTN: AMSTA-LC-CECT, Kansas St., Natick, MA 01760. You may also submit your recommended changes by E-mail directly to: amssbriml@natick.army.mil. A reply will be furnished directly to you. Instructions for sending electronic 2028 may be found at the back of this manual immediately preceding the hard copy 2028.

AIR FORCE

Reports by U.S. Air Force units should be submitted on AFTO Form 22 (Technical Order Publication Improvement Report and Reply) and forwarded to the address prescribed above for the Army. An information copy of the prepared AFTO Form 22 shall be furnished to WP-ALC/TILTA, 420 2nd Street, Suite 100, Robins AFB, GA 31098-1640.

MARINE CORPS

Marine Corps personnel submit NAVMC 10772 for to commander, ATTN: (Code 850), Marine Corps Logistics Bases, 814 Radford Blvd., Albany, GA 31704-1128.

NAVY

Submit NAVSEA Form 4160/1 (REV 2-99) to Commander, NSDSA Code 5E30, NAVSURFCENDIV, 4363 Missile Way, Port Hueneme, CA 93043-4307. A Reply will be sent to you.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

*This manual supercedes TM 10-1670-292-23&P, dated 16 September 1988

TABLE OF CONTENTS

WP Sequence No.

WARNING SUMMARY

HOW TO USE THIS MANUAL

CHAPTER 1 – INTRODUCTORY INFORMATION

General Information.....	0001 00
Equipment Description and Data.....	0002 00

CHAPTER 2 - OPERATOR MAINTENANCE INSTRUCTIONS

Service Upon Receipt	0003 00
Assembling the MC1-1C/MC1-1D Troop Back Parachute	0004 00
Preventive Maintenance Checks and Services (PMCS), Introduction	0005 00
Preventive Maintenance Checks and Services (PMCS)	0006 00

CHAPTER 3 – UNIT MAINTENANCE INSTRUCTIONS

Shakeout and Airing	0007 00
Cleaning and Drying	0008 00
Inspection	0009 00
Salt-/Fresh-Water Contamination Test.....	0010 00
Packing Procedures	0011 00
Sewing Procedures	0012 00
Searing and Waxing	0013 00
Marking and Restencilling	0014 00
Bridle Loop	0015 00
Orifice Edge Reinforcement	0016 00
Upper Lateral Band	0017 00
Gore Sections	0018 00
Radial Seam	0019 00
Lower Lateral Band	0020 00
Pocket Band	0021 00
V-Tabs	0022 00
Anti-Inversion Net	0023 00
Suspension Line	0024 00
Control Line Bridle.....	0025 00
Control Line	0026 00
Connector Link Assembly	0027 00
Risers	0028 00
Deployment Bag	0029 00
Harness Assembly	0030 00
Pack Tray	0031 00

TABLE OF CONTENTS - Continued**WP Sequence No.****CHAPTER 4 – DIRECT SUPPORT MAINTENANCE INSTRUCTIONS**

Sewing Procedures	0032 00
Searing and Waxing	0033 00
Marking and Restencilling	0034 00
Vent Lines	0035 00
Gore Sections	0036 00
Radial Tape	0037 00
Suspension Line	0038 00
Preparation for Storage	0039 00
Preparation for Shipment.....	0040 00

CHAPTER 5 – SUPPORTING INFORMATION

References	0041 00
Maintenance Allocation Chart (MAC)	0042 00
Repair Parts and Special Tools List (RPSTL), Introduction.....	0043 00
RPSTL – Group 00, MC1-1C/MC1-1D Troop Back Personnel Parachute	0044 00
RPSTL – Group 01, Personnel Canopy With Net and Orifice	0045 00
RPSTL – Group 02, Riser Extension	0046 00
RPSTL – Group 03, Standard Deployment Bag	0047 00
RPSTL – Group 04, Universal Static Line	0048 00
RPSTL – Group 05, Personnel Parachute Harness	0049 00
RPSTL – Group 06, Personnel Parachute Pack Tray	0050 00
RPSTL – Group 99, Bulk Materials	0051 00
Special Tools List	0052 00
National Stock Number Index.....	0053 00
Part Number Index	0054 00
Expendable/Durable Supplies and Materials List	0055 00
Illustrated List of Manufactured Items	0056 00

ALPHABETICAL INDEX.....	INDEX 1
--------------------------------	----------------

HOW TO USE THIS MANUAL

In this manual, primary chapters appear in upper case/capital letters; work packages are presented in numeric sequence, e.g., 0001 00; paragraphs within a work package are not numbered and are presented in a titles format. For a first level paragraph, title all upper case/capital letters, e.g., FRONT MATTER subordinate paragraph title will have the first letter of the first word of each principle word all upper case/capital letters, e.g., Manual Organization and Page Numbering System. The location of additional material that must be referenced is clearly marked. Illustrations supporting maintenance procedures/text are located underneath, or as close as possible to, their referenced paragraph.

FRONT MATTER. Front matter consists of front cover, warning summary, title block, table of contents, and how to use this manual page.

CHAPTER 1 - INTRODUCTION. Chapter 1 contains general information and equipment.

CHAPTER 2 - OPERATOR INSTRUCTIONS. Chapter 2 contains service upon receipt, initial receipt, receipt of used parachute assembly, and preventive maintenance checks and services information and instructions.

CHAPTER 3 – UNIT MAINTENANCE INSTRUCTIONS. Chapter 3 contains maintenance procedures authorized at the unit level.

CHAPTER 4 – DIRECT SUPPORT MAINTENANCE INSTRUCTIONS. Chapter 4 provides maintenance procedures authorized at the direct support level.

CHAPTER 5 - SUPPORTING INFORMATION. Chapter 5 contains references, expendable and durable items list, maintenance allocation chart, repair parts and special tools list, national stock number index, part number index, and illustrated list of manufactured items.

REAR MATTER. Rear matter consists of alphabetical index, DA Form 2028, authentication page, and back cover.

Manual Organization and Page Numbering System. The manual is divided into five major chapters that detail the topics mentioned above. Within each chapter are work packages covering a wide range of topics. Each work package is numbered sequentially starting at page 1. The work package has its own page-numbering scheme and is independent of the page numbering used by other work packages. Each page of a work package has a page number of the form XXXX YY-ZZ where XXXX is the work package number (e.g. 0010 is work package 10), YY is the revision number for that work package, and ZZ represents the number of the page within that work package. A page number such as 0010 00-1/(2 blank) means that page 1 contains information but page 2 of that work package has been intentionally left blank.

Finding Information. The table of contents permits the reader to find information in the manual quickly. The reader should start here first when looking for a specific topic. The table of contents lists the topics contained within each chapter and the work package sequence number where it can be found.

Example: If the reader were looking for instructions on Patching Radial Seam which is a unit maintenance topic, the table of contents indicates that unit maintenance information can be found in chapter 3. Scanning down the listings for chapter 3, Radial Seam information can be found in WP 0019 00 (Work Package 19).

An Alphabetical Index can be found at the back of the manual; specific topics are listed with the corresponding work package number.

CHAPTER 1

INTRODUCTORY INFORMATION

FOR

MC1-1C TROOP BACK PARACHUTE ASSEMBLY


MC1-1D TROOP BACK PARACHUTE ASSEMBLY

MC1-1C/MC1-1D TROOP BACK PARACHUTE ASSEMBLY

GENERAL INFORMATION

SCOPE

This Technical Manual provides Unit and Direct Support (DS) maintenance instructions for parachutes, NSN 1670-01-262-2359, and NSN 1670-01-487-0777. These are 35-Foot Diameter Troop Back Parachutes. This manual also provides a Repair Parts and Special Tools List, located in WP 0043 00 through WP 0050 00.

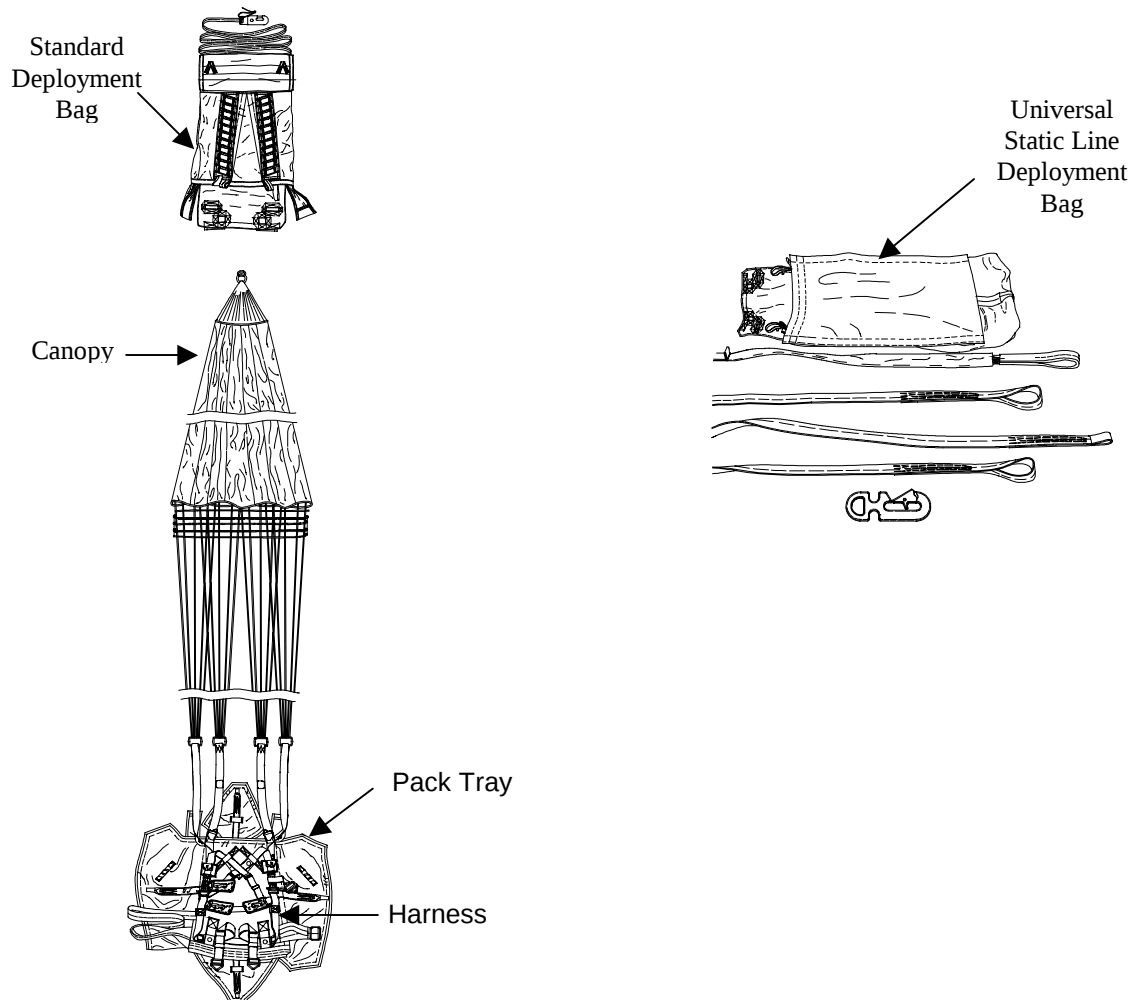

Equipment Name. MC1-1C Troop Back Parachute Assembly, 35-Foot Diameter, and MC1-1D Troop Back Parachute Assembly, 35-Foot Diameter.

Purpose of Equipment. The parachute provides capability to safely deliver an airborne soldier, and individual equipment, from an aircraft in flight, for a vertical assault on an enemy.

MAINTENANCE FORMS, RECORDS, AND REPORTS

Department of the Army forms and procedures used for equipment maintenance will be those prescribed by DA PAM 738-750, The Army Maintenance Management System. Maintenance forms and records used by Marine Corps personnel are prescribed by TM 4700-15/1.