

TECHNICAL MANUAL

**DIRECT SUPPORT AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS)**

TELEPHONE TERMINAL AN/TCC-23

(FSN 5805-537-7410)

AND TELEPHONE TERMINAL AN/TCC-3

(FSN 5805-503-2648)

HEADQUARTERS, DEPARTMENT OF THE ARMY

MARCH 1975

Technical Manual
No. 11-5805-223-34P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 28 March 1975

**Direct Support and General Support Maintenance
Repair Parts and Special Tools Lists (Including
Leopot Maintenance Repair Parts and Special Tools)
TELEPHONE TERMINAL AN / TCC-23 (FSN 5805-537-7410)
AND
TELEPHONE TERMINAL AN / TCC-3 (FSN 5805-503-2648)**

Current as of December 1974

	Paragraph	Page
Section		
I. INTRODUCTION		
S c o p e	1-1	1
General	1-2	1
Explanation of columns	1-3	1
Special information	1-4	3
Location of repair parts	1-5	3
Abbreviations (Not applicable)	1-6	4
Reporting of equipment publication improvements	1-7	4
II. REPAIR PARTS LIST		6
III. SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT (Not applicable)		
IV. INDEX--FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS-REFERENCE TO FIGURE AND) ITEM NUMBER		79

***This manual supersedes TM 11-5805-223-35P, 31 December 1963, including all changes.**

SECTION I

INTRODUCTION

1-1. Scope

This manual lists repair parts and special tools **required** for the performance of direct support, **general** support, and depot maintenance of the **AN/TCC-23** and **AN/TCC-3**. The PCCN for the **AN/TW-23** is **GCWAAN** and **GCWAAO** for the **AN/TCC-3**.

1-2. General

This repair parts and special tools lists is divided into the following sections:

a. Repair Parts List-Section II. A list of repair parts authorized for the performance of maintenance at the direct support, general support, and depot level. This repair parts lists is arranged in alphabetical order.

b. Special Tools, Test and Support Equipment - Section III. Not applicable.

c. Index-Federal Stock Number and Reference Number Cross-Reference to Figure and Item Number-Section IV. A list, in ascending numerical sequence, of all Federal stock numbers appearing in the listings, followed by a list, in alphanumeric sequence, of all reference numbers appearing in the listings. Federal stock number and reference numbers are cross-referenced to each illustration figure and item number or reference designation **appearance**.

1-3. Explanation of Columns

The following provides an explanation of columns found in the tabular list.

a. Source, Maintenance, and Recoverability Codes (SMR).

(1) **Source** code. Indicates the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are-

Code	Explanation
PA -	Item procured and stocked for anticipated or known usage.
PB -	Item procured and stocked for insurance purposes because essentiality dictates that a minimum quantity be available in the supply systems.
PC -	Item procured and stocked and which otherwise would be coded PA except that it is deteriorative in nature.
PD -	Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or

Code	Explanation
	outfittings. Not subject to automatic replenishment.
PE -	Support equipment procured and stocked for initial issue or outfitting to specified maintenance repair activities.
PF -	Support equipment which will not be stocked but which will be centrally procured on demand.
PG -	Item procured and stocked to provide for sustained support for the life of the equipment. It is applied to an item peculiar to the equipment which because of probable discontinuance or shutdown of production facilities would prove uneconomical to reproduce at a later time.
KD -	An item of depot overhaul/repair kit and not purchased separately. Depot kit defined as a kit that provides items required at the time of overhaul or repair.
KF -	An item of a maintenance kit and not purchased separately. Maintenance kit defined as a kit that provides an item that can be replaced at organizational or direct support or general support levels of maintenance.
KB -	Item included in both a depot overhaul/repair kit and a maintenance kit.
MO -	Item to be manufactured or fabricated at organizational level.
MF -	Item to be manufactured or fabricated at direct support maintenance level.
MH -	Item to be manufactured or fabricated at general support maintenance level.
MD -	Item to be manufactured or fabricated at depot maintenance level.
AO -	Item to be assembled at organizational level.
AF -	Item to be assembled at direct support maintenance level.
AH -	Item to be assembled at general support maintenance level.
AD -	Item to be assembled at depot maintenance level.
XA -	Item is not procured or stocked because the requirements for the item will