

TECHNICAL MANUAL

ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE

**REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS)**

FOR

**TELEPHONE TERMINAL SET AN TCC-62
(NSN 5805-00-868-8217)**

**HEADQUARTERS, DEPARTMENT OF THE ARMY
JULY 1976**

TECHNICAL MANUAL

No. 11-5805-359-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 22 July 1976

**Organizational, Direct Support, and General Support Maintenance
Repair Parts and Special Tools Lists
(Including Depot Maintenance Repair Parts and Special Tools Lists)
For
TELEPHONE TERMINAL SET AN/TCC-62
(NSN 5805-0868-8217)**

Current as of 29 March 1976

REPORTING OF ERRORS

You can improve' this manual by recommending improvements using DA Form 2028-2 (Test) located in the back of the manual. Simply tear out the self-addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Form 2028-2 (Test) in the back of your manual, use the standard DA Form 2028 Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Electronics Command, ATTN: DRSELMA-Q, Fort Monmouth, New Jersey 07703.

In either case a reply will be furnished direct to you.

		Page	Illus Figure
SECTION	I. Introduction	1	
	II. Repair parts list	7	
Group	00 Telephone Terminal Set AN/TCC-62	7	1
	01 Shelter, Electrical Equipment		
	S-302/TCC-62	9	2-5
	Shelter, Electrical Equipment		
	S-302/TCC62, Power Entrance Box.....	17	6
	Shelter, Electrical Equipment		
	S-302/TCC-62, Video Entrance Box	19	7
	Shelter, Electrical Equipment		
	S-302/TCC-62, Power Distribution Panel	21	8
	02 Converter, Telephone Signal CV-1548/G (See TM 11-5805367-25P/2 for parts)		
	03 Multiplexer TD-204/U (See TM 11-5850467-25P/2 for parts)		
	OR		
	Multiplexer TD-754/G (See TM 11-5805-383-12 and TM 11-5805-38345 for parts)		
	04 Multiplexer TD452/U (See TM 11-5805467-25P/3-1 for parts)		
	05 Regulator CN-514/GRC (See TM 11-5820-461-25P for parts)		
	06 Intercommunications Station LS-147C/FI (See TM 11-5830-221-24P for parts)		
	07 Telephone Set TA-312/PT (See TM 11-5805-201-12 and TM 11-5805-20135 for parts)		
	08 Overvoltage Control	23	9
SECTION	III. Special tools list (Not applicable)		
	IV. National stock number and part number index	22	24

*This manual supersedes so much of TM 11-5805459-15, 14 April 1969, as pertains to repair parts and special tools list.

SECTION I

INTRODUCTION

1. Scope

This manual lists repair parts and special tools required for performance of organizational, direct support, and general support maintenance of the AN/TCC62.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending numerical sequence, with the parts in each group listed in figure and item number sequence.

b. *Section III. Special Tools List.* Not applicable.

c. *Section IV. National Stock Number and Part Number Index.* A list, in ascending National item identification number (NIIN, last 9 digits) sequence, of all National stock numbers appearing in the listings, followed by a list, in alphabetic sequence, of all part numbers appearing in the listings. National stock number and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

The following provides an explanation of columns found in the tabular listings:

a. *Illustration.* This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration in which the item is shown.

(2) *Item number.* The number used to identify each item called out in the illustration.

b. *Source, Maintenance, and Recoverability Codes (SMR).*

(1) *Source code.* Source codes are assigned to support items to indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code	Definition
PA	-Item procured and stocked for anticipated or known usage.
PD	-Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.

Code	Application/Explanation
O	-Support item is removed, replaced, used at the organizational level.
F	-Support item is removed, replaced, used at the direct support level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Code	Definition
XD	-A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded, XA, XD, and aircraft support items as restricted by AR 70042.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code	Application/Explanation
D	-The lowest maintenance level capable of