

TECHNICAL MANUAL

**ORGANIZATIONAL AND DIRECT SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
FOR**

**SCANNER GROUPS, TELEPHONE TRAFFIC
0A-8746(V)1/GT (NSN 5805-00-143-4670)
AND
0A-8746(V)2/GT (NSN 5805-00-151-3925)**

**HEADQUARTERS, DEPARTMENT OF THE ARMY
NOVEMBER 1977**

TECHNICAL MANUAL
No. 11-5805-640-23P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 9 November 1977

ORGANIZATIONAL AND DIRECT SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
FOR
SCANNER GROUPS, TELEPHONE TRAFFIC
OA-8746(V)1/GT (NSN 5805-00-143-4670)
AND
OA-8746(V)2/GT (NSN 5805-00-151-3925)
Current as of 16 July 1977

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 (Test) located in the back of the manual. Simply tear out the self-addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Form 2028-2 (Test) in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Electronics Command, ATTN: DRSEL-MA-Q, Fort Monmouth, NJ 07703.

In either case a reply will be furnished direct to you.

Table of Contents

		Page	Illus. Figure
SECTION	I. INTRODUCTION		
Group	II. Repair parts list.....	5	
	00 Telephone Scanner Group OA-8746(V) 1/GT.....	5	1
	01Scanner,TelephoneTrafficTA-917/GT.....	9	2
	0101 Assembly, interface control A5 (See next higher assembly)..		
SECTION	III. Special tools list (Not applicable).....		
	IV National stock number and part number index.....	10	

*This manual supersedes so much of TM 11-5805-640-12, 16 September 1974, as pertains to repair parts and special tools list.

S E C T I O N I

INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational and direct support maintenance of the OA-8746(V)1/GT and OA-8746(V)2/GT. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections :

a. Section II. *Repair Parts List*. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. *Special Tools List*. Not applicable.

c. Section IV. *National Stock Number and Part Number Index*. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation

a. *Illustration*. This column is divided as follows:

(1) *Figure number*. Indicates the figure number of the illustration on which the item is shown.

(2) *Item number*. The number used to identify item called out in the illustration.

b. *Source, Maintenance, and Recoverability (SMR) Codes*.

(1) *Source code*. Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source

codes are entered in the first and second positions of the Uniform SMA Code format as follow :

Code -	Definition
PA-Item	procured and stocked for anticipated or known usage.
XD-A	support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items are restricted by AR 700-42.

(2) *Maintenance code*. Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance :

Code	Application/Explanation
O-Support item is removed, replaced, used at the organizational level.	
F-Support item is removed, replaced, used at the direct support level.	

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Code	Application/Explanation
F—The lowest maintenance level capable of complete repair of the support item is the direct support level.	
Z—Nonreparable. No repair is authorized.	

(3) *Recoverability code*. Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability