

TECHNICAL MANUAL

ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

FOR

CENTRAL OFFICE TELEPHONE AUTOMATIC

AN/TTC-41(V)1 (NSN 5805-01-028-8393),

AN/TTC-41(V)2 (NSN 5805-01-028-8394),

AN/TTC-41(V)3 (NSN 5805-01-028-8392),

AND

AN/TTC-41(V)4 (NSN 5805-01-044-8869)

HEADQUARTERS, DEPARTMENT OF THE ARMY

JULY 1979

TECHNICAL MANUAL }
No. 11-5805-693-20P }

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 11 July 1979

ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

FOR

CENTRAL OFFICE TELEPHONE AUTOMATIC

AN/TTC-41 (V) 1 (NSN 5805-01-028-8393),

AN/TTC-41 (V)2 (NSN 5805-01-028-8394),

AN/TTC-41 (V)3 (NSN 5805-01-028-8392),

AND

AN/TTC-41 (V)4 (NSN 5805-01-044-8869)

Current as of 12 January 1979

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 located in the back of the manual. Simply tear out the self-addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Form 2028-2 in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, New Jersey 07703.

In either case a reply will be furnished direct to you.

Table of Contents

		Page	Illus Figure
SECTION I.	Introduction	1	
II.	Repair parts list.....	5	
Group 00	Central Office Telephone Automatic AN/TTC-41(V)1,2,3,4	5	1
01	Shelter, Electrical Equipment S-561/TTC-41(V)	13	2
	S-561/TTC-41(V), AC Lamp Assembly.....	15	3
	S-561/TTC-41(V), DC Lamp Assembly.....	17	4
	S-561/TTC-41(V), fluorescent Lamp Assembly.....	19	5
	S-561/TTC-41(V), Battery Exhaust Alarm Assembly	21	6
	S-561/TTC-41(V), Battery Box, Rear View	23	7
	S-561/TTC-41(V), Cable Assembly	25	8
	S-561/TTC-41(V), Cable Assembly	27	9
	S-561/TTC-41(V), Cable Assemblies.....	29	10
	S-561/TTC-41(V), Patch Cords	31	11
	0101 Exhaust Blower Assembly (No parts authorized)		
	0102 Power Cable (100 Feet) CX-7453A/U (No parts authorized)		
	0103 Power Cable Stub (15 Feet) CX-7705A/U (No parts authorized)		
	0104 Fire Extinguisher (No parts authorized)		
	0105 Air Conditioner (See TM 5-4120-273-15 for parts)		

0106	Ladder (No parts authorized)		
0107	Heater (No parts authorized)		
02	Central Office, Telephone, Automatic AN/TTC-41(V)5,6,7 (Reserved for Trailer Version)		
03	Switchboard, Automatic Telephone SB-3614/TT (See TM 11-5805-695-20P for parts)		
04	Battery, Storage BB-501/U (See TM 11-6140-203-20P-3 for parts)		
	or		
	Battery, Storage BB-297/U (No parts authorized)		
05	Intercommunication Station LS-147F/FI (See TM 11-5830-256-13&P for parts)		
06	Telephone Set TA-938/G (No parts authorized)		
07	Telephone Set TA-312/PT (See TM 11-5805-201-20P for parts)		
18	Telephone Set TA-838/TT (No parts authorized)		
09	Power Supply PP-6224/U (See TM 11-6130-266-15 for parts)		
10	Headset-Microphone H-182 (See TM 11 -5965-283-15 for parts)		
11	Distribution Box J-1077/U (See TM 11-6110-201-12P for parts)		
12	Power Distribution Box	33	12
13	Signal Entrance Box		
14	Patch Panel		
15	Headset Switch Box	35	13
SECTION III.	Special Tools List (Not applicable)		
IV.	National Stock Number and Part Number Index	36	

SECTION I

INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational maintenance of the AN/TTC-41(V)1,2,3, and 4. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. *Section III. Special Tools List.* Not applicable

c. *Section IV. National Stock Number and Part Number Index.* A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. *Illustration.* This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. *Source, Maintenance, and Recoverability (SMR) Codes.*

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code	Definition
PA-	Item procured and stocked for anticipated or known usage.
PB-	Item procured and stocked for insurance purpose because essentiality dictates that a minimum quantity be available in the supply system.
PD-	Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.
XD-	A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code	Application/Explanation
------	-------------------------

O-Support item is removed, replaced, used at the organizational level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes: