

TECHNICAL MANUAL
DIRECT SUPPORT AND GENERAL
SUPPORT MAINTENANCE MANUAL
FOR
CENTRAL OFFICE, TELEPHONE
AUTOMATIC
AN/TTC-41 (V)1 (NSN 5805-01-028-8393),
AN/TTC-41 (V)2 (NSN 5805-01-028-8394),
AN/TTC-41 (V)3 (NSN 5805-01-028-8392),
AND
AN/TTC-41(V)4 (NSN 5805-01-044-8869).

HEADQUARTERS, DEPARTMENT OF THE ARMY

SEPTEMBER 1978

TECHNICAL MANUAL

No. 11-5805-693-34



HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC 1 September 1978

DIRECT SUPPORT AND GENERAL SUPPORT**MAINTENANCE MANUAL****CENTRAL OFFICE, TELEPHONE, AUTOMATIC****AN/TTC-41 (V) 1 (NSN 5805-01-028-8393),****AN/TTC-41(V)2 (NSN 5805-01-028-8394),****AN/TTC-41 (V)3 (NSN 5805-01-028-8392), AND****AN/TTC-41(V)4 (NSN 5805-01-044-8869).****REPORTING OF ERRORS**

You can improve this manual by recommending improvements using DA Form 2028-2 located in the back of the manual. Simply tear out the self addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Forms 2028-2 in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Communications Electronic Material Readiness Command, ATTN: DRSEL-MA-Q, Fort Monmouth, New Jersey 07703.

In either case, a reply will be furnished direct to you.

Table of Contents

		<i>Paragraph</i>	<i>Page</i>
CHAPTER	1.	INTRODUCTION	
Section	I.	General	
		Scope	1-1 1-1
		Forms and Records	1-2 1-1
		Destruction of Army Materiel to Prevent Enemy Use	1-3 1-1
		Administrative Storage	1-4 1-1
		Reporting Equipment Improvement Recommendations (EIR).....	1-5 1-1
	II.	Description and Data	
		Description	1-6 1-1
		Tabulated Data.....	1-7 1-1
CHAPTER	2.	FUNCTIONING OF EQUIPMENT	
		System Block Diagram	2-1 2-1
		Power Distribution	2-2 2-3
		Signal Distribution	2-3 2-3
		System Signal Connections	2-4 2-5
CHAPTER	3.	DIRECT SUPPORT MAINTENANCE	
Section	I.	General	
		Scope of Maintenance.....	3-1 3-1

		Tools, Test Equipment and Materials.....	3-2	3-1
Section	II.	Troubleshooting		
		Troubleshooting.....	3-3	3-1
	III.	Maintenance Procedures		
		General	3-4	3-1
		Signal Entrance Box	3-5	3-1
		Patch Panel	3-6	3-10
		Exhaust Blower Repairs	3-7	3-15
		Battery Box Maintenance	3-8	3-16
		Power Entrance Box	3-9	3-18
		Power Distribution Box Repairs	3-10	3-20
		Power Cable Repair	3-11	3-22
		Maintenance of Headset Switchbox.....	3-12	3-25
		Lighting Fixtures.....	3-13	3-27
	IV.	Direct Support Test Procedures		
		General	3-14	3-31
		Power Distribution and Operation Function Tests	3-15	3-31
		Tests of Circuit Breakers and Switches.....	3-16	3-31
		Signal Wiring and Components Installation Tests.....	3-17	3-32
		Systems Test	3-18	3-33
CHAPTER	4.	GENERAL SUPPORT MAINTENANCE		
		General	4-1	4-1
		Tools and Test Equipment Required.....	4-2	4-2
APPENDIX	A.	REFERENCES.....		A1

List of Illustrations

<i>Figure</i>	<i>Title</i>	<i>Page</i>
2-1	AN/TTC-41(V)(*) functional block diagram.....	2-1
2-2	Signal distribution diagram, S-561()/TTC-41(V).	2-4
3-1	Signal entrance box, Cover Removed.	3-4
3-2	Testing surge arrestors.	3-5
3-3	Surge arrestor module, Exploded View. (locate at back of manual)	3-9
3-4	Patch panel jack field.	3-11
3-5	Jack strip views, cover and schematic. (locate at back of manual)	3-12
3-6	Exhaust blower assembly, Exploded View. (locate at back of manual).....	3-15
3-7	Battery box schematic diagram for BB-501 and BB-297.	3-17
3-8	Power entrance box, Exterior View, Less Cover.	3-19
3-9	Power distribution box, Exploded View.	3-21
3-10	CX-7705A/U power cable assembly.....	3-23
3-11	CX-7453A/U power cable assembly.	3-24
3-12	Headset switchbox, top view and schematic.	3-26
3-13	Dc light assembly, Exploded View.	3-28
3-14	Ac light assembly, Exploded View.	3-29
3-15	Florescent light assembly, Exploded View.	3-30
FO-1	Power distribution schematic, S-561()/TTC-41(V).	

List of Tables

<i>Number</i>	<i>Title</i>	<i>Page</i>
2-1	System Signal Connections.....	2-6
3-1	Troubleshooting.....	3-1
3-2	Signal Entrance Box Wiring.....	3-8
3-3	Test Set TS- 3655A/TT Switch Positions and Corresponding Arrestors.....	3-9
3-4	Cable Assembly Line Side.....	3-13
3-5	Cable Assembly Switchboard Side	3-14
3-6	Sample Tester Connections.....	3-32
3-7	Test Connections for 2-Wire Switching	3-34
3-8	Test Test Connections for 4-Wire Switching	3-35

CHAPTER 1

INTRODUCTION

SECTION I. GENERAL**1-1. Scope.**

a. This manual describes the Central Office, Telephone, Automatic AN/TTC-41 (V) (*) and covers direct support and general support maintenance. Maintenance responsibilities for all levels of maintenance are specified in the Maintenance Allocation Chart, Appendix D, of TM 11-6805-693-12. Other publications in the family of manuals for this equipment covering repair parts and special tools list are TM 11-6805-93-20P and TM 11-805-693-30P. The nomenclature AN/TTC41 (V) (*) used herein refers to models AN/TTC-41 (V)1, AN/TTC-41 (V)2, AN/TTC-41 (V)3, and AN/TTC-41 (V)4.

b. Appendix A covers references. It lists publications which are applicable to this equipment.

1-2. Forms and Records.

Refer to TM 11-805-693-12 for applicable forms and records.

1-3. Destruction of Army Material to Prevent Enemy Use.

Destruction of Army material to prevent enemy use shall be as prescribed in TM 750-244-2.

1-4. Administrative Storage.

Refer to TM 11-5805-693-12 for procedures for placing this equipment into administrative storage.

1-5. Reporting Equipment Improvement Recommendations (EIR).

EIR's will be prepared using DA Form 2407, Maintenance Request. Instructions for preparing an EIR are provided in TM 38-750, The Army Maintenance Management System. EIR's should be mailed directly to Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-MA-Q, Fort Monmouth, New Jersey 07703. A reply will be furnished directly to you.

SECTION II. DESCRIPTION AND DATA

1-6. Description.

Refer to TM 11-6805-693-12 for a description of the AN/TTC-41 (V) (*). The asterisk contained in the nomenclature AN/TTC-41 (V) (*) refers to all models.

1-7. Tabulated Data.

Refer to TM 11-56805-693-12 for data concerning equipment, power consumption, operating temperatures and weights.