

ARMY
NAVY
AIR FORCE

TM 11-5805-715-34P
EE119-DB-PLG-010/E154 CV3478
TO 31W2-2TTC39-14

DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
FOR
CONVERTER, TELEPHONE SIGNAL CV-3478/TTC
(NSN 5805-01-127-6943)

TECHNICAL MANUAL
No. 11-5805-715-34P
TECHNICAL MANUAL
EE119-DB-PLG-010/E154 CV3478
TECHNICAL ORDER
No. TO 31W2-2TTC39-14



DEPARTMENTS OF THE ARMY,
THE NAVY, AND THE AIR FORCE

WASHINGTON, DC, 6 September 1985

**DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
FOR
CONVERTER, TELEPHONE SIGNAL CV-3478/TTC
(NSN 5805-01-127-6943)
Current as of 22 April 1985**

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in back of this manual direct to: Commander, US Army Communications-Electronics Command and Fort Monmouth, ATTN: AMSEL-ME-MP, Fort Monmouth, NJ 07703-5007.

For Air Force, submit AFTO Form 22 (Technical Order System Publication Improvement Report and Reply) in accordance with paragraph 6-5, Section VI, T.O. 00-5-1. Forward direct to prime ALC/MST.

For Navy, mail comments to the Commander, Naval Electronics System Command, ATTN: ELEX 8122, Washington, DC 20360.

In either case, a reply will be furnished direct to you.

Table of Contents

			Page	Illus Figure
SECTION	I.	Introduction	1	
	II.	Repair Parts List.....	1-1	
GROUP	00.	Converter, Telephone Signal CV-3478/TTC.....	1-1	1
		Panel, Front Assy, SM-D-811455.....	2-1	2
		Card Set, SM-B-814618-2.....	3-1	3
	01.	Printed Circuit Cards, A2, A3, A5, A7, A9, A11, A13, A15, A18, A20, A22, A24, A26, A29, A31, A33, A43		
		Circuit Card Assy, SM-E-809647	4-1	4
		Circuit Card Assy, SM-E-816554	5-1	5
		Circuit Card Assy, SM-E-816540	6-1	6
	02.	Low Voltage Power Supply, SM-D-817249-2.....	7-1	7
		Terminal Board Assy, 70421-304.....	8-1	8
		Circuit Card Assy, 70421-305	9-1	9
		Series Pass Assy, 70421-303	10-1	10
		Switcher, Heatsink, 70421-302	11-1	11
		Scr Heatsink Assy, 70421-306	12-1	12
		Diode Heatsink Assy, 70421-307	13-1	13
		Cover Assy, 70421-301	14-1	14
	03.	Power and Signal Cables, Internal		
		Cable Power, SM-D-812377-1	15-1	15
		Cable Assy, Electrical, SM-D-811745.....	16-1	16
		Cable Assy, Signal, SM-D-811235	17-1	17
		Cable Assy, Signal, SM-D-811746	18-1	18
	04.	Connector Plate Assy, SM-D-814619	19-1	19
	05.	Rear Panel Assy (See Group 00 for parts)		
SECTION	III.	Special Tools List (Not applicable)		
	IV.	National Stock Number and Part Number Index	I-1	

SECTION I

INTRODUCTION

1. Scope

This manual lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of direct support and general support maintenance of the CV-3478/TTC. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending numeric sequence, with the parts in each group listed in ascending item number sequence. Figure numbers are listed directly beneath the group header.

b. Section III. Special Tools List. Not applicable.

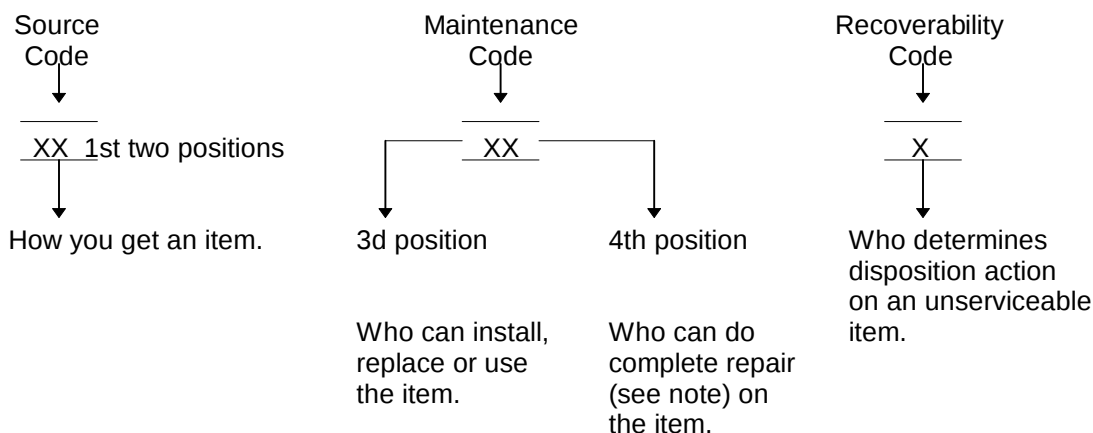
c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number

(NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphameric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns (Section II and III)

a. Item No. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR Code (Column (2)). The source, maintenance, and recoverability (SMR) code is a five-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

**NOTE**

Complete repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) *Source code.* The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows: