

TECHNICAL MANUAL
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR
PARTS AND SPECIAL TOOLS)
FOR
TEST SETS, TELEPHONE AN/USM-181B
AN AN/USM-181C
(6625-00-740-0344)

HEADQUARTERS, DEPARTMENT OF THE ARMY

MARCH 1977

TECHNICAL MANUAL
No. 11-6625-602-40P-1



HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 16 March 1977

GENERAL SUPPORT MAINTENANCE

REPAIR PARTS AND SPECIAL TOOLS LISTS

(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)

FOR
TEST SETS, TELEPHONE AN/USM-181B AND AN/USM-181C

(6625-00-740-0344)

Current as of 13 November 1976

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 (Test) located in the back of the manual. Simply tear out the self addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Form 2028-2 (Test) in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Electronics Command, ATTN: DRSEL-MA-Q, Fort Monmouth, NJ 07703.

In either case a reply will be furnished direct to you.

Table of Contents

		Page	Illus Figure
SECTION	I.	Introduction	1
	II.	Repair parts list	
Group	00	Test Sets, Telephone AN/USM-181B and AN/USM-181C	5
	01	Signal Generators SG-543B/U and SG-543C/U	11
		Signal Generators SG-543B/U and SG-543C/U	17
		Electrical shield plate assembly	17
		Circuit card assembly, power	17
		Circuit card assembly, oscillator	21
		Rotary switch assembly	25
	02	Impedance Matching Attenuators CN-947B/USM-181 and CN-947C/USM-181	31
		Impedance Matching Attenuators CN-947B/USM-181 and CN-9417C/USM-181	35
		Variable attenuator	37
		Rotary switch assembly DB control	39
		Switch assemblies (CN-947B/USM-181 and CN-947/USM-181)	49
	03	Electronic Voltmeters ME-260B/U and ME-260C/U	55
		Electronic Voltmeters ME-260B/U and ME-260C/U	59
		Circuit card assembly A3A1	59
		Circuit card assembly A3A2	59
		Rotary switch assembly, power	61
		Rotary switch assembly IME-260B/U and ME-260C/U)	63
		Circuit card assembly, rotary switch	63
		Rotary switch	63

This manual supersedes TM 11-6625-602-40P-1, 30 April 1973.

			Page	Illus Figure
Group	04	Electrical Power Cable Assembly CX-12594/USM-181B (No repair parts authorized)		
	06	Cable Assembly, Radio Frequency CG-3566/U	69	18
	06	Test Set Case CY-7047A/USM-181B.....	69	18
Section	III.	Special tool list (NOT APPLICABLE)		
	IV.	National stock number and part number index.....	71	

SECTION I INTRODUCTION

1. Scope

This manual lists repair parts and special tools required for performance of general support maintenance of the AN/USM-181B and the AN/USM-181C.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II-Repair Parts List. A list of repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending numerical sequence, with the parts in each group listed in figure and item number sequence.

b. Section III-Special Tools List. Not applicable.

c. Section IV-National Stock Number and Part Number Index. A list, in ascending National item identification number (NIIN, last 9 digits) sequence, of all National stock numbers appearing in the listings, followed by a list, in alphanumeric sequence, of all part numbers appearing in the listings. National stock number and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

The following provides an explanation of columns found in the tabular listings:

a. Illustration. This column is divided as follows:

(1) Figure number. Indicates the figure number of the illustration in which the item is shown.

(2) Item number. The number used to identify each item called out in the illustration. When a group of item numbers are enclosed by brackets on the illustration, they are parts of an assembly whose item number is outside the brackets.

b. Source, Maintenance, and Recoverability Codes (SMR).

(1) Source code. Source codes are assigned to support items to indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

<i>Code</i>	<i>Definition</i>
-------------	-------------------

PA--Item procured and stocked for anticipated or known usage.	
---	--

PC--Item procured and stocked and which otherwise would be coded PA except that it is deteriorative in nature.	
--	--

PD--Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.	
--	--

XA--Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.	
---	--

XD--A support item that is not stocked. When required, item will be procured through normal supply channels.	
--	--

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA, XD, and air- craft support items as restructured by AR 700-42.

(2) Maintenance code. Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth position of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

O--Support item is removed, replaced, used at the organizational level.	
---	--

H--Support item is removed, replaced, used at the general support level.	
--	--

D--Support items that are removed, replaced, used at depot, mobile depot, specialized repair activity only.	
---	--

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will