

TECHNICAL MANUAL
GENERAL SUPPORT MAINTENANCE
REPAIR
PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS)
FOR
TEST SETS ,
TELEPHONE
AN / USM - 181 AND
AN / USM - 181A
(NSN 6625-00-740-0344)

HEADQUARTERS, DEPARTMENT OF THE ARMY

MAY 1977

TECHNICAL MANUAL

No. 11-6625-602-40P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 4 May 1977

**GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
FOR
TEST SETS, TELEPHONE
AN/USM-181 AND AN/USM-181A**

(NSN 6625-00-740-0344)

Current as of January 7, 1977

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 (Test) located in the back of the manual. Simply tear out the self-addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Forms 2028-2 (Test) in the bsck of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Electronics Command, ATTN: DRSEL-MA-Q, Fort Monmouth, New Jersey 07703.

In either case a reply will be furnished direct to you.

Table of Contents

		Page	Illus Figure
SECTION	I. Introduction	1	
	II. Repair parts list	5	
Group	00 Test Sets, Telephone AN/USM-181 and AN/USM-181A	5	1
	01 Voltmeter, Electronic ME-260A/U or ME-260A/U A3	6	2-5
	0101 Circuit card assembly (A3A1)	17	6
	0102 Circuit card assembly (A3A2)	21	7
	0103 Switch assembly, rotary (A3A4)	23	8
	0104 Switch assembly (A3A3)	24	9
	02 Generator, Signal GS-543/U or SG-543A/U (A1)	27	10,11
	0201 Circuit card assembly(A1A4)	33	12
	0202 Power supply assembly (A1A100)	37	13
	020201 Circuit card assembly (A1A100A1)	38	14
	0203 Switch assembly, rotary (A1A3)	39	15
	03 Attenuator, Impedance Matching CN-947/USM-181 or CN-947A/USM-181 (A2)	41	16-18
	0301 Attenuator assembly (A2A2)	47	19
	0302 Switch assembly (A2A1)	48	20
	04 Case, Test Set CY-471/USM-181 (A4)	51	21,22
SECTION	III. Special tools list (Not applicable)		
	IV. National stock number and part number index	54	

SECTION I

INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of general support maintenance of the AN/USM -181 and AN/USM -181A. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. *Section III. Special Tools List.* Not applicable.

c. *Section IV. National Stock Number and Part Number Index.* A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphanumeric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. *Illustration.* This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. *Source, Maintenance, and Recoverability (SMR) Codes.*

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the uniform SMR Code format as follows:

Code	Definition
------	------------

PA-	Item procured and stocked for anticipated or known usage.
-----	---

PD-	Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfitting. Not subject to automatic replenishment.
-----	---

XD -	A support item that is not stocked. When required, item will be procured through normal supply channels.
------	--

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code	Application/Explanation
------	-------------------------

O-	Support item is removed, replaced, used at the organizational level.
----	--

H -	Support item is removed, replaced, used at the general support level.
-----	---

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Code	Application/Explanation
------	-------------------------

O-	The lowest maintenance level capable of complete repair of the support item is the organizational level.
----	--

H -	The lowest maintenance level capable of complete repair of the support item is the general support level.
-----	---

Z-	Nonreparable. No repair is authorized.
----	--

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The