

DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE

REPAIR PARTS AND SPECIAL TOOLS LIST

FOR

POWER METER

HEWLETT-PACKARD, MODEL E1232A

APN MIS-30525

NSN 6625-01-219-2878

Current as of 7 July 1986

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms) to Commander, U.S Army TMDE Support Group, ATTN: AMXTM-LML, Redstone Arsenal, AL 35898-5400. A reply will be furnished directly to you.

TABLE OF CONTENTS

			Page
Section	I.	INTRODUCTION.....	1
Section	II.	REPAIR PARTS LIST.....	
Group	0010	Power meter.....	2-1
	0020	Circuit card assembly	2-2
	0030	Circuit card assembly	2-3
	0040	Switch, electrical.....	2-5
	0050	Switch, electrical.....	2-5
	0060	Circuit card assembly	2-5
Section	III.	SPECIAL TOOLS LIST (Not applicable).....	
Section	IV.	NATIONAL STOCK NUMBER AND PART NUMBER INDEX	I-1

*This manual supersedes TM 9-6625-1935-34P, 15 May 1975.

DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE

REPAIR PARTS AND SPECIAL TOOLS LIST

SECTION I. INTRODUCTION

1. Scope. This RPSTL lists and authorizes spares and repair parts required for performance of direct and general support maintenance of Power Meter, Hewlett-Packard, Model E12-432A. It authorizes the requisitioning, issue, and disposition of spares and repair parts as indicated by the Source, Maintenance and Recoverability (SMR) codes.

2. General. In addition to this section I, Introduction, the Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. Parts lists are composed of functional groups in ascending numeric sequence. Parts are listed in alphabetical sequence within each figure number.

b. Section III. Special Tools List. Not applicable.

c. Section IV. National Stock Number and Part Number Index. A list, in National Item Identification Number (NIIN) sequence, of all National Stock Numbered (NSN) items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listing. NSN's and part numbers are cross-referenced to the figure and item number appearance.

3. Explanation of Columns (Section II)

a. Item No. (Column (1)). Indicates the number used to identify each item appearing in the listing.

b. SMR CODE (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions as shown in the following breakdown:

Source Code	Maintenance Code	Recoverability Code
<u>XX</u> 1st two positions	<u>XX</u>	<u>X</u> 5th position
How you get an item	3d position 4th position	Who determines disposition action on an unserviceable item
	Who can install replace or use the item	Who can do complete repair* on the item

*Complete Repair: Maintenance capacity, capability, and authority to perform all the corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.