

LUBRICATION ORDER

L05-4320-237-12

10 JUNE 1977

(Supersedes L05-4320-237-15, 5 MAY 1967)

PUMPING ASSEMBLY, FLAMMABLE LIQUID,
BULK TRANSFER, CENTRIFUGAL,
50 GPM, 100 FOOT HEAD: GASOLINE ENGINE DRIVEN, 2 IN.
FRAME MOUNTED, (BARNES MODEL-QM-2-28002)
WITH WISCONSIN ENGINE MODEL-MBKND,
SPECIFICATION 279315

Reference: C9100-IL

Intervals and related task-hour times are based on normal hours of operation. The task-hour time specified is the time you need to do all the services prescribed for a particular interval. Change the interval if your lubricants are contaminated or if you are operating the equipment under adverse operating conditions, including longer-than-usual operating hours. You may extend the interval during periods of low activity, but you must take adequate preservation precautions.
*The time specified is the time required to perform all services at the particular interval.
Clean fittings before lubricating. Relubricate all areas exposed to water after amphibious operation. Lubricate points indicated by dotted arrow shaft on both sides of

equipment. Clean parts with SOLVENT, dry cleaning, or with OIL, fuel, diesel. Dry before lubricated. Drain crankcase when HOT. Fill and check level. The lowest level of maintenance authorized to lubricate a point is indicated by one of the following: (C) operator/crew, or (O) organizational maintenance.
You can improve this publication by calling attention to errors and by recommending improvements and by stating your reasons for the recommendations. Your letter or DA Form 2028 (Recommended Changes to Publications and Forms) should be mailed directly to Commander, U. S. Army Troop Support Command, ATTN: DRSTS-MPP, 4300 Goodfellow Blvd., St. Louis, MO 63120. A reply will be furnished directly to you.


FOLD

FOLD

LUBRICANT • INTERVAL

INTERVAL • LUBRICANT

Air Cleaner OE D
(Refill oil reservoir to level mark; every 25 hours, 250 miles, or weekly, disassemble entire unit; clean, reoil and reassemble.)
(See Note 2.)

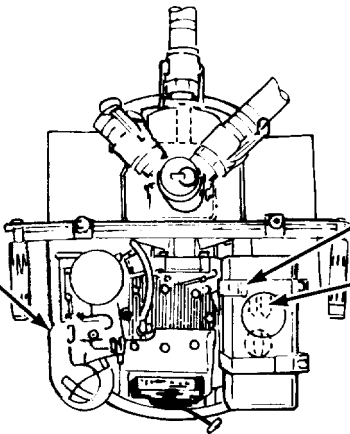

W Crankcase Drain Plug
(Drain and refill)
D OE Crankcase Fill Plug (Check Level)
(See Key)

*TOTAL TASK HOURS		*TOTAL TASK HOURS	
INTERVAL	TASK-HOURS	INTERVAL	TASK-HOURS
D	0.5	W	1.5