

TECHNICAL MANUAL

**UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST**

**PUMP UNIT, FLAMMABLE LIQUID, CENTRIFUGAL,
SELF-PRIMING, 2 INCH, 100 GPM,
DIESEL ENGINE DRIVEN
NSN 4320-01-307-0538**

DISTRIBUTION STATEMENT A: Approved for public release, distribution is unlimited

**HEADQUARTERS, DEPARTMENT OF THE ARMY
30 APRIL 1993**

TECHNICAL MANUAL

NO. 10-4320-310-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON D.C , 30 APRIL 1993

TECHNICAL MANUAL

**UNIT, INTERMEDIATE DIRECT SUPPORT AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST**

for

**PUMP UNIT, FLAMMABLE LIQUID, CENTRIFUGAL, SELF-PRIMING,
2 INCH, 100 GPM, DIESEL ENGINE DRIVEN
NSN 4320-01-307-0538**

Current as of March 1993

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MP, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. A reply will be furnished directly to you.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

	Page	Illus/ Figure
Section I. INTRODUCTION	1	
Section II. REPAIR PARTS LIST	1-1	
Group 01 Pump Assembly	1-1	1
Group 02 Air Filter Assembly	2-1	2
Group 03 Engine Assembly	3-1	3
Group 04 Fuel System.....	4-1	4
Fuel Lift Pump	5-1	5
Injection System.....	6-1	6
Group 05 Exhaust System	7-1	7
Group 06 Cranking System.....	8-1	8

TABLE OF CONTENTS (Continued)

	Page	Illus/ Figure
Group 07 Throttle Linkage	9-1	9
Group 08 Cylinder Head and Cylinder Assembly		
Cowling and Covers	10-1	10
Cylinder Head Cover and Push Rods	11-1	11
Cylinder Head and Valves.....	12-1	12
Cylinder and Piston	13-1	13
Group 09 Crankcase Assembly		
Connecting Rod	14-1	14
Timing Cover and Camshaft	15-1	15
Governor.....	16-1	16
Flywheel and Oil Seal	17-1	17
Crankshaft.	18-1	18
Crankcase	19-1	19
Group 10 Frame Assembly	20-1	20
Group 11 Bulk Materials	BULK-1	BULK
Section III. SPECIAL TOOLS LIST		
Special Tools	21-1	21
Section IV. CROSS-REFERENCE INDEXES		
National Stock Number Index.....	I-1	
Part Number Index	I.-3	
Figure and Item Number Index.....	I-11	

UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

SECTION I. INTRODUCTION

1. SCOPE. This RPSTL lists and authorizes spares and repair parts, special tools, special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit, direct support, and general support maintenance of the Pump Unit, 100 GPM, Diesel Engine Driven It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. GENERAL. In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. This list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in this section. Items are shown in the associated illustration(s)/figure(s).


b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) Information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV Cross-references Indexes. A list, in National item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item number in alphanumeric sequence and cross references NSN, CAGEC and part number.

3. EXPLANATION OF COLUMNS (SECTION II AND SECTION III).

a. ITEM NO (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR Code (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

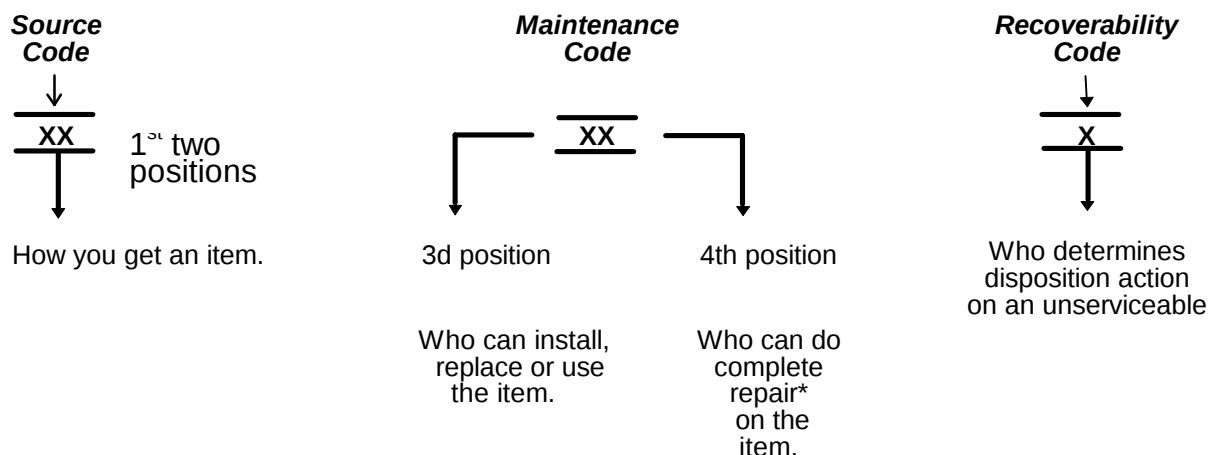

*Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows:

Source Code	Explanation
PA PB PC** PD PE PF PG	Stocked items; use the applicable NSN to request(requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3rd position of the SMR code. **NOTE: Items coded PC are subject to deterioration.
KD KF KB	Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the 3rd position of the SMR code. The complete kit must be requisitioned and applied.
MO- (Made at Unit/AVUM Level) MF- (Made at DS/AVUM Level) MH- (Made at GS Level) ML- (Made at Specialized Repair Activity (SRA)) MD- (Made at Depot)	Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the DESCRIPTION and USABLE ON CODE (UOC) column and listed in the Bulk Material group of the repair parts list in this RPSTL. H the item is authorized to you by the 3rd position code of the SMR code, but the source code indicates it is made at a higher level, order the item from the higher level of maintenance.
AO- (Assembled by Unit/AVUM Level) AF- (Assembled by DS/AVIM Level) AH- (Assembled by GS Category) AL- (Assembled by SRA) AD- (Assembled by Depot)	Items with these codes are not to be requested/ requisitioned individually. The puts that make up the assembled item must be requisitioned or fabricated and assembled at the level of maintenance indicated by the source code. H the 3rd position code of the SMR code authorizes you to replace the item, but the source code indicates the items are assembled at a higher level, order the item from the higher level of maintenance.
XA-	Do not requisition "XA"-coded item. Order its next higher assembly. (Refer to the NOTE below.)
XB-	If an UXB" item is not available from salvage, order it using the CAGEC and part number given.
XC-	Installation drawing, diagram, instruction sheet, field service drawing, that is identified manufacturer's part number.
XD-	Item is not stocked. Order an XD"-coded item through normal supply channels using the CAGEC and part number given, if no NSN is available.