

TECHNICAL MANUAL

ORGANIZATIONAL MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LISTS
PUMP, CENTRIFUGAL; FRESH WATER; GASOLINE
ENGINE; BASE MOUNTED; 4 IN., 200 GPM, 300
FT HEAD (CARVER MODELS) (MODEL 4 WHIS)
FSN 4320-810-7310
(MODEL 4 WHISA)
FSN 4320-830-5344

TECHNICAL MANUAL

No. 5-4320-216-20P



HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D. C., 16 October 1970

ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

**PUMP, CENTRIFUGAL; FRESH WATER; GASOLINE ENGINE;
BASE MOUNTED; 4 IN., 200 GPM, 300 FT HEAD
(CARVER MODELS) (MODEL 4 WHIS)
FSN 4320-810-7310
(MODEL 4 WHISA)
FSN 4320-830-5344**

Current as of 29 September 1970

	Paragraph	Page
SECTION I. INTRODUCTION -----		iii
Scope -----	1	i
General -----	2	iii
Explanation of columns -----	3	iii
Special information -----	4	iv
How to locate repair parts -----	5	v
Abbreviations -----	6	v
Federal supply codes for manufacturers 7 -----	7	v
Recommendations for maintenance publications improvement -----	8	vi
II. PRESCRIBED LOAD ALLOWANCE -----		1
III. REPAIR PARTS FOR ORGANIZATIONAL MAINTENANCE -----		4
Group 01. Hood, Covers, Rear Enclosure and Fasteners -----		4
02. Instrument Panel -----		5
03. Control Panel -----		8
04. Battery, Battery Box and Cables -----		9
05. Fuel Tanks, Fittings and Filter -----		10
06. Air Cleaner -----		13
07. Fuel Pump, Carburetor and Gaskets -----		15
08. Muffler -----		16
09. Generator Regulator -----		16
10. Generator -----		18
11. Ignition Wires and Spark Plugs -----		21
12. Magneto -----		21
13. Magnetic Switch and Charging Receptacle -----		24
14. Starter -----		26
15. Tachometer Drive Housing and Gear -----		29
17. Manifolds -----		29
18. Fan, Guard and Pulley -----		30
19. Radiator, Shroud, Grille, Lines and Fittings -----		30
20. Water Pump -----		32
21. Engine, Cylinder Block, Head, Cover, Exhaust Valve and Breather -----		34
22. Crankcase, Crankshaft Bearing Case and Oil Strainer -----		36
23. Covers, Starting Crank, Oil Filter and Timing Indicator -----		37
24. Rocker Arm, Camshaft and Timing Gears -----		37
25. Camshaft, Flywheel and Timing Gear -----		37

***This manual together with TM 5-4320-216-35P, 16 October 1970 supersedes TM 5-4320-216-25P, 18 September 1964, including all changes.**

	Page
Group 27. Oil Pump and Filter -----	38
28. Exhaust Primers _-----	40
29. Pump-----	42
30. Frame and Related Parts-----	43

SECTION IV. SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT FOR
ORGANIZATIONAL MAINTENANCE (NOT APPLICABLE.)

V. INDEX FEDERAL STOCK NUMBER AND REFERENCE NUMBER -----	83
--	----

SECTION I.

INTRODUCTION

1. Scope

This manual lists repair parts required for the performance of organizational maintenance of the pump.

2. General

This repair parts and Special Tools list is divided into the following sections:

a. Prescribed Load Allowance (PLA)-Section II. A composite listing of the repair parts, Special tools, Test and support equipment having quantitative allowances for initial stockage at the organizational level.

b. Repair Parts-Section III. A list of repair parts authorized for the performance of maintenance at the organizational level in figure and item number sequence.

c. Special Tools, Test and Support Equipment-Section IV. A list of special tools, test and support equipment authorized for the performance of maintenance at the organizational level (Not Applicable).

d. Index-Federal Stock Number and Reference Number-Section V. A list of Federal Stock Numbers in ascending numeric sequence followed by a list of reference numbers in ascending alpha-numerical sequence, cross-referenced to the illustration figure number and item number.

Note. Items not illustrated are cross-referenced to page number.

3. Explanation of -Columns

The following provides an explanation of columns in the tabular lists in Section II, III, and IV":

a. Source, Maintenance, and Recoverability Codes (SMR).

Note. Common hardware items known to be readily available in Army supply channels are assigned Maintenance codes only. Source codes, Recoverability codes, and Maintenance Allowances are not assigned this category.

(1) Source code indicates the selection status and source for the listed item. Source codes are:

Code	Explanation
P	Repair parts which are stocked in or supplied from the GSA/DSA, or Army supply system and authorized for use at indicated maintenance categories.
P2	Repair parts which are procured and stocked for insurance purposes because the combat or military essentially of the end item dictates that a minimum quantity be available in the supply system.
M	Repair parts which are not procured or stocked, but are to be manufactured in indicated maintenance levels.
A	Assemblies which are not procured or stock as such, but are made up of two or more units. Such component units carry individual stock numbers and descriptions, are procured and stocked separately and can be assembled, to form the required assembly at indicated maintenance categories.
X	Parts and assemblies which are not procured or stocked and the mortality of which normally is below that of the end item or component. The failure of such part or assembly should result in retirement of the end item from the supply system.
X1	Repair parts which are not procured or stocked. The requirement for such items will be filled by use of the next higher assembly or component.
X2	Repair parts which are not stocked. The indicated maintenance category requiring such repair parts will attempt to obtain same through cannibalization. Where such repair parts are not obtainable through cannibalization, requirements will be requisitioned, with accompanying justification, through normal supply channels.
G	Major assemblies that are procured with PEMA funds for initial issue only as exchange assemblies of DSU and GSU level. These assemblies will not be stocked above DS and GS level or returned to depot supply level
(3)	Maintenance code indicates the lowest category of maintenance authorized to install the listed item. The maintenance level code is:

Code	Explanation
O -----	Organizational Maintenance
(3)	Recoverability code indicates whether unserviceable items should be returned for recovery or salvage. Items not coded are expendable. Recoverability codes are: