

TECHNICAL MANUAL

**ORGANIZATIONAL, DIRECT SUPPORT AND
GENERAL SUPPORT MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LIST (INCLUDING DEPOT
MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS)**

**PUMP, CENTRIFUGAL: SELF-PRIMING, DIESEL-
ENGINE DRIVEN, WHEEL MOUNTED, 6 INCH,
1500 GPM AT 60 FOOT HEAD
(MODEL US90 CCD-1)
NSN 4320-00-490-1859**

HEADQUARTERS, DEPARTMENT OF THE ARMY

5 JULY 1985

TECHNICAL MANUAL

NO. 5-4320-300-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C. 5 July 1985

**ORGANIZATIONAL, DIRECT SUPPORT AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)**

**PUMP, CENTRIFUGAL: SELF-PRIMING, DIESEL-ENGINE-DRIVEN,
WHEEL MOUNTED, 6 INCH, 1500 GPM AT 60 FOOT HEAD
(MODEL US90 CCD-1)
NSN 4320-00-490-1859**

Current as of 15 January 1985

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistake or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, US Army Aviation and Troop Command. ATTN: AMSAT-I-MP, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. A reply will be furnished directly to you.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

TABLE OF CONTENTS

		Page	Illus Figure
Section	I. INTRODUCTION	1	
	II. REPAIR PARTS LIST	1-1	
Group	01 Air cleaner.....	1-1	1
	02 Exhaust system.....	2-1	2
	03 Electrical system	3-1	3
	04 Fuel system	9-1	9
	05 Engine assembly.....	25-1	25
	06 Pump assembly	57-1	57
	07 Control panel assembly.....	63-1	63
	08 Trailer assembly.....	65-1	65
Section	III. SPECIAL TOOLS LIST (not applicable)		
	IV. NATIONAL STOCK NUMBERS AND PART NUMBER INDEX.....	I-1	

ORGANIZATIONAL, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

Section I. INTRODUCTION

1. SCOPE. This RPSTL Lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of organizational, direct support and general support maintenance of the Centrifugal Pump. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. GENERAL. In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections.


a. *Section II. Repair Parts List.* A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in this section. Items listed are shown on the associated illustration(s)/figures(s).

b. *Section III. Special Tools List.* A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. *Section IV. National Stock Number and Part Number Index.* A lists, in National item identification number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listing. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. EXPLANATION OF COLUMNS (Sections II and III).

- a. *ITEM NO. (Column (1)).* Indicates the number used to identify items called out in the illustration.
- b. *SMR CODE (Column (2)).* The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

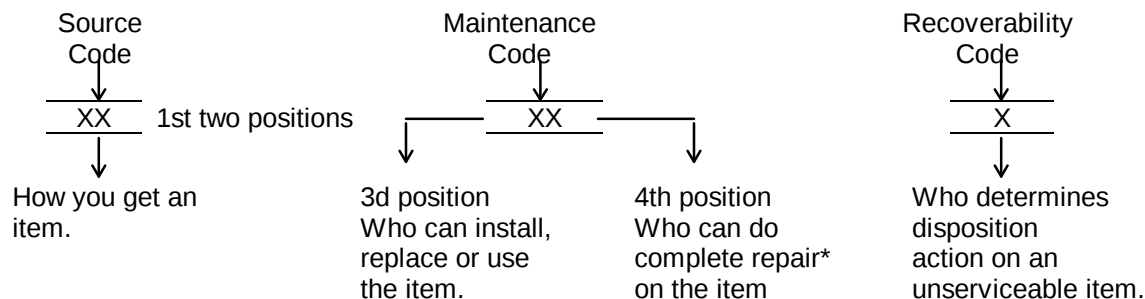

*Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows:

Code		Explanation
PA	}	Stocked items; use the applicable NSN to request(requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3rd position of the SMR code.
PB		
PC**		
PD		
PE		
PF		
PG		
		**NOTE: Items coded PC are subject to deterioration.
KD	}	Items with these codes are not to be requested/requisitioned individually. They re part of a kit which is authorized to the maintenance category indicated in the 3rd position of the SMR code. The complete kit must be requisitioned and applied.
KF		
KB		
MO-	}	Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the DESCRIPTION and USABLE ON CODE (UOC) column and listed in the Bulk Material group of the repair parts list in this RPSTL. H the item is authorized to you by the 3rd position code of the SMR code, but the source code indicates it is made at a higher level, order the item from the higher level of maintenance.
MF-		
MH-		
ML-		
MD-		
AO-	}	Items with these codes are not to be requested/requisitioned individually. The puts that make up the assembled item must be requisitioned or fabricated and assembled at the level of maintenance indicated by the source code. If the 3rd position code of the SMR code authorizes you to replace the item, but the source code indicates the items are assembled at a higher level, order the item from the higher level of maintenance.
AF-		
AH-		
AL-		
AD-		
XA-		Do not requisition "XA"-coded item. Order its next higher assembly. (Refer to the NOTE below.)
XB-		If an UXB" item is not available from salvage, order it using the CAGEC and part number given.
XC-		Installation drawing, diagram, instruction sheet, field service drawing, that is identified manufacturer's part number.
XD-		Item is not stocked. Order an XD"-coded item through normal supply channels using the CAGEC and part number given, if no NSN is available.

NOTE

Cannibalization or controlled exchange, when authorized, may be used as a source of supply for items with the above source codes, except for those source coded "XA" or those aircraft support items restricted by requirements of AR 700-42.

(2) Maintenance Code. Maintenance codes tells you the level(s) of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the SMR Code as follows: