

TECHNICAL MANUAL

UNIT AND INTERMEDIATE MAINTENANCE

REPAIR PARTS AND SPECIAL TOOLS LIST
FOR

**PUMPING ASSEMBLY,
FLAMMABLE LIQUID, BULK
TRANSFER, 50 GPM, CENTRIFUGAL,
DIESEL ENGINE DRIVEN
NSN 4320-01-171-9726**

Approved for public release; distribution is unlimited.

**HEADQUARTERS, DEPARTMENT OF THE ARMY
21 MARCH 1988**

TECHNICAL MANUAL

No. 5-4320-308-23P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D. C., 21 March 1988UNIT AND DIRECT SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST

for

PUMPING ASSEMBLY, FLAMMABLE LIQUID, BULK TRANSFER,
50 GPM, CENTRIFUGAL, DIESEL ENGINE DRIVEN
NSN 4320-01-212-2166E

Current as of 9 September 1987

Approved for public release. Distribution is unlimited.

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in back of this manual directly to: Commander, U.S. Army Troop Support Command, ATTN: AMSTR- MMTS, 4300 Good fellow Boulevard, St. Louis, MO 63120-1798. A reply will be furnished to you.

TABLE OF CONTENTS

		Page	Illus Figure
Section	I. INTRODUCTION	1-1	
Section	II. REPAIR PARTS LIST	1-1	
Group 00	Pumping Assembly	1-1	1
Group 01	Suction Hose Assembly	1-1	1
Group 02	Discharge Hose Assembly	1-1	1
Group 03	Drum Unloader	1-1	1
Group 04	Storage Container	2-1	2
Group 05	Nozzle Assembly	3-1	3
Group 06	Y-Connectors	4-1	4
Group 07	Ground Rod	4-1	4
Group 08	Pump Assembly	4-1	4
	Pump	5-1	5
Group 09	Pump Case Assembly	6-1	6
Group 10	Air Filter Assembly	7-1	7
Group 11	Engine Assembly	8-1	8
Group 12	Fuel System	9-1	9
	Three Way Valve	10-1	10
	Fuel Lift Pump	11-1	11
	Injection System	12-1	12
Group 13	Exhaust System	13-1	13
Group 14	Crank Assembly	14-1	14
Group 15	Throttle	15-1	15
	Cowling and Covers	16-1	16

TABLE OF CONTENTS (Continued)

		Page	Illus Figure
Group 16	Cylinder Head and Cylinder Assembly		
	Cylinder Head and Push Rods	17-1	17
	Cylinder Head and Valve Assembly	18-1	18
	Cylinder and Piston	19-1	19
Group 17	Crankcase Assembly		
	Connecting Rods	20-1	20
	Timing Cover and Camshaft	21-1	21
	Governor.....	22-1	22
	Flywheel and Oil Seal	23-1	23
	Crankshaft	24-1	24
	Crankcase	25-1	25
Group 18	Base Assembly	26-1	26
Group 19	Bulk	Bulk-1	
Section III.	SPECIAL TOOLS LIST		
	Special Tools	27-1	27
Section IV.	CROSS-REFERENCE INDEXES	I-1	
	National Stock Number Index	I-1	
	Part Number Index	I-3	
	Figure and Item Number Index	I-13	

*U.S. GOVERNMENT PRINTING OFFICE: 1992 - 755-028/80014

PIN: 063642-001

UNIT AND INTERMEDIATE MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

SECTION I. INTRODUCTION

1. SCOPE. This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit and Intermediate Maintenance of the Pumping Assembly. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. GENERAL. In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in this section. Items listed are shown on the associated illustration(s)/figure(s).


b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. Cross-references Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item number in alphanumeric sequence and cross-references NSN, FSCM and part number.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR Code (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

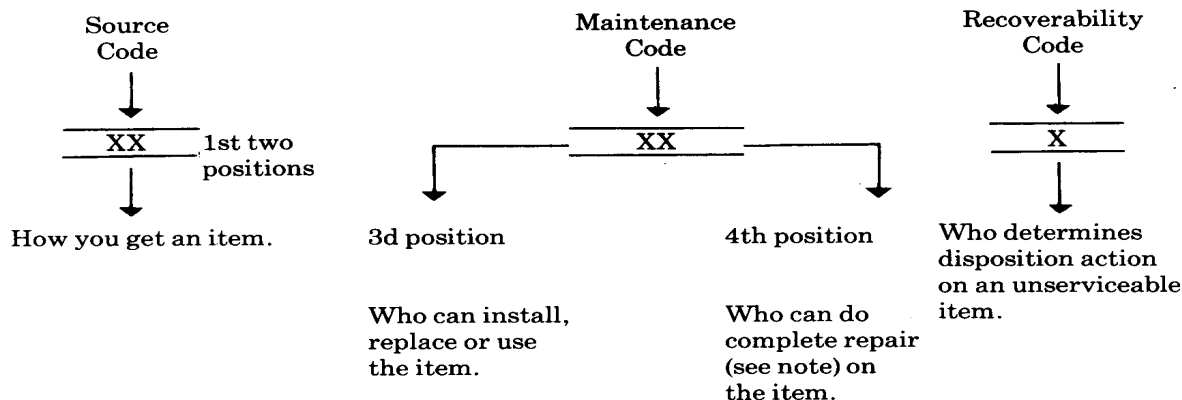

• Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how to get an item needed or maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows:

PA
PB
PC
PD
PE
PF
PG

Explanation

Stocked items; use the applicable NSN to request/requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3d position of the SMR code.

****NOTE:** Items coded PC are subject to deterioration.

Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the 3d position of the SMR code. The complete kit must be requisitioned and applied.

KD
KF
KB

Explanation

Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the DESCRIPTION and USABLE ON CODE (UOC) column and listed in the Bulk Material group of the repair parts list in this RPSTL. If the item is authorized to you by the 3d position code of the SMR code, but the source code indicates it is made at a higher level, order the item from the higher level of maintenance.

MO—Made at org/
AVUM category
MF—Made at DS/
AVUM category
MH—Made at GS
category
ML—Made at
Specialized
Repair Activity
(SRA)
MD—Made at Depot