

TECHNICAL MANUAL

**ORGANIZATIONAL AND DIRECT SUPPORT
MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST**

**TANK AND PUMP UNIT, LIQUID
DISPENSING FOR TRUCK MOUNTING
MIL DESIGN TANK AND PUMP UNITS
GASOLINE ENGINE DRIVEN
MODEL (97403)13217E7100
NSN 4930-00-426-9960
ELECTRIC MOTOR DRIVEN
MODEL (97403) 13217E7130
NSN 4930-01-120-7281**

Approved for public release; distribution is unlimited

* This manual supersedes TM 5-4930-230-23P, 12 December 1985, including all changes

HEADQUARTERS, DEPARTMENT OF THE ARMY

28 JANUARY 1992

TECHNICAL MANUAL

NO. 5-4930-230-23P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 28 January 1992

ORGANIZATIONAL AND DIRECT SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST

TANK AND PUMP UNIT, LIQUID DISPENSING
FOR TRUCK MOUNTING MIL DESIGN TANK AND PUMP UNITS
GASOLINE ENGINE DRIVEN
MODEL (97403) 13217E7100, NSN 4930-00-426-9960
ELECTRIC MOTOR DRIVEN
MODEL (97403) 13217E7130, NSN 4930-01-130-7281

Current as of 2 September 1992

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes, or if you know of a way to improve these procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MP, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. You may also submit your recommended changes by E-mail directly to <mpmt%avma28@st-louis-emh7.army.mil>. A reply will be furnished directly to you. Instructions for sending an electronic 2028 maybe found at the back of this manual immediately preceding the hard copy 2028.

	PAGE	FIGURE
Section I	Introduction	1
Section II	Repair Parts List	
Group 01	Pump Unit	
	Hose Assemblies, Elbows and Tee	1-1 1
	Inlet and Outlet	
	Electrical Accessories	2-1 2
	Junction Box Assembly	3-1 3
	Pump Assembly	4-1 4
	Motor and Base Assembly	5-1 5
	Filter Separator	6-1 6
	Liquid Distribution Manifold	7-1 7
	Static Discharge Reel	8-1 8
	Nozzle Assembly, Fuel Dispensing	9-1 9
	Reel Assembly, Fuel Dispensing	10-1 10
	Frame, Pump Unit	11-1 11
Group 02	Tanks	
	Tank Assembly, Tiedown Tank and Pump	12-1 12
	Manhole Cover (Model and 2)	13-1 13
Group 03	Bulk	Bulk-1
Section III	Special Tools List (Nonapplicable)	
Section IV	Cross Reference Indexes	
	National Stock Number Index	1-1
	Part Number Index	1-4
	Figure and Item Number Index.. . . .	1-12

*This manual spersedes TM 5-4930-230-23P, 12 December 1985, including all changes.

ORGANIZATIONAL AND DIRECT SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

SECTION I. INTRODUCTION

1. SCOPE. This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit, direct support, and general support maintenance of the Tank and Pump Unit, Liquid Dispensing. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. GENERAL. In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in this section. Items listed are shown on the associated illustration(s)/figure(s).

b. Section III. Special Tools List. A list of special tool is, special TM DE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. Cross-references Indexes. A list, in National Item identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item number in alphanumeric sequence and cross references NSN, CAGEC and part number.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items tailed out in the illustration.

b. SMR Code (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

