

TECHNICAL MANUAL

**ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND
SPECIAL TOOLS LISTS
FOR**

RADAR SET AN/FPN -40

(NSN 5840-00-752-0603)

HEADQUARTERS, DEPARTMENT OF THE ARMY

FEBRUARY 1979

TECHNICAL MANUAL }
NO. 11-5840-293-20P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 6 February 1979

ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

FOR

RADAR SET AN/FPN-40

(NSN 5840-00-752-0603)

Current as of 28 August 1978

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 located in the back of the manual. Simply tear out the self-addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Forms 2028-2 in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN.: DRSEL-ME-MQ, Fort Monmouth, NJ 07703.

In either case a reply will be furnished direct to you.

Table of Contents

SECTION		Page	Illus Figure
	I. Introduction	1	
	II. Repair parts list	5	
GROUP	00 Radar Set AN/FPN-40.....	5	1
	01 Control-Indicator Group OA-2664/FPN-40 (No parts authorized)		
	0101 Cabinet and rack assembly (No parts authorized)		
	010101 Cabinet, Electrical Equipment CY-2094/FPN-33	7	2
	010102 Rack, Electrical Equipment MT- 3476/FPN-40 (No parts authorized)		
	0102 Control, Radar Set C-2074A/FPN-33	11	3,4
	0103 Computer, Navigational CP-338/FPN-33	17	5
	010301 Chassis	19	6
	010302 Computer subassembly 78337 (No parts authorized)		
	010303 Computer subassembly 78339 (No parts authorized)		
	010304 Computer subassembly 78341 (No parts authorized)		
	010305 Computer subassembly 78343 (No parts authorized)		
	010306 Computer subassembly 78345 (No parts authorized)		
	010307 Computer subassembly 182460-1 (No parts authorized)		
	010308 Voltage regulator (No parts authorized)		
	0104 Indicator, AZ-EL Range IP-800/FPN-40	23	7
	010401 Cabinet, electrical, equipment (No parts authorized)		
	010402 Tilt meter assembly (No parts authorized)		
	010403 Ring assembly, Cathode ray (No parts authorized)		
	010404 Structure assembly (No parts authorized)		
	010405 Coil assembly, focus (No parts authorized)		
	010406 Indicator, position (No parts authorized)		
	010407 Indicator subassembly	25	8
	010408 Amplifier, Video AM-4339/FPN-40 (No parts authorized)		
	01040801 Amplifier subassembly 93233 (No parts authorized)		
	01040802 Amplifier subassembly 93234 (No parts authorized)		
	010409 Power Supply PP-607/GPN (No parts authorized)		
	01040901 Cable assembly, special purpose 40817 (No parts authorized)		
	0105 Panel, Power Distribution SB-1116A/FPN-40	29	9

*This manual supersedes TM 11-5840-293- 20P, 25 September 1971.

	0106 Synchronizer-Generator, Electronic Marker SN-386/FPN-40	33	10
	010601 Synchronizer converter 180099-1 (No parts authorized)		
	010602 Generator subassembly (No parts authorized)		
	010603 Timing control (No parts authorized)		
	010604 Countdown assembly, range mark (No parts authorized)		
	010605 Sweep generator (No parts authorized)		
	010606 Generator, precision range mark (No parts authorized)		
	010607 Oscillator, range mark (No parts authorized)		
GROUP	02 Power supply group, indicator	35	11
	0201 Cabinet, electrical equipment (No parts authorized)		
	020101 Rack assembly, electrical equipment (No parts authorized)		
	0202 Power Supply PP-1633/FPN-33	37	12
	020201 Power supply subassembly 78090 (No parts authorized)		
	020202 Power supply subassembly 78091 (No parts authorized)		
	03 Video Amplifier Group OA-2032/FPN-33 (No parts authorized)		
	0301 Cabinet, Electrical Equipment CY-2092/FPN-33 (No parts authorized)		
	0302 Video Amplifier AM-158/FPN-33	39	13
	030201 Chassis, electrical equipment	41	14
	030202 Amplifier subassembly 75188 (No parts authorized)		
	030203 Amplifier subassembly 80650 (No parts authorized)		
	030204 Amplifier subassembly 77525 (No parts authorized)		
	030205 Switch assembly (No parts authorized)		
	04 Radar Set Group OA-2665/FPN-40	45	15
	0401 Antenna Group OA-2666/FPN-40 (No parts authorized)		
	040101 Elevation Antenna AS-1080/FPN-40 (No parts authorized)		
	040102 Azimuth Antenna AS-1079/FPN-40 (No parts authorized)		
	040103 Antenna Pedestal Subassembly AB-642/FPN-40 (No parts authorized)		
	04010301 Cable assembly, power 73823 (No parts authorized)		
	04010302 Cable assembly, power 76544 (No parts authorized)		
	04010303 Cable assembly, power 95682 (No parts authorized)		
	04010304 Drive assembly, search (No parts authorized)		
	0401030401 Cable assembly, special purpose 89138 (No parts authorized)		
	0401030402 Actuator, scan (No parts authorized)		
	0401030403 Actuator antenna-tilt (No parts authorized)		
	0401030404 Gear box assembly, search drive (No parts authorized)		
	040104 Antenna Pedestal Subassembly AB-644/FPN-40 (No parts authorized)		
	04010401 Cable assembly power 95683 (No parts authorized)		
	04010402 Cable assembly, power 78780 (No parts authorized)		
	04010403 Drive assembly, elevation (No parts authorized)		
	0401040301 Actuator, antenna servo (Same as group 0401030403)		
	0401040302 Actuator assembly, 7-31 degrees (No parts authorized)		
	04010403021 Motor, actuator (No parts authorized)		
	040105 Antenna Pedestal Subassembly AB-643/FPN-40 (No parts authorized)		
	04010501 Cable assembly, power 73822 (No parts authorized)		
	04010502 Cable assembly, power 73820 (No parts authorized)		
	04010503 Cable assembly, power 76543 (No parts authorized)		
	04010504 Terminal board assembly (No parts authorized)		
	04010505 Wiring harness (No parts authorized)		
	04010506 Drive assembly, precision (No parts authorized)		
	0401050601 Window assembly, observation (No parts authorized)		
	0401050602 Dash pot assembly (No parts authorized)		
	0401050603 Gear box assembly, precision drive (No parts authorized)		
	04010506031 Cable assembly, power 76560 (No parts authorized)		
	04010507 Drive assembly, antenna mount (No parts authorized)		
	0401050701 Cable assembly, power 73221 (No parts authorized)		
	0402 Receiver-Transmitter Group OA-2667/FPN-40 (No parts authorized)		
	040201 Radar Set Group Case CY-211/FPN-33 (No parts authorized)		
	040202 Cabinet, Electrical Equipment CY-2830/FPN-40 (No parts authorized)		
	04020201 Cable assembly, power 71496 (No parts authorized)		
	040203 Control Monitor C-2124A/FPN-33	47	16
	040204 Power Supply PP-1670/FPN-33	49	17
	040205 Power Supply PP-2489/FPN	51	18

		Page	Illus Figure
	040206 Receiver, Radar R-981/FPN-40	53	19
	04020601 Chassis, electrical equipment (No parts authorized)		
	04020602 Amplifier assembly intermediate frequency (No parts authorized)		
	04020603 Control assembly STC (No parts authorized)		
	04020604 Synchronizer assembly (No parts authorized)		
	040207 Transmitter, RadarT-749A/FPN (No parts authorized)		
	04020701 Transmitter subassembly 75049 (No parts authorized)		
	04020702 Transmitter subassembly 85800 (No parts authorized)		
	04020703 Oscillator, Pulse Delay O-1284/FPN (No parts authorized)		
	040208 Wiring installation (No parts authorized)		
	040209 Video Amplifier AM-1577A/FPN-33 (No parts authorized)		
	04020901 Chassis electrical equipment (No parts authorized)		
	04020902 Amplifier subassembly 75086 (No parts authorized)		
	04020903 Amplifier subassembly 75116 (No parts authorized)		
	04020904 Amplifier subassembly 75124 (No parts authorized)		
	040210 Cable installation, transmitter 73833 (No parts authorized)		
	04021001 Cable assembly, power 73450 (No parts authorized)		
GROUP	05 Cable installation, local (No parts authorized)		
	0501 Cable assembly, power (W4401) (No parts authorized)		
	0502 Cable assembly, power (W4402) (No parts authorized)		
	0503 Cable assembly, power (W4403) (No parts authorized)		
	0504 Cable assembly, power (W4415) (No parts authorized)		
	0505 Cable assembly, power (W4416) (No parts authorized)		
	06 Tiedowns	55	20
	07 Telescope (No parts authorized)		
	08 Simulator Radar Target SM- 104/GP (No parts authorized)		
SECTION	III. Special tools list (Not applicable)		
	IV. National stock number and part number index	56	

SECTION I

INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational maintenance of the AN/FPN-40. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item. number sequence.

b. *Section II. Special Tools List.* Not applicable.

c. *Section IV. National Stock Number and Part Number Index.* A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphanumeric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. *Illustration.* This column is divided as follows:
(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. *Source, Maintenance, and Recoverability (SMR) Codes.*

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform

SMR Code format as follows:

Code	Definition
PA--	Item procured and stocked for anticipated or known usage.
PD--	Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.
XD--	A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code	Application/Explanation
C--	Crew or operator maintenance performed within organizational maintenance.
O--	Support item is removed, replaced, used at the organizational level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes: