

TECHNICAL MANUAL

DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
FOR

RADAR SET AN/FPN-40

(NSN 5840-00-752-0603)

HEADQUARTERS, DEPARTMENT OF THE ARMY

APRIL 1979

TECHNICAL MANUAL }
No. 11-5840-293-34P }

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 10 April 1979

**DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
FOR
RADAR SET AN/FPN-40
(NSN 5840-00-752-0603)**

Current as of 25 August 1978

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 located in the back of the manual. Simply tear out the self addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Form 2028-2 in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, NJ 07703.

In either case a reply will be furnished direct to you.

Table of Contents

		Page	Illus Figure
SECTION I.	Introduction	1	
II.	Repair parts list	5	
Group 00	Radar Set AN/FPN-40	5	1
01	Control-Indicator Group OA-2664/FPN-40	9	2
	0101 Cabinet and rack assembly	11	3
	010101 Cabinet, Electrical Equipment CY-2094/FPN-33	13	4
	010102 Rack, Electrical Equipment MT-3476/FPN-40	17	5, 6
	0102 Control, Radar Set C-2074A/FPN-33	27	7-10
	0103 Computer, Navigational CP-338/FPN-33	41	11
	010301 Chassis	45	12
	010302 Computer subassembly 78337	47	13
	010303 Computer subassembly 78339	49	14
	010304 Computer subassembly 78341	53	15
	010305 Computer subassembly 78343	57	16
	010306 Computer subassembly 78345	61	17
	010307 Computer subassembly 182460-1	63	18
	010308 Voltage regulator	65	19
	0104 Indicator, AZ-EL Range IP-800/FPN-40	69	20
	010401 Cabinet, electrical equipment	73	21
	010402 Tilt meter assembly	75	22
	010403 Ring assembly, cathode ray	77	23
	010404 Structure assembly	79	24
	010405 Coil assembly, focus	83	25
	010406 Indicator, position	85	26
	010407 Indicator subassembly	89	27
	010408 Amplifier, Video AM-4339/FPN-40	91	28
	01040801 Amplifier subassembly 93233	93	29
	01040802 Amplifier subassembly 93234	95	30
	010409 Power Supply PP-607/GPN	99	31

*This manual supersedes TM 11-5840-293-34P, 25 September 1971.

		Page	Illus Figure
	01040901 Cable assembly, special purpose 40817	103	32
	0105 Panel, Power Distribution SB- 116A/FPN-40	107	33
	0106 Synchronizer-Generator, Electronic Marker SN-386/FPN-40.....	115	34-40
	010601 Synchronizer converter 180099-1 (No parts authorized)		
	010602 Generator subassembly	137	41
	010603 Timing control.....	141	42
	010604 Countdown assembly, range mark	145	43
	010605 Sweep generator	149	44
	010606 Generator, precision range mark	153	45
	010607 Oscillator, range mark	157	46
02	Power supply group, indicator	161	47
	0201 Cabinet, electrical equipment	165	48
	020101 Rack assembly, electrical equipment	169	49
	0202 Power Supply PP-1633/FPN-33	177	50
	020201 Power supply subassembly 78090.....	183	51
	020202 Power supply subassembly 78091.....	185	52
03	Video Amplifier Group OA-2032/FPN-33	187	53-57
	0301 Cabinet, Electrical Equipment CY-2092/FPN-33	199	58
	0302 Video Amplifier AM-1578/FPN-33	205	59
	030201 Chassis, electrical equipment	211	60
	030202 Amplifier subassembly 75188	215	61
	030203 Amplifier subassembly 80650	217	62
	030204 Amplifier subassembly 77525	219	63
	030205 Switch assembly	221	64
04	Radar Set Group OA-2665/FPN-40	225	65,66
	0401 Antenna Group OA-2666/FPN-40	233	67
	040101 Elevation Antenna AS-1080/FPN-40	237	68-71
	040102 Azimuth Antenna AS-1079/FPN-40.....	249	72-74
	040103 Antenna Pedestal Subassembly AB-642A/FPN-40	257	75
	04010301 Cable assembly, power 73823	259	76
	04010302 Cable assembly, power 76544	261	77
	04010303 Cable assembly, power 95682	263	78
	04010304 Drive assembly, search	269	79
	0401030401 Cable assembly, special purpose 89138	277	80
	0401030402 Actuator, scan	279	81
	0401030403 Actuatorantenna-tilt	283	82,83
	0401030404 Gear box assembly, search drive.....	289	84
	040104 Antenna Pedestal Subassembly AB-644/FPN-40	293	85
	04010401 Cable assembly, power 95683	295	86
	04010402 Cable assembly, power 78780	297	87
	04010403 Drive assembly, elevation	301	88,89
	0401040301 Actuator, antenna servo (Same as group 0401030403)		
	0401040302 Actuator assembly, 7-31 degrees	311	90
	04010403021 Motor, actuator	315	91
	040105 Antenna Pedestal Subassembly AB-643/FPN-40	319	92-94
	04010501 Cable assembly, power 73822	327	95
	04010502 Cable assembly, power 73820	329	96
	04010503 Cable assembly, power 76543	331	97
	04010504 Terminal board assembly	333	98
	04010505 Wiring harness	335	99
	04010506 Drive assembly, precision	339	100
	0401050601 Window assembly, observation	343	101
	040105060 Dash pot assembly.....	345	102
	0401050603 Gear box assembly, precision drive.....	349	103,104
	04010506031 Cable assembly, power 76560	359	105
	04010507 Drive assembly, antenna mount	361	106-109
	0401050701 Cable assembly, power 73221	373	110
	0402 Receiver-Transmitter Group OA-2667/FPN-40	377	111
	040201 Radar Set Group Case CY-2111/FPN-33	383	112,113
	040202 Cabinet, Electrical Equipment CY-2830/FPN-40	393	114,115
	04020201 Cable assembly, power 71496	401	116
	040203 Control Monitor C-2124A/FPN-33	409	117
	040204 Power Supply PP-1670/FPN-33'	423	118
	040205 Power Supply PP-2489/FP	433	119
	040206 Receiver, Radar R-981/FPN-40	443	120

		Page	Illus Figure
	04020601 Chassis, electrical equipment	451	121
	04020602 Amplifier assembly intermediate frequency	455	122
	04020603 Control assembly STC	461	123
	04020604 Synchronizer assembly	467	124
	040207 Transmitter, Radar T-749A/FPN	477	125,126
	04020701 Transmitter subassembly 75049	485	127
	04020702 Transmitter subassembly 85800	485	127
	04020703 Oscillator, Pulse Delay 0-1284/FPN	489	128
	040208 Wiring installation	493	129
	040209 Vide6 Amplifier AM-1577/FPN-33	497	130
	04020901 Chassis electrical equipment	501	131
	04020902 Amplifier subassembly 75086	503	132
	04020903 Amplifier subassembly 75116	505	133
	04020904 Amplifier subassembly 75124	507	134
	040210 Cable installation, transmitter 73833	509	135
	04021001 Cable assembly, power 73450	509	135
05	Cable installation, local	511	136
	0501 Cable assembly, power (W4401)	513	137
	0502 Cable assembly, power (W4402)	513	137
	0503 Cable assembly, power (W4403)	513	137
	0504 Cable assembly, power (W4415)	513	137
	0505 Cable assembly, power (W4416)	513	137
06	Tiedowns	515	138
07	Telescope (No parts authorized)		
08	Simulator Radar Target SM- I 04/GP (No parts authorized)		
SECTION III.	Special tools list (Not applicable)		
IV.	National stock number and part number index	516	

SECTION I INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of direct support and general support maintenance of the AN/FPN-40. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. Special Tools List. Not applicable.

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphanumeric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration. This column is divided as follows:

(1) Figure number. Indicates the figure number of the illustration on which the item is shown.

(2) Item number. The number used to identify item called out in the illustration.

b. Source, Maintenance, and Recoverability (SMR) Codes.

(1) Source code. Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

<i>Code</i>	<i>Definition</i>
PA	-Item procured and stocked for anticipated or known usage.

PD	-Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.
----	---

XD-A	support item that is not stocked. When required, item will be procured through normal supply channels.
------	--

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) Maintenance code. Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

<i>Code</i>	<i>Application/Explanation</i>
C	-Crew or operator maintenance performed within organizational maintenance.
O	--Support item is removed, replaced, used at the organizational level.
F	--Support item is removed, replaced, used at the direct support level.
H	--Support item is removed, replaced, used at the general support level.
D	--Support items that are removed, replaced, used at depot, mobile depot, specialized repair activity only.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

<i>Code</i>	<i>Application/Explanation</i>
F	-The lowest maintenance level capable of complete repair of the support item is the direct support level.
H	-The lowest maintenance level capable of complete repair of the support item is the general support level.
D	-The lowest maintenance level capable of complete repair of the support item is the depot level.
Z	-Nonreparable. No repair is authorized.

(3) Recoverability code. Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

<i>Recoverability codes</i>	<i>Definition</i>
Z	-Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.