
TECHNICAL MANUAL

**ORGANIZATIONAL MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LISTS**

FOR

RADAR SETS

AN/PPS-5 (NSN 5840-00-168-15671)

AN/PPS-5A (NSN 5840-00-453-5662)

AND

AN/PPS-5B (NSN 5840-01-009-4939)

HEADQUARTERS, DEPARTMENT OF THE ARMY

NOVEMBER 1978

ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST
FOR
RADAR SETSAN/PPS-5 (NSN 5840-00-168-1567)
AN/PPS-5A (NSN 5840-00-453-5662)
AND
AN/PPS-5B (NSN 5840-01-009-4939)*Current as of 12 June 1978***REPORTING OF ERRORS**

You can improve this manual by recommending improvements using DA Form 2028-2 located in the back of the manual. Simply tear out the self addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Form 2028-2 in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, NJ 07703.

In either case a reply will be furnished direct to you.

Table of Contents

			Page	Illus Figure
SECTION	I.	Introduction	1	
	II.	Repair parts list	5	
GROUP	00	Radar Set AN/PPS-5	5	1
	01	Receiver-Transmitter, Radar RT-692/PPS-5	7	2
		0101 T/R assembly (No parts authorized)		
		010101 Local oscillator, R-T (No parts authorized)		
		010102 IF preamplifier (No parts authorized)		
		010103 AFC preamplifier (No parts authorized)		
		0102 IF amplifier (No parts authorized)		
		0103 Amplifier, box car and audio (No parts authorized)		
		0104 Gate generator (No parts authorized)		
		0105 Modulator assembly (No parts authorized)		
		0106 Converter assembly (No parts authorized)		
		0107 AFC amplifier (No parts authorized)		
		0108 Motor control assembly (No parts authorized)		
		0109 R-T subassembly	11	3
		010901 Eletronic component assembly (E3108) (No parts authorized)		
		010902 Relay control (No parts authorized)		
GROUP		010903 Range drive assembly (No parts authorized)		
		010904 Enclosure, receiver (No parts authorized)		
		010905 Interlock panel assembly (No parts authorized)		
		0110 Drive Antenna AB-992/PPS-5	15	4
		011001 Azimuth drive (No parts authorized)		
		011002 Wiring harness (No parts authorized)		
		011003 Counter assembly, azimuth (No parts authorized)		
		011004 Commutator (No Parts authorized)		
	02	Control-Indicator Radar C-4610/PPS-5	17	5

• This manual supersedes so much of TM 11-5840-298-12, 1 June 1967, including Change 8, 6 November 1975 as pertains to repair parts and special tools list.

GROUP	0201	A-display assembly (No parts authorized)		
	0202	B-display assembly (No parts authorized)		
	0203	Power converter (No parts authorized)		
	0204	Amplifier assembly, azimuth servo (No parts authorized)		
	020401	Amplifier subassembly servo (No parts authorized)		
	020402	Electronic component assembly (No parts authorized)		
	020403	Generator subassembly azimuth (No parts authorized)		
	0205	RGF assembly (No parts authorized)		
	020501	RGF subassembly (No parts authorized)		
	0206	Range amplifier (No parts authorized)		
	0207	Counter assembly, azimuth (No parts authorized)		
	0208	Extension assembly, range (No parts authorized)		
	0209	Bezel assembly	19	6
	0210	Component board (E3602) (No Parts authorized)		
	03	Power Supply PP-4450/PF-5, PP-4450/PPS-5 (No parts authorized)		
	04	Column Assembly, Tripod MX-7565/PPS-5 (No parts authorized)		
	05	Tripod, Radar MT-2958/PPS-5	21	7
	06	Reflector, Antenna AS-2023/PPS-5 (No parts authorized)		
	07	Horn, Waveguide AS-2024PPS-5 (No parts authorized)		
	08	Headset, Electrical H-226/PPS-5 (No parts authorized)		
	09	Cable Assembly, Special Purpose, Electrical CX-12004/PP8-5 (No parts authorized)		
G R O U P	10	Telescope (No parts authorized)		
	00	Radar Set AN/PPS-5A	23	8-10
	01	Receiver-Transmitter, Radar RT-965/PPS-5A (No parts authorized)		
	0101	T/R assembly (No parts authorized)		
	010101	Local oscillator R-T (No parts authorized)		
	010102	IF preamplifier (No parts authorized)		
	010103	AFC preamplifier (No parts authorized)		
	0102	IF amplifier (No parts authorized)		
	0103	Amplifier, box car and audio (No parts authorized)		
	0104	Gate generator (No parts authorized)		
	0105	Modulator assembly (No parts authorized)		
	0106	Converter assembly (No parts authorized)		
	0107	AFC amplifier (No parts authorized)		
	0108	Motor control assembly (No parts authorized)		
	0109	R-T subassembly	31	11
	010901	Electronic component assembly (E3108) (No parts authorized)		
	010902	Relay control (No parts authorized)		
GROUP	010903	Range drive assembly (No parts authorized)		
	010904	Enclosure, receiver (No parts authorized)		
	010905	Interlock panel assembly (No parts authorized)		
	0110	Drive, Antenna AB-992A/PPS-5	33	12-14
	011001	Azimuth drive (No parts authorized)		
	011002	Wiring harness (No parts authorized)		
	011003	Counter assembly, azimuth (No parts authorized)		
	011004	Commutator (No Parts authorized)		
	02	Control-Indicator, Radar C-4670A/PPS-5	39	15-17
	0201	A display assembly (No parts authorized)		
	0202	B-display assembly	45	18
	0203	Power converter (No parts authorized)		
	0204	Amplifier assembly azimuth servo (No parts authorized)		
	020401	Amplifier subassembly servo (No parts authorized)		
	020402	Electronic component assembly (No parts authorized)		
		Generator subassembly azimuth (No parts authorized)		
GROUP	0205	RGF assembly (No parts authorized)		
	020501	RGF subassembly (No parts authorized)		
	0206	Range amplifier (No parts authorized)		
	0207	bunter assembly, azimuth (No parts authorized)		
	0208	Extension assembly, range (No parts authorized)		
	0209	Bezel assembly	47	19
	0210	Component board (E3602) (No parts authorized)		
	03	Power Supply PP-4450B/PPS-5 (No parts authorized)		
	04	Column Assembly, Tripod MX-7565A/PPS-5 (No parts authorized)		
	05	Tripod Radar MT-2958A/PPS-5 (No parts authorized)		
	06	Reflector, Antenna AS-2023/PPS-5 (No parts authorized)		

		Page	Illus Figure
G ROUP	07	Horn, Waveguide AS-2413/PPS-5A (No parts authorized)	
	08	Headset, Electrical H-226A/PPS-5 (No parts authorized)	
	09	Cable Assembly, Special Purpose, Electrical CX-12004/PPS-5 (No parts authorized)	
	10	Telescope (No parts authorized)	
	11	Cable Assembly Special Purpose, Electrical, Branched CX-12068A/PPS-5 (No parts authorized)	
	00	Radar Set AN/PPS-5B	49 20,21
	01	Receiver-Transmitter, Radar RT-965B/PPS-5A	53 22
	0101	T/R assembly (No parts authorized)	
	010102	IF preamplifier (No parts authorized)	
	010103	AFC preamplifier (No parts authorized)	
	010104	Voltage regulator (No parts authorized)	
	0102	IF amplifier (No parts authorized)	
	0103	Amplifier, box car and audio (No parts authorized)	
	0104	Gate generator (No parts authorized)	
	0105	Modulator assembly (No parts authorized)	
	0106	Converter assembly (No parts authorized)	
	0107	AFC amplifier (No parts authorized)	
	0108	Motor control assembly (No parts authorized)	
GROUP	0109	R-Tsubassembly	55 23-25
	010901	Electronic component assembly (E3108) (No parts authorized)	
	010902	Relay control (No parts authorized)	
	010903	Range drive assembly (No parts authorized)	
	010904	Enclosure, receiver (No parts authorized)	
	010905	Interlock panel assembly (No parts authorized)	
	0110	Drive, Antenna AB-992B/PPS-5 (No parts authorized)	
	011001	Azimuth drive (No parts authorized)	
	011002	Wiring harness (No parts authorized)	
	011003	Counter assembly, azimuth (No parts authorized)	
	011004	Commutator (No Parts authorized)	
	02	Control-Indicator, Radar C-4610B/PPS-5	61 26
	0201	A-display assembly (No parts authorized)	
		B-display assembly (No parts authorized)	
	0203	Power converter (No parts authorized)	
GROUP	0204	Amplifier assembly azimuth servo (No parts authorized)	
	020401	Amplifier subassembly servo (No parts authorized)	
	020402	Electronic component assembly (No parts authorized)	
	020403	Generator subassembly azimuth (No parts authorized)	
	0205	RGF assembly (No parts authorized)	
	020501	RGF subassembly (No parts authorized)	
	0206	Range amplifier (No parts authorized)	
	0207	Counter assembly, azimuth (No parts authorized)	
	0208	Extension assembly, range (No parts authorized)	
	0209	Bezel assembly (No parts authorized)	
	0210	Component board (E3602) (No Parts authorized)	
	03	Power Supply PP-4450B/PPS-5 and PP-4450C/PPS-5 (No parts authorized)	
	04	Column Assembly, Tripod MX-7565B/PPS-5	63 27
	05	Tripod Radar MT-2958A/PPS-5 (No parts authorized)	
	06	Reflector, Antenna AS-2023/PPS-5 (No parts authorized)	
G ROUP	07	Horn, Waveguide AS-2413/PPS-5A (No parts authorized)	
	08	Headset, Electrical H-251/U (No parts authorized)	
	09	Cable assembly, Special Purpose, Electrical CX-12004/PPS-5 (No parts authorized)	
	10	Telescope	65 28
	11	Cable Assembly, Special Purpose, Electrical, Branched CX-12068A/PPS-5 (No parts authorized)	
SECTION	III.	Special tools list (Not applicable)	
	IV.	National stock number and part number index	66

SECTION I INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational maintenance of the AN/PPS-5, AN/PPS-5A, AN/PPS-5B. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. Special Tools List. Not applicable.

c. Section IV. National Stock Number and Part Number index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration. This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. Source, Maintenance, and Recoverability (SMR) Codes.

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows

<i>code</i>	<i>Definition</i>
PA-Item procured and stocked for anticipated or known usage.	
PD-Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.	
XD-A support item that is not stocked. When required, item will be procured through normal	

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

<i>Code</i>	<i>Application/Explanation</i>
O	-Support item is removed, replaced, used at the organizational level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

<i>Code</i>	<i>Application/Explanation</i>
O	-The lowest maintenance level capable of complete repair of the support item is the organizational level.
F	-The lowest maintenance level capable of complete repair of the support item is the direct support level.
H	-The lowest maintenance level capable of complete repair of the support item is the general support level.
D	-The lowest maintenance level capable of complete repair of the support item is the depot level.
Z	-Nonreparable. No repair is authorized.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows

<i>Recoverability codes</i>	<i>Definition</i>
Z	-Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.
F	-Reparable item. When uneconomically reparable, condemn and dispose at the direct support level.