

TM 11-5840-298-34P-2

TECHNICAL MANUAL

**DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
FOR**

**RADAR SET AN/PPS-5B
(NSN 5840-01-009-4939)**

This copy is a reprint which includes current
pages from Change 1.

HEADQUARTERS, DEPARTMENT OF THE ARMY
OCTOBER 1977

TECHNICAL MANUAL

TM 11-5840-298-34P-2

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC 24 October 1977

**DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
FOR**

RADAR SET AN/PPS-5B (NSN 5840-01-009-4939)

Basic Manual Current as of 27 May 1977
Change No. 1 Current as of 1 February 1984

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA 2028-2 located in the back of this manual direct to Commander, US Army Communications-Electronics Command and Fort Monmouth, ATTN: DRSEL-ME-MP, Fort Monmouth, New Jersey 07703. In either case, a reply will be furnished direct to you.

Table of Contents

SECTION		Page	<i>Illus Figure</i>
	I. Introduction	1	
	II. Repair parts list	5	
Group	00 Radar Set AN/PPS-53	5	1
	Case, Radar Set CY-3872A/PP-5	5	2
	Case, cover assembly	7	3
	Adapter, mount, radar set	11	4
	Battery Assembly BB-643A/PPS-5	11	5
	Battery box enclosure	11	6
	Battery box enclosure, left side	16	7
	Cable assembly	16	8
	01 Receiver-Transmitter, Radar RT-965B/PPS-5A.	19	9
	Receiver-Transmitter, Radar RT-965B/PPS-5A, access door open. . .	19	10
	Receiver-Transmitter, Radar RT-965B/PPS-5A, inside access door. . .	19	11
	00 Receiver-Transmitter, Radar RT-965B/PPS-5A, inside access door. . .	22.1	11A
	0101 T-R assembly (block 100).	23	12
	T-R assembly (block 100), left-side view	23	13
	T-R assembly (block 100), right-side view	16	14
	T-R assembly (block 100), front view	26	15
	Wiring harness. T-R assembly.	30	16
	010101 Local oscillator R-T (No parts authorized)		
	010102 If. preamplifier (block 200-1).	32	17
	If. preamplifier (block 200-1)	32.1	17A
	010103 Afc preamplifier (block 200-2).	34	18
	010104 Voltage regulator	36	19
	Afc preamplifier (block 200-2).	36.1	18A

		Page	Illus Figure
Group	0102	If. amplifier (block 300)	38 20
		If. amplifier (block 300), bottom view, turned 900	38 21
		If./afc amplifier assembly (block 300/800)	42.1 21A
		If./afc amplifier assembly (block 300/800) top cover removed)	42.1 21B
		If./afc amplifier assembly (block 300/800) (bottom view with mounting plate raised.	42.1 21C
		If amplifier (block 300-2)	42.1 21D
	0103	Amplifier, boxcar and audio (block 400).	44 22
		Amplifier, boxcar and audio (block 400), with cover removed	44 23
	0104	Gate generator (block 500)	49 24
		Gate generator (block 500) bottom view	49 25
		Printed circuit board assembly No. 1.	49 26
	0105	Modulator assembly (block 600)	55 27
		Modulator assembly (block 600) rear view	55 28
		Modulator assembly (block 600), side view	55 29
	0106	Converter assembly (block 700)	61 30
		Converter assembly (block 700), top view.	61 31
		Converter assembly (block 700), rear view	61 32
		Converter assembly (block 700), top rear view, with electronic component assembly A702 raised	65 33
		Converter assembly (block 700), bottom view	65 34
		Chassis, converter	68 35
	0107	Afc amplifier (block 800)	70 36
		Afc amplifier (block 800), rearview.	70 37
		Afc amplifier (block 800)	76.1 37A
	0108	Motor control assembly (block 900).	78 38
		Motor control assembly (block 900), left-side view	78 39
		Printed wiring board No. laassembly	78 40
	0109	R-T subassembly (block 3100)	86 41
		R-T subassembly (block 3100), left front view	86 42
		R-T subassembly (block 3100), inside access door	89 43
		R-T subassembly (block 3100), access door open, partial view	91 44
		R-T subassembly (block 3100), access door open	91 45
		R-T subassembly (block 3100), left side control panel removed	94 46
		Wiring harness, R-T subassembly (block 3100).	94 47
	010901	Electronic component assembly E3108	99 48
	010902	Relay control (block 1200)	100 49
	010903	Range drive assembly (block 1300)	103 50
		Range drive assembly (block 1300)	103 51
		Gear housing assembly, range driver.	103 52
	010904	Enclosure, receiver (block 3200)	107 53
		Enclosure, receiver (block 3200), front view	107 54
		Enclosure, receiver (block 3200), access door removed	109 55
	010905	Interlock panel assembly (block 3300)	112 56
		Interlock panel assembly (block 3300), bottom view	112 57
	0110	Drive, Antenna AB--22B/PPS-5 (block 1000)	115 58
		Drive, Antenna AB-922B/PPS-5 (block 1000), right front view	115 59
		Drive, Antenna AB-922B/PPS-5 (block 1000), front view, cover removed	118 60
		Drive, Antenna AB-922B/PPS-5 (block 1000), left rear view	118 61
		Drive, Antenna AB-922B/PPS-5 (block 1000), right rear view	120 62
		Drive, Antenna AB-922B/PPS-5 (block 1000), rear view. window assembly removed	123 63
		Elevation assembly, antenna drive.	123 64
		Spindle assembly, antenna drive	125 65
	011001	Azimuth drive (block 1500)	129 66
		Azimuth drive (block 1500), lower half	129 67
	011002	Wiring harness(block 1800)	132 68
	011003	Counter assembly azimuth (block 1600)	134 69
	011004	Commutator (block 1700)	138 70

			<i>Page</i>	<i>Illus Figure</i>
Group	02	Control-Indicator, Radar C-4610B/PPS-5	142	71
		Control-Indicator, Radar C4610B/PPS-5, right rear view	142	72
		Control-Indicator, Radar C-4610B/PPS-5, rear view	144	73
		Control-indicator subassembly (block 3600), top view	144	74
		Control-indicator subassembly (block 3600), front view	147	75
		Control-indicator subassembly (block 3600), bottom view	147	76
		Control-indicator subassembly (block 3600), left side view	150	77
		Control panel, front view	152	78
		Control panel, rear view	152	79
		Control-indicator subassembly (block 3600), right side view	156	80
		Control panel, front view	156	81
		Control panel, rear view	156	82
		Electronic component assembly E3615, top view.	156	83
		Electronic component assembly E3615, bottom view	160	84
		Control-indicator subassembly (block 3600), rear view	162	85
		Frame, control-indicator, top view.	166	86
		Frame, control-indicator, side view.	166	87
		Frame, control-indicator, rearview.	166	88
		Wiring harness, control-indicator, front view	166	89
		Wiring harness, control-indicator, side view	170	90
		Wiring harness, control-indicator, rear view	170	91
	0201	A-display (block 2100)	174	92
	0202	B-display (block 2200)	178	93
	0203	Power converter (block 2300)	182	94
		Power coverter (block 2300), right-side view	182	95
		Power conveter (block 2300), right-side view, with A2303 removed	184	96
	0204	Amplifier assembly, azimuth servo (block 2400)	182	97
		Amplifier assembly, azimuth servo (block 2400), right rear view	188	98
		Amplifier assembly .azimuth servo(block 2400), left rear view	191	99
	020401	Amplifier subassembly, servo	192	100
	020402	Electronic component assembly	194	101
		Electronic component assembly, bottom view	195	102
	020403	Generator subassembly, azimuth	196	103
	0205	Rgf assembly (block 2700)	198	104
		Rgf assembly (block 2700), bottom view.	198	105
	020501	Rgf assembly (block 2600).	202	106
		Rgf subassembly (block 2601 -1).	202	107
		Rgf subassembly (block 2601 -2).	203	108
	0206	Range amplifier (block 2900)	207	109
	0207	Counter assembly .azimuth (block 2800)	209	110
	0208	Extension assembly .range (block 2000)	212	111
	0209	Bezel assembly (block 3800)	215	112
		Bezel assembly (block 3800), rearview	217	113
	0210	Component board E3600.	219	114
		Component Lmard E3602, bottom view.	220	115
	03	Power Supply PP-4450C/PPS-5 (block 3000).	221	116
		Power Supply PP4450C/PPS-5 (block 3000), cover removed	221	117
		Electronic component assembly E3001.	223	118
		Power Supply PP-4450C/PPS-5 (block 3000), partial view, electronic component assembly E3001 raised	226	119
	04	Column Assembly .Tripod MX-7565B/PPS5 (block 7000).	228	120
		Retainer assembly. column	229	121
	05	Tripod. Radar MT-2958/A/PPS-5 (block 7100)	231	122
	06	Reflector. Antenna AS-2023/PPS--5 (No parts authorized)		
	07	Horn, Waveguide AS-2413/PPS-5A (block 7400)	234	123
	08	Headset. Electrical. H-251/U (No parts authorized)		
	09	Cable Assembly, Special Purpose. Electrical CX-12004B/PPS-5 (block 77 W)	235	124
	10	Telescope (block 7500)	236	125
	11	Cable Assembly .Special Purpose. Electrical. Branched CX-12068A/PPS5	237	126
SECTION III		Special tools list (not applicable)		
IV		National stock number and part number index	239	

SECTION I

INTRODUCTION

1. Scope

This manual lists repair parts required for performance of direct support, general support, and depot maintenance of the AN/PPS-5B.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II, Repair Parts List. A list of repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending numerical sequence, with the parts in each group listed in figure and item number sequence.

b. Section III, Special Tools List. Not applicable.

c. Section IV, National Stock Number and Part Number Index. A list, in ascending numerical sequence, of all National stock numbers appearing in the listings, followed by a list, in alphabetic sequence, of all part numbers appearing in the listings. National stock number and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

The following provides an explanation of columns found in the tabular listings

a. Illustration. This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration in which the item is shown.

(2) *Item number.* The number used to identify each item called out in the illustration.

b. Source, Maintenance, and Recoverability Codes (SMR).

(1) *Source code.* Source codes are assigned to support items to indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code	Definition
PA—	Item procured and stocked for anticipated or known usage.
PD—	Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues

Code

Definition

or outfittings. Not subject to automatic replenishment.

AF— Item to be assembled at direct support maintenance level.

XA—Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.

XD—A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source-coded above, except those coded XA, XD, and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code	Application/Explanation
F—	Support item is removed, replaced, used at the direct support level.
H—	Support item is removed, replaced, used at the general support level.
D—	Support items that are removed, replaced, used at depot, mobile depot, specialized repair activity only,

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Code	Application/Explanation
O—	The lowest maintenance level capable of complete repair of the support item is the organizational level.