

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

DS, GS, and Depot Maintenance Repair Parts and Special Tool Lists SIMULATOR, RADAR SIGNAL SM-472/TPX-44

Current as of 18 February 1970

Headquarters, Department of the Army, Washington, D. C.
24 April 1970

	Paragraph	Page
Section I. INTRODUCTION		
Scope	1	i
General	2	i
Explanation of columns	3	i
Special information	4	iii
Location of repair parts	5	iii
Federal supply codes for manufacturers	6	iv
Recommendations for maintenance publication improvement	7	iv
II. REPAIR PARTS FOR DIRECT SUPPORT, C GENERAL SUPPORT, AND DEPOT MAINTENANCE		
III. SPECIAL TOOLS, TEST, AND SUPPORT EQUIPMENT FOR DIRECT SUPPORT, GENERAL SUPPORT, AND DEPOT MAINTENANCE (Not applicable)		
IV. INDEX - REFERENCE DESIGNATION CROSS-REFERENCE TO PAGE NUMBER NUMBER OR REFERENCE DESIGNATION		12
V. INDEX - REFERENCE DESIGNATION CROSS-REFERENCE TO PAGE NUMBER		18

SECTION I. INTRODUCTION

1. Scope

This manual lists repair parts, and special tools required for the performance of direct support, general support, and depot maintenance of the Simulator, Radar Signal SM-472/TPX-44.

2. General

This repair parts and special tools list is divided into the following sections:

- Repair Parts - Section II.* A list of repair parts authorized for the performance of maintenance at the direct support, general support, and depot level.
- Special Tools, Test and Support Equipment - Section III.* Not applicable.
- Index - Federal Stock Number Cross-Reference to Figure and Item Number or Reference Designation*

— *Section IV.* A list of Federal stock numbers in ascending numerical sequence followed by a list of reference numbers in ascending alphanumeric sequence, cross-referenced to illustration figure number and reference designation.

d. Index - Reference Designation Cross-Reference to Page Numbers - Section V A list of reference designations cross-referenced to page numbers.

3. Explanation of Columns

The following provides an explanation of columns in the tabular lists:

- Source, Maintenance, and Recoverability Codes (SMR), Column .*

(1) Source codes indicate the selection status and source for the listed item. Source codes are -

* This manual supersedes TM 11-5840-326-35P, 27 January 1967.