
TECHNICAL MANUAL

**DIRECT SUPPORT MAINTENANCE REPAIR
PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR
PARTS AND SPECIAL TOOLS)
FOR
RADAR SET AN/PPS-15A(V)1
(NSN 5840-01-051-3067)**

HEADQUARTERS, DEPARTMENT OF THE ARMY

19 DECEMBER 1979

TECHNICAL MANUAL

No. 11-5840-347-30P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 19 December 1979

**DIRECT SUPPORT MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS)
FOR
RADAR SET AN/PPS-15A(V)1
NSN 5840-01-051-3067)
Current as of August 1979**

REPORTING ERRORS AND RECOMMENDED IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know.

Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in back of this manual direct to: Commander US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, NJ 07703.

In any case, a reply will be furnished direct to you.

Table of Contents

Illus		Page	Figure
SECTION	I. Introduction	1	
	II. Repair Parts List.....	5	
Group	00 RadarSet AN/PPS-15A(V)1	5	1
	01 Antenna Drive AB-1205A/PPS-15(V).....	9	2
	02 Radar Tripod MT-4800/PPS-15(V)	13	3
	03 Interconnecting Cable Assemblies	17	4
	0301 External Power Cable	19	5
	030101 Power Regulator Circuit Card	21	6
	Remote Control Cable Assembly	23	7
	Cold Weather Cable	25	8
	04 Transport Case CY-7338A/PPS-15(V).....	27	9
	05 Carrying Case CY-7399A/PPS- 15(V) (no parts authorized)		
	06 Antenna AS-2906APPS- 15(V).....	29	10
	Antenna Housing	31	11
	0601 Antenna Preamplifier Circuit Card.....	35	12
	0602 Antenna Circuits Circuit Card.....	39	13
	07 Control Indicator C-9353A/PPS-15(V).....	43	14
	Housing.....	47	15
	Battery Section Cover	49	16
	Control Section Cover	51	17
	0701 Automatic Alarm Circuit Card.....	59	18

**Illus
Group**

Page Figure

	0702 All Range Circuit Card.....	65	19
	0703 Regulator/Audio Circuit Card.....	71	20
	0704 Discrete Range Circuit Card	79	21
	0705 Digital Display	83	22
	070501 Numeric Display Circuit Card	85	23
	070502 Digital Processor Circuit Card.....	93	24
	0706 Printed Cable Assembly.....	97	25
	08 Pintle Mount Adapter MX-9426/PPS-15(V)	99	26
SECTION	III. Special Tools List (not applicable)		
	IV. National Stock Number and Part Number Index	100	

SECTION I
INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of direct support maintenance of the AN/PPS-15A(V)1. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. *Section III. Special Tools List.* Not applicable.

c. *Section IV. National Stock Number and Part Number Index.* A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. *Illustration.* This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. *Source, Maintenance, and Recoverability (SMR) Codes.*

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second, positions of the Uniform SMR Code format as follows:

Code	Definition
PA-Item	procured and stocked for anticipated or known usage.
PB-Item	procured and stocked for insurance purpose because essentiality dictates that a minimum quantity be available in the supply system.
XA-Item	is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.
XD-A	support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code	Application/Explanation
O-Support	item is removed, replaced, used at the organizational level.
F-Support	item is removed, replaced, used at the direct support level.
D-Support	items that are removed, replaced, used at depot, mobile depot, specialized repair activity only.
(b)	The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes: