

TECHNICAL MANUAL

**DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS)**

FOR

RADAR SET AN/SPS-59(V)1

(NSN 5840-01-017-2798)

AND

POWER SUPPLY PP-7334/U

(NSN 6130-01-017-9155)

HEADQUARTERS, DEPARTMENT OF THE ARMY

AUGUST 1978

DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
FOR
RADAR SET AN/SPS-59(V)1 (NSN 5840-01-017-2798)
AND
POWER SUPPLY PP-7334/U (NSN 6130-01-017-9155)

Current as of 3 March 1978

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 located in the back of the manual. Simply tear out the self-addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-MA-Q, Fort Monmouth, New Jersey 07703.

In either case a reply will be furnished direct to you.

Table of Contents

SECTION		Page	Illus. Figure
	I. Introduction.....	1	
	II. Repair parts List	5	
GROUP	00 Radar Set AN/SPS-59(V)1.....	5	1
	01 Antenna AS-3146/SPS-59(V).....	7	2
	0101 Antenna Assembly (No Parts Authorized)		
	0102 Antenna Drive Unit.....	9	3
	010201 Drive and Synchro Mounting Assembly	13	4
	01020101 Antenna Motor.....	17	5
	01020102 MAG Slip Transmitter.....	19	6
	010202 Gear Box Assembly	21	7
	01020201 Rotary Joint Housing Assembly	23	8
	02 Receiver-Transmitter RD-1211/SPS-59(V)	37	9
	0201 Mixer Assembly	43	10
	0202 DC-DC Power Supply.....	45	11
	0203 Components Board Assembly	49	12
	0204 Swing Panel Assembly.....	51	13
	03 Display Unit IP-1258/SPS-59(V)	53	14
	0301 CRT Visor Assembly	55	15
	0302 Display Case Assembly.....	61	16

		Page	Illus. Figure
	0303 Tray Assembly, Power Display	69	17
	0304 Component Board	73	18
04	Power Supply PP-7334/U	75	19
05	Cable Assembly MC9804.....	81	20
SECTION II.	Special Tools List (Not Applicable)		
IV.	National Stock Number and Part Number		
	Index	82	

SECTION I INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational, direct support, and general support maintenance of the AN/SPS-59(V)1 and PP-7334/U. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. *Section III. Special Tools List.* Not applicable.

c. *Section IV. National Stock Number and Part Number Index.* A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. *Illustration.* This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. *Source, Maintenance, and Recoverability (SMR) Codes.*

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code	Definition
PA-	Item procured and stocked for anticipated or known usage.
PD-	Support item excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.

Code	Definition
XA-	Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.
XD-	A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code	Application / Explanation
O-	Support item is removed, replaced, used at the organizational level.
F-	Support item is removed, replaced, used at the direct support level.
H-	Support item is removed, replaced, used at the general support level.
D-	Support items that are removed, replaced, used at depot, mobile depot, specialized repair activity only.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes: