

TECHNICAL MANUAL

DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
FOR

RADAR SET AN/APN-158A
(NSN 5841-00-143-4116)

TECHNICAL MANUAL

No. 11-5841-241-34P-1

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 26 March 1979

**DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIRS PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
FOR
RADAR SET NA/APN-158A
(NSN 5841-00-143-41 1 6)**

Current as of 27 October n1978

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 located in the back of the manual. Simply tear out the self addressed form, fill it out as shown on the sample, fold it where shown, and drop in the mail. If there are no blank DA Form 2028-2 in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, NJ 07703. In either case a reply will be furnished direct to you.

Table of Contents

		Page	Illus Figure
Section	I. Introduction	1	
	II. Repair parts list	5	
Group	00 Radar Set AN/APN-158A	5	1
	01 Antenna AS-1520A/APN-158	11	2
	0101 Geartrain assembly (A1A1)	15	3
	0102 Geartrain assembly (A1A2)	17	4
	0103 Gimbal assembly (A1A3)	9	5
	02 Control, Radio Set C-4881/APN-158 (A2)	21	6
	03 Indicator, Azimuth-Range IP-724A/AP-158 (A3)	25	7
	0301 Chassis, indicator assembly (A3A1)	29	8, 9
	030101 Terminal board (A3A1TB1)	37	10
	030102 Terminal board (A3A1TB2)	39	11
	030103 Terminal board assembly (A3A1TB3)	41	12
	030104 Terminal board assembly (A3A1TB4)	45	13
	0302 Filter assembly (A3A2)	47	14
	04 Mount, Receiver-Transmitter MT-3068A/APN-158 (A4)	51	15
	05 Mount, Synchronizer MT-3069/APN-158 (A)	55	16
	06 Receiver Transmitter, Radio RT-711A/APN-158 (A6)	59	17-21
	0601 Chassis, Receiver-Transmitter (A6A1)	83	22
	0602 Circuit card assembly, positive magnetron (A6A2)	85	23
	0603 Board, keep alive supply (A6A3)	87	24
	0604 Board, regulator (A6A4)	89	25
	0605 Circuit board assembly, meter (A6A5)	91	26
	0606 Circuit board assembly, regulator (A6A6)	93	27
	0607, Circuit board assembly fault sense (A6A7)	95	28

This manual supersedes TM 11-58141-4134P-1, 25 June 1971.

			Page	Illus Figure	
Group	0608	Mixer-duplexer assembly (A6A10).....	99	29, 30	
	0609	Generator, trigger wired (A6A11).....	103	31	
	0610	Modulator, radar (A6A13)	107	32-35	
	07	Synchronizer, Electrical SN-3A/APN-158 (A7).....	117	36, 37	
		0701	Chassis, synchronizer (A7A1).....	125	38
		0702	Generator, gate, board assembly (A7A2)	127	39
		0703	Amplifier, servo elevation (A7A1).....	131	40
		0704	Amplifier, insulation-circuit (A7A4).....	135	41
		0705	Amplifier intermediate-frequency (A7A4	139	42
		0706	Generator-amplifier, sweep (A7A7)	147	43
		0707	Heatsink assembly (A7A8)	151	44
		0708	Generator, range mark board assembly (A7A9).....	153	45
		0709	Circuit card assembly, control (A7A11)	157	46
	0710	Circuit card assembly, video drive (A7A11).....	161	47	
	0711	Circuit card assembly, adjust (A7A12).....	165	48	
	0712	Cable assembly - synchronizer (A7A14).....	167	49	
	071201	Circuit card assembly, detector (A7A14A1).....	169	50	
SECTION III.	Special tools list (Not applicable)				
IV.	National stock number and part number index	170			

SECTION I INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of direct support and general support maintenance of the AN/APN-158A. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III Special Tools List. Not applicable.

c. Section IV National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of National stock numbers (NSN) appearing in the listings, followed by a list, in alphabetic sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration. This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. Source, Maintenance, and Recoverability- (SMR) Codes.

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code	Definition
PA	-Item procured and stocked for anticipated or known usage.
XD	-A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code	Application / Explanation
O	-Support item is removed, replaced, used at the organizational level.
F	-Support item is removed, used at the direct support level.
H	-Support item is removed, replaced, used at general support level.
D	-Support items that are removed, replaced, used at depot, mobile depot, specialized repair activity only.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., authorized maintenance functions). This position will contain one of the following maintenance codes:

Code	Application / Explanation
H	The lowest maintenance level capable of complete repair of the support item is the general support level.
D	The lowest maintenance level capable of complete repair of the support item is the depot level.
Z	Nonreparable. No repair authorized.