

DEPARTMENT OF THE ARMY TECHNICAL MANUAL
DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING
DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
CONTROLS, RADAR SET C-654/APR-9B (FSN 5895-897-8193)
AND C-654A(APR-9B (FSN 5895-897-8192)

Headquarters, Department of the Army, Washington, D.C.
19 April 1974

Current as October 1973

SECTION		Paragraph	Page
I.	INTRODUCTION		
	Scope.....	1-1	2
	General.....	1-2	2
	Explanation of columns.....	1-3	2
	Special information.....	1-4	4
	Location of repair parts	1-5	4
	Abbreviations (Not applicable).....	1-6	4
	Reporting of equipment publication improvements.....	1-7	4
II.	REPAIR PARTS LIST		6
III.	SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT (Not applicable)		
IV.	INDEX - FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS REFERENCE TO FIGURE AND ITEM NUMBER.....		12

This publication is a courtesy quick copy
from the UNITED STATES ARMY ADJUTANT
GENERAL PUBLICATIONS CENTER, ST. LOUIS,
MISSOURI, to meet your needs while we are
replenishing our regular stock.

*This manual supersedes TM 11-5895-231-35P, 7 February 1964.

SECTION I INTRODUCTION

1-1. Scope

This manual lists repair parts and special tools required for the performance of direct support, general support, and depot maintenance of the C654/APR-9B and C654A/APR-9B. The PCCN for the equipment is GEWAAY for all models

1-2. General

This repair parts and special tools list is divided into the following sections:

- a. *Repair Parts List -Section III.* A list of repair parts authorized for the performance of maintenance at the direct support, general support, and depot level This repair parts list is arranged in alphabetical order.
- b. *Special Tools, Test and Support Equipment - Section III.* Not applicable.
- c. *Index -Federal Stock Number and Reference Number Cross-Reference to Figure and Item Number - Section IV.* A list, in ascending numerical sequence, of all Federal stock numbers appearing in the listings, followed by a list, in alphabetic sequence, of all reference numbers appearing in the listings. Federal stock number and reference numbers are cross-referenced to each illustration figure and item number or reference designation appearance.

1-3. Explanation of Columns

The following provides an explanation of columns found in the tabular list.

- a. *Source, Maintenance, and Recoverability Codes (SMR).*

(1) *Source code.* Indicates the manner of acquiring support items for maintenance, repair, or overhaul of end item & Source codes are –

<i>Code</i>	<i>Explanation</i>
PA -	Item procured and stocked for anticipated or known usage.
PB -	Item procured and stocked for insurance purposes because essentiality dictates that a minimum quantity be available in the supply systems.
PC -	Item procured and stocked and which otherwise would be coded PA except that it is support deteriorative in nature.
PD -	Support item, excluding equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.
PE -	Support equipment procured and stocked for initial issue or outfitting to specified maintenance repair activities.
PF -	Support equipment which will not be stocked but which will be centrally procured on demand.
PG -	Item procured and stocked to provide for sustained support for the life of the equipment. It is applied to an item peculiar to the equipment which because of probable discontinuance or shutdown of production facilities would prove uneconomical to reproduce at a later time.
KD	An item of depot overhaul/repair kit and not purchased separately. Depot kit defined as a kit that provides items required at the time of overhaul or repair.
KF -	An item of a maintenance kit and not purchased separately. Maintenance kit defined as a kit that provides an item that can be replaced at organizational or direct support or general support levels of maintenance.
KB	Item included in both a depot over-haul/repair kit and a maintenance kit.
MO-	Item to be manufactured or fabricated at organizational level
MF-	Item to be manufactured or fabricated at direct support maintenance level
MH-	Item to be manufactured or fabricated at general support maintenance level.
MD-	Item to be manufactured or fabricated at depot maintenance level
AO -	Item to be assembled at organizational level.
AF -	Item to be assembled at direct support maintenance level
AH	Item to be assembled at general support maintenance level.
AD -	Item to be assembled at depot maintenance level