

T M 1 1 - 5 8 9 5 - 2 8 4 - 3 5 / 4

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

DS, GS, AND DEPOT MAINTENANCE

REPAIR PARTS AND SPECIAL TOOLS LIST

FOR

R A D A R S U R V E I L L A N C E S E T S

A N / A P S - 9 4 B

A N D A N / A P S - 9 4 C



HEADQUARTERS, DEPARTMENT OF THE ARMY
MARCH 1971

TECHNICAL MANUAL }
 No. 11-5895-284-35/4 }

HEADQUARTERS
 DEPARTMENT OF THE ARMY
 Washington, D.C., 15 March 1971

DS, GS, AND DEPOT MAINTENANCE REPAIR
 PARTS AND SPECIAL TOOLS LIST FOR
 RADAR SURVEILLANCE SETS AN/APS-94B AND AN/APS-94C

	Paragraph	Page
SECTION I. INTRODUCTION		
S c o p e	1	
General....	2	
Explanation of columns	3	
Special information	4	
Location of repair parts	5	
Federal supply codes	6	
Reporting of equipment manual improvements	7	
II. REPAIR PARTS FOR DS, GS, AND DEPOT MAINTENANCE		
	Seq. No.	Page
A Radar Surveillance Set AN/APS-94B ANAPS94B	A001	1
A Radar Surveillance Set AN/APS-94C ANAPS94C	A002	1
B Box, Interconnecting J1098ABCAPS94	A003	1
B Box, Interconnecting J1098BAPS94	A004	2
C Housing Assembly SMD459530	A005	2

*This manual supersedes TM 11-5895-284-35P, 14 March 1967.

	Seq. No.	Page
C Cover Assembly		
SMD459531	A011	2
C Wiring Assembly		
SME341177	A069	6
D Wiring Harness, Branched		
SMD341176	A070	6
E Lead Assembly, Electrical		
SMD459544	A071	6
E Lead Assembly, Electrical		
SMD459543	A078	6
E Lead Assembly, Electrical		
SMD459542	A087	7
E Lead Assembly, Electrical		
SMD459539	A093	7
E Lead Assembly, Electrical		
SMD459536	A098	8
E Lead Assembly, Electrical		
SMD459541	A102	8
E Lead Assembly, Electrical		
SMD459540	A106	8
E Lead Assembly, Electrical		
SMD459538	A113	9
E Lead Assembly, Electrical		
SMD459537.	A116	9
E Lead Assembly, Electrical		
SMD459535	A119	9
B Power Supply PP-2404A/APS-94		
PP2404AAPS94	A200	16
C Housing, Heat Exchange		
SMD459588GR1	A201	16
D Lead Assembly, Electrical		
SMC459608	A213	16
C Chassis, Electrical		
SMD45960S	A223	17