

TECHNICAL MANUAL

DIRECT SUPPORT MAINTENANCE REPAIR

PARTS AND SPECIAL TOOLS LISTS

(INCLUDING DEPOT MAINTENANCE REPAIR

PARTS AND SPECIAL TOOLS)

FOR

RADAR SURVEILLANCE SET

AN/APS-94E

(NSN) 5841-01-040-3873)

HEADQUARTERS, DEPARTMENT OF THE ARMY

JUNE 1979

TECHNICAL MANUAL

No. 11-5895-967-30P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC. 29 June 1979

DIRECT SUPPORT MAINTENANCE REPAIR

PARTS AND SPECIAL TOOLS LISTS

(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND

SPECIAL TOOLS)**FOR****RADAR SURVEILLANCE SET AN/APS-94E****(NSN 5841-01-040-3873)***Current as of 1 February 1979***REPORTING OF ERRORS**

You can improve this manual by recommending improvements using DA Form 2028-2 located in the back of the manual. Simply tear out the self-addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Forms 2028-2 in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, NJ 07703.

In either case a reply will be furnished direct to you.

Table of Contents

		Page	Illus Figure
Section	I. Introduction	1	
	II. Repair Parts List . . .	5	
Group	00 Radar Surveillance Set AN/APS-94E . . .	5	1
	01 Interconnecting Box J-2794/APS-94D, Unit 1 . . .	11	2
	Top Cover Assembly, Interconnecting Box J-2794/APS-94D . . .	15	3
	Access Plate Assembly, Interconnecting Box J-2794/APS-94D . . .	17	4
	0101 Voltage Sensor. 1A1 . . .	21	5
	02 Receiver-Transmitter, Radar RT-899/APS-94D, Unit 2 . . .	29	6
	Interior Housing Cables, Receiver-Transmitter, Radar RT-899/APS-94D . . .	37	7
	Connector Plate Assembly, Receiver-Transmitter Radar RT-899/APS-94D . . .	41	8
	0201 Control, Receiver-Transmitter. 2A1 . . .	43	9
	020101 Circuit Card Assembly, 2A1A1 . . .	45	10
	0202 Electronics Component Assembly, 2A2 . . .	47	11
Group	020201 Circuit Card Assembly, 2A2A1 . . .	49	12
	020202 Circuit Card Assembly, 2A2A2 . . .	51	13
	0203 Electronics Components Assembly, 2A3 . . .	55	14
	0204 Modulator, Radar, 2A4 . . .	59	15
	020401 Circuit Card Assembly, 2A4A1 . . .	63	16
	0205 Amplifier, Electronics Control, 2A5 . . .	65	17
	020501 Circuit Card Assembly, 2A5A1 . . .	67	18

		Page	Illus Figure
Group	0206 Regulator. Frequency, 2A6	69	19
	020601 Circuit Card Assembly, 2A6A1	73	20
	0207 Amplifier, Video, 2A7 and 2A8	77	21
	020701 Electronics Components Assembly, 2A7A1 and 2A8A1	81	22
	0208 Synthesizer, Electronic Frequency, 2A9	83	23
	020801 Circuit Card Assembly, 2A9A1	87	24
	0209 Electronic Switch, 2A10	91	25
	020901 Circuit Card Assembly, 2A10A1	95	26
	0210 Receiver-Transmitter Subassembly, 2A11	99	27
	Switch Assembly, Receiver-Transmitter Subassembly, 2A11	103	28
	Directional Coupler Assembly, Receiver-Transmitter Subassembly 2A11	107	29
	021001 Oscillator, Radio Frequency, 2A11A1	109	30
	021002 Amplifier, Intermediate Frequency, 2A11A2	113	31
	021003 Mixer, Crystal, Waveguide, 2A11A3	119	32
	Mixer, Crystal Assembly	121	33
	021004 Tuner, Waveguide, 2A11A4	125	34
	0211 Circuit Card Assembly, 2A12	129	35
	0212 Control, Preselector, 2A13	133	36
	021201 Circuit Card Assembly, 2A13A1	137	37
	0213 Amplifier, Intermediate Frequency, 2A14	143	38
	021301 Circuit Card Assembly, 2A14A1	147	39
	0214 Servomechanism, Magnetic Tuning, 2A15	151	40
	0215 Electronic Components Assembly, 2A16	155	41
	0216 Regulator, Voltage 2A17	157	42
	021601 Circuit Card Assembly, 2A17A1	161	43
	0217 Regulator, Voltage, 2A18	163	44
	021701 Circuit Card Assembly, 2A18A1	167	45
	0218 Filter Assembly, Electrical 2MP27	169	46
03	Processor, Radar Signal CM-374/APS-94D, Unit 3	175	47
	0301 Circuit Card Assembly, 3A1 through 3A20	181	48
	030101 Circuit Card Assembly, 3A1A1 through 3A1A42	183	49
	0302 Circuit Card Assembly, 3A21 through 3A30	187	50
	0303 Circuit Card Assembly, 3A31 and 3A32	191	51
	0304 Circuit Card Assembly, 3A33	195	52
	0305 Circuit Card Assembly, 3A34	199	53
	0306 Amplifier, Video, 3A35	203	54
	0307 Generator, Sweep, 3A36	207	55
	0308 Circuit Card Assembly, 3A37	211	56
	0309 Circuit Card Assembly, 3A38	215	57
	0310 Oscillator, Radio Frequency, 3A39	219	58
	0311 Circuit Card Assembly, 3A40 and 3A41	225	59
	0312 Circuit Card Assembly, 3A42	229	60
	0313 Circuit Card Assembly, 3A43	233	61
	0314 Circuit Card Assembly, 3A44	237	62
	0315 Control, Antenna, 3A45	241	63
	0316 Circuit Card Assembly, 3A46	245	64
	0317 Power Supply, 3A47	253	65
	031701 Circuit Card Assembly, 3A47A1	259	66
	031702 Electronics Components Assembly, 2A47A2	265	67
	0318 Filter Assembly, Electrical, 3A48	267	68
04	Antenna AS-2199/APS-94D, Unit 4	273	69
	0401 Amplifier, Electronic, 4A1	279	70
	040101 Circuit Card Assembly, 4A1A1	285	71
	040102 Circuit Card Assembly, 4A1A2	289	72
	040103 Circuit Card Assembly, 4A1A3	293	73
05	040104 Amplifier, Audio-Radio Frequency, 4A1A4	295	74
	04010401 Circuit Card Assembly, 4A1A4A1	297	75
	0402 Gyroscope, Integrating, 4A3 (no parts authorized)		
	Sweep Generator SG-1127/APS-94E, Unit 5	303	76
	0501 Amplifier, Direct Current, 5A1 through 5A4	309	77
	050101 Circuit Card Assembly, 5A1A1 through 5A1A4	313	78
	0502 Generator, Sweep, 5A5	315	79
	050201 Circuit Card Assembly, 5A5A1	319	80
	050202 Circuit Card Assembly, 5A5A2	323	81

		Page	Illus Figure
Group	0503 Power Supply, 5A6	329	82
	050301 Circuit Card Assembly, 5A6A1	333	83
	05030101 Circuit Card Assembly, 5A6A1A1	337	84
	05030102 Circuit Card Assembly, 5A6A1A2	341	85
	050302 Circuit Card Assembly, 5A6A2	345	86
0 8	Rack, Electrical Equipment MT-4015/APS-94D, Unit 8	349	87
	Terminal Board Assembly, Back, Electrical Equipment MT-4015/APS-94D.	353	88
	Power Supply Assembly, Rack, Electrical Equipment MT-4015/APS-94D	357	89
0 9	Control, Radar Set C-7645/APS-94D, Unit 9.	367	90
	0901 Amplifier, Electronic Control, 9A1	373	91
	090101 Circuit Card Assembly, 9A1A1	377	92
	090102 Circuit Card Assembly, 9A1A2	381	93
	090103 Circuit Card Assembly, 9A1A3	385	94
	0902 Circuit Card Assembly, 9A2.	389	95
	0903 Control Sweep, 9A3	391	98
	090301 Circuit Card Assembly, 9A3A1	395	97
	090302 Circuit Card Assembly, 9A3A2	399	98
	0904 Circuit Card Assembly, 9A4.	403	99
10	Recorder-Processor-Viewer, Radar Mapping RO-945/U. Unit 10 (See TM 11-5841-285-30P for parts)		
SECTION III.	Special Tools List (Not applicable)		
IV.	National Stock Number and Part Number Index	404	

SECTION I

INTRODUCTION

1. Scope

This manual lists spares and repair **parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment** required for performance of direct support maintenance of the AN/APS-94E.

It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric **sequence, with the parts in each group listed in figure and item number sequence.**

b. Section III. Special Tools List. Not applicable.

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration. This column is divided as follows:

(1) **Figure number.** Indicates the figure number of the illustration on which the item is shown.

(2) **Item number.** The number used to identify item called out in the illustration.

b. Source, Maintenance, and Recoverability (SMR) Co&s.

(1) **Source Code.** Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

code	Definition
PA--	Item procured and stocked for anticipated or known usage.
PD-	Support item, excluding support equipment, procured for initial issue or outfitting and

Code**Definition**

XA-Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.

XD-A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) **Maintenance code.** Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third-position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

code	Application Explanation
F-	Support item is removed, replaced, used at the direct support level.
D-	Support items that are removed, replaced, used at depot, mobile depot, specialized repair activity only.

(b) **The maintenance code** entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Code	Application/Explanation
F-	The lowest maintenance level capable of complete repair of the support item is the direct support level.
D-	The lowest maintenance level capable of complete repair of the support item is the depot level.
Z-	Nonreparable. No repair is authorized.

(3) **Recoverability code.** Recoverability codes