

TECHNICAL MANUAL

**ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS
FOR**

**TELETYPEWRITER SETS AN/PGC-1 (NSN 5815-00-198-5963),
AN/PGC-3 (NSN 5815-00-012-8773),
AND TELETYPEWRITERS TT-4A/TG, TT-4B/TG, TT-4C/TG
(NSN 5815-00-198-4438),
TT-335/TG (NSN 5815-00-878-8449), TT-537/G
(NSN 5815-00-926-7378), TT-698/TG,
TT-698A/TG, TT-698B/TG (NSN 5815-01-008-9628),
TT-722/TG AND TT-722A/TG
(NSN 5815-01-017-9172)**

**HEADQUARTERS, DEPARTMENT OF THE ARMY
26 SEPTEMBER 1978**

TECHNICAL MANUAL }
No. 11-5815-206-20P }

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 26 September 1978

ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

FOR

TELETYPEWRITER SETS

AN/PGC-1 (NSN 5815-00-198-5963)

AN/PGC-3 (NSN 5815-01-012-8773)

AND

TELETYPEWRITERS

TT-4A/TG (NSN 5815-00-198-4438) TT-4B/TG (NSN 5815-00-198-4438)

TT-4C/TG (NSN 5815-00-198-4438) TT-335/TG (NSN 5815-00-878-8449)

TT-537/G (NSN 5815-00-926-7378) TT-698/TG (NSN 5815-01-008-9628)

TT-698A/TG (NSN 5815-01-008-9628) TT-698B/TG (NSN 5815-01-008-9628)

TT-722/TG and TT-722A/TG

(NSN 5815-01-017-9172)

Current as of 25 November 1977

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 (Test) located in the back of the manual. Simply tear out the self-addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Form 2028-2 (Test) in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-MA-Q, Fort Monmouth, New Jersey 07703.

In either case a reply will be furnished direct to you.

Table of Contents

	Page	Illus Figure
SECTION I. Introduction	1	
II. Repair parts list	5	
Group 00 Teletypewriter Set AN/PGC-1, Teletypewriters TT-4A/TG, TT-4B/TG, TT-4C/TG.	5	1,2
01 Immersion proof cover (No parts authorized)		
02 Dust cover	9	3
03 Governor (No parts authorized)		
0301		4
04 Instrument panel assembly	13	6
06 Transmitter contact assembly (No parts authorized)		
06 Platen assembly (No parts authorized)		
0601 Platen frame assembly (No parts authorized)		
0602 Platen trough assembly (No parts authorized)		
07 Automatic carriage return and line feed mechanism (No parts authorized)		

•This manual supersedes TM 11-5815-206-20P, 17 January 1963.

	Page	Illus Figure
GROUP 08 Line feed and platen shift mechanism (No parts authorized)		
09 Ribbon mechanism assembly (No parts authorized)		
0901 Ribbon lifter assembly (No parts authorized)		
0902 Ribbon feed assembly	15	6
10 Margin bell assembly (No parts authorized)		
11 Signal bell assembly (No parts authorized)		
12 Type bar mechanism (No parts authorized)		
1201 Type selecting arm assembly (No parts authorized)		
1202 Type bar mechanism (No parts authorized)		
13 Carriage frame assembly (No parts authorized)		
14 Carriage mechanism (No parts authorized)		
1401 Manual carriage-return mechanism	17	7
1402 Carriage feed mechanism (No parts authorized)		
1403 Carriage return mechanism (No parts authorized)		
15 Paper shaft, paper shaft bracket, and paper chute	19	8
16 Line terminal box (No parts authorized)		
1601 Circuit card assembly, transmitter (No parts authorized)		
1602 Circuit card assembly, receiver (No parts authorized)		
1603 Circuit card assembly, TD clutch (selector) magnet driver (No parts authorized)		
17 Transmitter camshaft, filter and locking mechanism (No parts authorized)		
1701 Keyboard-transmitter-camshaft locking mechanism (No parts authorized)		
1702 Transmitter camshaft and filter (No parts authorized)		
18 Keyboard-transmitter sensing and selector lever assembly (No parts authorized)		
19 Key levers and code bars (No parts authorized)		
20 Print bail shaft assembly (No parts authorized)		
21 Selector magnet assembly (No parts authorized)		
22 Motor stop assembly (No parts authorized)		
23 Square shaft assembly (No parts authorized)		
24 Carriage return shaft and clutch assembly (No parts authorized)		
2401 Carriage return shaft assembly (No parts authorized)		
2402 Carriage return clutch assembly (No parts authorized)		
25 Code ring cage and function sensing lever group (No parts authorized)		
2501 Code ring cage (No parts authorized)		
2502 Function sensing lever group (No parts authorized)		
26 Selector-level-comb bracket assembly (No parts authorized)		
27 Selector camshaft assembly (No parts authorized)		
28 Selector levers and Y levers (No parts authorized)		
29 Function selecting mechanism (No parts authorized)		
30 Carriage feed shaft assembly (No parts authorized)		
31 Carriage rack drive shaft (No parts authorized)		
32 Function shaft assembly (No parts authorized)		
33 Main shaft assembly .-	21	9,10
34 Keyboard-transmitter drive shaft (No parts authorized)		
35 Transfer lever shaft assembly (No parts authorized)		
36 Motor filter box assembly (No parts authorized)		
37 Teletypewriter frame assembly	25	11
38 Teletypewriter base assembly (No parts authorized)		
00 Teletypewriter Set AN/PGC-3, Teletypewriters TT-698/TG, TT-698A/TG, TT-698B/TG	27	12,13
01 Immersion proof cover (No parts authorized)		
02 Dust cover	31	14
03 Governor (No parts authorized)		
0301 Motor.	33	15
04 Instrument panel assembly	35	16
05 Transmitter contact assembly (No parts authorized)		
06 Platen assembly (No parts authorized)		
0601 Platen frame assembly (No parts authorized)		
0602 Platen trough assembly (No parts authorized)		
07 Automatic carriage return and line feed mechanism (No parts authorized)		
08 Line feed and platen shift mechanism (No parts authorized)		
09 Ribbon mechanism assembly (No parts authorized)		
0901 Ribbon lifter assembly (No parts authorized)		

	Page	Illus Figure
G R O U P 0902 Ribbon feed assembly	37	17
10 Margin bell assembly (No parts authorized)		
11 Signal bell assembly (No parts authorized)		
12 Type bar mechanism (No parts authorized)		
1201 Type selecting arm assembly (No parts authorized)		
1202 Type bar mechanism (No parts authorized)		
13 Carriage frame assembly (No parts authorized)		
14 Carriage mechanism (No parts authorized)		
1401 Manual carriage-return mechanism	39	18
1402 Carriage feed mechanism (No parts authorized)		
1403 Carriage return mechanism (No parts authorized)		
15 Paper shaft, paper shaft bracket, and paper chute	41	19
16 Line terminal box (No parts authorized)		
1601 Circuit card assembly, transmitter (No parts authorized)		
1602 Circuit card assembly, received (No parts authorized)		
1603 Circuit card assembly TD clutch (selector) magnet driver (No parts authorized)		
17 Transmitter camshaft, filter and locking mechanism (No parts authorized)		
1701 Key board-transmitter-camshaft locking mechanism (No parts authorized)		
1702 Transmitter camshaft and filter (No parts authorized)		
18 Keyboard-transmitter sensing and selector lever assembly (No parts authorized)		
19 Key levers and code bars (No parts authorized)		
20 Print bail shaft assembly (No parts authorized)		
21 Selector magnet assembly (No parts authorized)		
22 Motor stop assembly (No parts authorized)		
23 Square shaft assembly (No parts authorized)		
24 Carriage return shaft and clutch assembly (No parts authorized)		
2401 Carriage return shaft assembly (No parts authorized)		
2402 Carriage return clutch assembly (No parts authorized)		
25 Code ring cage and function sensing lever group (No parts authorized)		
2501 Code ring cage (No parts authorized)		
2502 Function sensing lever group (No parts authorized)		
26 Selector-lever-comb bracket assembly (No parts authorized)		
27 Selector camshaft assembly (No parts authorized)		
28 Selector levers and Y levers (No parts authorized)		
29 Function selecting mechanism (No parts authorized)		
30 Carriage feed shaft assembly (No parts authorized)		
31 Carriage rack drive shaft (No parts authorized)		
32 Function shaft assembly (No parts authorized)		
33 Main shaft assembly	43	20,21
34 Keyboard-transmitter drive shaft (No parts authorized)		
35 Transfer lever shaft assembly (No parts authorized)		
36 Motor filter box assembly (No parts authorized)		
37 Teletypewriter frame assembly	47	22
38 Teletypewriter base assembly (No parts authorized)		
00 Teletypewriters TT-722/TG, TT-722A/TG	49	23
01 Immersion proof cover (No parts authorized)		
02 Dust cover	51	24
03 Governor (No parts authorized)		
0301 Motor	53	25
04 Instrument panel assembly	55	26
05 Transmitter contact assembly (No parts authorized)		
06 Platen assembly (No parts authorized)		
0601 Platen frame assembly (No parts authorized)		
0602 Platen trough assembly (No parts authorized)		
07 Automatic carriage return and line feed mechanism (No parts authorized)		
08 Line feed and platen shift mechanism (No parts authorized)		
09 Ribbon mechanism assembly (No parts authorized)		
0901 Ribbon lifter assembly (No parts authorized)		
0902 Ribbon feed assembly	67	27
10 Margin bell assembly (No parts authorized)		
11 Signal bell assembly (No parts authorized)		

	Page	Illus Figure
GROUP 12 Type bar mechanism (No parts authorized)		
1201 Type selecting arm assembly (No parts authorized)		
1202 Type bar mechanism (No parts authorized)		
13 Carriage frame assembly (No parts authorized)		
14 Carriage mechanism (No parts authorized)		
1401 Manual carriage-return mechanism (No parts authorized)		
1402 Carriage feed mechanism (No parts authorized)		
1403 Carriage return mechanism (No parts authorized)		
15 Paper shaft, paper shaft bracket, and paper chute	59	28
16 Line terminal box (No parts authorized)		
1601 Circuit card assembly, transmitter (No parts authorized)		
1602 Circuit card assembly, receiver (No parts authorized)		
1603 Circuit card assembly, TD clutch (selector) magnet driver (No parts authorized)		
17 Transmitter camshaft, filter and locking mechanism (No parts authorized)		
1701 Key board-transmitter-camshaft locking mechanism (No parts authorized)		
1702 Transmitter camshaft and filter (No parts authorized)		
18 Keyboard-transmitter sensing and selector lever assembly (No parts authorized)		
19 Key levers and code bars (No parts authorized)		
20 Print bail shaft assembly (No parts authorized)		
21 Selector magnet assembly (NO parts authorized)		
22 Motor stop assembly (No parts authorized)		
23 Square shaft assembly (No parts authorized)		
24 Carriage return shaft and clutch assembly (No parts authorized)		
2401 Carriage return shaft assembly (No parts authorized)		
2402 Carriage return clutch assembly (No parts authorized)		
25 Code ring cage and function sensing lever group (No parts authorized)		
2501 Cede ring cage (No parts authorized)		
2502 Function sensing lever group (No parts authorized)		
26 Selector-lever-comb bracket assembly (No parts authorized)		
27 Selector camshaft assembly (No parts authorized)		
28 Selector levers and Y levers (No parts authorized)		
29 Function selecting mechanism (No parts authorized)		
30 Carriage feed shaft assembly (No parts authorized)		
31 Carriage rack drive shaft (No parts authorized)		
32 Function shaft assembly (No parts authorized)		
33 Main shaft assembly.	61	29
34 Keyboard-transmitter drive shaft (No parts authorized)		
35 Transfer lever shaft assembly (No parts authorized)		
36 Motor filter box assembly (No parts authorized)		
37 Teletypewriter frame assembly	63	30
38 Teletypewriter base assembly (No parts authorized)		
00 Teletypewriter TT-335/TG -.	.66	31
01 Immersion proof cover (No parts authorized)		
02 Dust cover	67	32
03 Motor (No parts authorized)		
0301 Motor (No parts authorized)		
04 Instrument panel assembly.	69	33
05 Transmitter contact assembly (No parts authorized)		
06 Platen assembly (No parts authorized)		
0601 Platen frame assembly (No parts authorized)		
0602 Platen through assembly (No parts authorized)		
07 Automatic carriage return and line feed mechanism (No parts authorized)		
08 Line feed and platen shift mechanism (No parts authorized)		
09 Ribbon mechanism assembly	71	34
0901 Ribbon lifter assembly (No parts authorized)		
0902 Ribbon feed assembly (No parts authorized)		
10 Margin bell assembly (No parts authorized)		
11 Signal bell assembly (No parts authorized)		
12 Type bar mechanism (No parts authorized)		
1201 Type selecting arm assembly (No parts authorized)		
1202 Type bar mechanism (No parts authorized)		
13 Carriage frame assembly (No parts authorized)		
14 Carriage mechanism (No parts authorized)		

		Page	Illus Figure
GROUP	1401 Manual carriage-return mechanism	73	35
	1402 Carriage feed mechanism (No parts authorized)		
	1403 Carriage return mechanism (No parts authorized)		
16	Paper trough assembly	76	36
16	Line terminal box (No parts authorized)		
	1601 Circuit card assembly, transmitter (No parts authorized)		
	1602 Circuit card assembly, received (No parts authorized)		
	1603 Circuit card assembly TD clutch (selector) magnet driver (No parts authorized)		
17	Transmitter camshaft, filter and locking mechanism (No parts authorized)		
	1701 Key board-transmitter-camshaft locking mechanism (No parts authorized)		
	1702 Transmitter camshaft and filter (No parts authorized)		
18	Keyboard-transmitter sensing and selector lever assembly (No parts authorized)		
19	Key levers and code bars (No parts authorized)		
20	Print bail shaft assembly (No parts authorized)		
21	Selector magnet assembly (No parts authorized)		
22	Motor stop assembly (No parts authorized)		
23	Square shaft assembly (No parts authorized)		
24	Carriage return shaft and clutch assembly (No parts authorized)		
	2401 Carriage return shaft assembly (No parts authorized)		
	2402 Carriage return clutch assembly (NO parts authorized)		
25	Code ring cage and function sensing lever group (No parts authorized)		
	2501 Code ring cage (No parts authorized)		
	2502 Function sensing lever group (No parts authorized)		
26	Selector-lever-comb assembly (No parts authorized)		
27	Selector camshaft assembly (No parts authorized)		
28	Selector levers and Y levers (No parts authorized)		
29	Function selecting mechanism (No parts authorized)		
30	Carriage feed shaft assembly (No parts authorized)		
31	Carriage rack drive shaft (No parts authorized)		
32	Function shaft assembly (No parts authorized)		
33	Main shaft assembly (No parts authorized)		
34	Keyboard-transmitter drive shaft (No parts authorized)		
35	Transfer lever shaft assembly (No parts authorized)		
36	Junction box assembly (No parts authorized)		
37	Frame assembly (No parts authorized)		
38	Base assembly (No parts authorized)		
00	Teletypewriter TT-537/G	77	37
01	Immersion proof cover (No parts authorized)		
02	Dust cover	79	38
03	Motor (No parts authorized)		
	0301 Motor (No parts authorized)		
04	Instrument panel assembly	81	39
05	Transmitter contact assembly (No parts authorized)		
06	Platen assembly (No parts authorized)		
	0601 Platen frame assembly (No parts authorized)		
	0602 Platen trough assembly (No parts authorized)		
07	Automatic carriage return and line feed mechanism (No parts authorized)		
08	Line feed and platen shift mechanism (No parts authorized)		
09	Ribbon mechanism assembly ~.	83	40
	0901 Ribbon lifter assembly (No parts authorized)		
	0902 Ribbon feed assembly (No parts authorized)		
10	Margin bell assembly (No parts authorized)		
11	Signal bell assembly (No parts authorized)		
12	Type bar mechanism (No parts authorized)		
	1201 Type selecting arm assembly (No parts authorized)		
	1202 Type bar mechanism (No parts authorized)		
13	Carriage frame assembly (No parts authorized)		
14	Carriage mechanism (No parts authorized)		
	1401 Manual carriage-return mechanism (No parts authorized)		
	1402 Carriage feed mechanism (No parts authorized)		
	1403 Carriage return mechanism (No parts authorized)		
15	Paper trough assembly . _	85	41
16	Line terminal box and signal cable assembly (No parts authorized)		
	1601 Circuit card assembly, transmitter (No parts authorized)		

		Page	Illus Figure
GROUP	1602 Circuit card assembly, receiver (No parts authorized)		
	1603 Circuit card assembly, TD clutch (selector) maget driver (No parts authorized)		
17	Transmitter camshaft, filter and locking mechanism (No parts authorized)		
	1701 Keyboard-transmitter-camshaft locking mechanism (No parts authorized)		
	1702 Transmitter camshaft and filter (No parts authorized)		
18	Keyboard-transmitter sensing and selector lever assembly (No parts authorized)		
19	Key levers and code bars (No parts authorized)		
20	Print bail shaft assembly (No parts authorized)		
21	Selector magnet assembly (No parts authorized)		
22	Motor stop assembly (No parts authorized)		
23	Square shaft assembly (No parts authorized)		
24	Carriage return shaft and clutch assembly (No parts authorized)		
	2401 Carriage return shaft assembly (No parts authorized)		
	2402 Carriage return clutch assembly (No parts authorized)		
25	Code ring cage and function sensing lever group (No parts authorized)		
	2501 Code ring cage (No parts authorized)		
	2502 Function sensing lever group (No parts authorized)		
26	Selecting-lever-comb bracket assembly (No parts authorized)		
27	Selector camshaft assembly (No parts authorized)		
28	Selector levers and Y levers (No parts authorized)		
29	Function selecting mechanism (No parts authorized)		
30	Carriage feed shaft assembly (No parts authorized)		
31	Carriage rack drive shaft (No parts authorized)		
32	Function shaft assembly (No parts authorized)		
33	Main shaft assembly..	87	42
34	Keyboard-transmitter drive shaft (No parts authorized)		
35	Transfer lever shaft assembly (No parts authorized)		
36	Motor filter box assembly (No parts authorized)		
37	Teletypewriter frame assembly (No parts authorized)		
38	Teletypewriter base assembly (No parts authorized)		
SECTION III.	Special tools list (Not applicable)		
IV.	National stock number and part number index.	88	

SECTION I

INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational maintenance of the AN/PGC-1, AN/PGC-3, TT-4A/TG, TT-4B/TG, TT-4C/TG, TT-335/TG, TT-537/G, TT-698/TG, TT-698A/TG, TT-698B/TG, TT-722/TG, and TT-722A/TG. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. *Section III. Special Tools List.* Not applicable.

c. *Section IV. National Stock Number and Part Number Index.* A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. *Illustration.* This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. *Source, Maintenance, and Recoverability (SMR) Codes.*

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code	Definition
PA	Item procured and stocked for anticipated or known usage.
PD	Support item, support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.
XD	A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 70042.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code	Application/Explanation
O	Support item is removed, replaced, used at the organizational level.
(b)	The maintenance code entered in the