

TECHNICAL MANUAL

**DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)**

FOR

TELETYPEWRITER SET TT-537/G

(NSN 5815-00 -926-7378)

TECHNICAL MANUAL
NO. 11-5815-206-34P-3



HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 21 April 1978

**DIRECT SUP PORT AND GENERAL SUPP OR T MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
FOR
TELETYPEWRITER SET TT—537/G
(NSN 5815-00-926-7378)
Current as of 21 October 1977**

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 (Test) located in the back of the manual. Simply tear out the self-addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Forms 2028-2 (Test) in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Electronics Command, ATTN: DRSEL-MA-Q, Fort Monmouth, NJ 07703.

In either case a reply will be furnished direct to you.

Table of Contents

SECTION		Page	Illus Figure
	I. Introduction	1	
	II. Repair parts list	5	
GROUP	00 Teletypewriter Set TT-537/G	5	1
	01 Immersion proof cover	7	2
	02 Dusts cover	9	3
	03 Motor	11	4
	04 Instrument panel assembly.....	13	5
	05 Transmitter contact assembly	17	6
	06 Platen assembly	23	7
	07 Automatic carriage return and line feed mechanism	27	8
	08 Line feed and platen shift mechanism	29	9
	09 Ribbon mechanism assembly.....	35	10
	10 Margin bell assembly	39	11
	11 Signal bell assembly	41	12
	12 Type bar mechanism	45	13
	13 Carriage frame assembly	49	14
	14 Carriage mechanism	53	15
	15 Paper trough assembly.....	57	16
	16 Line terminal box and signal cable assembly	59	17
	17 Transmitter camshaft, filter and locking mechanism	63	18
	18 Keyboard-transmitter sensing and selector lever assembly.....	67	19
	19 Key levers and code bars	69	20
	20 Print bail shaft assembly	73	21
	21 Selector magnet assembly	75	22
	22 Motor stop assembly	77	23
	23 Square shaft assembly	79	24
	24 Carriage return shaft and clutch assembly	83	25

This manual supersedes TM 11-5815-206-34P-3, 25 September 1975.

Table of Contents-Continued

Table of Contents Continued			Page	Illus Figure
GROUP	25	Code ring cage and function sensing lever group	87	26
	26	Selector lever comb assembly	91	27
	27	Selector camshaft assembly	93	28
	28	Selector levers and Y levers	95	29
	29	Function selecting mechanism	97	30
	30	Carriage feed shaft assembly	99	31
	31	Carriage rack drive shaft	101	32
	32	Function shaft assembly	103	33
	33	Main shaft assembly	107	34
	34	Keyboard-transmitter drive shaft	109	35
	35	Transfer lever shaft assembly	111	36
	36	Junction box assembly	11	37
	37	Frame assembly	117	38
	38	Base assembly	119	39
SECTION	III.	Special tools list (Not applicable)		
	IV.	National stock number and part number index	120	

SECTION I INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of direct support and general support maintenance of the TT-537/G. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III Special Tools List. Not applicable.

c. Section IV National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphanumeric sequence, of all part-numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration. This column is divided as follows;

(1) Figure number. Indicates the figure number of the illustration on which the item is shown.

(2) Item number. The number used to identify item called out in the illustration.

b. Source, Maintenance, and Recoverability (SMR) Codes.

(1) Source code. Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

<i>Code</i>	<i>Definition</i>
PA	-Item procured and stocked for anticipated or known usage.
XD	A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) Maintenance code. Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

<i>Code</i>	<i>Application/Explanation</i>
O --	Support item is removed, replaced, used at the organizational level.
F --	Support item is removed, replaced, used at the direct support level.
H --	Support item is removed, replaced, used at the general support level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes: