

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS RADIO SETS AN/GRC-26A, AN/GRC-26B, AND AN/GRC-26C AND RADIO TELETYPEWRITER CONTROLS C-308/GRC-26A AND C-308A/GRC-26A FSN 5815-709-0638

Headquarters, Department of the Army, Washington, D.C.
31 July 1973

Current as of January 1973

	Paragraph	P a g e
Section I.	INTRODUCTION	
	Scope	1-1 Text
	General	1-2 Text
	Explanation of columns	1-3 Text
	Special information	1-4 Text
	Location of repair parts	1-5 Text
	Abbreviations (Not applicable)	1-6 Text
	Reporting of equipment publication improvements	1-7
II.	PREScribed LOAD ALLOWANCE (Not applicable)	
III.	REPAIR PARTS LIST	6
Group 0001	Radio Set AN/GRC-26A, 3, C	6
0002	Radio Teletypewriter Control C-308/GRC-26A	8
IV.	SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT (Not applicable)	
V.	INDEX—FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS-REFERENCE TO FIGURE AND ITEM NUMBER	9

*This manual supersedes TM 11-5820-202-20P, 4 December 1958, including all changes.

SECTION I

INTRODUCTION

1 - 1 . S c o p e

This manual lists repair parts and special tools required for the performance of organizational maintenance of the AN/GRC-26A, AN/GRC-26B, AN/GRC-26C, C-808/GRC-26A, and C-808A/GRC-26A. The PCCN for the AN/GRC-26A, B, and C is GCRAAE for all models. The PCCN for the C-808/GRC-26A, -808A is GCRAHT for all models.

1 - 2 . G e n e r a l

This repair parts and special tools list is divided into the following sections:

a. *Prescribed Load Allowance (PLA)—Section II.* Not applicable.

b. *Repair Parts List—Section III.* A list of repair parts authorized for the performance of maintenance at the organizational level. This repair parts list is arranged in alphabetical order.

c. *Special Tools, Test and Support Equipment—Section IV.* Not applicable.

d. *Index—Federal Stock Number and Reference Number Cross-Reference to Figure and Item Number—Section V.* A list, in ascending numerical sequence, of all Federal stock numbers appearing in the listings, followed by a list, in alphabetic sequence, of all reference numbers appearing in the listings. Federal stock number and reference numbers are cross-referenced to each illustration figure and item number or reference designation appearance.

1-3. Explanation of Columns

The following provides an explanation of columns in the tabular lists—

a. *Source, Maintenance, and Recoverability Codes (SMR).*

(1) *Source code.* Indicates the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are—

Code	Explanation
PA	Item procured and stocked for anticipated or known usage.
PB	Item procured and stocked for insurance purposes because essentiality dictates that a minimum quantity be available in the supply systems.
PC	Item procured and stocked and which otherwise would be coded PA except that it is deteriorative in nature.
PD	Support item, excluding support equipment.

Code

Explanation

	procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.
PE	Support equipment procured and stocked for initial issue or outfitting to specified maintenance repair activities.
PF	Support equipment which will not be stocked but which will be centrally procured on demand.
PG	Item procured and stocked to provide for sustained support for the life of the equipment. It is applied to an item peculiar to the equipment which because of probable discontinuance or shutdown of production facilities would prove uneconomical to reproduce at a later time.
KD	An item of depot overhaul/repair kit and not purchased separately. Depot kit defined as a kit that provides items required at the time of overhaul or repair.
KF	An item of a maintenance kit and not purchased separately. Maintenance kit defined as a kit that provides an item that can be replaced at organizational or direct support or general support levels of maintenance.
KB	Item included in both a depot overhaul/repair kit and a maintenance kit.
MO	Item to be manufactured or fabricated at or
MF	Item to be manufactured or fabricated at direct support maintenance level.
MH	Item to be manufactured or fabricated at general support maintenance level.
MD	Item to be manufactured or fabricated at depot maintenance level.
AO	Item to be assembled at organizational level.
AF	Item to be assembled at direct support maintenance level.
AH	Item to be assembled at general support maintenance level.
AD	Item to be assembled at depot maintenance level.
ZA	Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.
XB	Item is not procured or stocked. If not available through salvage, requisition.
XC	Installation drawing, diagram instruction