

TECHNICAL MANUAL

ORGANIZATIONAL MAINTENANCE REPAIR PARTS
AND

SPECIAL TOOLS LISTS

FOR

RADIO SETS

AN/VRC-24 (NSN 5820-00-402-2264),

AN/VRC-24A (NSN 5820-00-892-3722),

AN/TRC-68 (NSN 5820-00-682-2718),

AND

AN/TRC-68A (NSN 5820-00-892-3723)

Technical Manual

No. 11-5820-222-20P

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington, DC, 25 January 1980

ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

RADIO SETS

AN/VRC-24 (NSN 5820-00-402-2264),
AN/VRC-24A (NSN 5820-00-892-3722),
AN/TRC-68 (NSNA 5820-00-682-2718),
AND
AN/TRC-68A (NSN 5820-00-892-3723)
Current as of 10 September 1979

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know.

Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in back of this manual direct to Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-ME-MQ, Fort Monmouth NJ 07703.

In any case a reply will be furnished direct to you.

Table of Contents

Section		Page	Illus Figure
	I. Introduction	1	
	II. Repair parts list	5	
Group	00 Radio Sets AN/VRC-24 and AN/VRC-24A	5	1
	01 Receiver-Transmitter Groups 0A-2648/VRC-24, 0A-2648A/VRC-24	7	2
	0101 Case, Receiver-Transmitter CY-2557/VRC-24 (No parts authorized)		
	010101 Blower B1401 (no parts authorized)		
	0102 Receiver-Transmitters RT-323/VRC-24, RT-323A/VRC-24	9	3
	010201 Amplifier, IF 3.0 to 3.9 MHz subunit (A1A3)	11	4
	010202 500-KHz IF amplifier, subunit (A1A4)	13	5
	010203 First IF amplifier 20 to 29.9 MHz subunit (A1A2)	15	6
	010204 Audio amplifier and modulator, subunit (A1A12)	17	7
	010205 UHF injection 200 to 370 MHz subunit (A1A6)	21	8
	010206 Radio frequency and power amplifier 225 to 399.9 MHz subunit (A1A11)...	23	9
	010207 Coupler, directional (no parts authorized)		
	010208 Dynamotor, DY-151/U (no parts authorized)		
	010209 500-KHz IF filter and low pass filter (no parts authorized)		
	010210 Relay and filter subunit (no parts authorized)		
	010211 Frequency selector assembly (no parts authorized)		
	01021101 Motor, DC(B1231)(no parts authorized)		
Group	02 Mountings MT-1436/U, MT-1436A/U (no parts authorized)		
	03 Radio Set Control C-1439/U	25	10
	04 Antenna AT-803/VR (no parts authorized)		
	05 Microphone M-29B/U (no parts authorized)		
	06 Loud Speaker LS-166/U (see TM 11-5965-222-14P for parts)		
	07 Headset, Electrical H-113/U (see TM 11-5965-231-14P for parts)		
	08 Cable Assemblies Group CG-1650 ()/U, CX-1334 ()/U, CX-4629 ()/U, CX-4630 ()/U and CX-4884 ()/U (no parts authorized)		

	00 Radio Sets AN/TRC-68 and AN/TRC-68A	29	11,12
	01 Receiver-Transmitter Groups OA-2649/TRC-68, OA-2649A/TRC-68.	33	13
	0101 Case, Receiver-Transmitter CY-2712/TRC-68 (no parts authorized)		
	0102 Power Supply PP-1494/U	35	14
	0103 Receiver-Transmitters RT-441/TRC-68, RT-441A/TRC-68	37	15
	010301 Amplifier, IF 3.0 to 3.9 MHz subunit (A1A3)..	39	16
	010302 500 KHz IF amplifier subunit (A1A4)..	41	17
	010303 First IF amplifier 20 to 29.9 MHz subunit (A1A2)	43	18
	010304 Audio amplifier and modulator subunit (A1A12).	45	19
Group	010305 UHF injection 200 to 370 MHz subunit (A1A6).	49	20
	010306 Radio frequency and power amplifier 225 to 399.9 MHz subunit (A1A11).	51	21
	010307 Coupler, directional (no parts authorized)		
	010308 Fan, Centrifugal HD-390/U (no parts authorized)		
	010309 500 KHz IF filter and low pass filter (no parts authorized)		
	010310 Relay and filter subunit (no parts authorized)		
	010311 Frequency selector assembly (no parts authorized)		
	01031101 Motor, DC B1201 (no parts authorized)		
	02 Radio Set Control C-1439 /U	53	22
	03 Mounting MT-2297/TRC-68 (no parts authorized)		
	04 Antenna AT- 197/GR (no parts authorized)		
	05 Control Group AN/GRA-6 (see TM 11-5820-489-20P for parts)		
	06 Loud Speaker LS-166/U (see TM 11-5965-222-14P for parts)		
	07 Microphone M-29B/U (no parts authorized)		
	08 Headset, Electrical H-113/U (see TM 11-5965-231-14P for parts)		
	09 Cable Assemblies Group CX-1334()/U, CX-4881()/U, CX-4882()/U, and CX-4884 ()/U (no parts authorized)		
Section	III. Special tools list (Not applicable)		
	IV. National stock number and part number index	54	

SECTION I

INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic Equipment (TMDE), and other special support equipment required for performance of organizational maintenance on the AN/VRC-24, AN/VRC-24A, AN/TRC-68, and AN/TRC-68A. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. Special Tools List. Not applicable.

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration. This column is divided as follows:

(1) **Figure number.** Indicates the figure number of the illustration on which the item is shown.

(2) **Item number.** The number used to identify

item called out in the illustration.

b. Source, Maintenance, and Recoverability (SMR) Codes.

(1) **Source code.** Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code

Definition

PA-Item procured and stocked for anticipated or known usage.

PD-Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfitting. Not subject to automatic replenishment.

XD-A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) **Maintenance code.** Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance: