

TECHNICAL MANUAL

**DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
FOR**

RADIO SETS

AN/VRC-24 (NSN 5820-00-402-2264)

AN/VRC-24A (NSN 5820-00-892-3722)

AN/TRC-68 (NSN 5820-00-682-2718)

AND

AN/TRC-68A (NSN 5820-00-892-3723)

HEADQUARTERS, DEPARTMENT OF THE ARMY

19 FEBRUARY 1980

TECHNICAL MANUAL }
No.11-5820-222-34P }

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC 19 February 1980

**DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
FOR
RADIO SETS
AN/VRC-24 (NSN 5820-00-402-2264)
AN/VRC-24A (NSN 5820-00-892-3722)
AN/TRC-68 (NSN 5820-00-682-2718)
AND
AN/TRC-68A (NSN 5820-00-892-3723)**

Current as of 10 September 1979

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or If you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in back of this manual direct to: Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, NJ 07703.

In either case a reply will be furnished direct to you.

Table of Contents

SECTION		Page	Illus Figure
	I. Introduction	1	
	II. Repair parts list	5	
Group	00 Radio Sets AN/VRC -24	5	1
	01 Receiver-Transmitter Groups OA-2648/VRC-24 and OA-2648A/VRC-24	7	2
	0101 Case, Receiver-Transmitter CY-2557/VRC-24	9	3
	010101 Blower B1401	11	4
	0102 Receiver-Transmitters RT-323/VRC-24 and RT-323A/VRC-24	15	5-8
	010201 Amplifier, IF, 3.0 to 3.9 MHz subunit (A1A3)	27	9
	010202 500-kHz IF amplifier subunit (A1A4)	31	10
	010203 First IF amplifier 20 to 29.9 MHz subunit (A1A2)	37	11
	010204 Audio amplifier and modulator subunit (A1A12)	43	12
	010205 UHF injection 200 to 370 MHz subunit (A1A6)	51	13
	010206 Radio frequency and power amplifier 225 to 399.9 MHz subunit (A1A11)	57	14
	010207 Coupler, directional	61	15
	010208 Dynamotor, DY-151/U	63	16
	010209 500-kHz IF filter and low pass filter	65	17
	010210 Relay and filter subunit	67	18
	010211 Frequency selector assembly	73	19
	01021101 Motor, DC-B1201 (No parts authorized)		
	02 Mounting MT-1436/U and MT-1436A/U	75	20
	03 Radio Set Control C-1439/U	79	21
	04 Antenna AT-803/VR (No parts authorized)		
	05 Microphone M-29B/U (No parts authorized)		
	06 Loud Speaker LS-166/U (See TM 11-5965-222-14P for parts)		
	07 Headset Electrical H-1 13/U (See TM 11-5965-231-14P for parts)		
	08 Cable Assemblies Group CG-1650()/U, (CX-1334()/U, CX-4629()/U, CX-4630()/U, and		

•This manual supersedes TM 11-5820-222-35P, 6 August 1963 including all changes.

Group		Page	Illus Figure
	CX-4884 ()/U	81	22
00	Radio Sets AN/TRC-68 and AN/TRC-68A	85	23,24
01	Receiver-Transmitter Groups OA-2649/TRC-68 and OA-2649A/TRC-68	89	25
	0101 Case, Receiver-Transmitter CY-2712/TRC-68	91	26
	0102 Power Supply PP-1494/U	95	27
	0103 Receiver-Transmitters RT-441/TRC-68 and RT-441A/TRC-68	99	28-31
	010301 Amplifier, IF, 3.0 to 3.9 MHz subunit (A1A3)	111	32
	010302 500 kHz IF amplifier subunit (A1A4)	115	33
	010303 First IF amplifier 20 to 29.9 MHz subunit (A1A2)	121	34
	010304 Audio amplifier and modulator subunit (A1A12)	127	35
	010305 UHF injection 200 to 370 MHz subunit (A1A6)	135	36
	010306 Radio frequency and power amplifier 225 to 399.9 MHz subunit (A1A11)	141	37
	010307 Coupler, directional	145	38
	010308 Fan, Centrifugal HD-390/U	147	39
	010309 500-kHz IF filter and low pass filter	149	40
	010310 Relay and filter subunit	151	41
	010311 Frequency selector assembly	157	42
	01031101 Motor, DC-B1201 (No parts authorized)		
02	Radio Set Control C-1439/U	161	43
03	Mounting MT-2297/TRC-68	163	44
04	Antenna AT-197/GR (No parts authorized)		
05	Control Group AN/GRA-6 (See TM 11-5820-489-35P for parts)		
06	Loud Speaker LS-166/U (See TM 11-5965-222-14P for parts)		
07	Microphone M-29B/U (No parts authorized)		
08	Headset, Electrical H-113/U (See TM 11-5965-231-14P for parts)		
09	Cable Assemblies Group CX-1334()/U, CX-4881 ()/U, CX-4882()/U, CX-4883()/U, and CX-4884()/U	165	45
SECTION III.	Special tools list (Not applicable)		
IV.	National stock number and number index	166	

SECTION I
INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of direct support, and general support maintenance of the AN/VRC-24, AN/VRC-24A, AN/TRC-68, and AN/TRC-68A. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following Sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. *Section III. Special Tool List.* Not applicable.

c. *Section IV. National Stock Number and Part Number Index.* A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. *Illustration.* This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. *Source, Maintenance, and Recoverability (SMR) Codes.*

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows

Code	Definition
PA	Item procured and stocked for anticipated or known usage.
PD	Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment
XD	A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code	Application/Explanation
O	Support item is removed, replaced, used at the organizational level.
F	Support item is removed, replaced, used at the direct support level.
H	Support item is removed, replaced, used at the general support level.
D	Support items that are removed, replaced, used at depot, mobile depot, specialized repair activity only.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Code	Application/Explanation
F	The lowest maintenance level capable of complete repair of the support item is the direct support level.
H	The lowest maintenance level capable of complete repair of the support item is the general support level.
D	The lowest maintenance level capable of complete repair of the support item is the depot level.
Z	Nonreparable. No repair is authorized.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

Recoverability codes	Definition
Z	Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.
F	Reparable item. When uneconomically reparable, condemn and dispose at the direct support level.